

CE 4101: Structural Analysis and Design-III

MD Ehasan Kabir



University of Global Village (UGV), Barishal

COURSE INFORMATION
Structural Analysis and Design-III
MD Ehasan Kabir

No.	Course Learning Outcomes
CLO1	Apply matrix methods (stiffness and flexibility) to analyze complex indeterminate structures.
CLO2	Utilize energy methods (strain energy, virtual work) to solve statically indeterminate problems.
CLO3	Employ numerical methods (finite element analysis) to analyze structures with irregular geometries and loadings.
CLO4	Apply critical thinking and problem-solving skills to address complex structural engineering challenges.
CLO5	Investigate the behavior of structures under dynamic loads

Week	Topic	Teaching Learning Strategy	Assessment Strategy	Corresponding CLOs
01	Introduction to Flexibility Method	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO1
02	Beam problem	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3, CLO4
03	Product Integral	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3,

				CLO4
04-05	Truss Problem	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3, CLO4
06-08	Frame Problem	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3, CLO4
09	Introduction to Stiffness Matrix Method	Lecture, Oral presentation	Class Test	CLO2, CLO3, CLO4
10	Basic Approach	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3, CLO4
11-12	Plain Trusses	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3, CLO4
13-15	Beam	Lecture, Oral presentation	Class Test	CLO2, CLO3, CLO4
16-17	Plane Frame	Lecture, Oral presentation	Daily Quiz, Sudden test	CLO2, CLO3, CLO4

Week-(01)

MD Ehasan Kabir

Objective of the Course and Expected Outcomes

Objective:

- To make the students understand behaviour of 1-dimensional **indeterminate structures** through exact analysis

Expected Outcomes:

- The students will be able to analyze small indeterminate structures by the **moment distribution method**.
 - The students will be able to write simple codes for analysis of structures using **computer methods**.
-

Course Content

- Analysis of statically indeterminate beams and frames by moment distribution
 - Consistent deformation/flexibility method
 - Stiffness method
 - Algorithms for implementing direct stiffness method in computer
 - Influence lines for statically indeterminate beams and frames
-

Course Materials

Text Book:

- Structural Analysis by Hibbeler, Eighth Edition

References:

- Elementary Structural Analysis by Norris, 3rd Edition
- Elements of Structural Analysis by Sinha
- Structural Analysis: A Unified Approach by Rao
- Advanced Methods of Structural Analysis by Karnovsky and Lebed
- Analysis of Engineering Structures by Bedenik and Besant

Class Notes:

- Presentation in PDF
-

Course Schedule

Schedule of Classes:

Topic	Classes
Beam Problem	7
Frame Problem	3
Truss Problem	5

Schedule of Class Test:

CT	Topic	Class
1	Beam Problem	8 th

Idealization

Simplified description of an object under analysis. For example:

- Continuity vs. discontinuity
 - Homogeneity vs. heterogeneity
 - Isotropy vs. orthotropy vs. anisotropy
 - Elastic vs. elastic-plastic vs. elasto-plastic
-

Dimensional Idealization

In reality all objects are 3-dimensional. For convenience of analysis, we consider some objects as 1-dimensional or 2-dimensional. So, in structural engineering, we discuss about:

- 1-dimensional or skeletal structures
 - 2-dimensional structures
 - 3-dimensional structures
-

1-Dimensional Structures

1-dimensional structures are elongated along one axis and have smaller dimensions in other two axes. All parameters can be expressed as functions of one axis. So we use ordinary differential equations to describe them. For example:

- Cable
 - Arch
 - Beam
 - Frame
 - Grid
 - Truss
-

2-Dimensional Structures

2-dimensional structures are extended in two directions. All parameters can be expressed as functions of two axes. So we use partial differential equations to describe them. For example:

- Membrane
 - Shell
 - Plate
-


3-Dimensional Structures

3-dimensional structures have comparable dimensions along all three axes. All parameters are expressed as functions of all three axes. So we use partial differential equations to describe them. For example:

- Dome
 - Arbitrary solid shapes
-

Exact Analysis of Indeterminate Structures

Indeterminate Structures: Structures that we cannot solve using equilibrium conditions only. Then how can we solve them? Let's see an example.

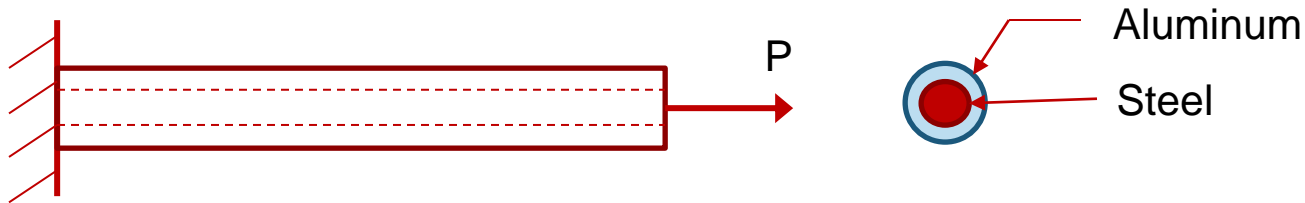


Just by applying equilibrium condition, $\sum F = 0$ we cannot determine how much force the aluminum will bear and how much share of the force the steel will take. So the problem is indeterminate.

To solve this problem, we assume perfect bonding i.e., the aluminum and steel experiences same deformation which is called Compatibility Condition.

So, we use two types of conditions: 1. Force based **Equilibrium Condition** and 2. Deformation based **Compatibility Condition**

Two Approaches

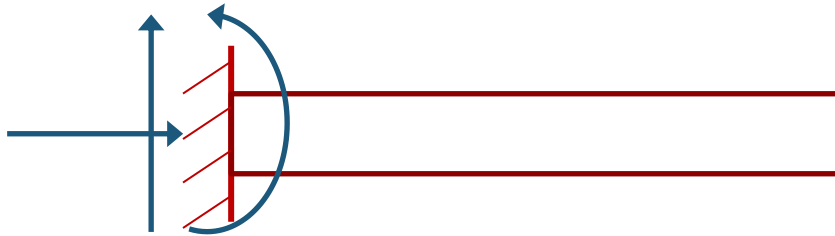


$$\sum F_x = 0$$

$$\sum F_y = 0$$

$$\sum M = 0$$

Equilibrium
Conditions

While making a structure indeterminate by providing more restraints we, in fact, impose deformation-based conditions.

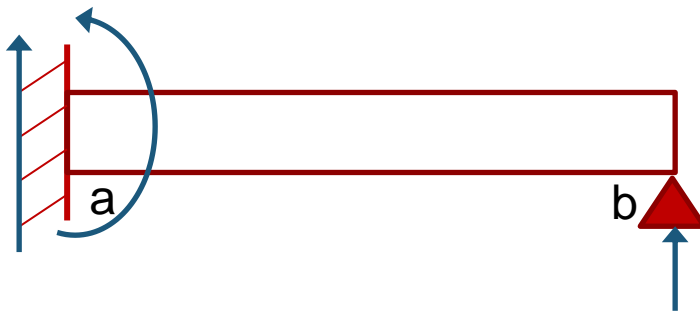


$$\Delta_b = 0$$

Compatibility
Condition


There may be two different approaches: the basic unknowns may be either forces or deformations.

Force Based and Deformation Based


Forced Based: The basic unknown is force. Equilibrium is maintained. Compatibility equation is solved. **Flexibility Method**/Method of Consistent Deformation.

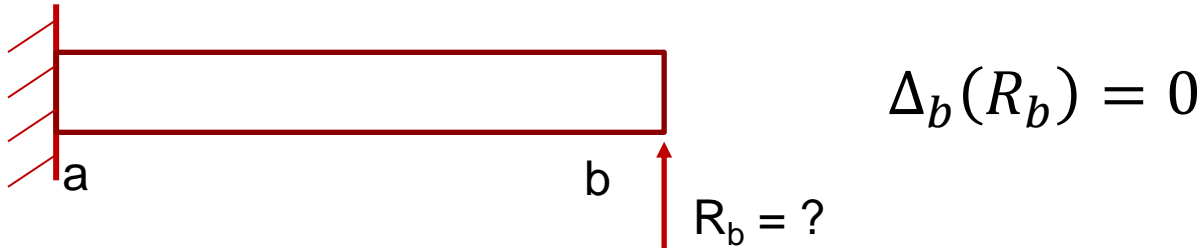



Deformation Based: The basic unknown is deformation. Compatibility is maintained. Equilibrium equation is solved. **Stiffness Method**.

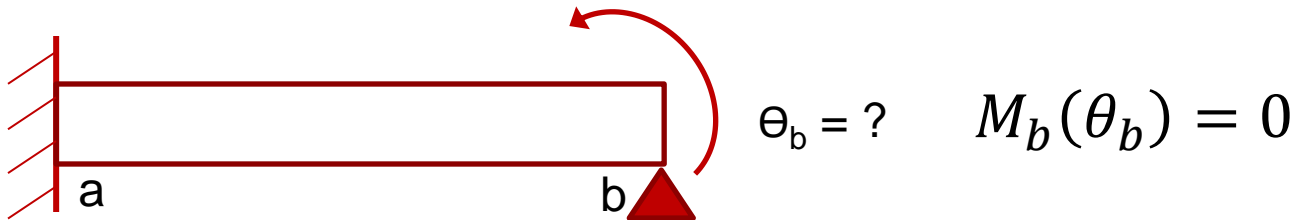

Force Based Method/Flexibility Method

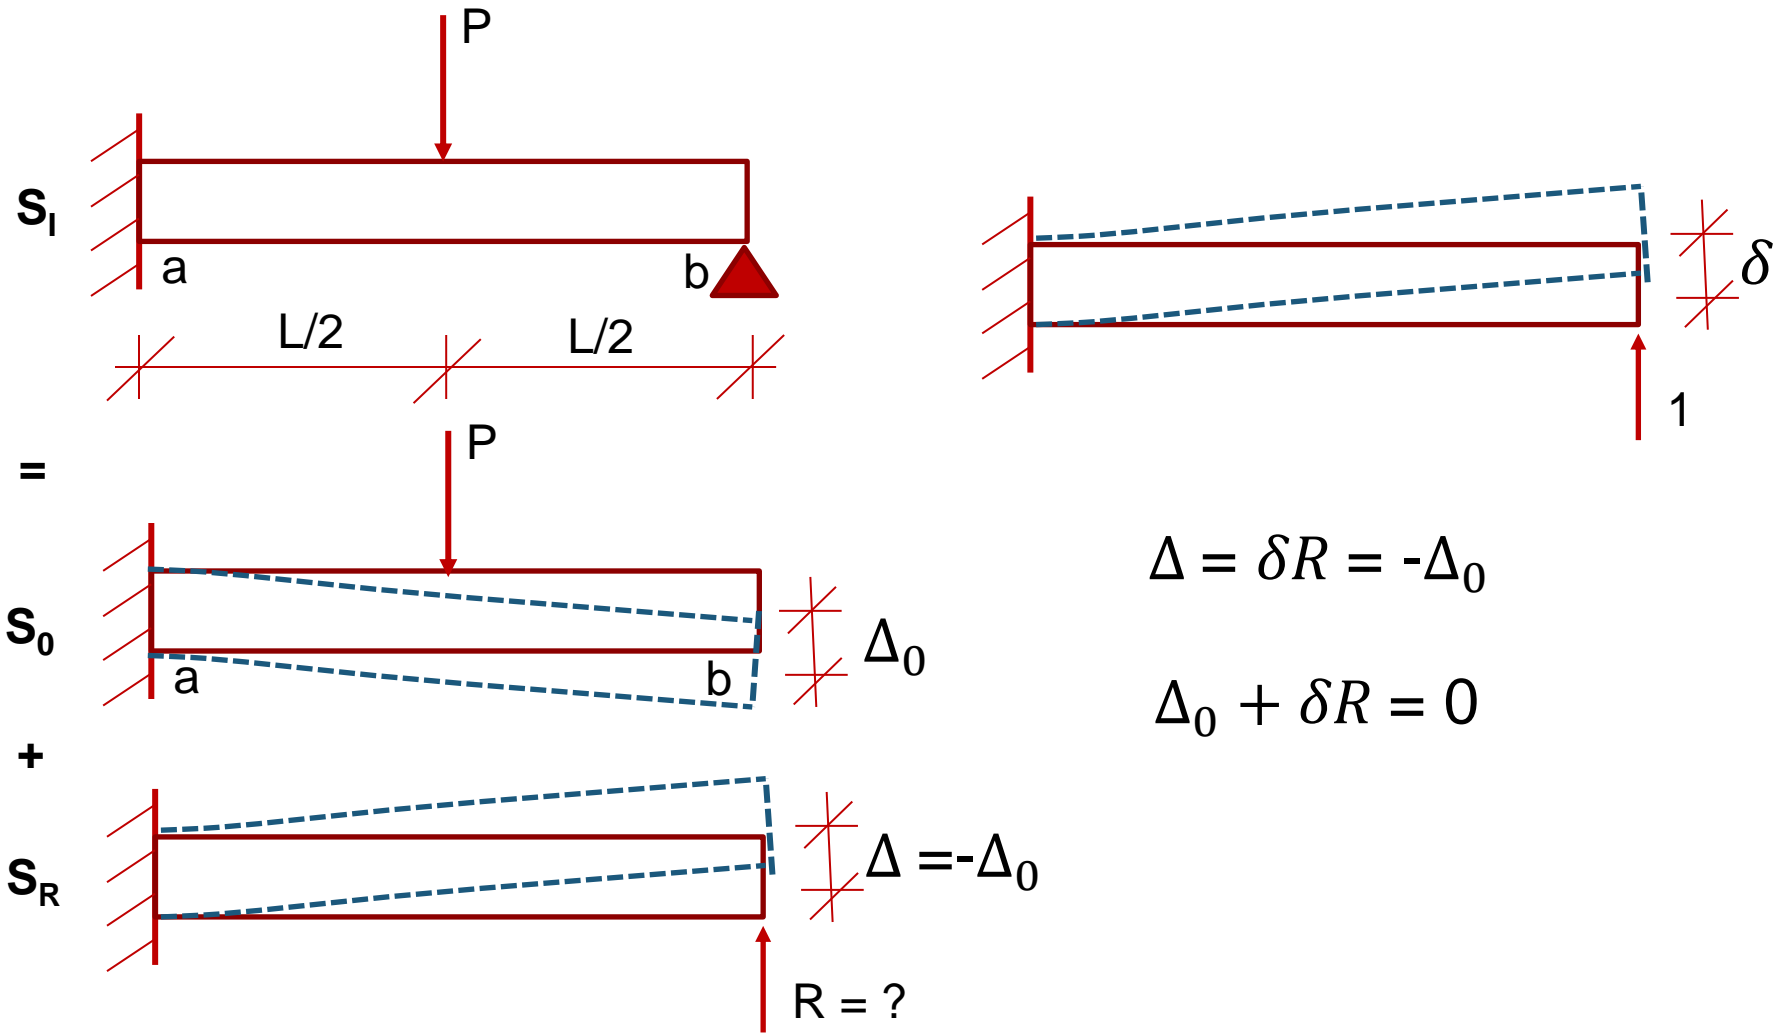

Principle of Superposition

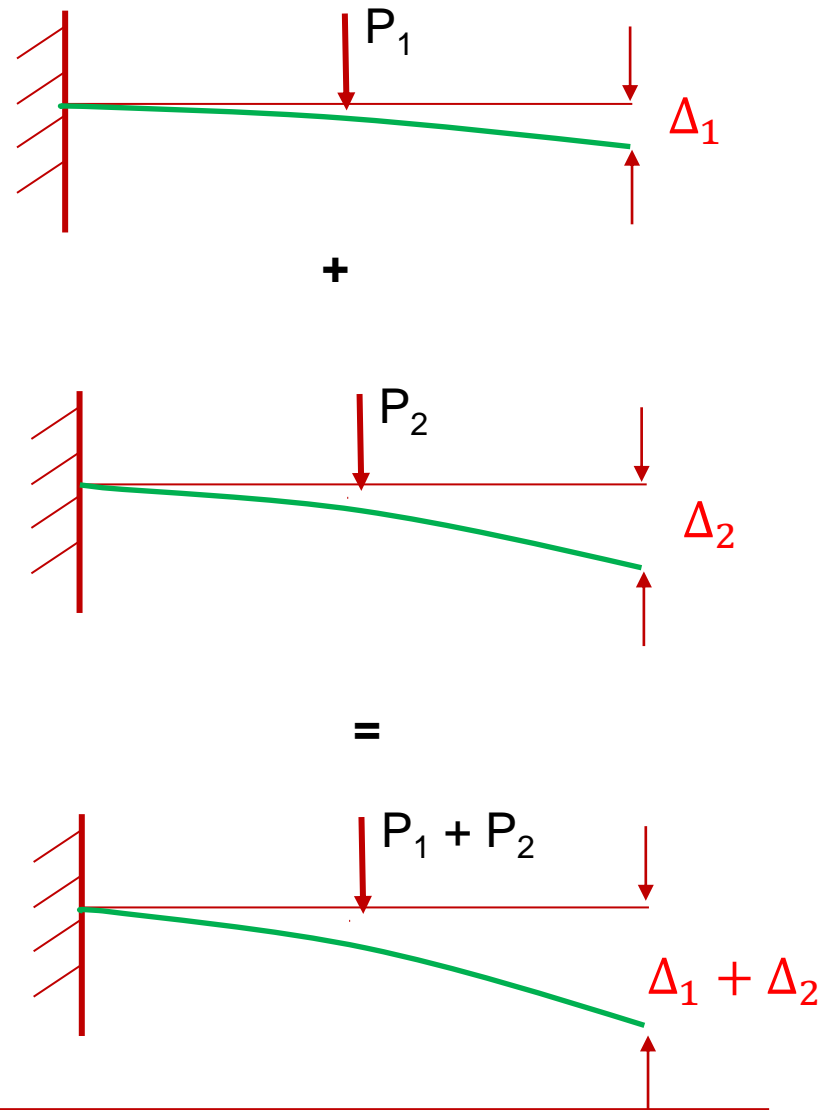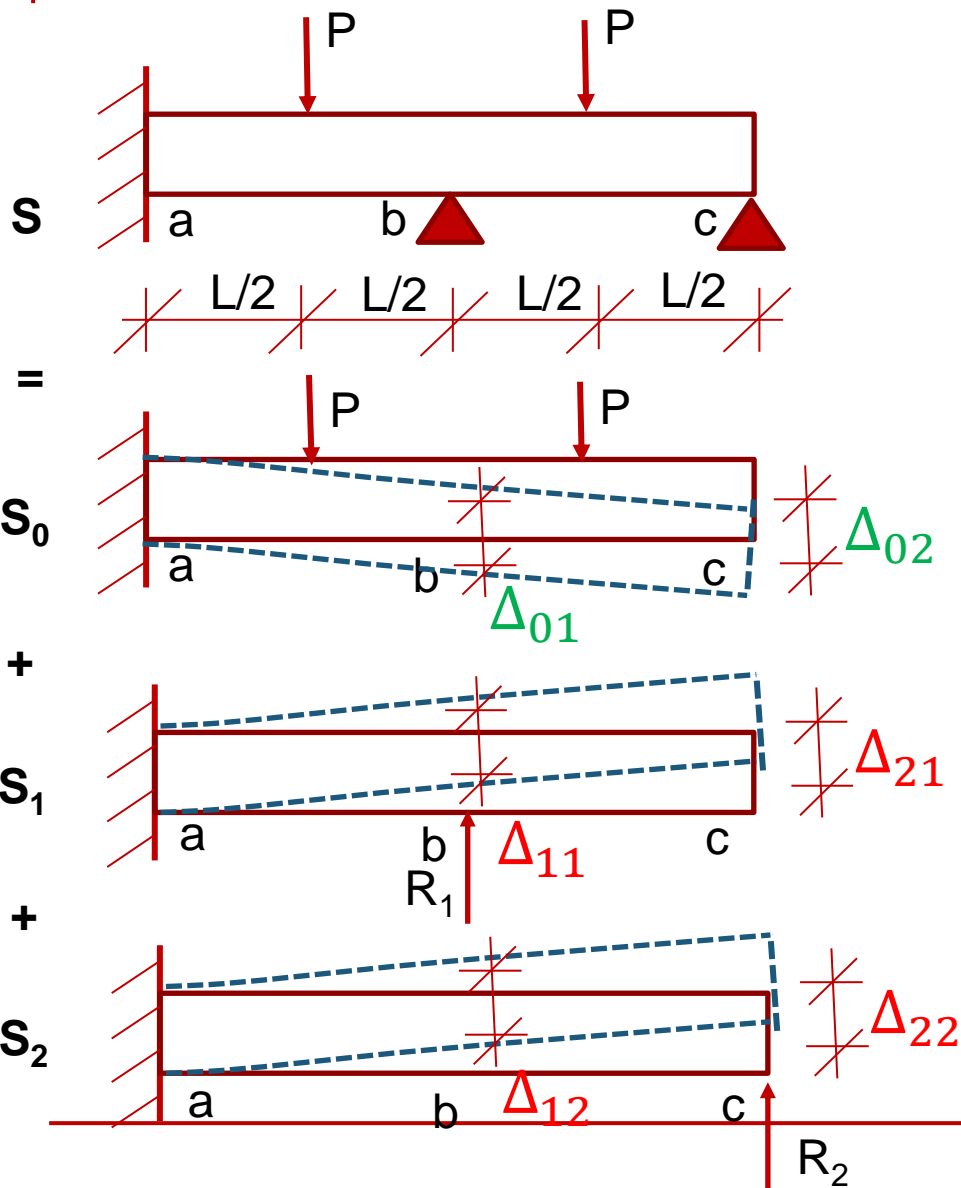


Validity of Principle of Superposition

Principle of Superposition is not valid for the following cases:

- When the system is non-linear
 - For large strain problems
 - When equilibrium condition is applied on the deformed shape
 - Cable
 - P- Δ effect
-

Linear and Non-linear Systems

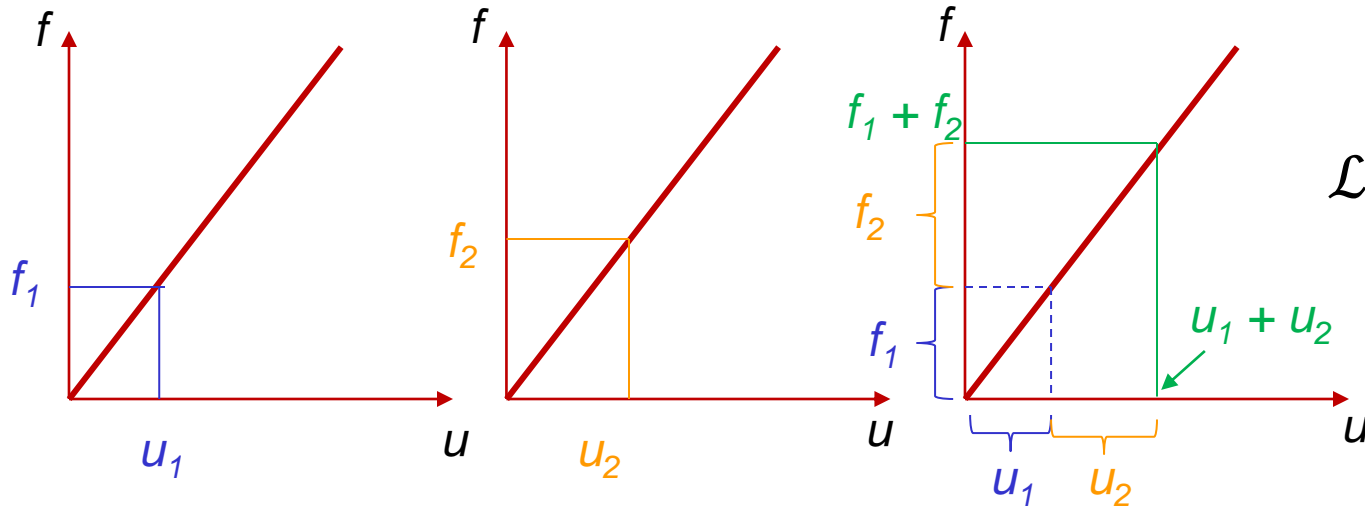

$$\mathcal{L}\{u\} = f$$

$$\mathcal{L}\{u_1\} = f_1$$


$$\mathcal{L}\{u_2\} = f_2$$

$$\mathcal{L}\{u_1 + u_2\} = f_1 + f_2$$

$$\mathcal{L}\{au_1 + bu_2\}$$

$$= af_1 + bf_2$$

$$\mathcal{L}\{\sum a_i u_i\} = \sum a_i f_i$$

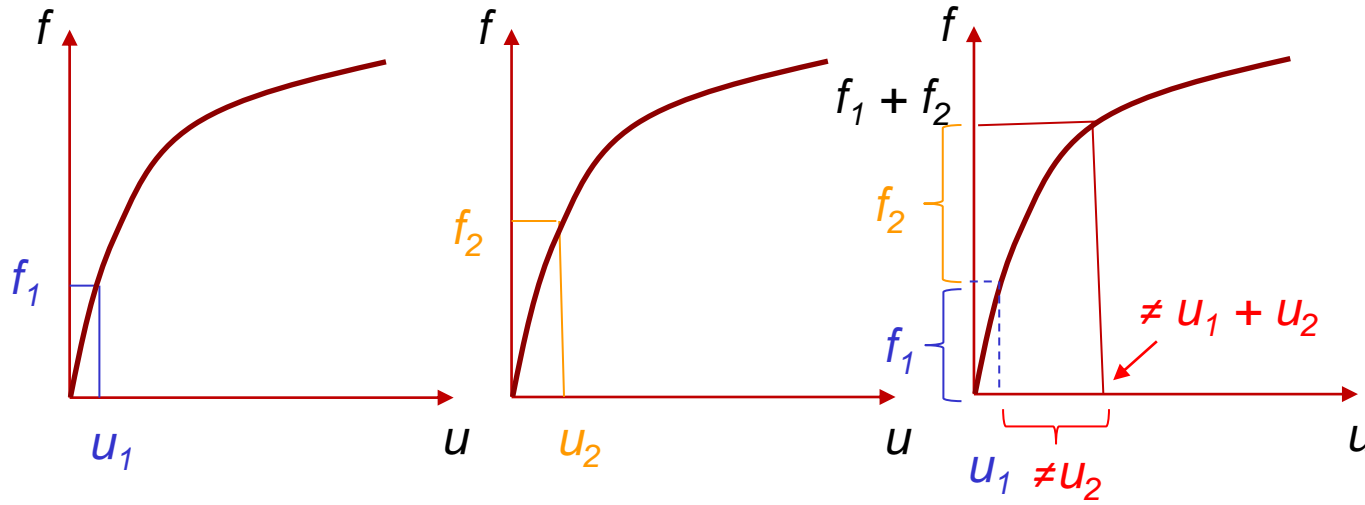


$$D\{\sum a_i u_i\} \neq \sum a_i f_i$$

Ex. Beam Equation:

$$EI \frac{d^4 v}{dx^4} = p(x)$$

Linear if E is constant

Large and Small Strains

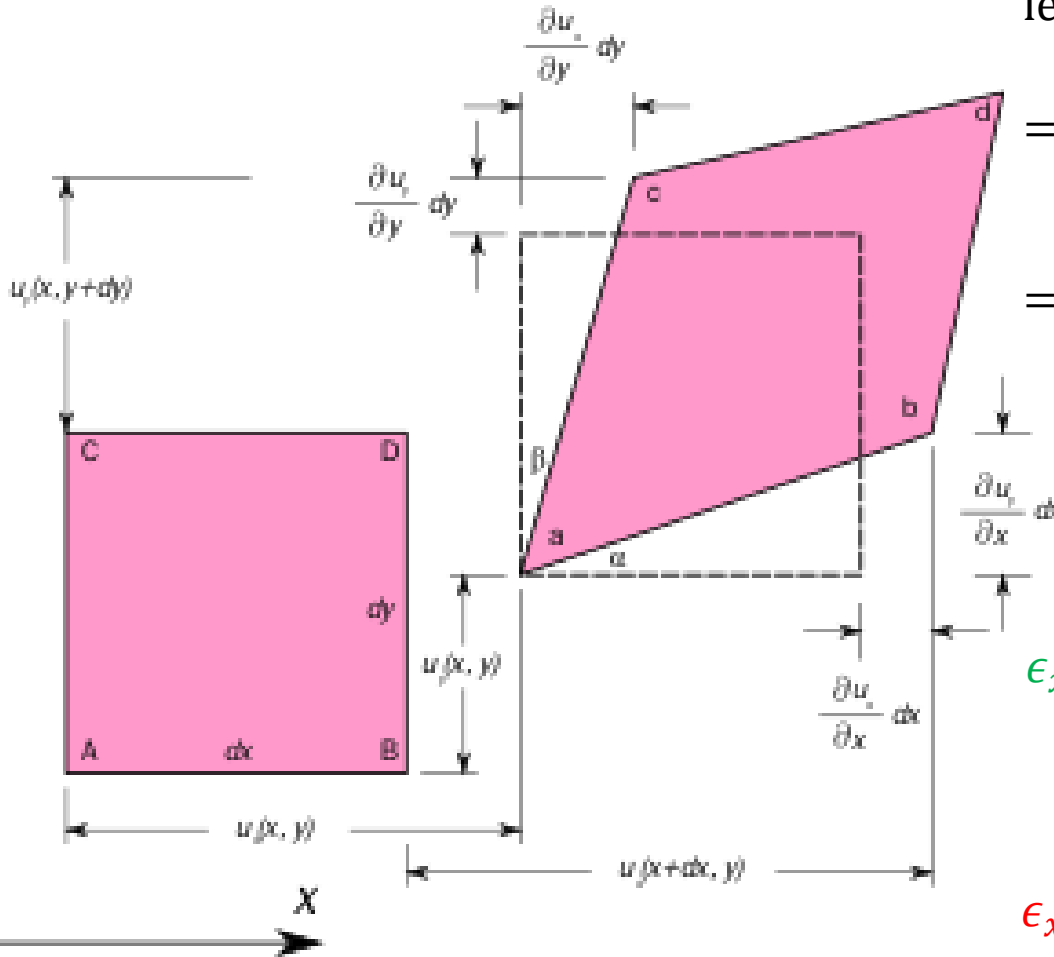

$$\text{length}(AB) = dx$$

$$\text{length}(ab)$$

$$= \sqrt{\left(dx + \frac{\partial u_x}{\partial x} dx\right)^2 + \left(\frac{\partial u_y}{\partial y}\right)^2}$$

$$= dx \sqrt{1 + 2 \frac{\partial u_x}{\partial x} + \left(\frac{\partial u_x}{\partial x}\right)^2 + \left(\frac{\partial u_y}{\partial y}\right)^2}$$

For small displacement:


$$\text{length}(ab) = dx + \frac{\partial u_x}{\partial x} dx$$

$$\epsilon_x = \frac{\text{length}(ab) - \text{length}(AB)}{\text{length}(AB)} = \frac{\partial u_x}{\partial x}$$




For large displacement:

$$\epsilon_x = \sqrt{1 + 2 \frac{\partial u_x}{\partial x} + \left(\frac{\partial u_x}{\partial x}\right)^2 + \left(\frac{\partial u_y}{\partial y}\right)^2}$$

Equilibrium in Deformed State

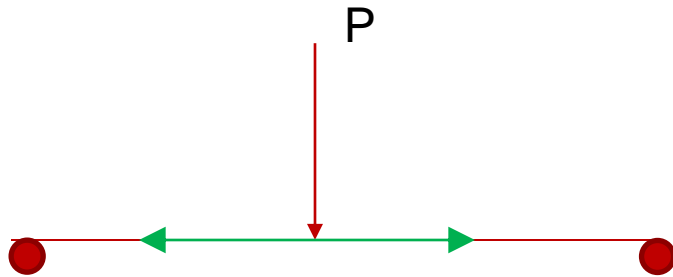

For cable we cannot satisfy equilibrium in the undeformed state.

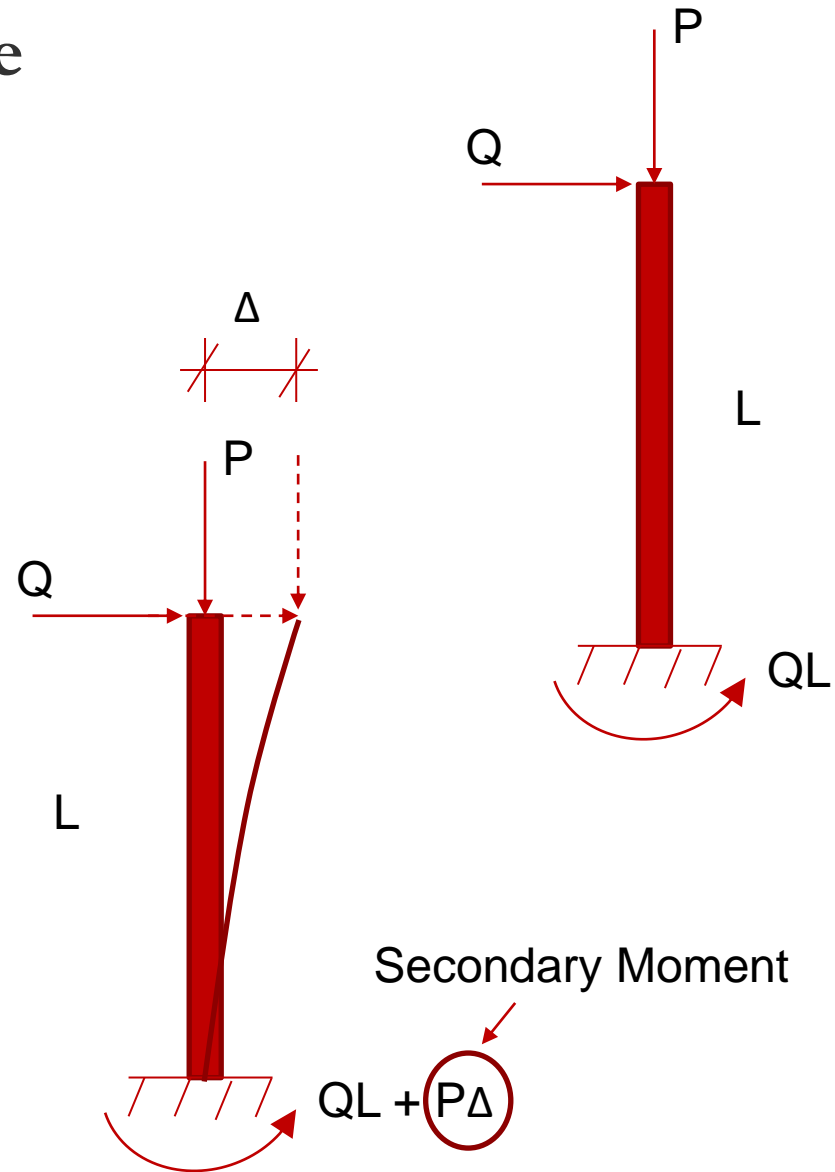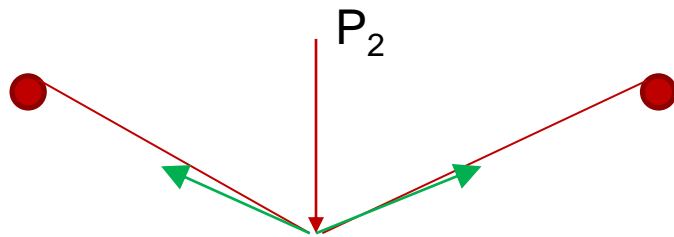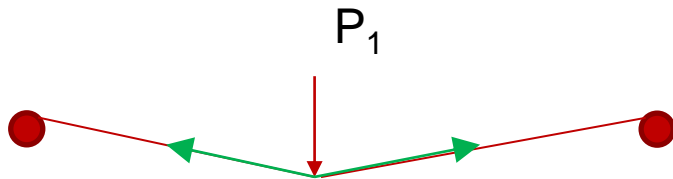


Secondary Moment

$$QL + P\Delta$$

Week-(02)

MD Ehasan Kabir

Force Based Method/Flexibility Method

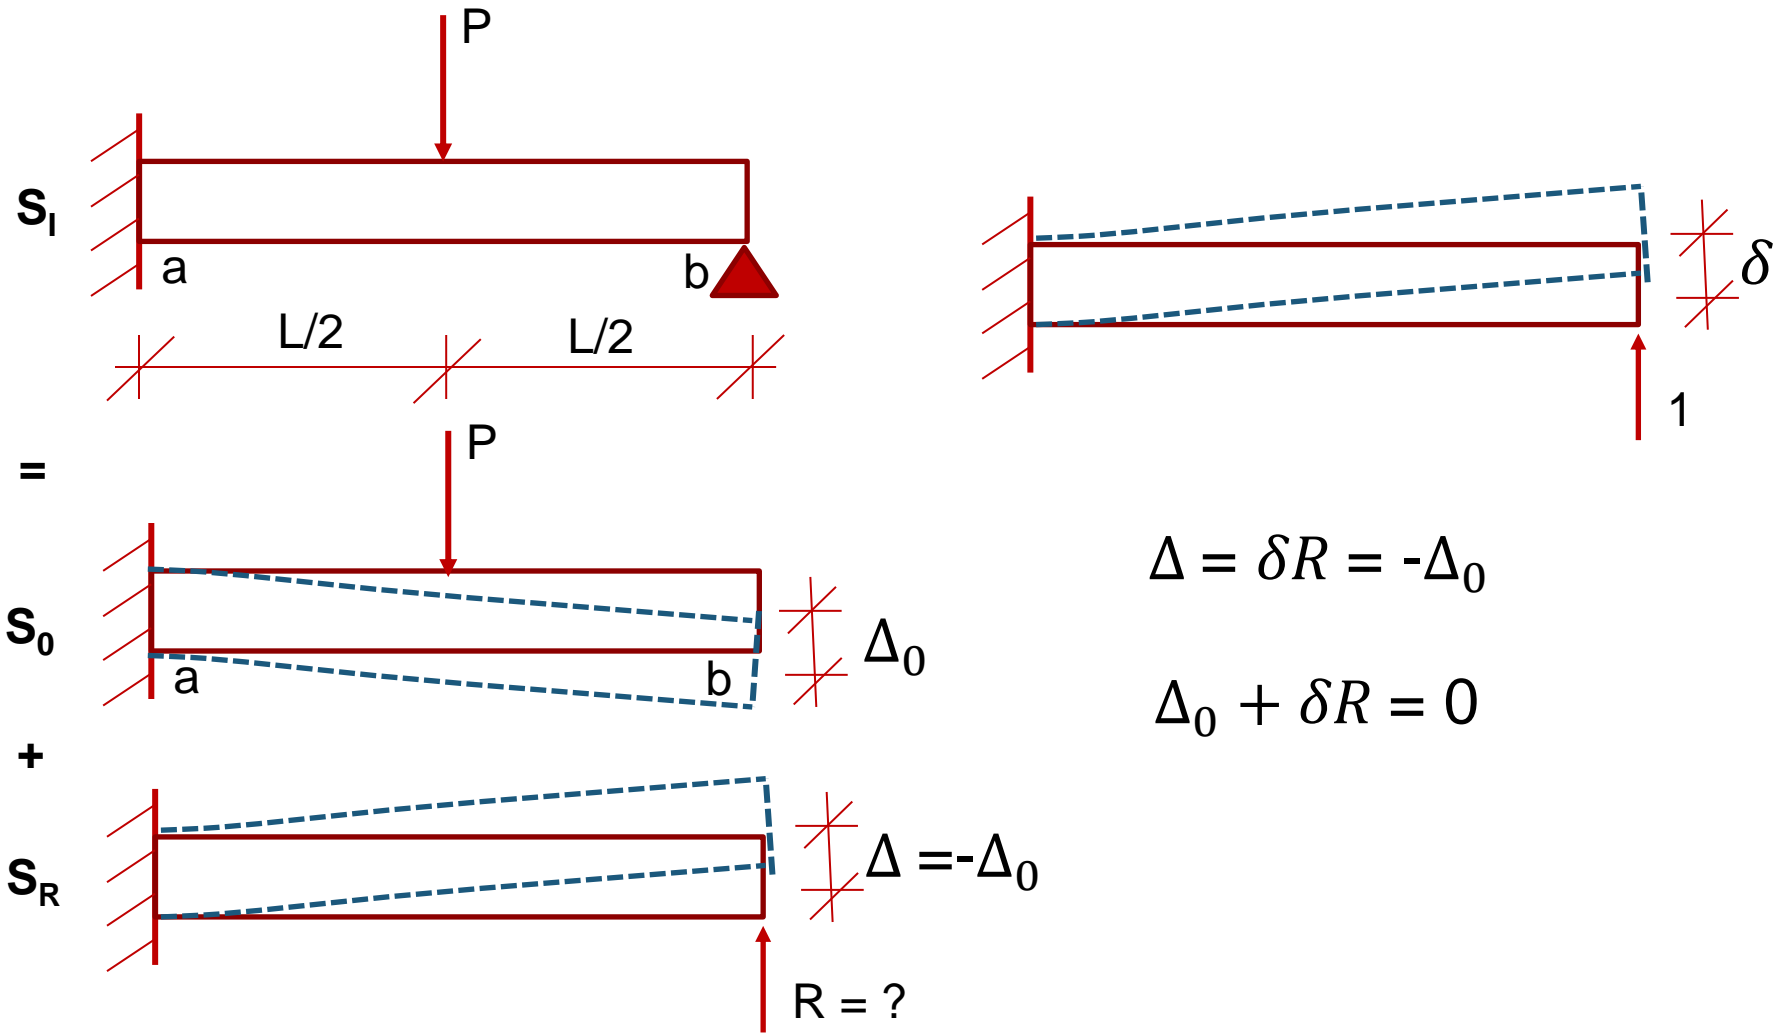


Solution

DoSI = 2

Calculation of Deformations: Unit Load Method


P-Force System

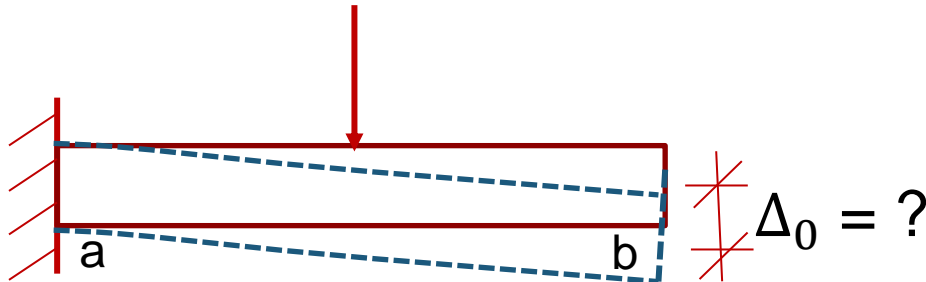


$PL/2$

M_P

Q-Force System

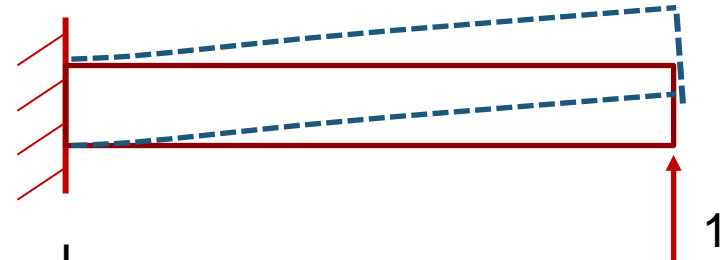

L

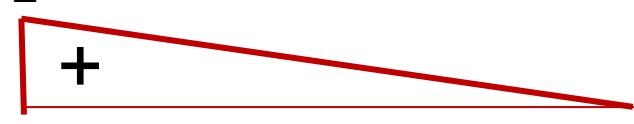

M_Q










Virtual Work Principle: External Virtual Work = Internal Virtual Work

$$F_Q \Delta_P = \int \sigma_Q \varepsilon_P dV \Rightarrow 1 \times \Delta_0 = \iint \frac{M_Q y}{I} \frac{M_P y}{EI} dA dx = \int \frac{M_P M_Q}{EI^2} \int y^2 dA dx$$




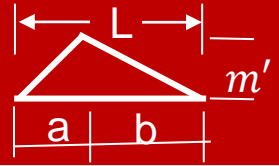
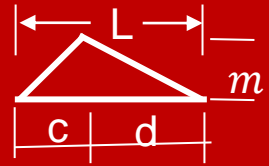
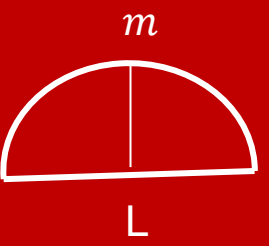
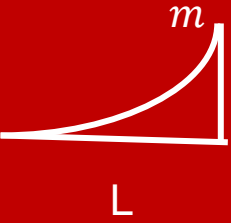
$$\Delta_0 = \int \frac{M_P M_Q}{EI} dx$$

Determination of Δ_0 and δ

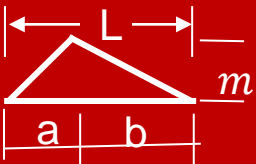
Product Integral

$\int_0^L mm' dx$				
	$mm'L$	$\frac{1}{2}mm'L$	$\frac{1}{2}m(m'_1 + m'_2)L$	$\frac{2}{3}mm'L$
	$\frac{1}{2}mm'L$	$\frac{1}{3}mm'L$	$\frac{1}{6}m(m'_1 + 2m'_2)L$	$\frac{5}{12}mm'L$
	$\frac{1}{2}mm'L$	$\frac{1}{6}mm'L$	$\frac{1}{6}m(2m'_1 + m'_2)L$	$\frac{1}{4}mm'L$
	$\frac{1}{2}(m_1 + m_2)m'L$	$\frac{1}{6}(m_1 + 2m_2)m'L$	$\frac{1}{6}m_1(2m'_1 + m'_2)L + \frac{1}{6}m_2(m'_1 + 2m'_2)L$	$\frac{1}{12}m'(3m_1 + 5m_2)L$
	$\frac{1}{2}mm'L$	$\frac{1}{6}mm'(L + a)$	$\frac{1}{6}m[m'_1(L + b) + m'_2(L + a)]$	$\frac{1}{12}mm' \left(3 + \frac{3a}{L} - \frac{a^2}{L^2} \right) L$

Product Integral

$\int_0^L mm' dx$				
	$\frac{1}{2} mm' L$	$\frac{1}{6} mm' (L + a)$	$\frac{1}{6} m [m'_1 (L + b) + m'_2 (L + a)]$	For $c \leq a$: $\left(\frac{1}{3} - \frac{(a-c)^2}{6ad} \right) mm' L$
	$\frac{2}{3} mm' L$	$\frac{1}{3} mm' L$	$\frac{1}{3} m (m'_1 + m'_2) L$	$\frac{1}{3} mm' \left(L + \frac{ab}{L} \right)$
	$\frac{1}{3} mm' L$	$\frac{1}{4} mm' L$	$\frac{1}{12} m (m'_1 + 3m'_2) L$	$\frac{1}{12} mm' \left(3a + \frac{a^2}{L^2} \right)$

Determination of Δ_0 and δ

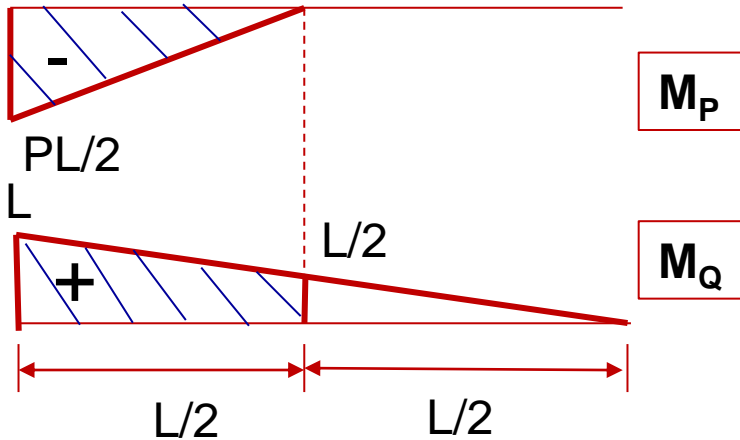


$$\Delta_0 = \int \frac{M_P M_Q}{EI} dx$$

$$= \frac{1}{6EI} (2m_1 + m_2) m' L$$

$$= \frac{-1}{6EI} (2L + L/2) \frac{PL}{2} \frac{L}{2}$$


$$= -\frac{5PL^3}{48EI}$$

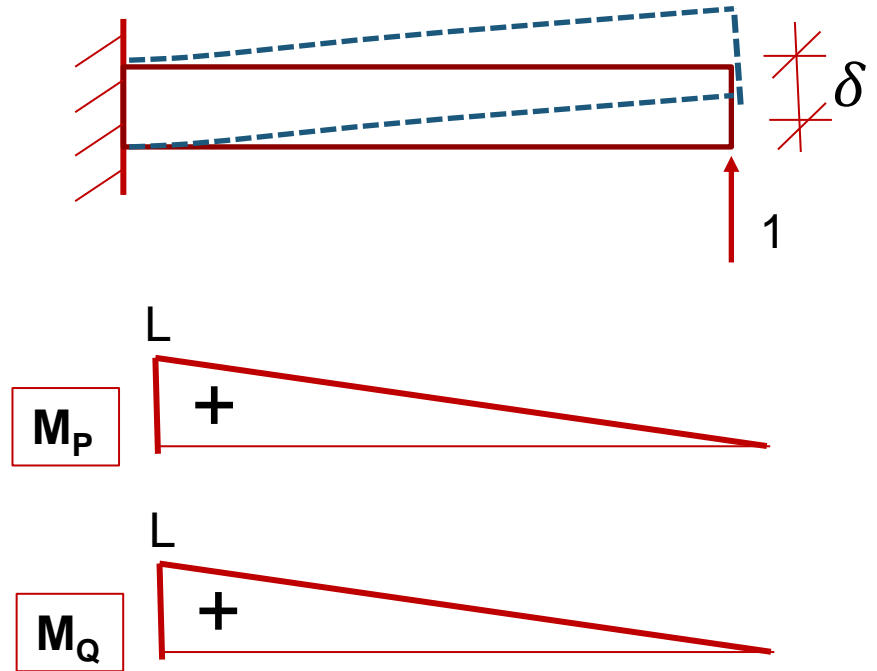

$$\delta = \int \frac{M_P M_Q}{EI} dx$$

$$= \frac{1}{3EI} mm' L = \frac{1}{3EI} LLL = \frac{L^3}{3EI}$$


Solution of Problem 1

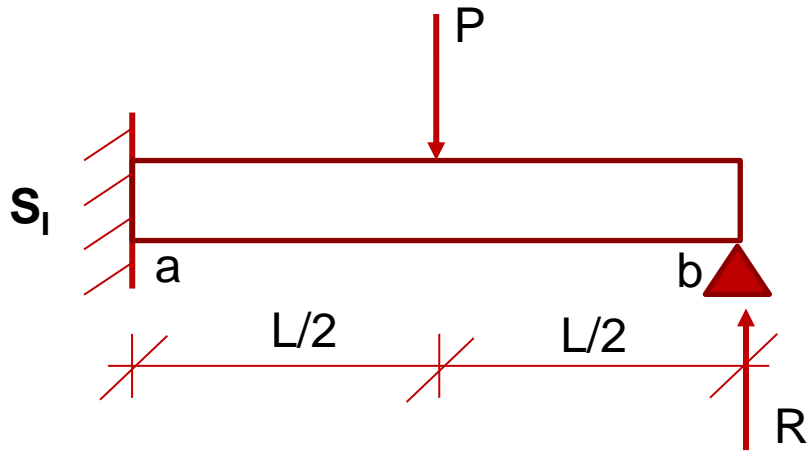


$$\Delta_0 + \delta R = 0$$

$$\Delta_0 = -\frac{5PL^3}{48EI}$$


$$\delta = \frac{L^3}{3EI} \quad R = \frac{5P}{16}$$

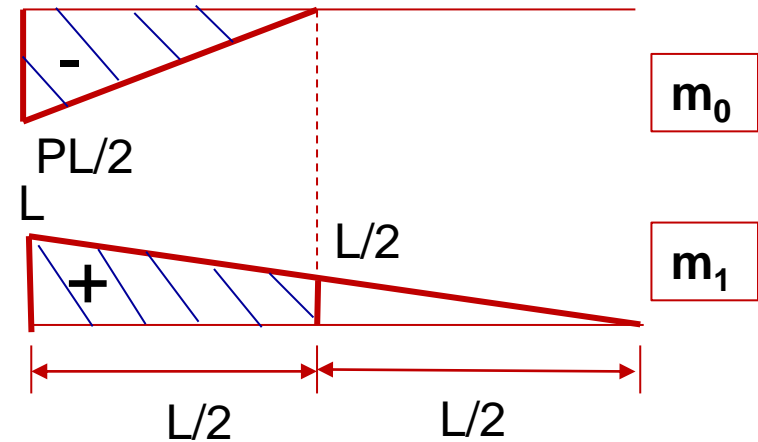

$$M = m_0 + m_1 R$$

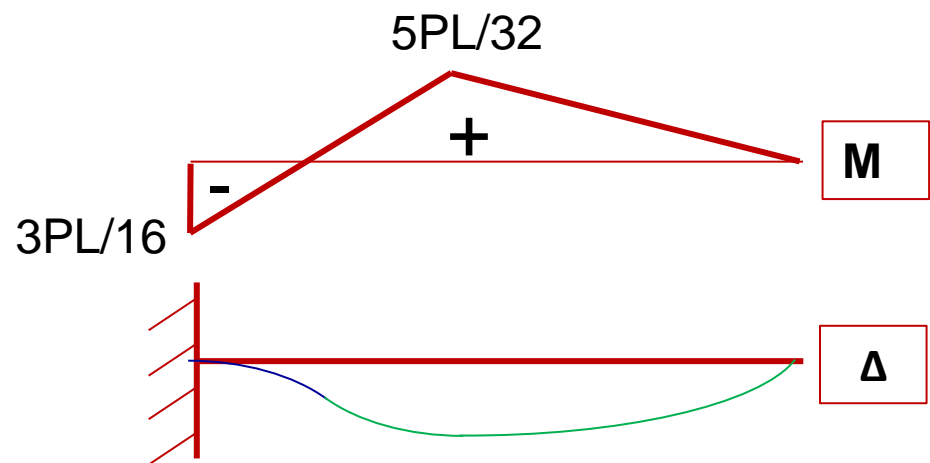

Beam Problem with DoSI > 1

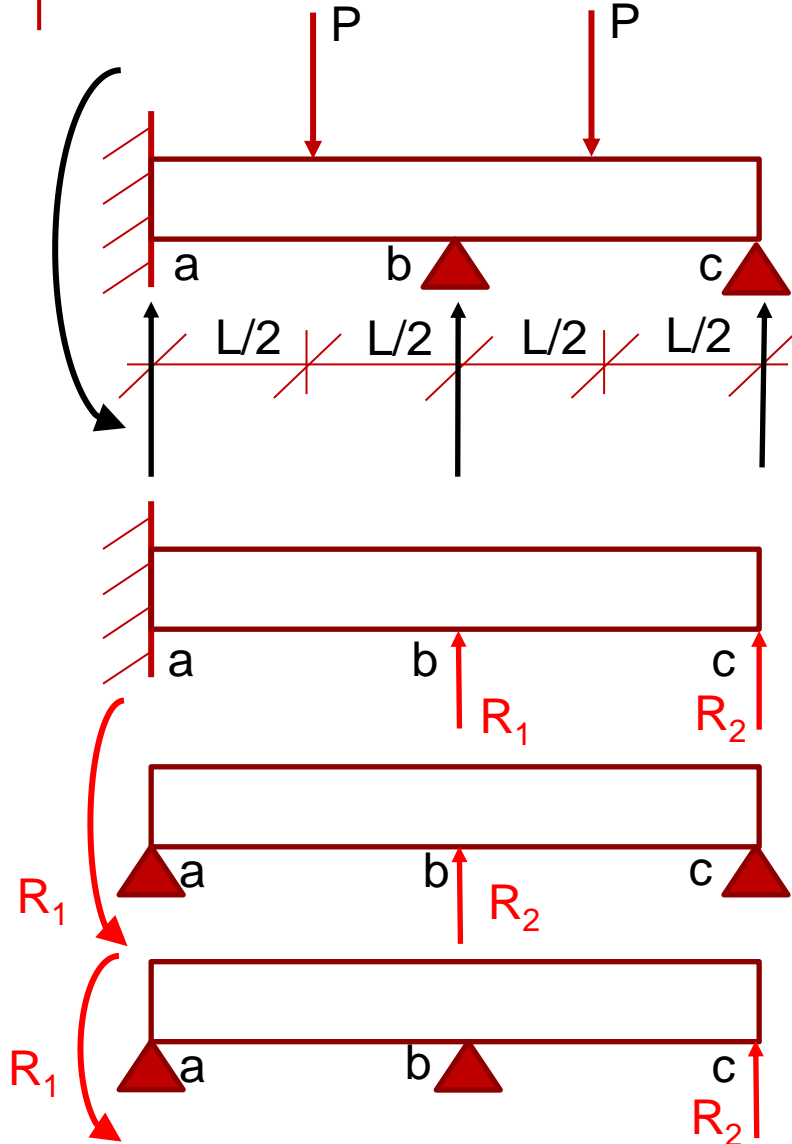

Step 1: Identification of Degree of Static Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = 4 – 2 = 2


(Ignoring axial deformation for the beam problem)

Step 2: Select redundants and the released structure

The released structure must be stable.


DoSI = 1

Superposition of Redundants

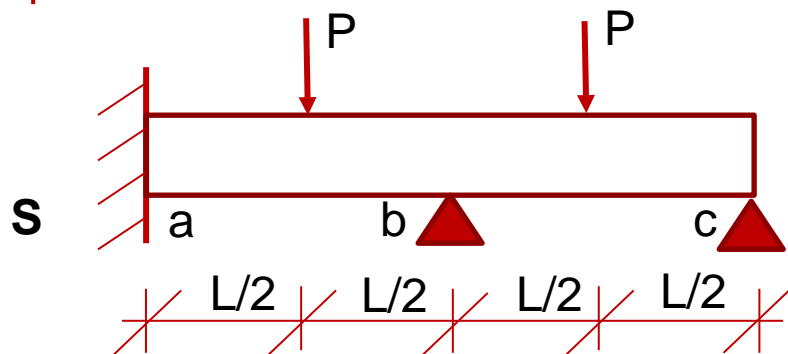

$$\Delta_b = \Delta_{01} + \Delta_{11} + \Delta_{12} = 0$$





$$\Delta_c = \Delta_{02} + \Delta_{21} + \Delta_{22} = 0$$

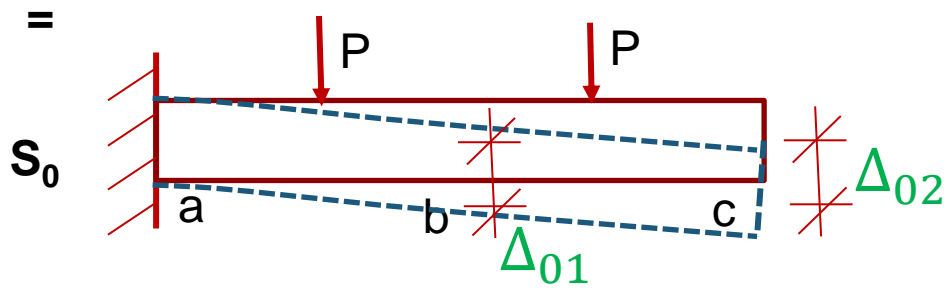

$$\Delta_{11} = \delta_{11} R_1 \quad \Delta_{21} = \delta_{21} R_1$$

$$\Delta_{12} = \delta_{12} R_2 \quad \Delta_{22} = \delta_{22} R_2$$

$$\delta_{ij} = \frac{\Delta_{ij}}{R_j} \quad \text{i: Deform; j: Force}$$

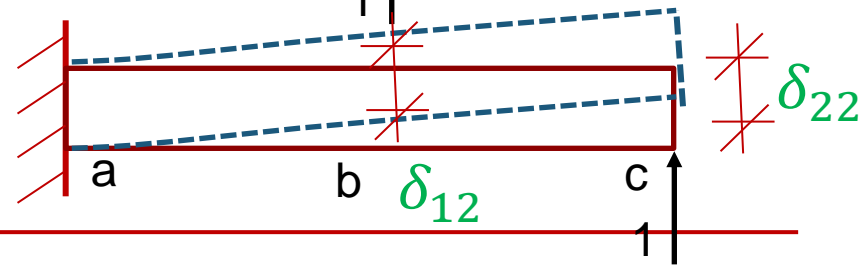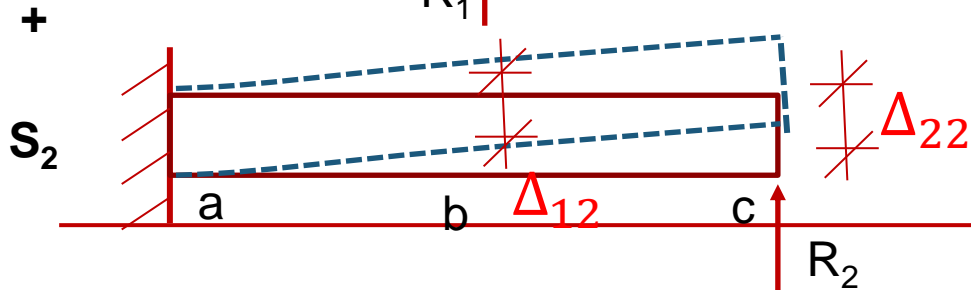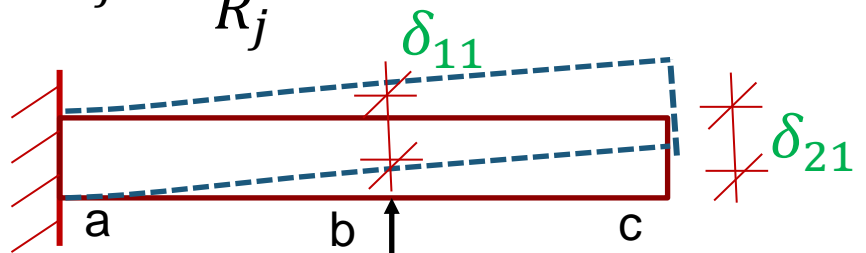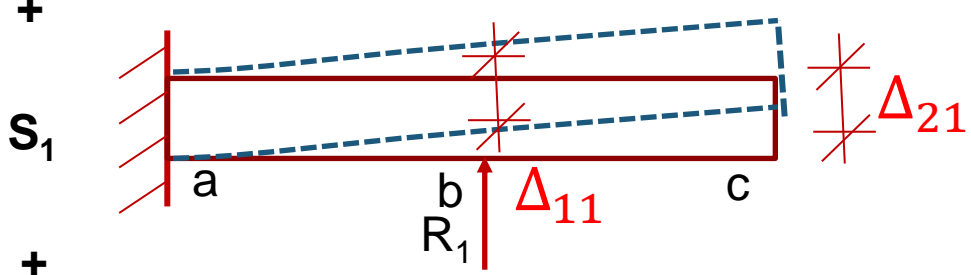

Flexibility Equation







$$\Delta_{01} + \delta_{11}R_1 + \delta_{12}R_2 = 0$$

$$\Delta_{02} + \delta_{21}R_1 + \delta_{22}R_2 = 0$$

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$

Step 3: Plotting bending moment diagrams (For calculation of deformations and flexibilities)

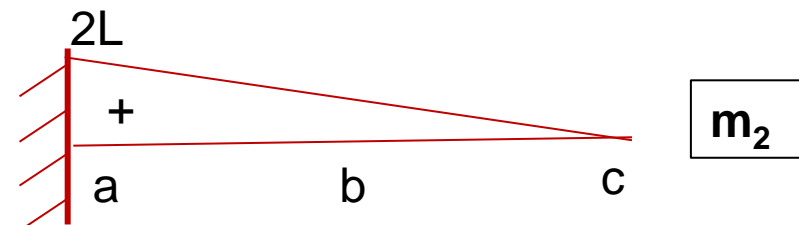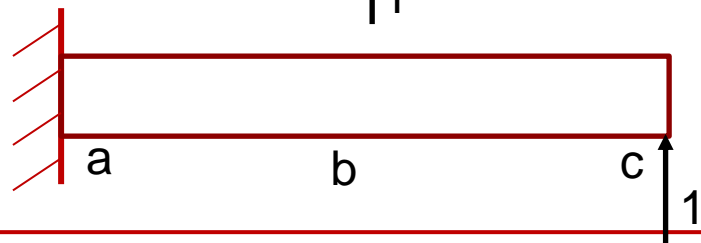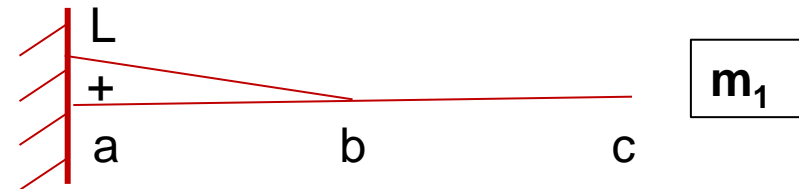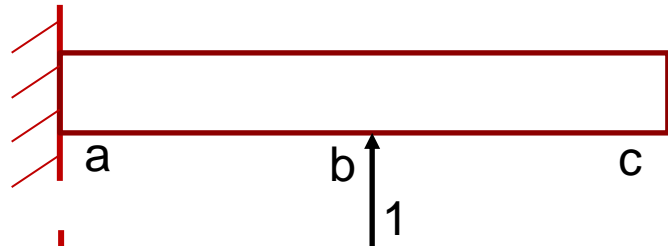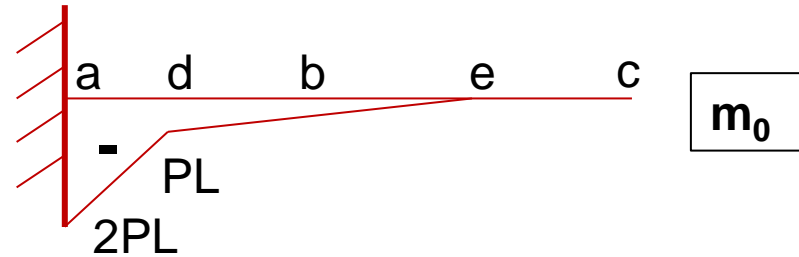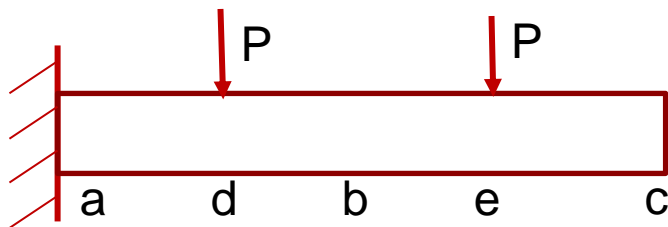


Calculation of Deformations and Flexibilities

Step 4: Calculations of deformations and flexibilities (From bending moments)

$$\Delta_{01} = \int \frac{m_0 m_1}{EI} dx; \quad \Delta_{02} = \int \frac{m_0 m_2}{EI} dx; \quad \delta_{11} = \int \frac{m_1 m_1}{EI} dx;$$

$$\delta_{12} = \delta_{21} = \int \frac{m_1 m_2}{EI} dx; \quad \delta_{22} = \int \frac{m_2 m_2}{EI} dx;$$

$$\Delta_{01} = \int \frac{m_0 m_1}{EI} dx$$

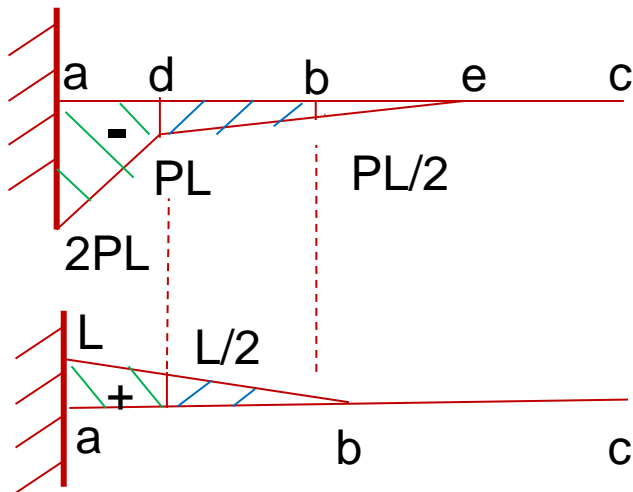


m_0

m_1

$$\begin{aligned} &= \frac{L/2}{6EI} \left\{ -2PL \left(2L + \frac{L}{2} \right) - PL \left(L + 2 \frac{L}{2} \right) \right\} \\ &+ \frac{L/2}{6EI} \frac{L}{2} \left(-2PL - \frac{PL}{2} \right) = -\frac{7PL^3}{12EI} - \frac{5PL^3}{48EI} \\ &= -\frac{33PL^3}{48EI} = -\frac{11PL^3}{16EI} \end{aligned}$$

Table of Product Integral



Calculation of Deformations and Flexibilities

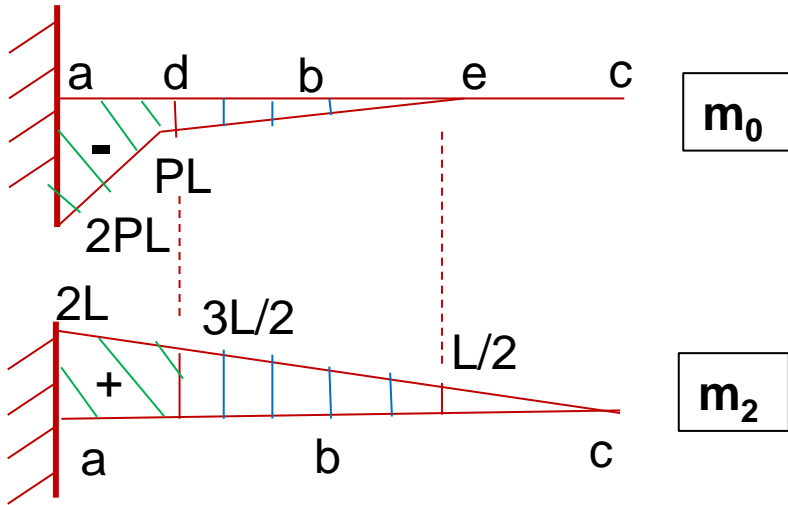

$$\Delta_{02} = \int \frac{m_0 m_2}{EI} dx$$

$$= \frac{L/2}{6EI} \left\{ -2PL \left(4L + \frac{3L}{2} \right) - PL \left(2L + 2 \frac{3L}{2} \right) \right\} + \frac{L}{6EI} (-PL) \left(3L + \frac{L}{2} \right)$$


$$= -\frac{4PL^3}{3EI} - \frac{7PL^3}{12EI} = -\frac{23PL^3}{12EI} = -\frac{23PL^3}{12EI}$$

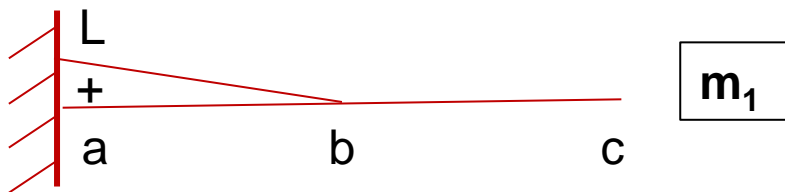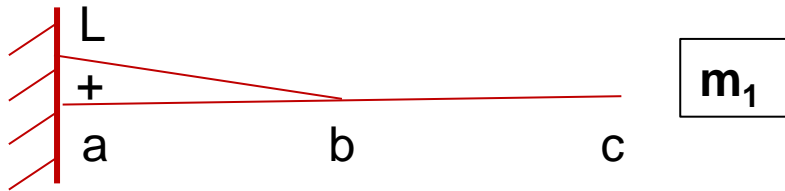


$$\delta_{11} = \int \frac{m_1 m_1}{EI} dx = \frac{L}{3EI} LL = \frac{L^3}{3EI}$$

Table of Product Integral



Calculation of Deformations and Flexibilities

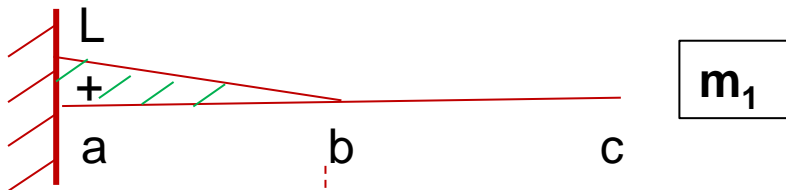

$$\delta_{12} = \delta_{12} = \int \frac{m_1 m_2}{EI} dx$$

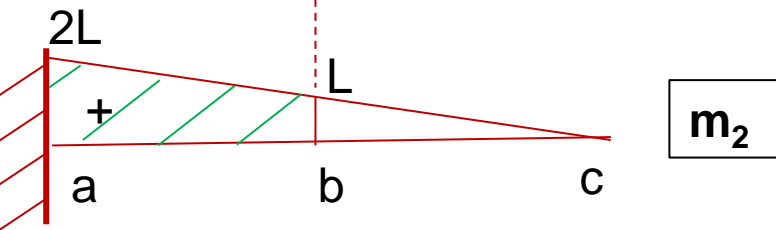

$$= \frac{L}{6EI} L(4L + L) = \frac{5L^3}{6EI}$$

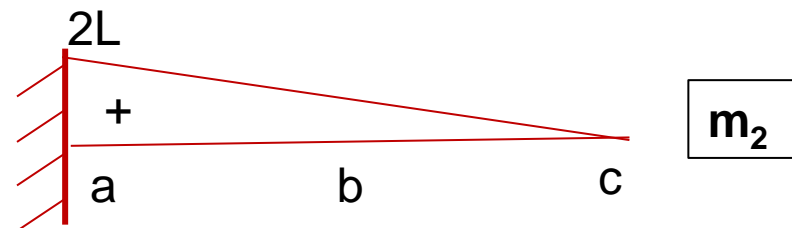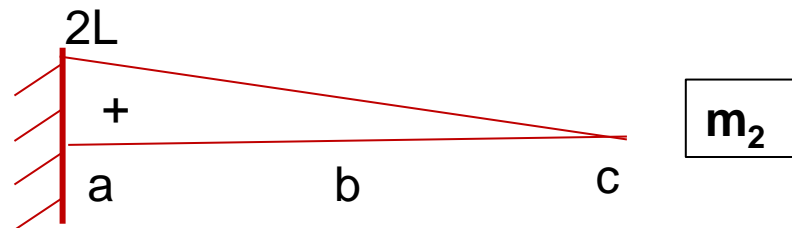

$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx = \frac{2L}{3EI} 2L 2L = \frac{8L^3}{3EI}$$

Solving Flexibility Equation

Step 5: Solving flexibility equation

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\begin{Bmatrix} -\frac{11}{16} \\ \frac{23}{12} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$


$$\begin{bmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{11}{16} \\ \frac{23}{12} \end{Bmatrix} P$$

$$R_1 = \frac{\begin{vmatrix} \frac{11}{16} & \frac{5}{6} \\ \frac{23}{12} & \frac{8}{3} \end{vmatrix}}{\begin{vmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{vmatrix}} P = \frac{0.236}{0.194} P = 1.22P$$

$$R_2 = \frac{\begin{vmatrix} \frac{1}{3} & \frac{11}{16} \\ \frac{5}{6} & \frac{23}{12} \end{vmatrix}}{\begin{vmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{vmatrix}} P = \frac{0.066}{0.194} P = 0.34P$$

Equilibrium and Internal Forces


Step 6: Applying equilibrium condition and drawing bending moment diagrams

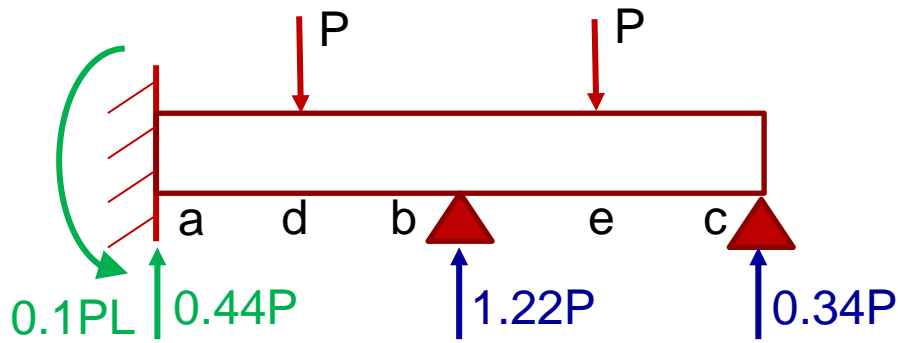

$$\{M\} = \{m_0\} + [m]\{R\}$$

$$\begin{Bmatrix} M_a \\ M_d \\ M_b \\ M_e \end{Bmatrix} = \begin{Bmatrix} -2PL \\ -PL \\ -PL/2 \\ 0 \end{Bmatrix} + \begin{bmatrix} L & 2L \\ L/2 & 3L/2 \\ 0 & L \\ 0 & L/2 \end{bmatrix} \begin{Bmatrix} 1.22P \\ 0.34P \end{Bmatrix}$$

$$\begin{Bmatrix} M_a \\ M_d \\ M_b \\ M_e \end{Bmatrix} = \begin{Bmatrix} -0.1PL \\ 0.12PL \\ -0.16PL \\ 0.17PL \end{Bmatrix}$$

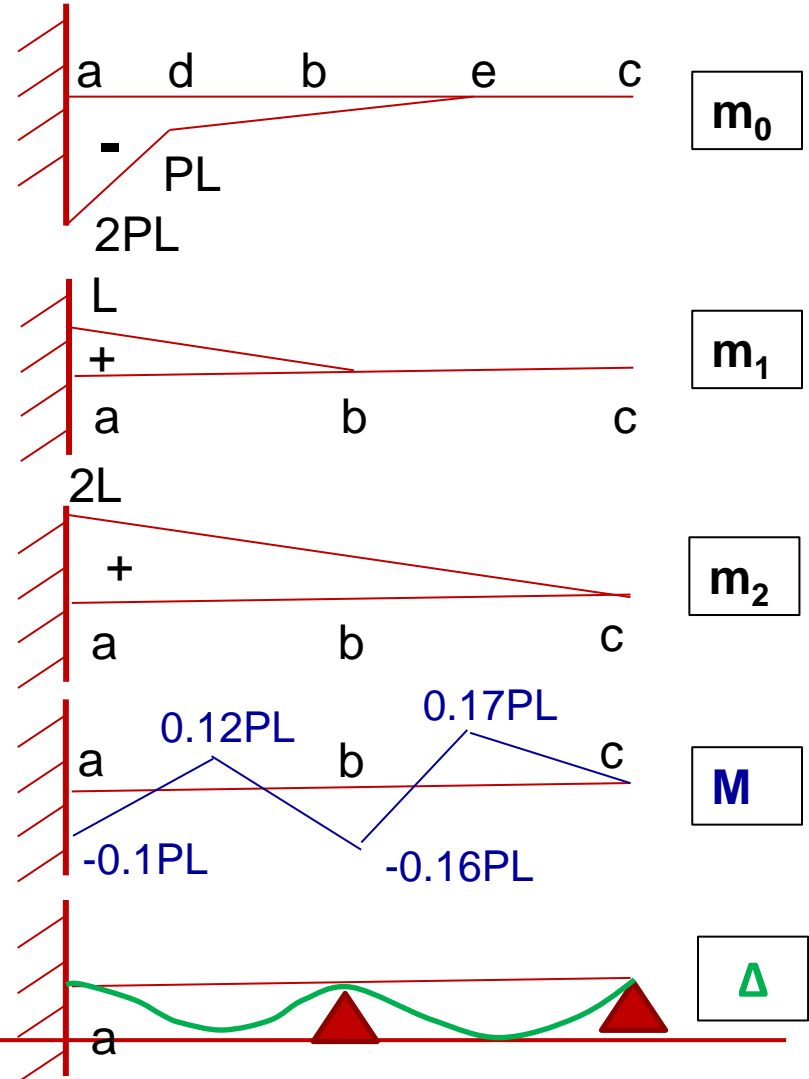

Non-Prismatic Beam

$$w = 10 \text{ kN/m}, L = 5 \text{ m}, EI = 1000 \text{ kN-m}^2$$


Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 4 - 2 = 2$$

(Ignoring axial deformation for the beam problem)

Step 2: Select redundants and the released structure

The released structure must be stable.

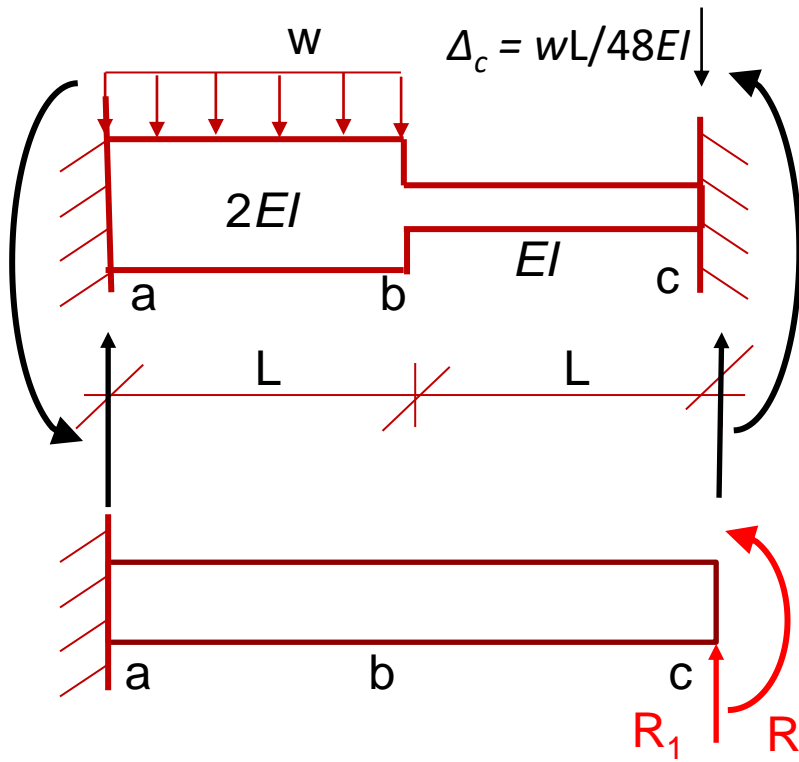


$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_c \\ \theta_c \end{Bmatrix}$$


Bending Moment Diagrams for Deformation

$$\Delta_{01} = \int \frac{m_0 m_1}{EI} dx; \quad \Delta_{02} = \int \frac{m_0 m_2}{EI} dx; \quad \delta_{11} = \int \frac{m_1 m_1}{EI} dx;$$


$$\delta_{12} = \delta_{21} = \int \frac{m_1 m_2}{EI} dx; \quad \delta_{22} = \int \frac{m_2 m_2}{EI} dx;$$

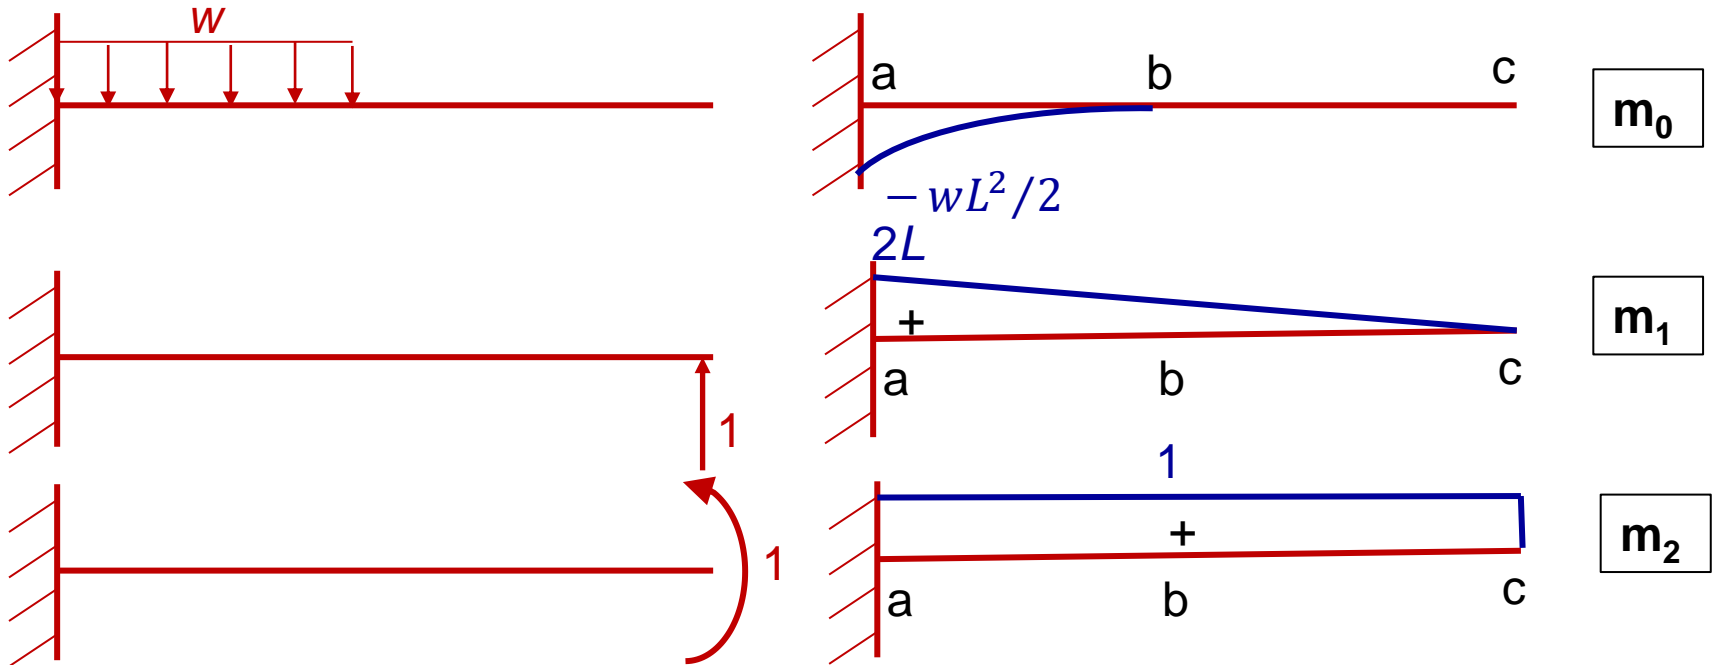

Calculation of Deformations

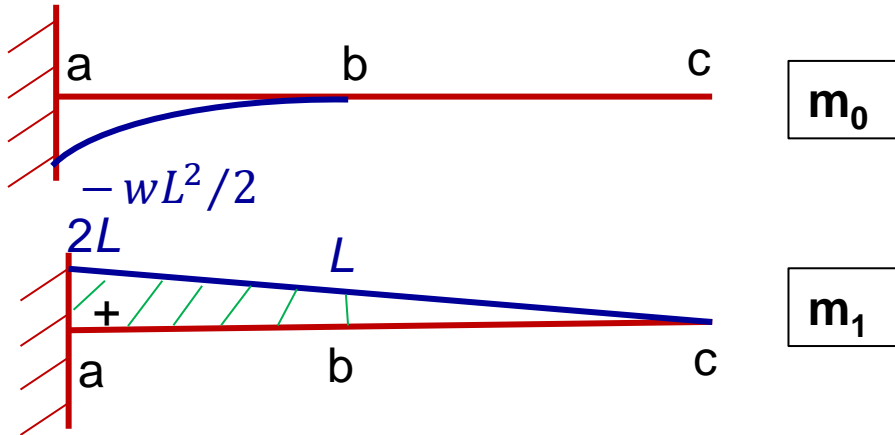


$$\begin{aligned}\Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L}{12 \times 2EI} \left(-\frac{wL^2}{2} \right) (3 \times 2L + L) \\ &= -\frac{7wL^4}{48EI}\end{aligned}$$

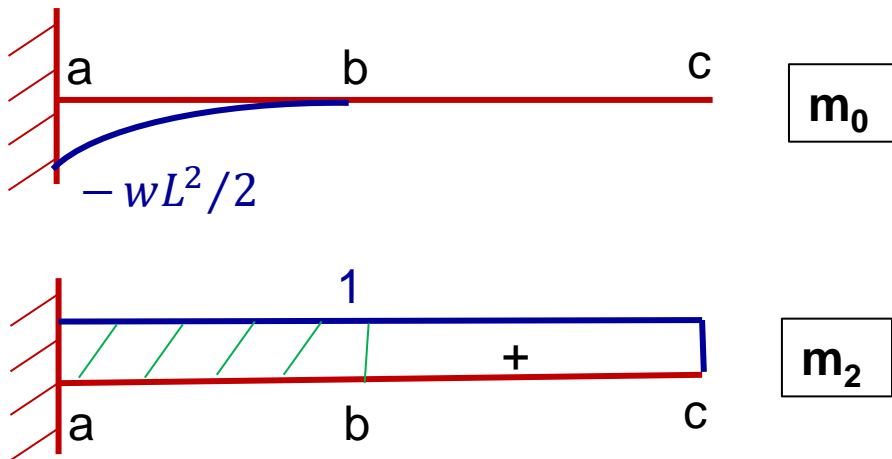

$$\begin{aligned}\Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\ &= \frac{L}{3 \times 2EI} \left(-\frac{wL^2}{2} \right) \times 1 \\ &= -\frac{wL^3}{12EI}\end{aligned}$$

Calculation of Flexibilities

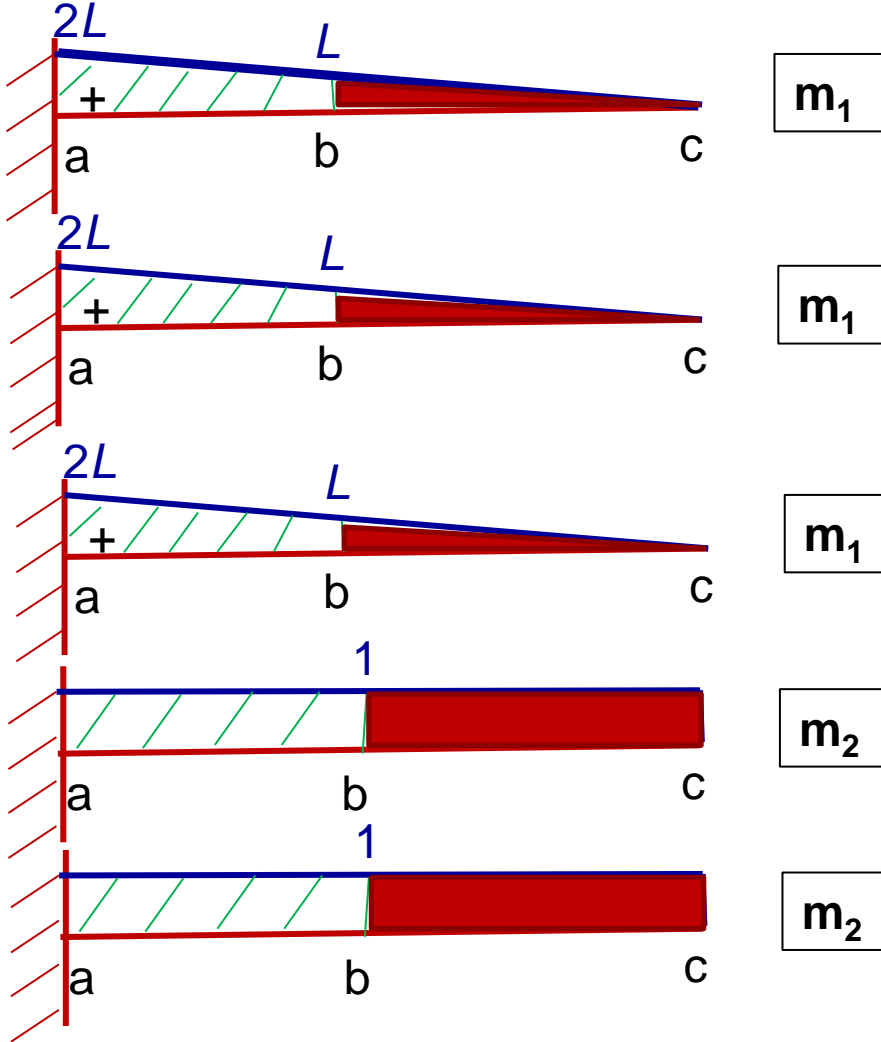

$$\delta_{11} = \int \frac{m_1 m_1}{EI} dx$$

$$= \frac{L}{6 \times 2EI} \{2L(4L + L) + L(2L + 2L)\}$$

$$+ \frac{L}{3EI} L \times L$$

$$= \frac{7L^3}{6EI} + \frac{L^3}{3EI} = \frac{3L^3}{2EI}$$

$$\delta_{12} = \delta_{21} = \int \frac{m_1 m_2}{EI} dx$$

$$= \frac{L}{2EI} \times 1 \times \frac{2L + L}{2} + \frac{L}{2EI} \times 1 \times L$$

$$= \frac{3L^2}{4EI} + \frac{L^2}{2EI} = \frac{5L^2}{4EI}$$

$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx$$

$$= \frac{L}{2EI} \times 1 \times 1 + \frac{L}{EI} \times 1 \times 1 = \frac{3L}{2EI}$$

Table of Product Integral

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_c \\ \theta_c \end{Bmatrix}$$

$$\begin{Bmatrix} -\frac{7L^3}{48} \\ L^2 \\ -\frac{L^2}{12} \end{Bmatrix} \frac{wL}{EI} + \begin{bmatrix} \frac{3L^2}{2} & \frac{5L}{4} \\ \frac{5L}{4} & \frac{3}{2} \end{bmatrix} \frac{L}{EI} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix}$$
$$= \begin{Bmatrix} -1/48 \\ 0 \end{Bmatrix} \frac{wL}{EI}$$

$$\begin{bmatrix} \frac{3L^2}{2} & \frac{5L}{4} \\ \frac{5L}{4} & \frac{3}{2} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{7L^3 - 1}{48} \\ L^2 \\ \frac{L^2}{12} \end{Bmatrix} w$$





$$\begin{bmatrix} 37.5 & 6.25 \\ 6.25 & 1.5 \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 182.08 \\ 20.83 \end{Bmatrix}$$

$$R_1 = \frac{\begin{vmatrix} 182.08 & 6.25 \\ 20.83 & 1.5 \end{vmatrix}}{\begin{vmatrix} 37.5 & 6.25 \\ 6.25 & 1.5 \end{vmatrix}} = \frac{142.93}{17.19}$$
$$= 8.31 \text{ kN}$$

$$R_2 = \frac{\begin{vmatrix} 37.5 & 182.08 \\ 6.25 & 20.83 \end{vmatrix}}{\begin{vmatrix} 37.5 & 6.25 \\ 6.25 & 1.5 \end{vmatrix}} = \frac{-356.88}{17.19}$$
$$= -20.76 \text{ kN-m}$$

Final Bending Moment Diagram



$w = 10 \text{ kN/m}$, $L = 5 \text{ m}$, $EI = 1000 \text{ kN-m}^2$

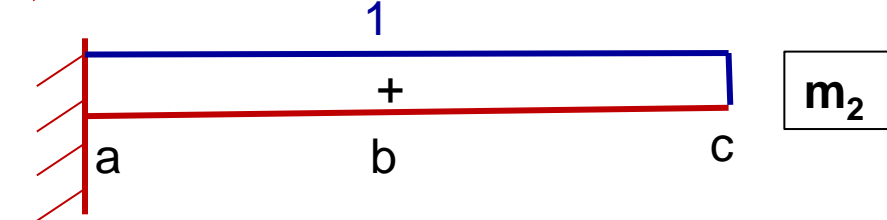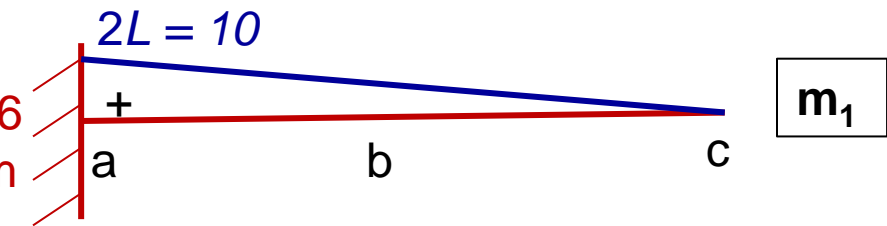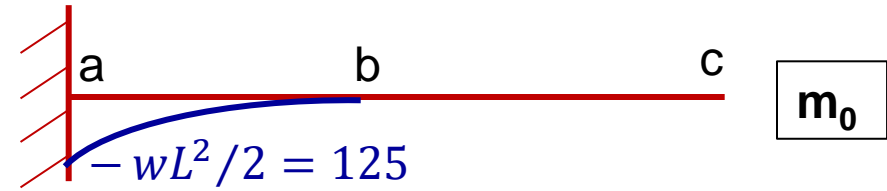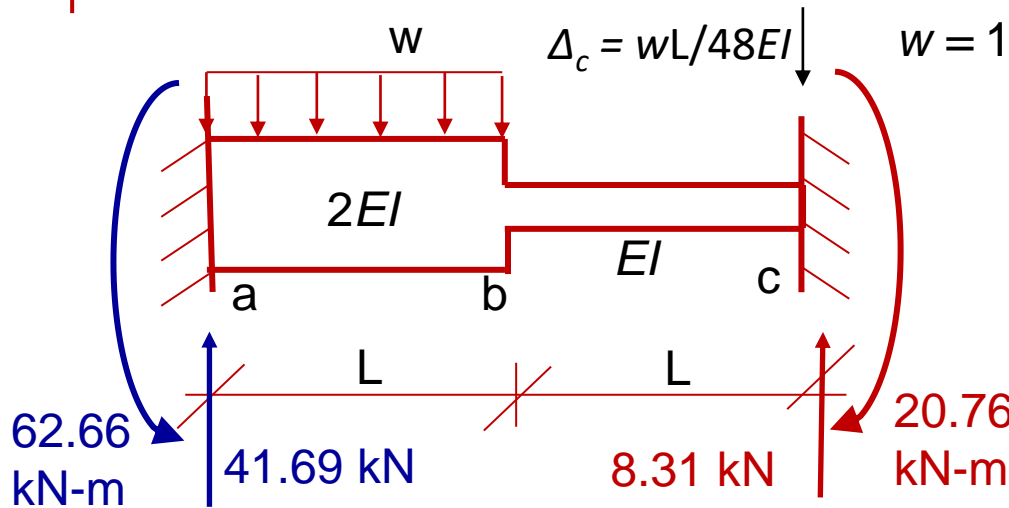

$$\{M\} = \{m_0\} + [m]\{R\}$$




$$\begin{Bmatrix} M_a \\ M_b \\ M_c \end{Bmatrix} = \begin{Bmatrix} -125 \\ 0 \\ 0 \end{Bmatrix} + \begin{bmatrix} 10 & 1 \\ 5 & 1 \\ 0 & 1 \end{bmatrix} \begin{Bmatrix} 8.31 \\ -20.76 \end{Bmatrix}$$

$$\begin{Bmatrix} M_a \\ M_b \\ M_c \end{Bmatrix} = \begin{Bmatrix} -62.66 \\ 20.79 \\ -20.76 \end{Bmatrix}$$

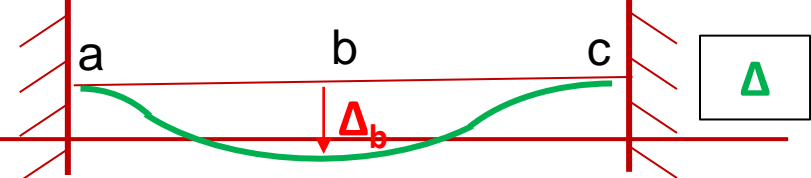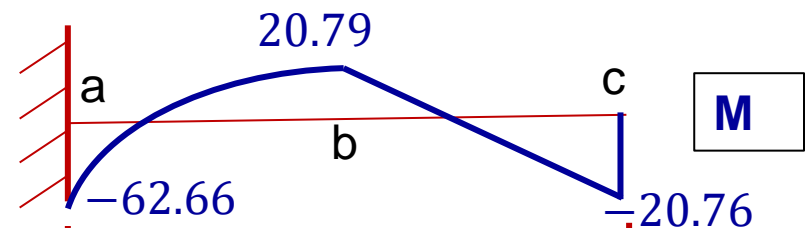

Deflection

$$\Delta_b = \Delta_{0b} + \Delta_{1b}R_1 + \Delta_{2b}R_2$$


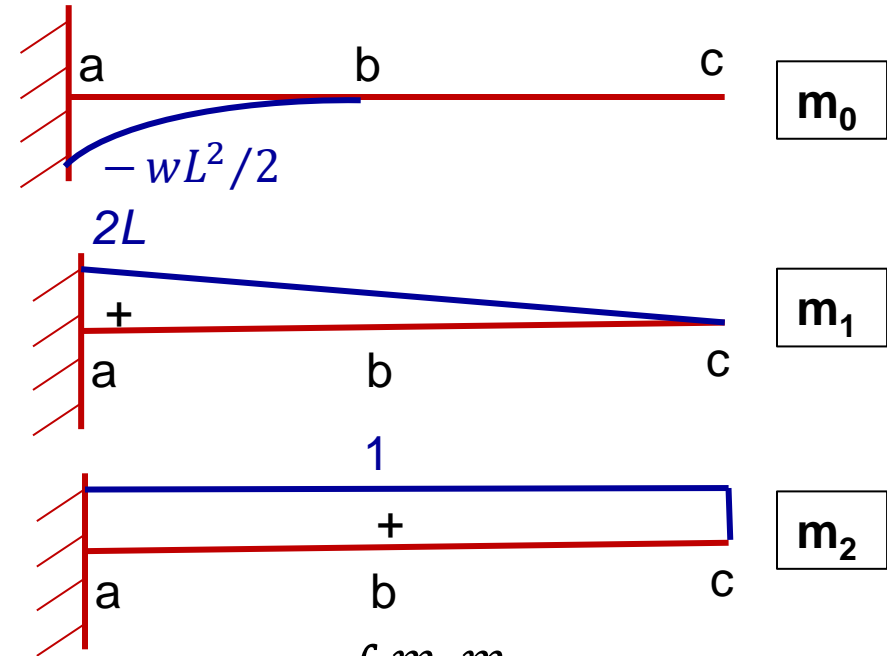
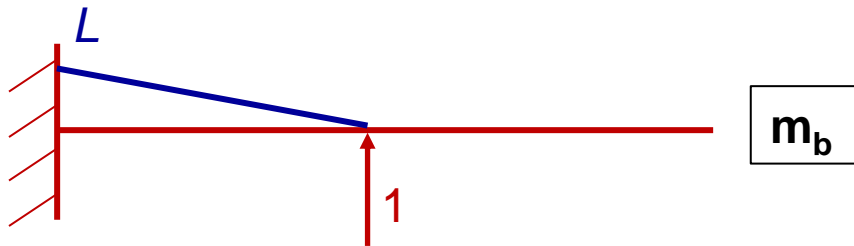
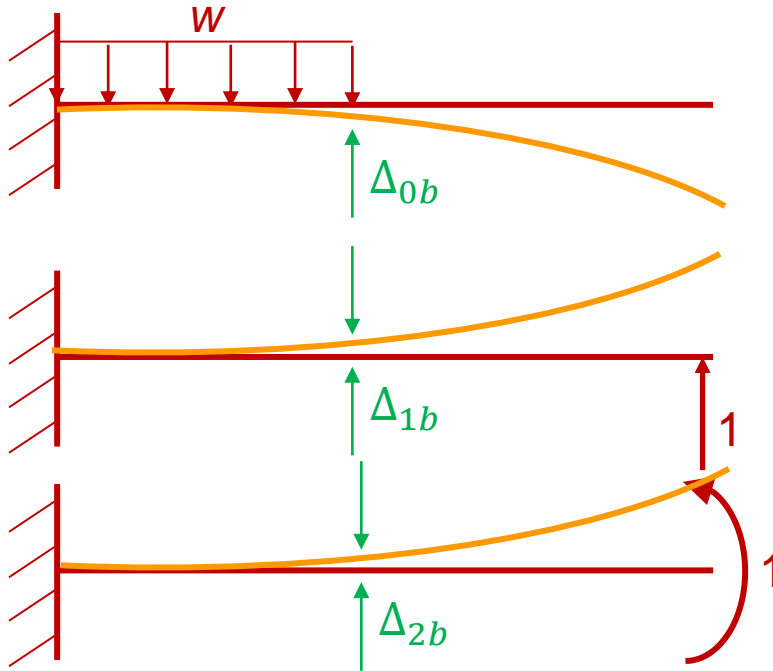


$$\Delta_{0b} = \int \frac{m_0 m_b}{EI} dx$$

$$\Delta_{1b} = \int \frac{m_1 m_b}{EI} dx$$

$$\Delta_{2b} = \int \frac{m_2 m_b}{EI} dx$$

Deflection Calculation

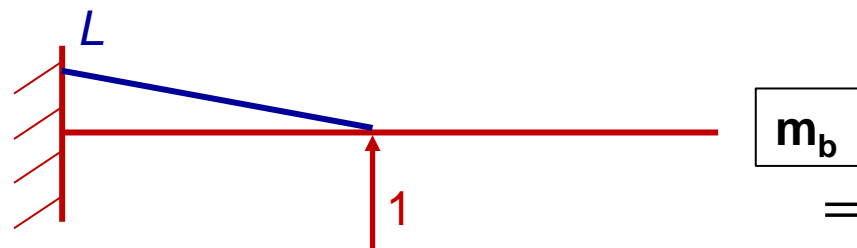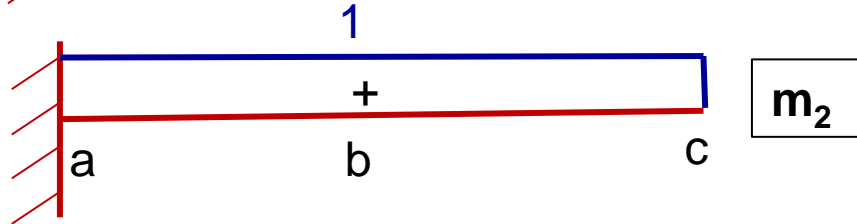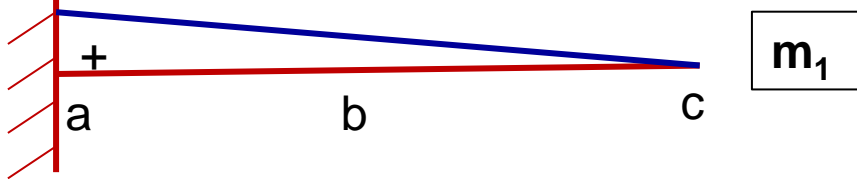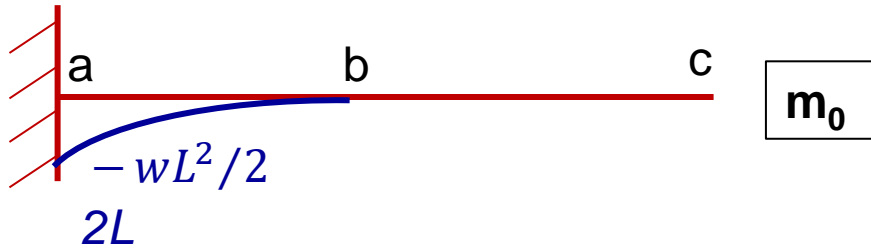

$$\Delta_{0b} = \int \frac{m_0 m_b}{EI} dx = \frac{L}{4 \times 2EI} \left(-\frac{wL^2}{2} \right) L$$

$$= -\frac{wL^4}{16EI} = -\frac{390.63}{EI}$$

$$\Delta_{1b} = \int \frac{m_1 m_b}{EI} dx = \frac{L}{6 \times 2EI} L(4L + L)$$

$$= \frac{5L^3}{12EI} = \frac{52.08}{EI}$$

$$\Delta_{2b} = \int \frac{m_2 m_b}{EI} dx = \frac{L}{2 \times 2EI} L \times 1$$


$$= \frac{L^2}{4EI} = \frac{6.25}{EI}$$

$$\Delta_b = \Delta_{0b} + \Delta_{1b} R_1 + \Delta_{2b} R_2$$

$$= -\frac{390.63}{EI} + \frac{52.08}{EI} \times 8.31 + \frac{6.25}{EI} (-20.76)$$

$$= -\frac{87.6}{EI}$$

Beam Problem with Internal Hinge

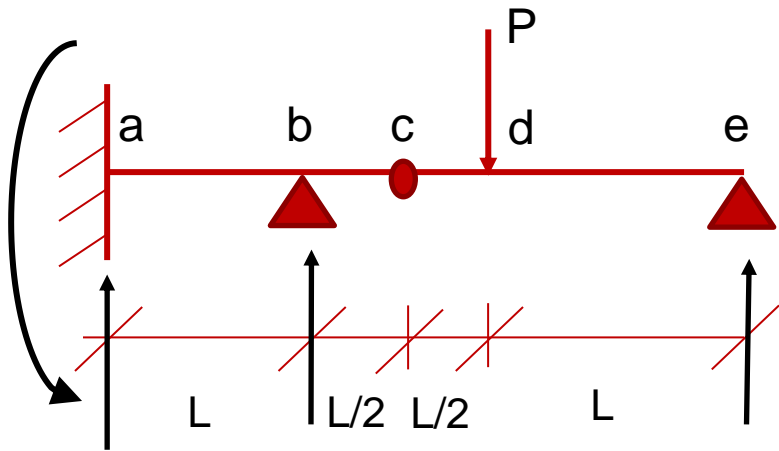




Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = 4 – 3 = 1

(Ignoring axial deformation for the beam problem)

Step 2: Select redundants and the released structure

The released structure must be stable.

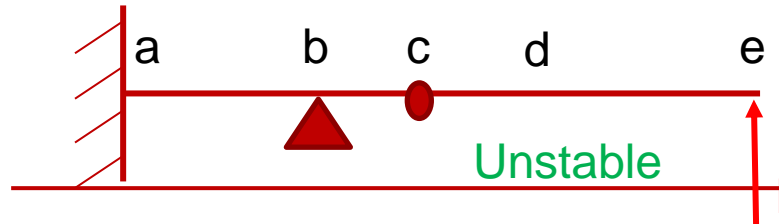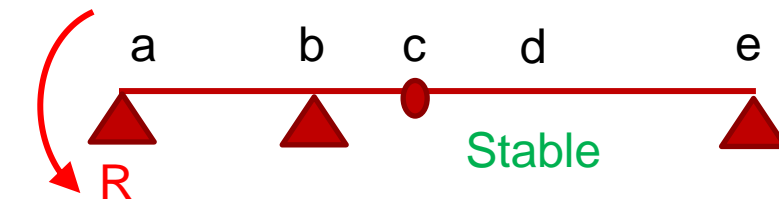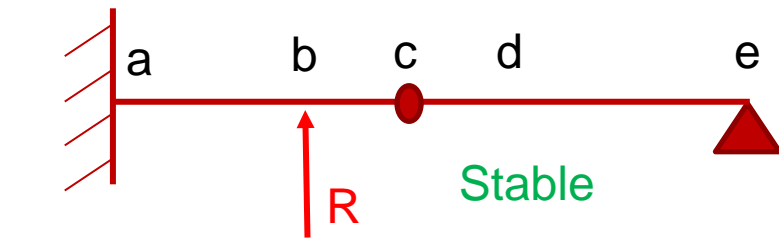


$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$

$$\Delta_0 + \delta R = \Delta_j$$

Solution of Flexibility Equation


$$\Delta_0 = \int \frac{m_0 m_1}{EI} dx; \quad \delta = \int \frac{m_1 m_1}{EI} dx;$$

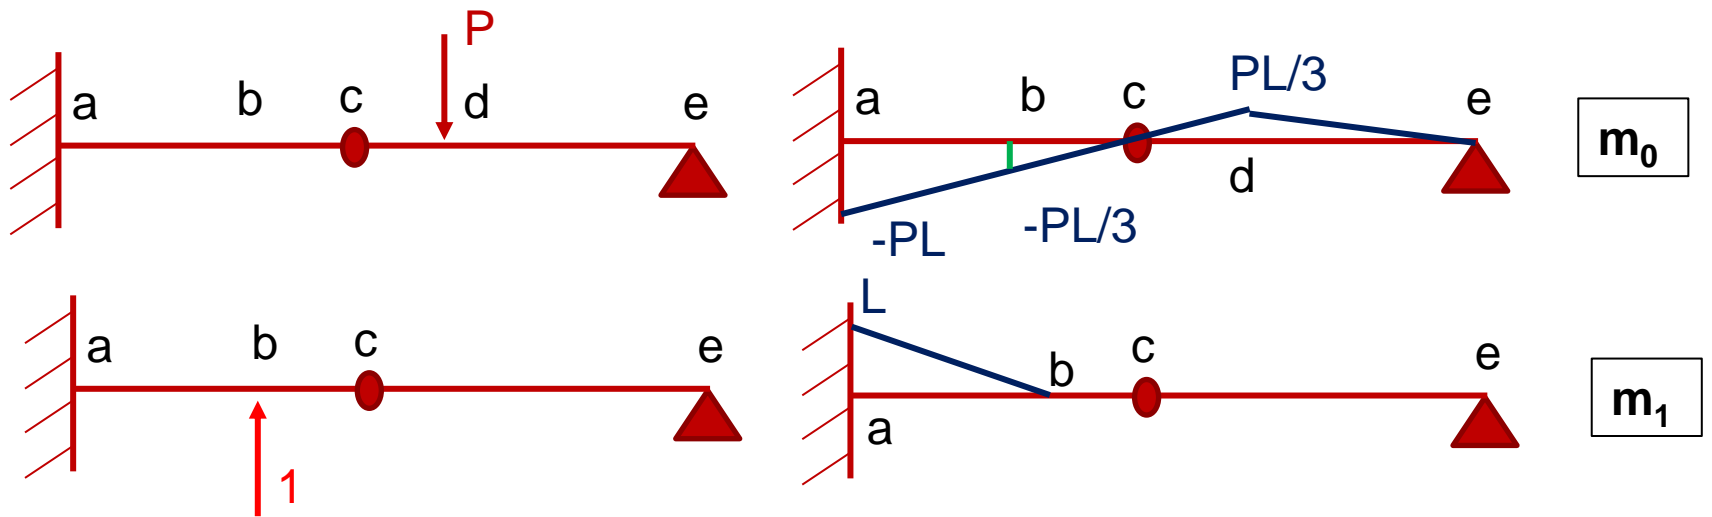

$$\Delta_0 = \int \frac{m_0 m_1}{EI} dx = \frac{L}{6EI} L \left(-2PL \times 2 - \frac{PL}{3} \right) = \frac{-13PL^3}{18EI}$$

$$\delta = \int \frac{m_1 m_1}{EI} dx = \frac{L^3}{3EI} \quad \Delta_0 + \delta R = 0 \quad R = -\frac{\Delta_0}{\delta} = \frac{13PL^3/18EI}{L^3/3EI} = \frac{13}{6}P$$


Bending Moment Diagram and Deflected Shape

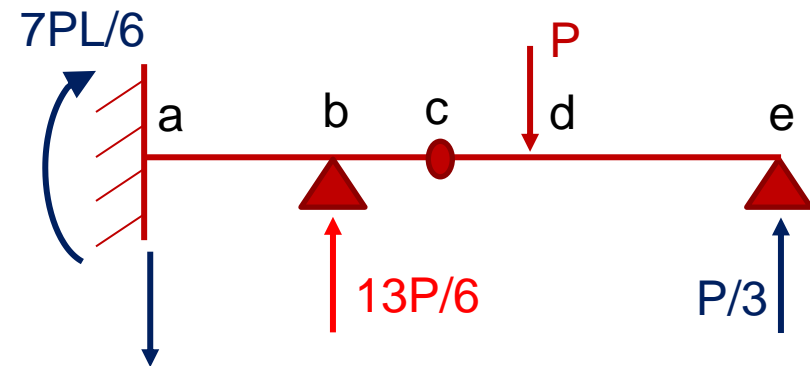


$$M = m_0 + m_1 R$$

$$\begin{Bmatrix} M_a \\ M_b \\ M_d \end{Bmatrix} = \begin{Bmatrix} -PL \\ PL \\ \frac{PL}{3} \end{Bmatrix} + \begin{Bmatrix} 0 \\ 0 \\ 0 \end{Bmatrix} \frac{13P}{6}$$


$$\begin{Bmatrix} M_a \\ M_b \\ M_d \end{Bmatrix} = \begin{Bmatrix} \frac{7PL}{6} \\ PL \\ \frac{PL}{3} \end{Bmatrix}$$

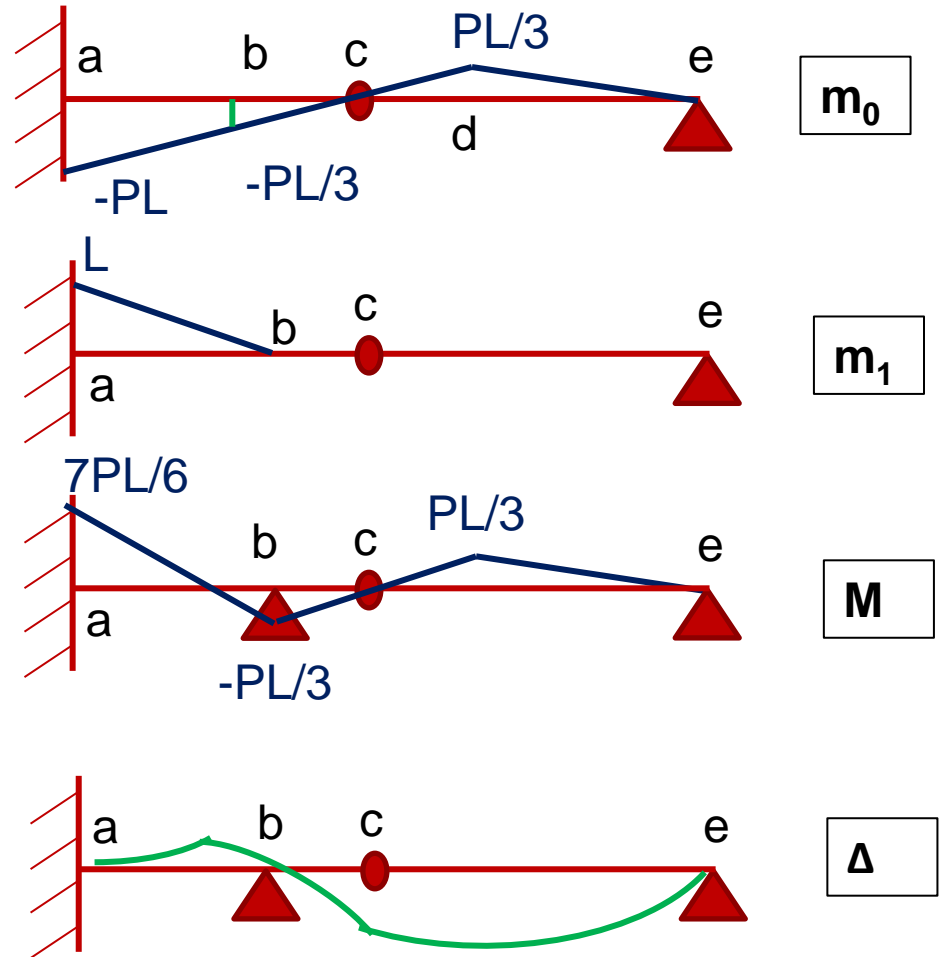

Beam Problem With Support Settlement

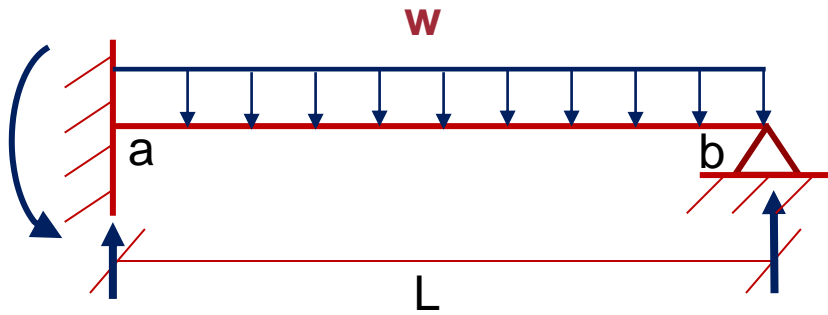

$$\Delta_b = \frac{L^3}{24EI} (\downarrow)$$

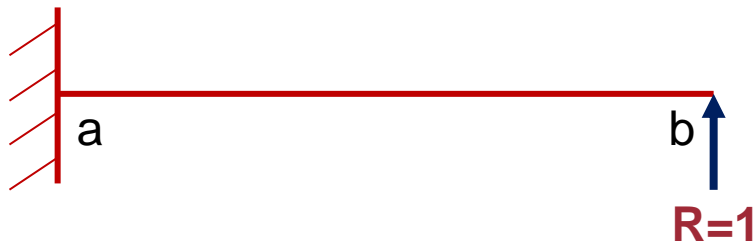


Step 1: Identification of Degree of Static Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = 3 – 2 = 1
(Ignoring axial deformation for the beam problem)


Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

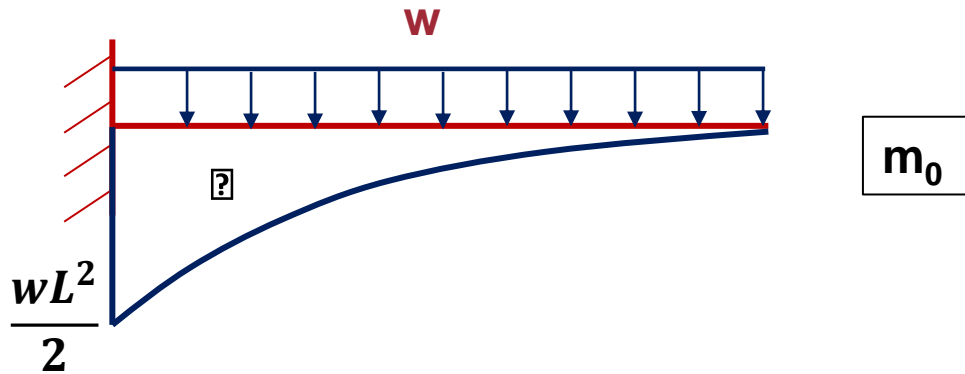

$$\begin{aligned}\Delta_0 &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L}{4EI} \left(-\frac{wL^2}{2} \right) L \\ &= -\frac{wL^4}{8EI}\end{aligned}$$

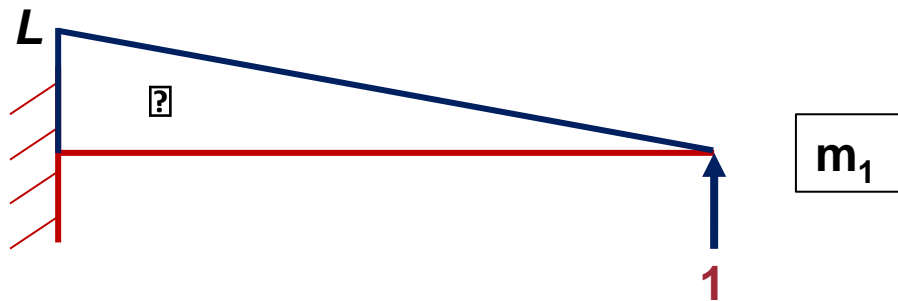

$$\begin{aligned}\delta &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{3EI}\end{aligned}$$

Solution of Flexibility Equation

$$\Delta_0 + \delta R = \Delta_s$$

$$\frac{-wL^4}{8EI} + \frac{L^3}{3EI}R = \frac{-L^3}{24EI}$$

$$\frac{-wL}{8} + \frac{R}{3} = \frac{-1}{24}$$

$$\boxed{R} = \frac{1}{8}(3wL - 1)$$

$$M = m_0 + m_1R$$


$$M_a = \frac{-wL^2}{2} + L \times \frac{1}{8}(3wL - 1)$$

$$= -\frac{wL^2}{2} + \frac{3wL^2}{8} - \frac{L}{8}$$

$$= -\frac{wL^2}{8} - \frac{L}{8}$$


$$= -\frac{L}{8}(wL + 1)$$

Beam Problem With Support Spring

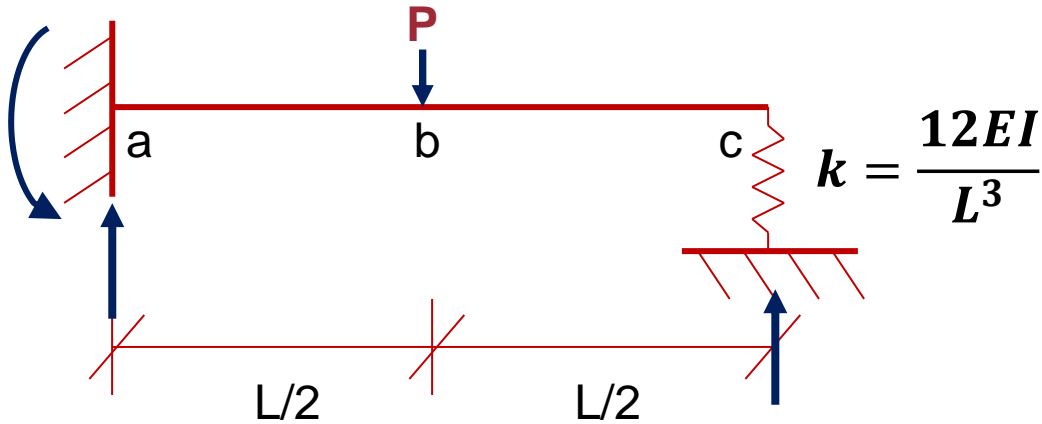

Step 1: Identification of Degree of Static Indeterminacy (DoSI)


DoSI = No. of Reactions – No. of Equilibrium Equations = $3 - 2 = 1$
(Ignoring axial deformation for the beam problem)

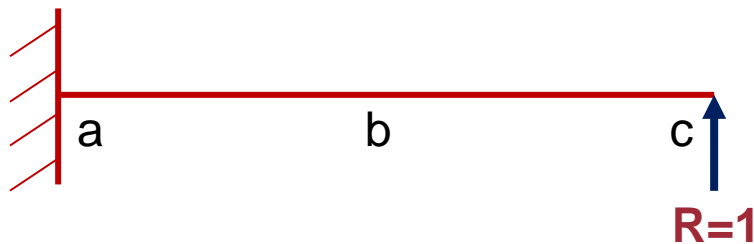


Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

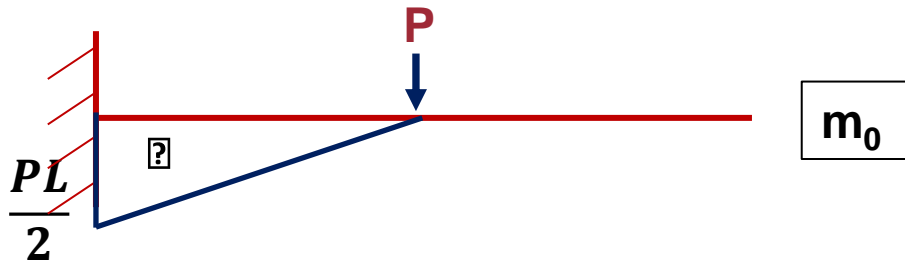


$$\begin{aligned}\Delta_0 &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L/2}{6EI} \left(-\frac{PL}{2} \right) \left(2L + \frac{L}{2} \right) \\ &= -\frac{PL^2}{24EI} \left(\frac{5L}{2} \right) \\ &= -\frac{5PL^3}{48EI}\end{aligned}$$

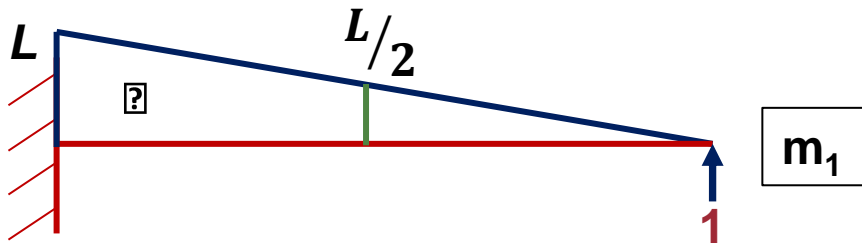

$$\begin{aligned}\delta &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{3EI}\end{aligned}$$

Solution of Flexibility Equation

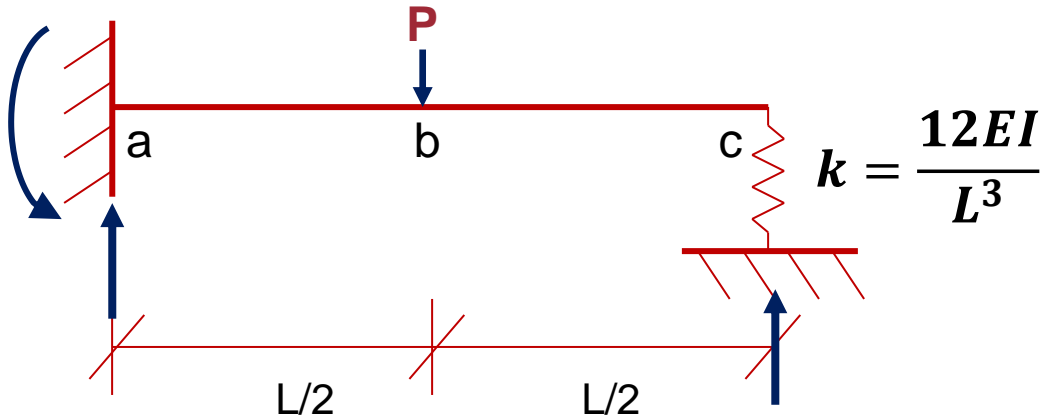

$$\begin{aligned}
 -k\Delta_s &= R ; \quad \Delta_s = \frac{-R}{k} \\
 &= \frac{-R}{12EI/L^3} \\
 &= \frac{-RL^3}{12EI}
 \end{aligned}$$


$$\Delta_0 + \delta R = \Delta_s$$

$$\frac{-5PL^3}{48EI} + \frac{L^3}{3EI}R = \frac{-L^3}{12EI}R$$



$$\frac{L^3}{EI} \left(\frac{1}{3} + \frac{1}{12} \right) R = \frac{5PL^3}{48EI}$$

$$\boxed{R} = \frac{P}{4}$$

Bending Moment Diagram and Deflected Shape

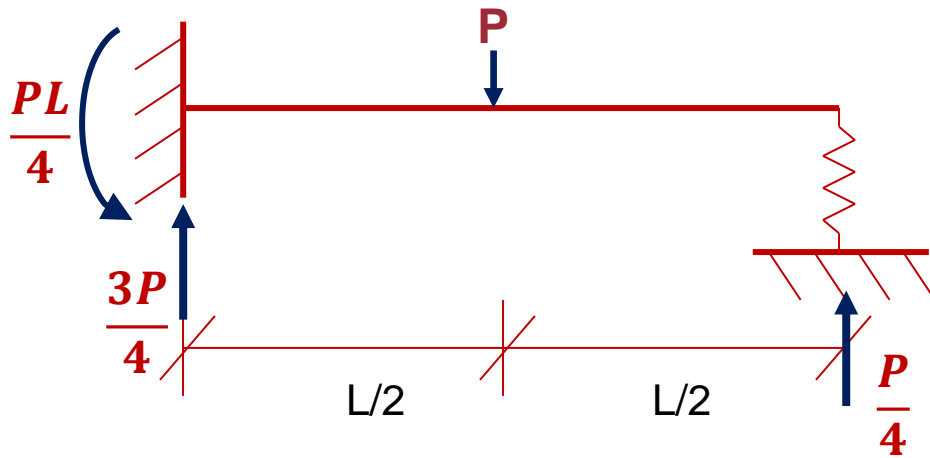


$$M = m_0 + m_1 R$$

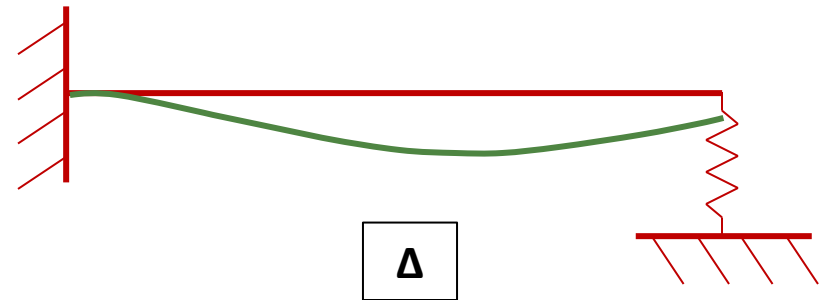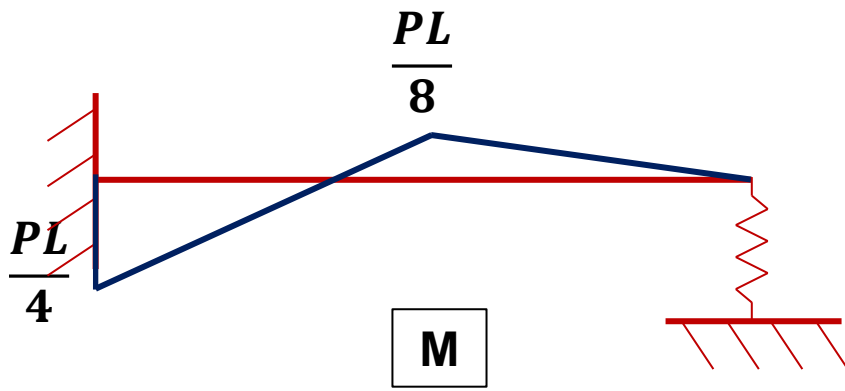

Week-(03)

MD Ehasan Kabir

Force Based Method/Flexibility Method

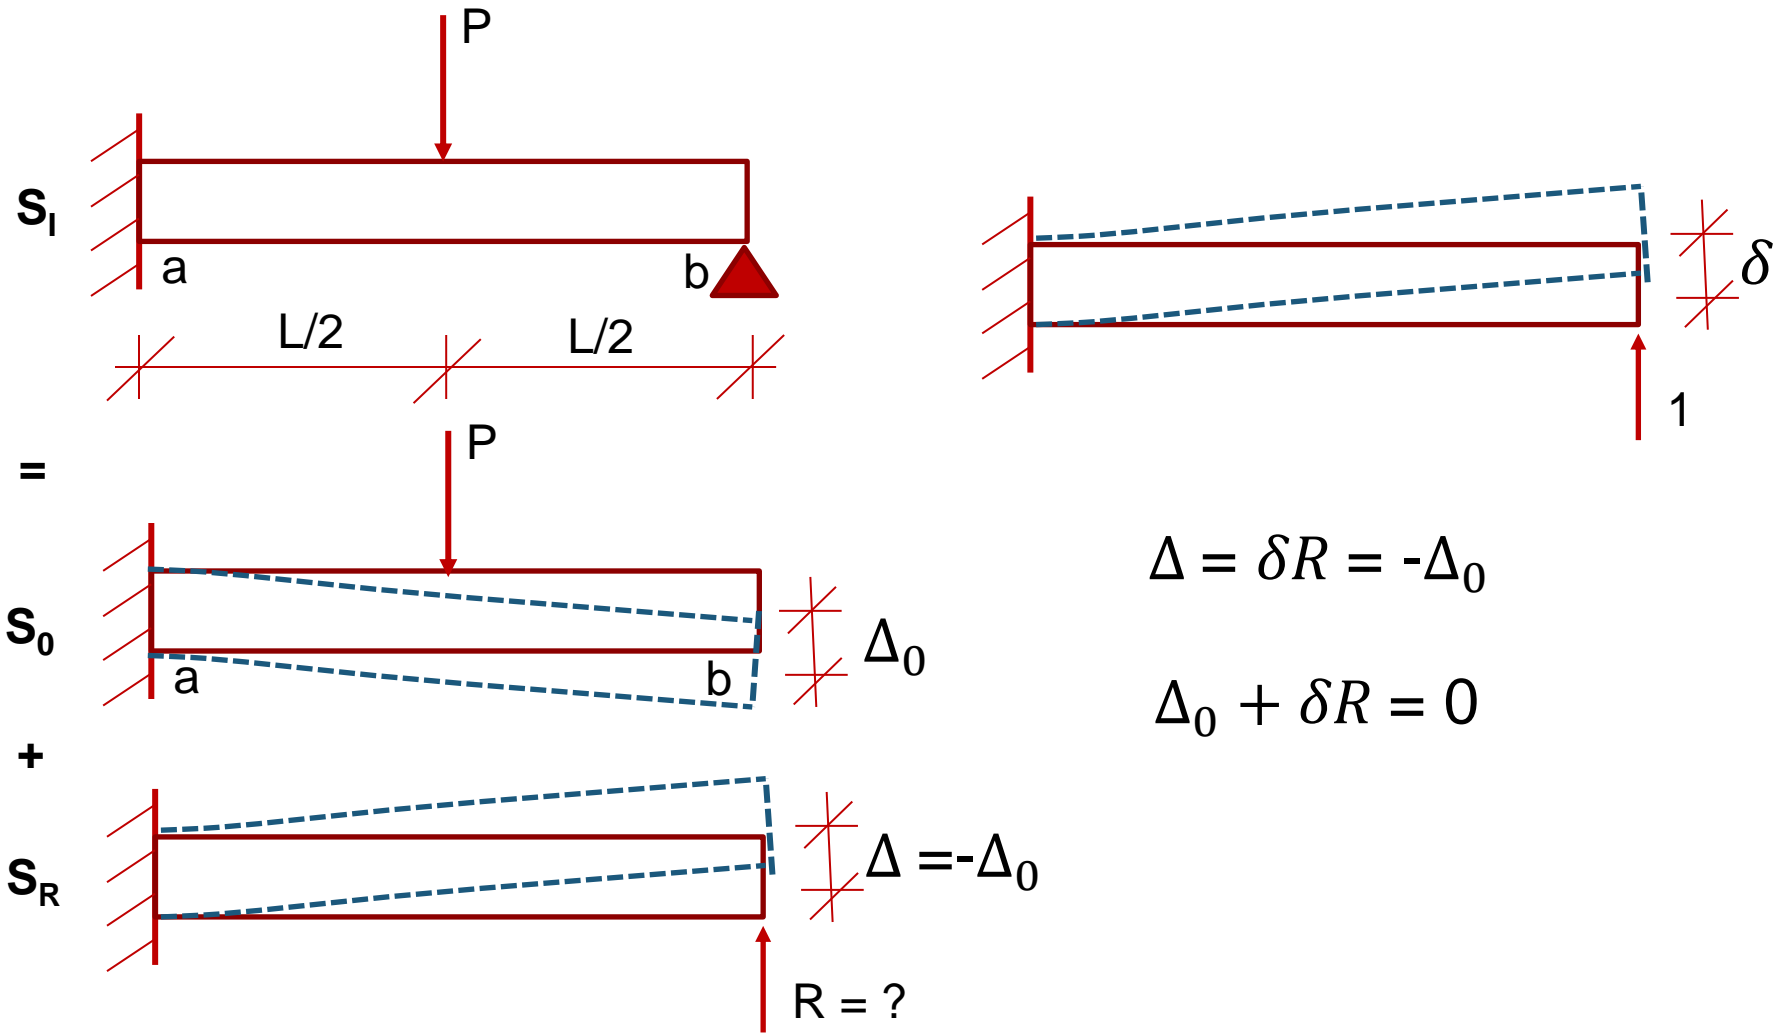


Solution

DoSI = 2

Calculation of Deformations: Unit Load Method


P-Force System

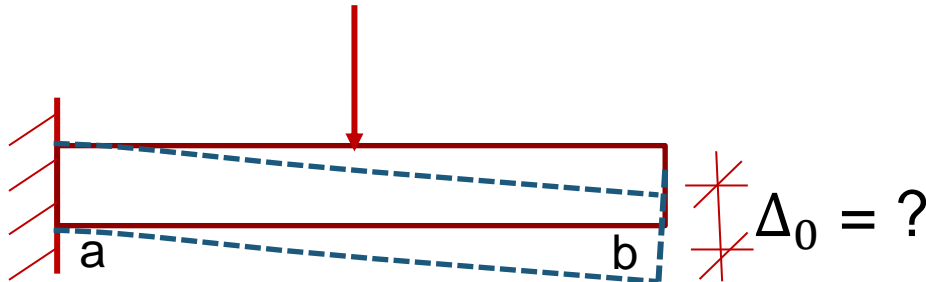


$PL/2$

M_P

Q-Force System

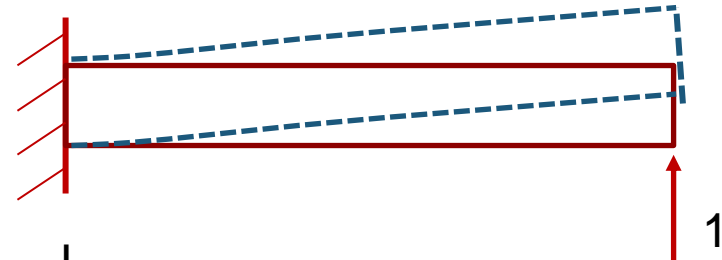

L



M_Q

Virtual Work Principle: External Virtual Work = Internal Virtual Work

$$F_Q \Delta_P = \int \sigma_Q \varepsilon_P dV \Rightarrow 1 \times \Delta_0 = \iint \frac{M_Q y}{I} \frac{M_P y}{EI} dA dx = \int \frac{M_P M_Q}{EI^2} \int y^2 dA dx$$

$$\Delta_0 = \int \frac{M_P M_Q}{EI} dx$$




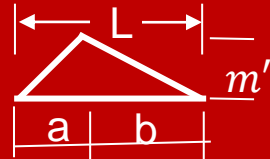
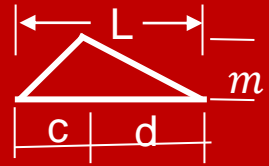
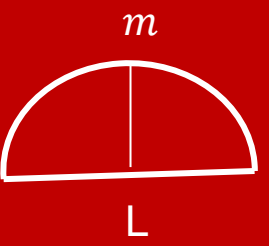
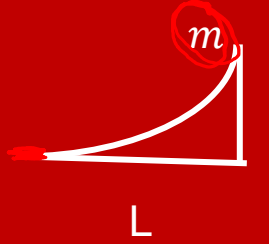
Determination of Δ_0 and δ


Product Integral

$\int_0^L mm' dx$				
	$mm'L$	$\frac{1}{2}mm'L$	$\frac{1}{2}m(m'_1 + m'_2)L$	$\frac{2}{3}mm'L$
	$\frac{1}{2}mm'L$	$\frac{1}{3}mm'L$	$\frac{1}{6}m(m'_1 + 2m'_2)L$	$\frac{5}{12}mm'L$
	$\frac{1}{2}mm'L$	$\frac{1}{6}mm'L$	$\frac{1}{6}m(2m'_1 + m'_2)L$	$\frac{1}{4}mm'L$
	$\frac{1}{2}(m_1 + m_2)m'L$	$\frac{1}{6}(m_1 + 2m_2)m'L$	$\frac{1}{6}m_1(2m'_1 + m'_2)L + \frac{1}{6}m_2(m'_1 + 2m'_2)L$	$\frac{1}{12}m'(3m_1 + 5m_2)L$
	$\frac{1}{2}mm'L$	$\frac{1}{6}mm'(L + a)$	$\frac{1}{6}m[m'_1(L + b) + m'_2(L + a)]$	$\frac{1}{12}mm' \left(3 + \frac{3a}{L} - \frac{a^2}{L^2} \right) L$


Product Integral



$\int_0^L mm' dx$				
	$\frac{1}{2} mm' L$	$\frac{1}{6} mm'(L + a)$	$\frac{1}{6} m[m'_1(L + b) + m'_2(L + a)]$	<p>For $c \leq a$:</p> $\left(\frac{1}{3} - \frac{(a-c)^2}{6ad}\right) mm' L$
	$\frac{2}{3} mm' L$	$\frac{1}{3} mm' L$	$\frac{1}{3} m(m'_1 + m'_2)L$	$\frac{1}{3} mm' \left(L + \frac{ab}{L}\right)$
	$\frac{1}{3} mm' L$	$\frac{1}{4} mm' L$	$\frac{1}{12} m(m'_1 + 3m'_2)L$	$\frac{1}{12} mm' \left(3a + \frac{a^2}{L^2}\right)$



Determination of Δ_0 and δ

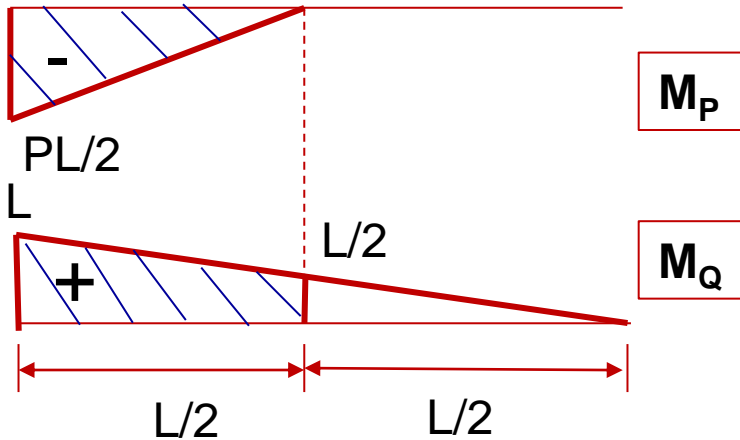


$$\Delta_0 = \int \frac{M_P M_Q}{EI} dx$$

$$= \frac{1}{6EI} (2m_1 + m_2) m' L$$

$$= \frac{-1}{6EI} (2L + L/2) \frac{PL}{2} \frac{L}{2}$$



$$= -\frac{5PL^3}{48EI}$$

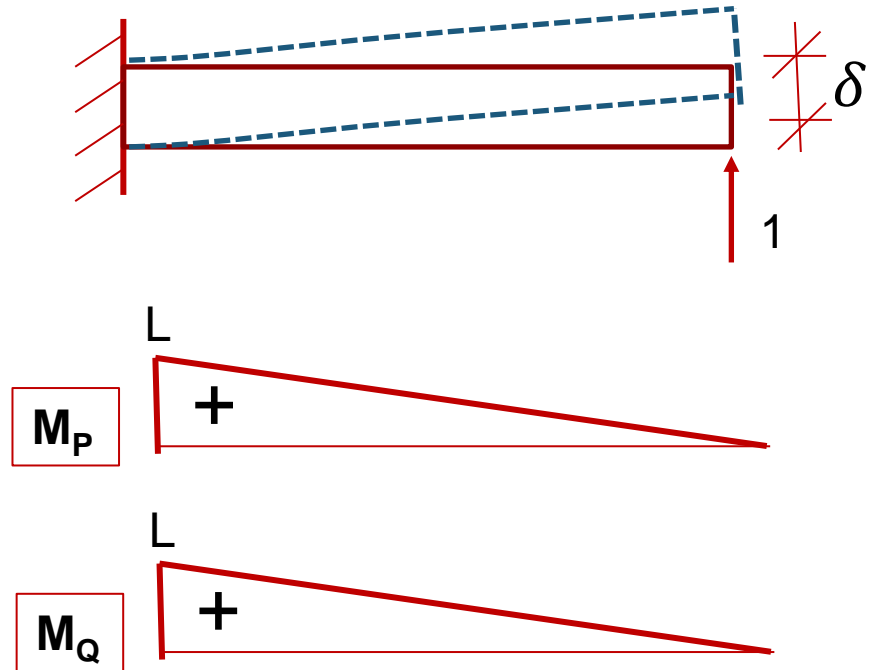

$$\delta = \int \frac{M_P M_Q}{EI} dx$$

$$= \frac{1}{3EI} mm' L = \frac{1}{3EI} LLL = \frac{L^3}{3EI}$$

Solution of Problem 1

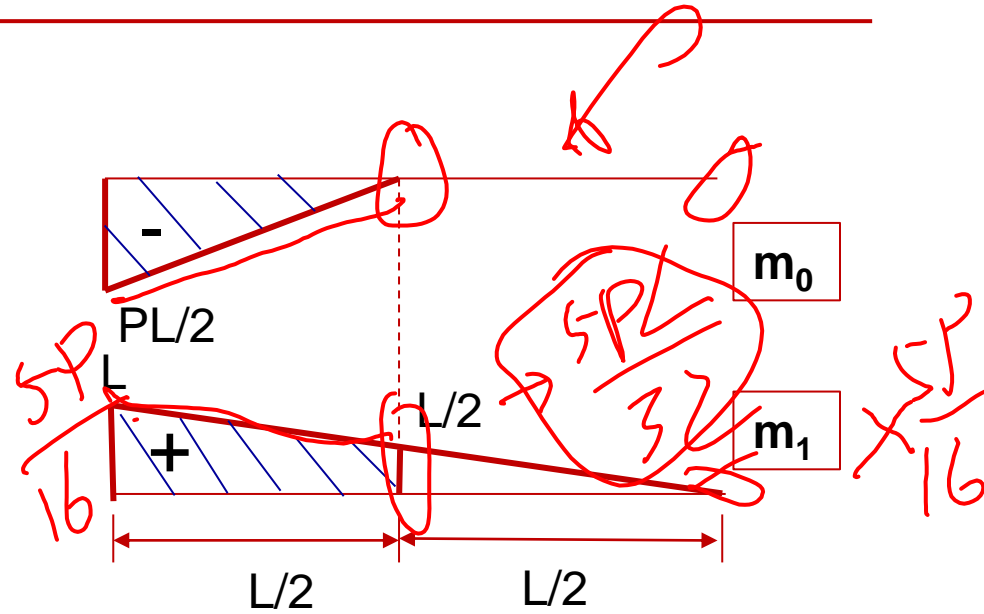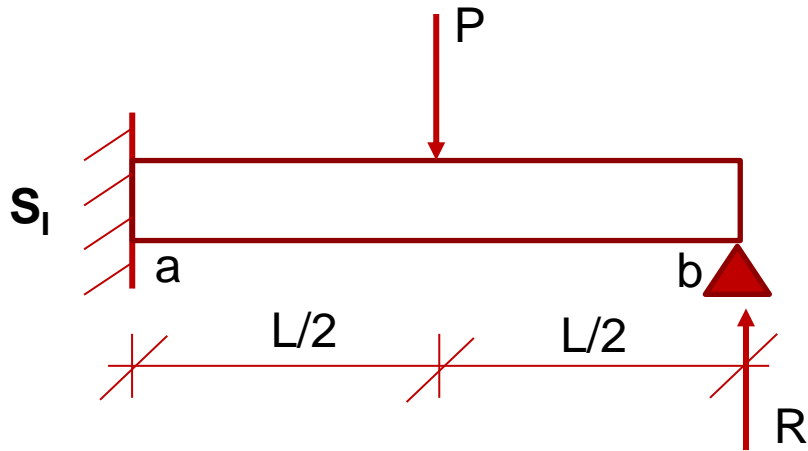


$$\Delta_0 + \delta R = 0$$


$$\Delta_0 = -\frac{5PL^3}{48EI}$$

$$\delta = \frac{L^3}{3EI} \quad R = \frac{5P}{16}$$

$$M = m_0 + m_1 R$$

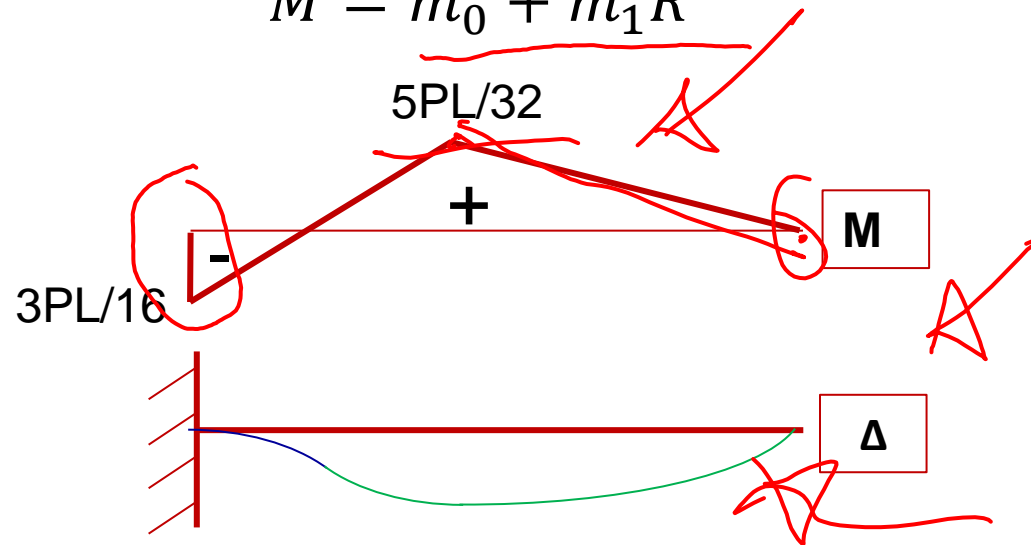

Beam Problem with DoSI > 1

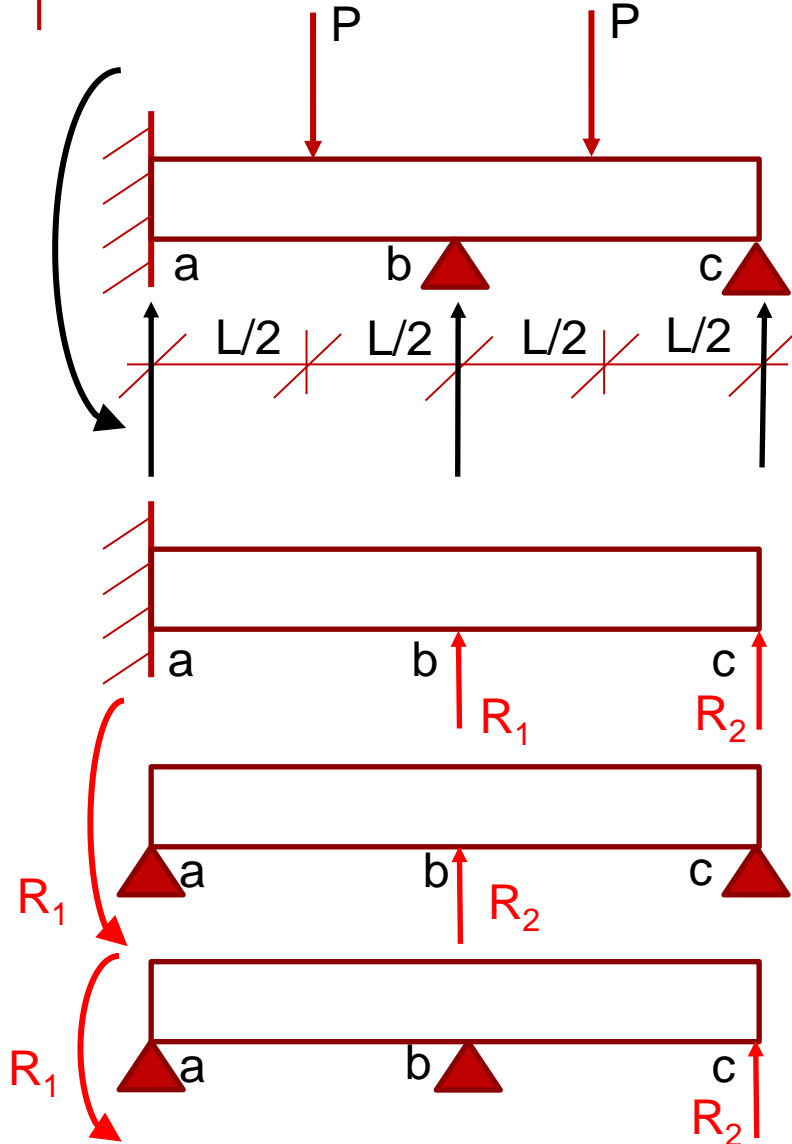

Step 1: Identification of Degree of Static Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = 4 – 2 = 2





(Ignoring axial deformation for the beam problem)

Step 2: Select redundants and the released structure

The released structure must be stable.

DoSI = 1

Superposition of Redundants

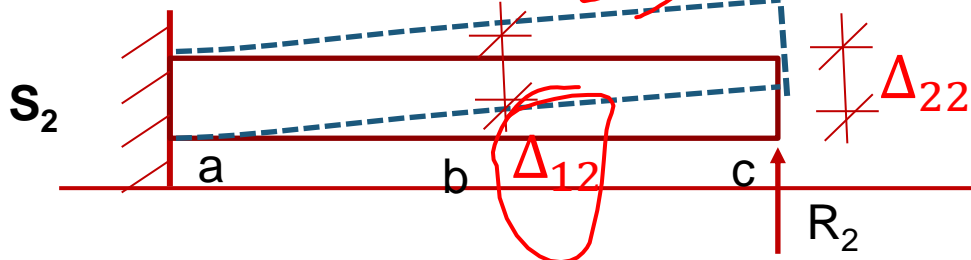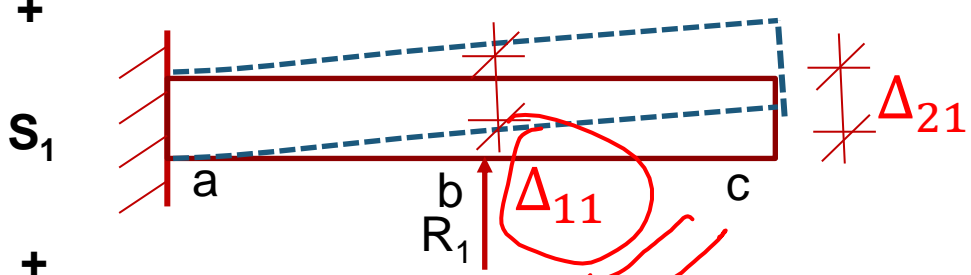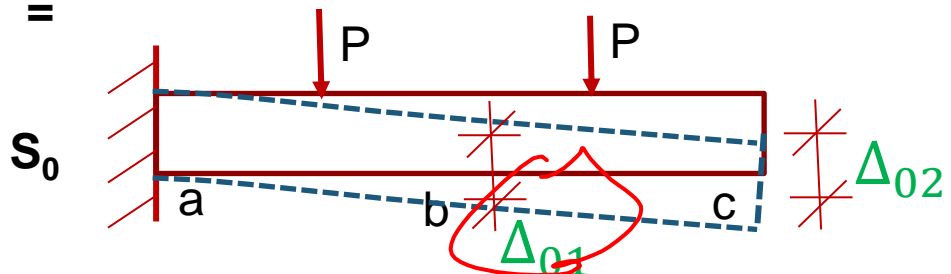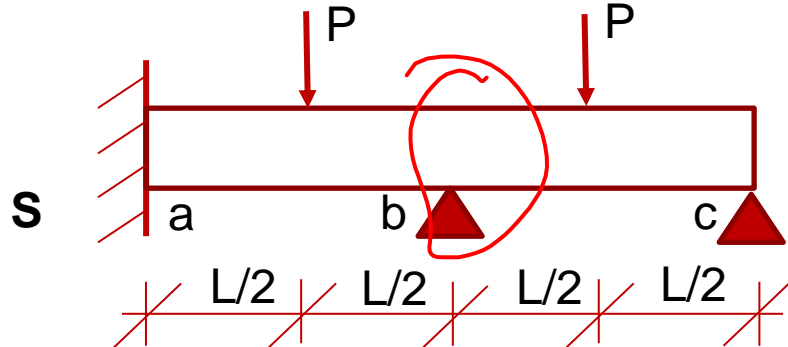

$$\Delta_b = \Delta_{01} + \Delta_{11} + \Delta_{12} = 0$$



$$\Delta_c = \Delta_{02} + \Delta_{21} + \Delta_{22} = 0$$

$$\Delta_{11} = \delta_{11} R_1 \quad \Delta_{21} = \delta_{21} R_1$$

$$\Delta_{12} = \delta_{12} R_2 \quad \Delta_{22} = \delta_{22} R_2$$

$$\delta_{ij} = \frac{\Delta_{ij}}{R_j}$$

i : Deform; j : Force

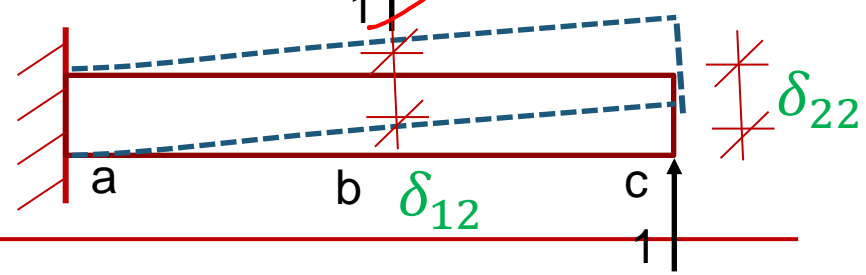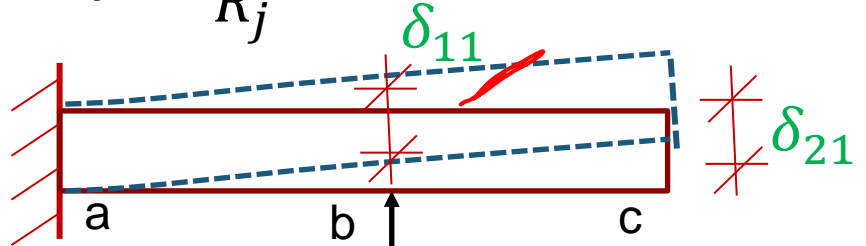

Flexibility Equation







$$\Delta_{01} + \delta_{11}R_1 + \delta_{12}R_2 = 0$$





$$\Delta_{02} + \delta_{21}R_1 + \delta_{22}R_2 = 0$$

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$

Step 3: Plotting bending moment diagrams (For calculation of deformations and flexibilities)

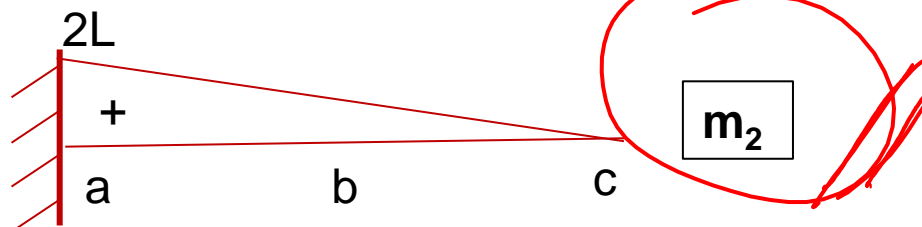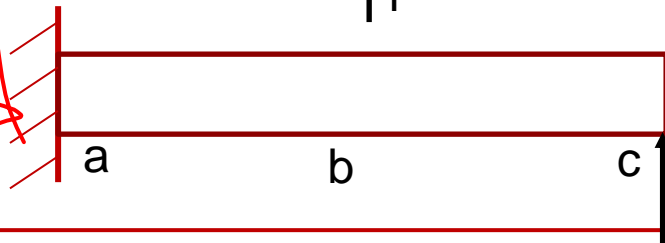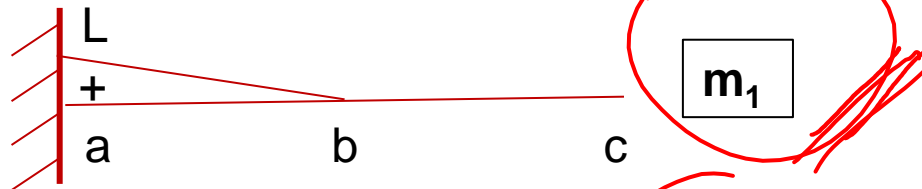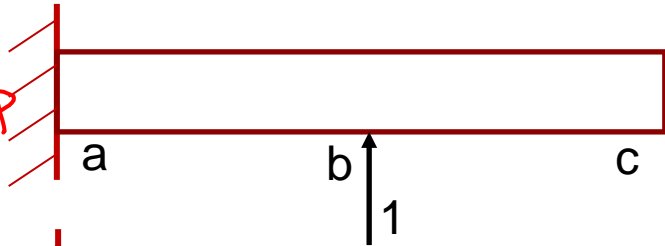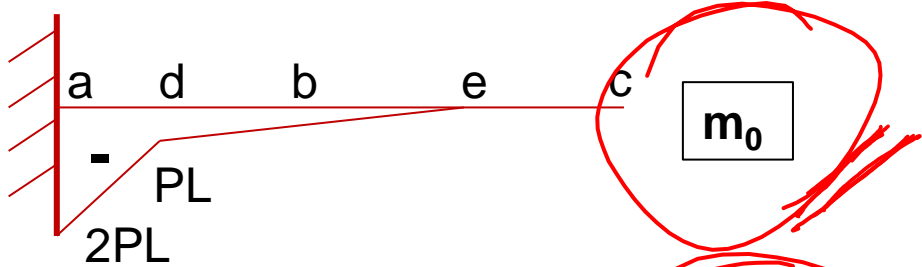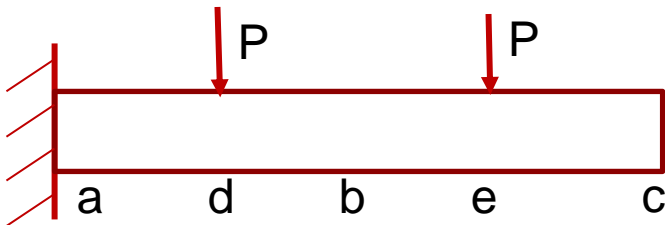


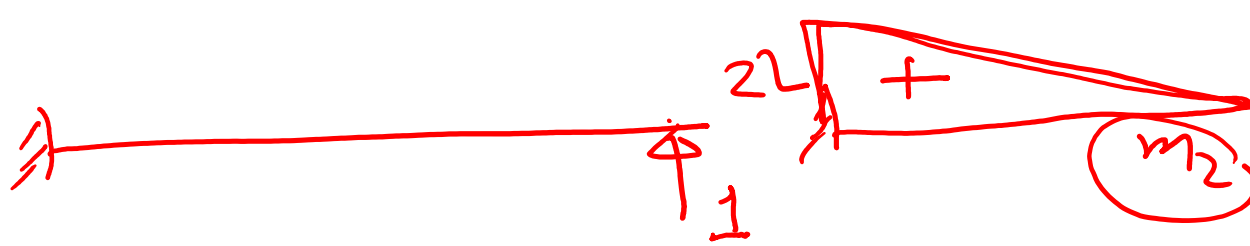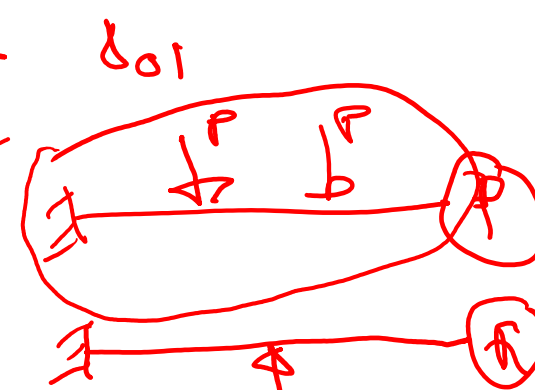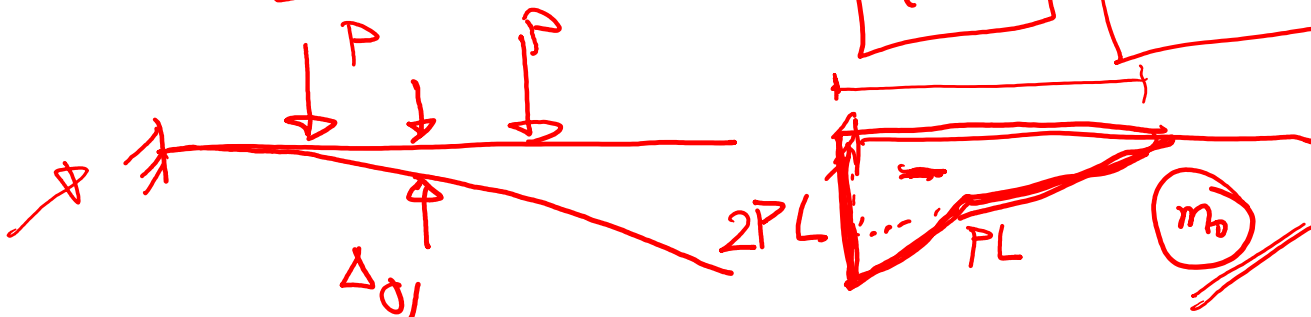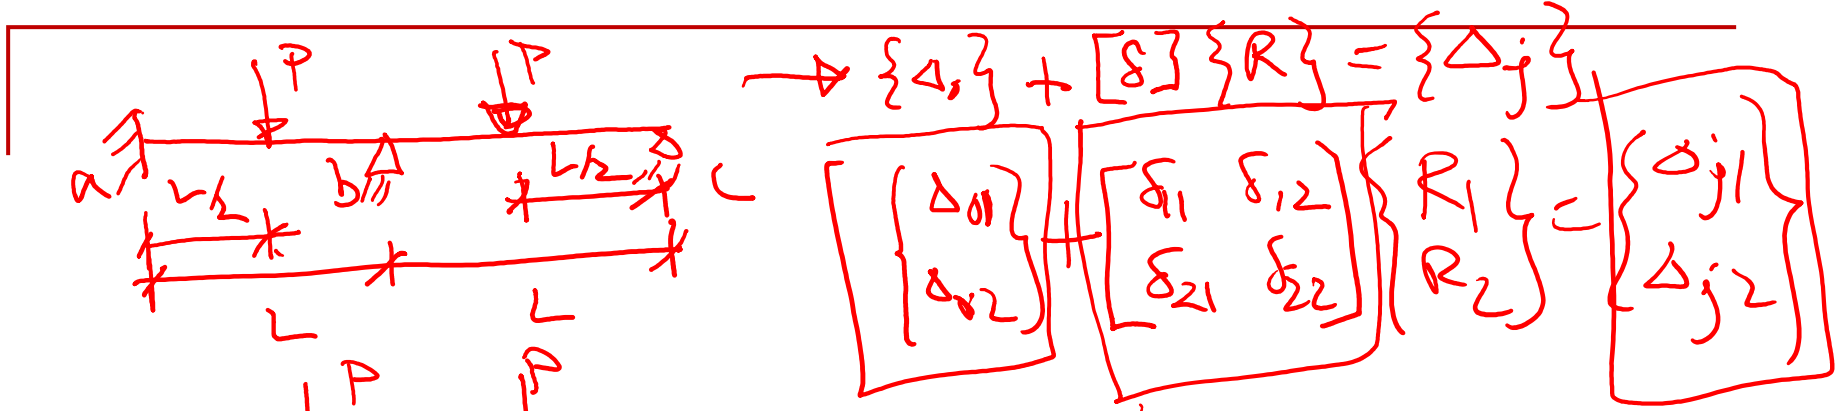





$$\Delta_{j1} = \int_L \frac{M_p M_0}{EI} dx$$

$$= \int_L \frac{m_0 m_1}{EI} dx$$

Δ_{02}

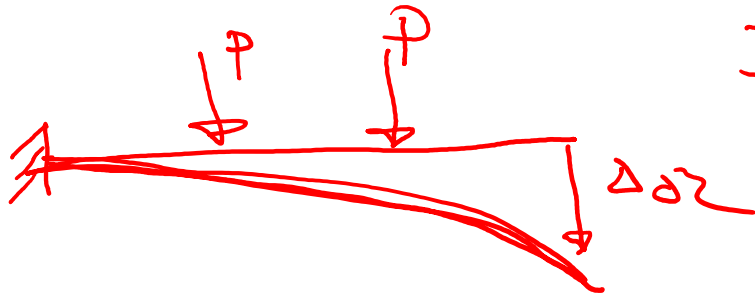

Def. δ_{11} force

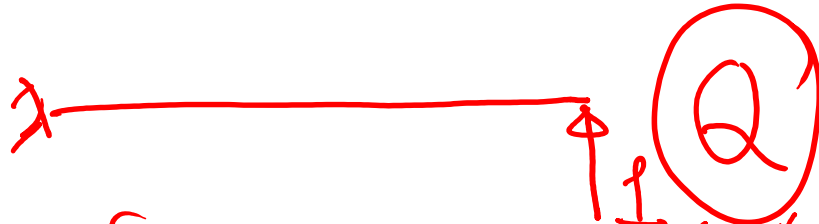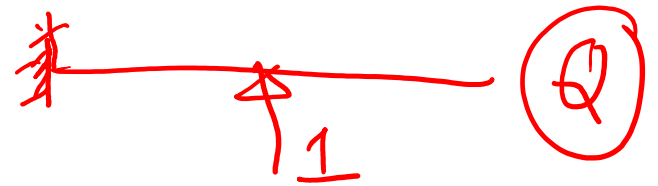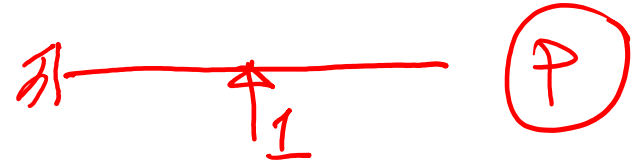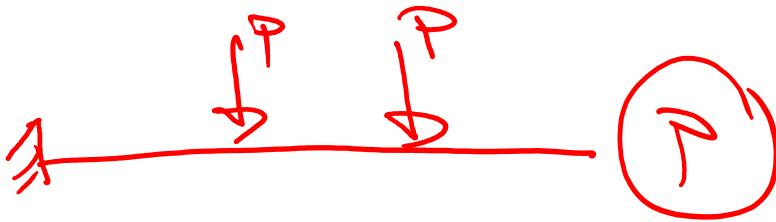

$$\Delta = \int \frac{M_P M_Q}{EI} dx$$

$$\delta_{11} = \int \frac{m_1 m_1}{EI} dx$$


$$\Delta_{02} = \int \frac{M_P M_Q}{EI} dx = \int \frac{m_1 m_2}{EI} dx$$

Calculation of Deformations and Flexibilities

Step 4: Calculations of deformations and flexibilities (From bending moments)

$$\Delta_{01} = \int \frac{m_0 m_1}{EI} dx; \quad \Delta_{02} = \int \frac{m_0 m_2}{EI} dx; \quad \delta_{11} = \int \frac{m_1 m_1}{EI} dx;$$

$$\delta_{12} = \delta_{21} = \int \frac{m_1 m_2}{EI} dx; \quad \delta_{22} = \int \frac{m_2 m_2}{EI} dx;$$

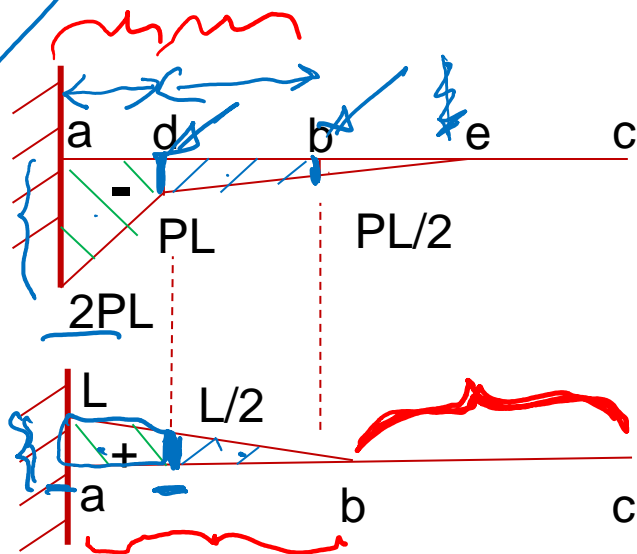


m_0

m_1

$$\begin{aligned} \Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L/2}{6EI} \left\{ -2PL \left(2L + \frac{L}{2} \right) - PL \left(L + 2 \frac{L}{2} \right) \right\} \\ &\quad + \frac{L/2}{6EI} \frac{L}{2} \left(-2PL - \frac{PL}{2} \right) = -\frac{7PL^3}{12EI} - \frac{5PL^3}{48EI} \\ &= -\frac{33PL^3}{48EI} = -\frac{11PL^3}{16EI} \end{aligned}$$

Table of Product Integral


Calculation of Deformations and Flexibilities

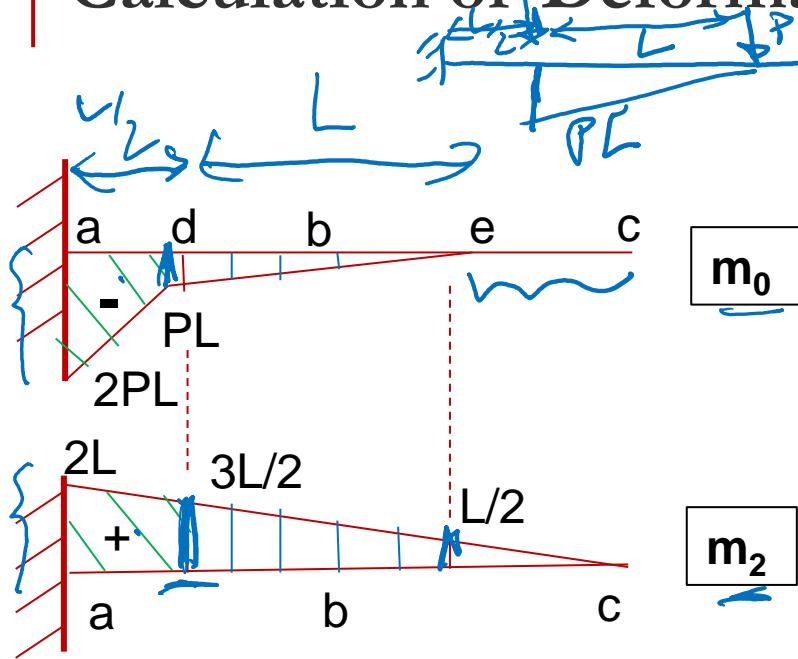

$$\Delta_{02} = \int \frac{m_0 m_2}{EI} dx$$

$$= \frac{L/2}{6EI} \left\{ -2PL \left(\frac{4L}{2} + \frac{3L}{2} \right) - PL \left(\frac{2L}{2} + 2 \frac{3L}{2} \right) \right\} + \frac{L}{6EI} (-PL) \left(\frac{3L}{2} + \frac{L}{2} \right)$$


$$= -\frac{4PL^3}{3EI} - \frac{7PL^3}{12EI} = -\frac{23PL^3}{12EI} = -\frac{23PL^3}{12EI}$$

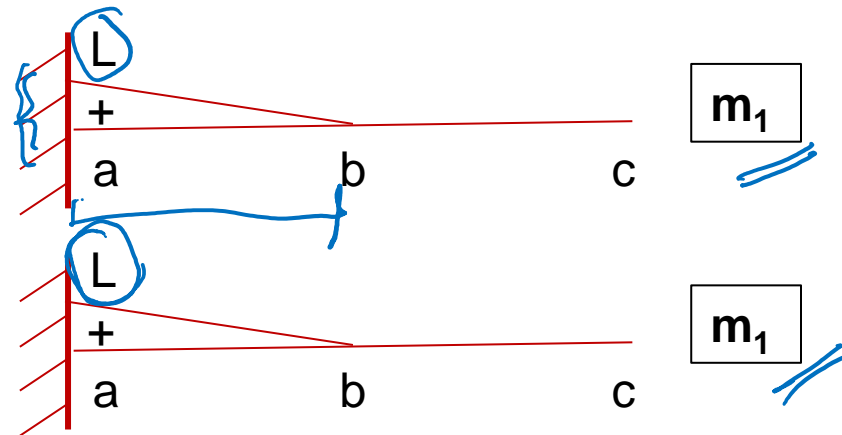

$$\delta_{11} = \int \frac{m_1 m_1}{EI} dx = \frac{L}{3EI} LL = \frac{L^3}{3EI}$$


Table of Product Integral

Calculation of Deformations and Flexibilities

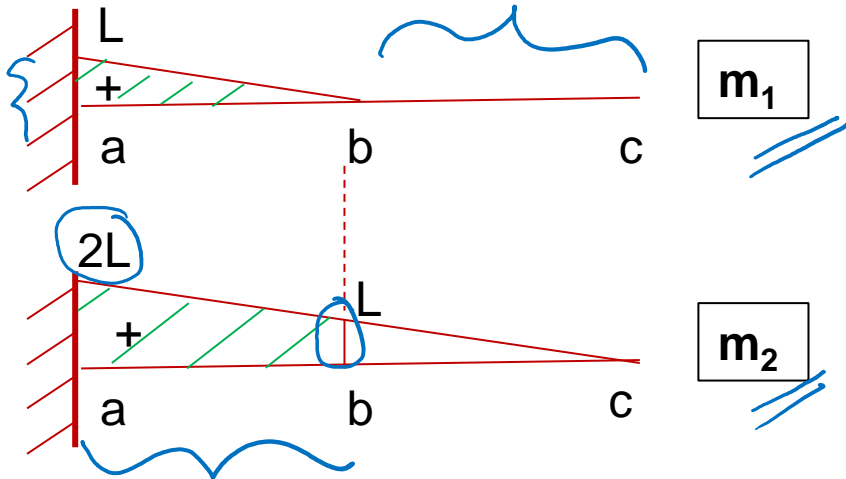

$$\delta_{12} = \delta_{21} = \int \frac{m_1 m_2}{EI} dx$$

$$= \frac{L}{6EI} L(4L + L) = \frac{5L^3}{6EI}$$

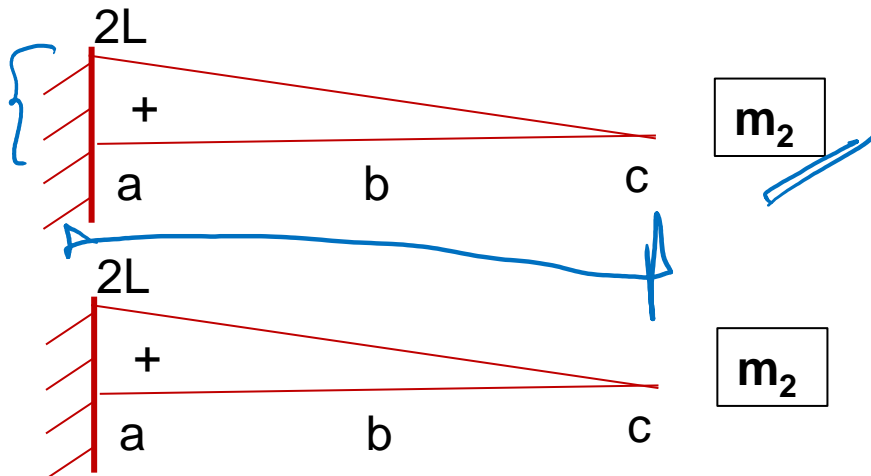

$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx = \frac{2L}{3EI} 2L 2L = \frac{8L^3}{3EI}$$

Solving Flexibility Equation

Step 5: Solving flexibility equation

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\begin{Bmatrix} -\frac{11}{16} \\ \frac{23}{12} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$


$$\begin{bmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{11}{16} \\ \frac{23}{12} \end{Bmatrix} P$$

$$R_1 = \frac{\begin{vmatrix} \frac{11}{16} & \frac{5}{6} \\ \frac{23}{12} & \frac{8}{3} \end{vmatrix}}{\begin{vmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{vmatrix}} P = \frac{0.236}{0.194} P = 1.22P$$

$$R_2 = \frac{\begin{vmatrix} \frac{1}{3} & \frac{11}{16} \\ \frac{5}{6} & \frac{23}{12} \end{vmatrix}}{\begin{vmatrix} \frac{1}{3} & \frac{5}{6} \\ \frac{5}{6} & \frac{8}{3} \end{vmatrix}} P = \frac{0.066}{0.194} P = 0.34P$$

Equilibrium and Internal Forces

Step 6: Applying equilibrium condition and drawing bending moment diagrams

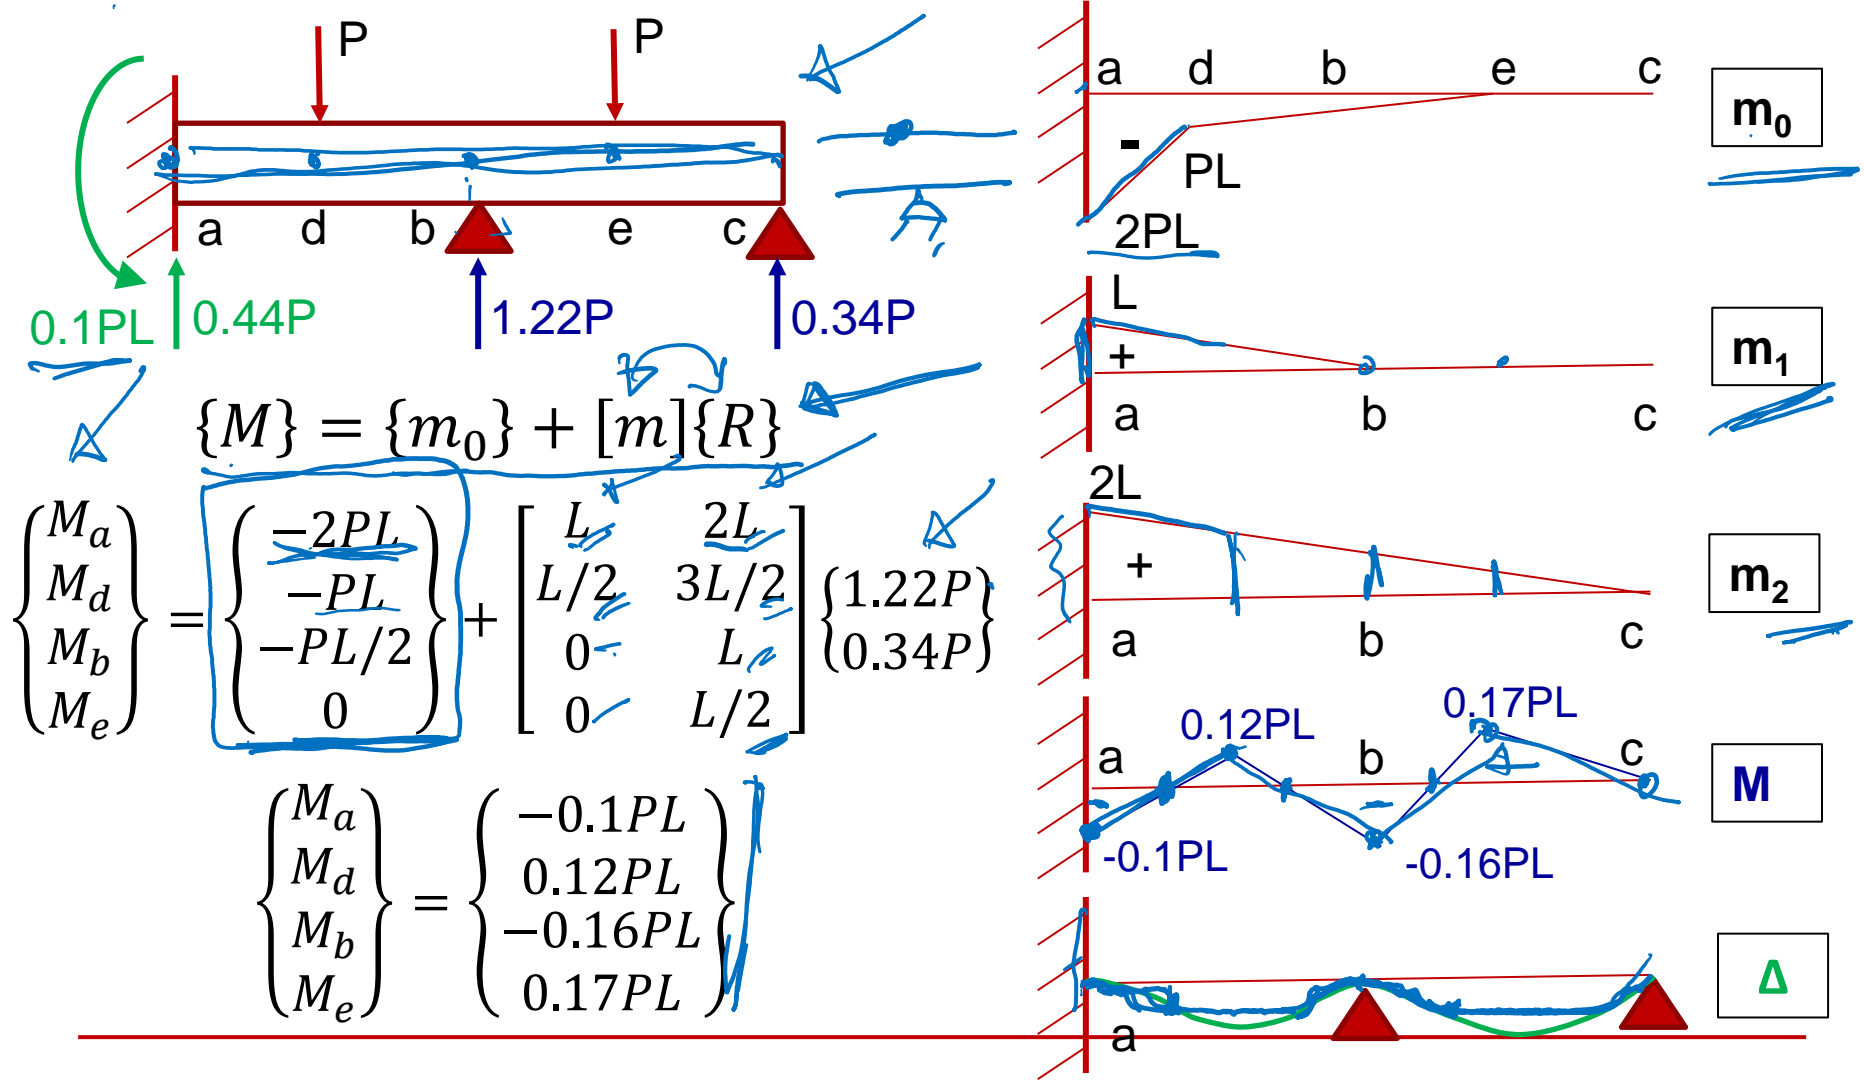

Non-Prismatic Beam

$w = 10 \text{ kN/m}$, $L = 5 \text{ m}$, $EI = 1000 \text{ kN-m}^2$


Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = 4 – 2 = 2

(Ignoring axial deformation for the beam problem)

Step 2: Select redundants and the released structure

The released structure must be stable.

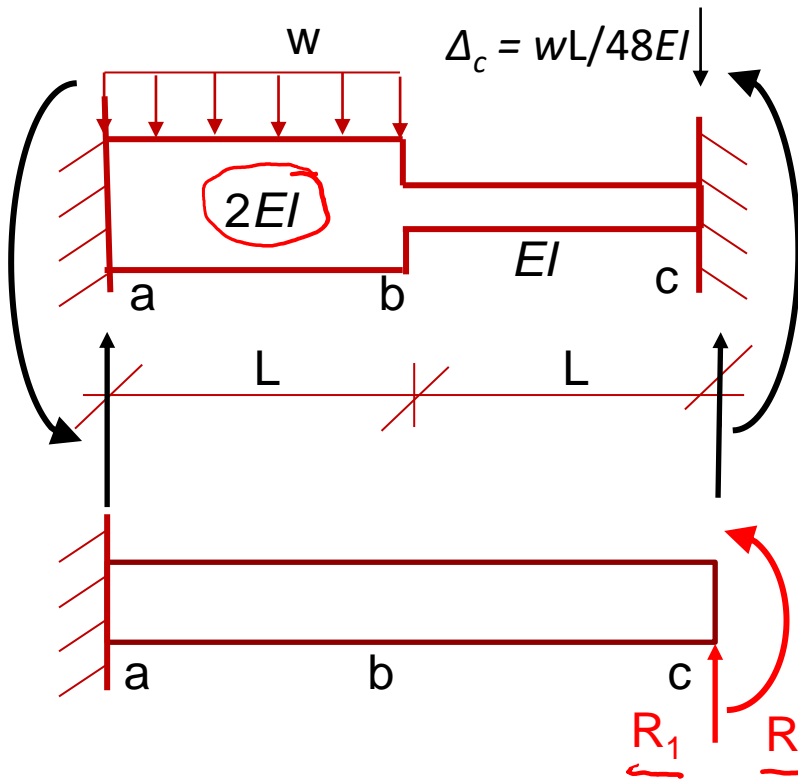

$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$



$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_c \\ \theta_c \end{Bmatrix}$$

Δ_c
 θ_c



Bending Moment Diagrams for Deformation

$$\underline{\Delta_{01}} = \int \frac{\underline{m_0} \underline{m_1}}{EI} dx; \quad \underline{\Delta_{02}} = \int \frac{\underline{m_0} \underline{m_2}}{EI} dx; \quad \underline{\delta_{11}} = \int \frac{\underline{m_1} \underline{m_1}}{EI} dx;$$


$$\underline{\delta_{12}} = \underline{\delta_{21}} = \int \frac{\underline{m_1} \underline{m_2}}{EI} dx; \quad \underline{\delta_{22}} = \int \frac{\underline{m_2} \underline{m_2}}{EI} dx;$$

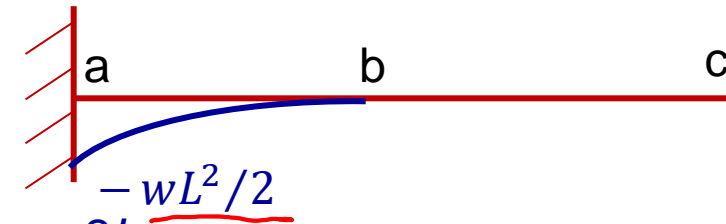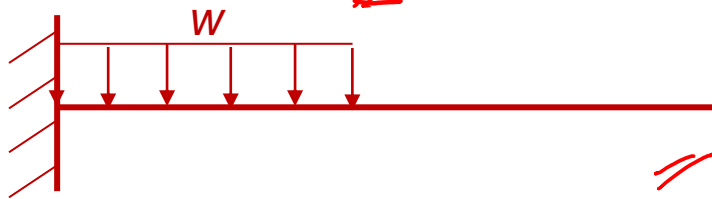

m_0

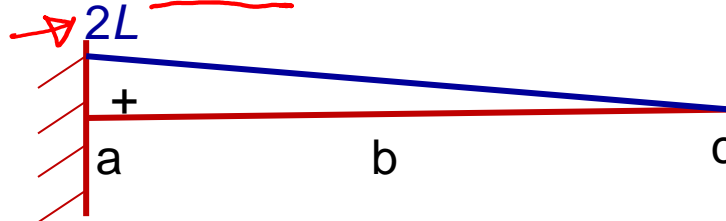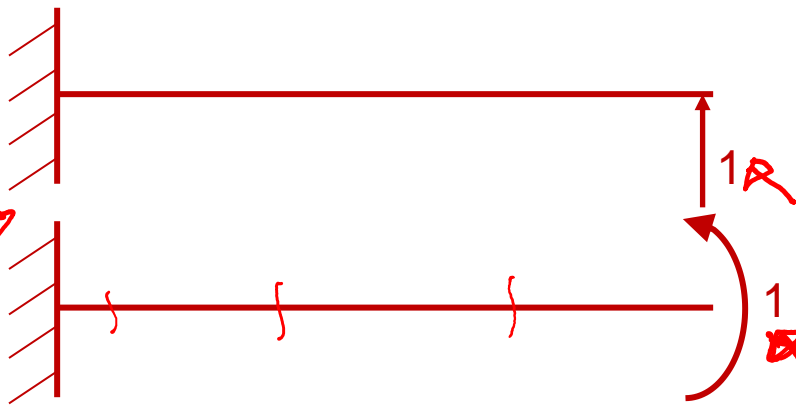


m_1

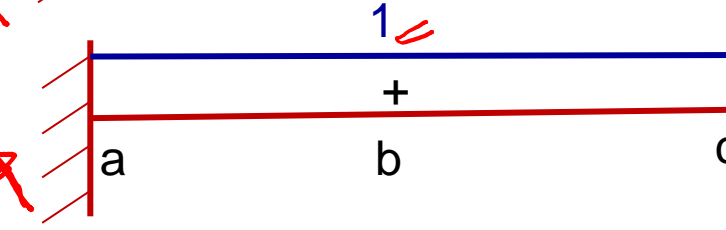


m_2

Calculation of Deformations

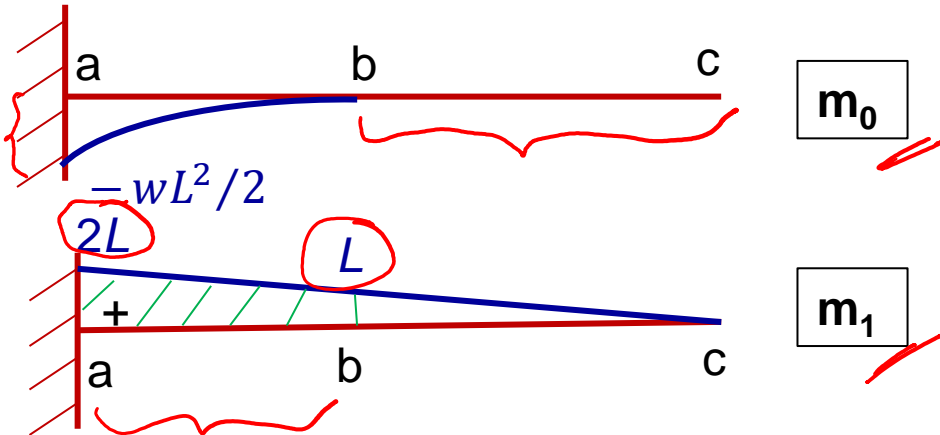


$$\begin{aligned} \Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L}{12 \times 2EI} \left(-\frac{wL^2}{2} \right) (3 \times 2L + L) \\ &= -\frac{7wL^4}{48EI} \end{aligned}$$

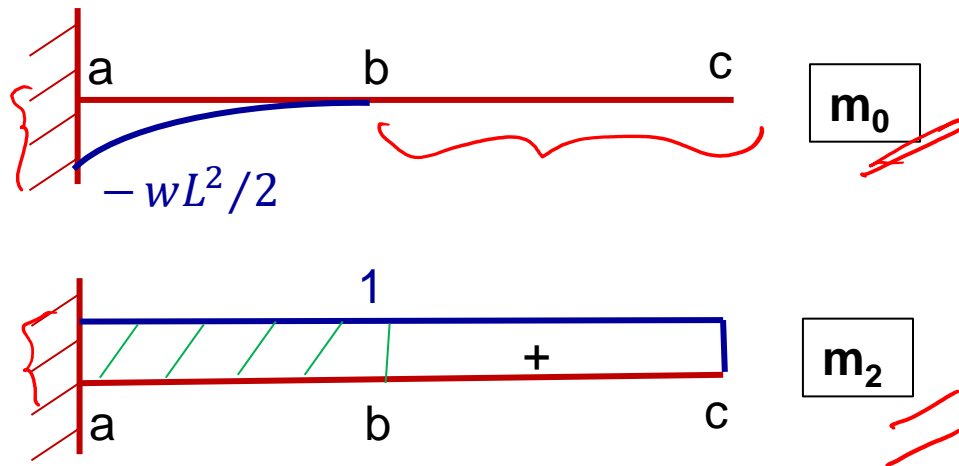

$$\begin{aligned} \Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\ &= \frac{L}{3 \times 2EI} \left(-\frac{wL^2}{2} \right) \times 1 \\ &= -\frac{wL^3}{12EI} \end{aligned}$$

Calculation of Flexibilities

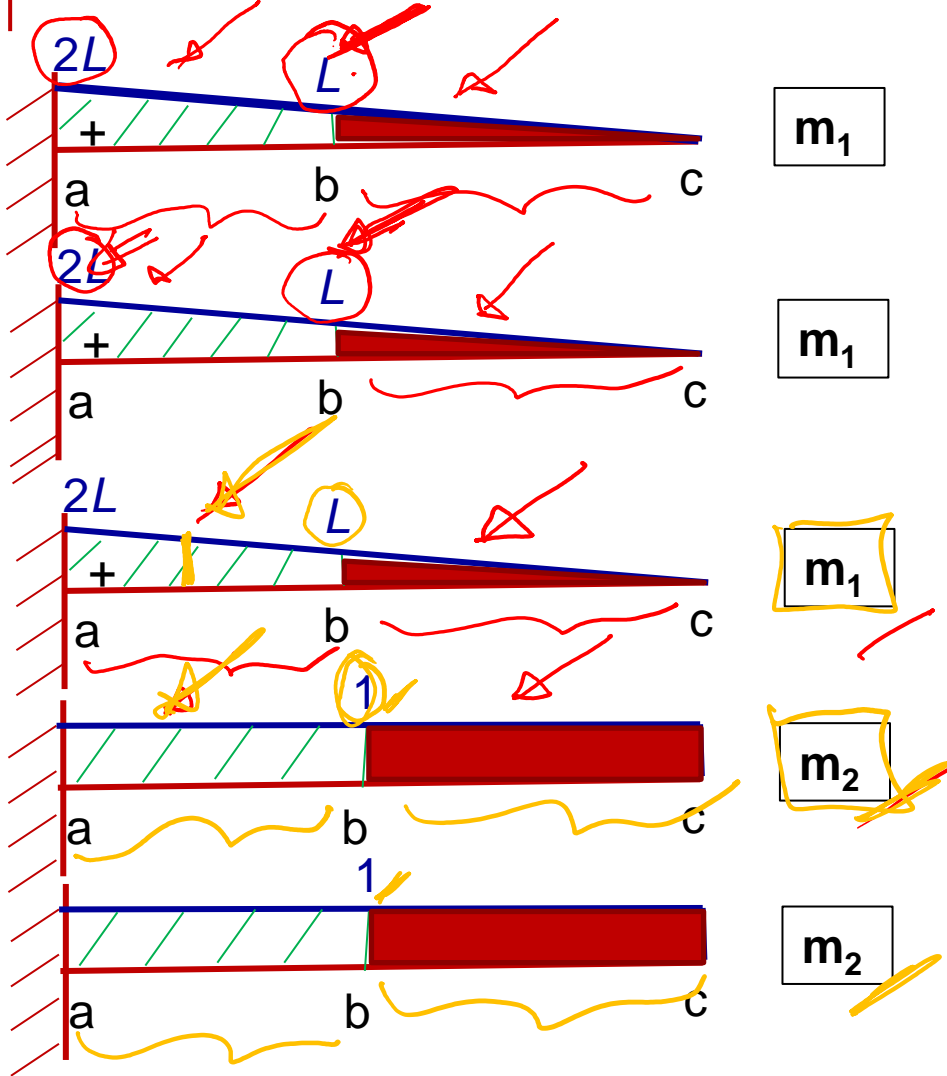

$$\delta_{11} = \int \frac{m_1 m_1}{EI} dx$$

$$= \frac{L}{6 \times 2EI} \{2L(4L + L) + L(2L + 2L)\} + \frac{L}{3EI} L \times L$$

$$= \frac{7L^3}{6EI} + \frac{L^3}{3EI} = \frac{3L^3}{2EI}$$

$$\delta_{12} = \delta_{21} = \int \frac{m_1 m_2}{EI} dx$$

$$= \frac{L}{2EI} \times 1 \times \frac{2L + L}{2} + \frac{L}{2EI} \times 1 \times L$$

$$= \frac{3L^2}{4EI} + \frac{L^2}{2EI} = \frac{5L^2}{4EI}$$

$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx$$

$$= \frac{L}{2EI} \times 1 \times 1 + \frac{L}{EI} \times 1 \times 1 = \frac{3L}{2EI}$$

Table of Product Integral

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_c \\ \theta_c \end{Bmatrix}$$

$$\begin{Bmatrix} -\frac{7L^3}{48} \\ L^2 \\ -\frac{L^2}{12} \end{Bmatrix} \frac{wL}{EI} + \begin{bmatrix} \frac{3L^2}{2} & \frac{5L}{4} \\ \frac{5L}{4} & \frac{3}{2} \end{bmatrix} \frac{L}{EI} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} -1/48 \\ 0 \end{Bmatrix} \frac{wL}{EI}$$

$$\begin{bmatrix} \frac{3L^2}{2} & \frac{5L}{4} \\ \frac{5L}{4} & \frac{3}{2} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{7L^3 - 1}{48} \\ L^2 \\ \frac{1}{12} \end{Bmatrix} w$$

$$\begin{bmatrix} 37.5 & 6.25 \\ 6.25 & 1.5 \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 182.08 \\ 20.83 \end{Bmatrix}$$

$$R_1 = \frac{\begin{vmatrix} 182.08 & 6.25 \\ 20.83 & 1.5 \end{vmatrix}}{\begin{vmatrix} 37.5 & 6.25 \\ 6.25 & 1.5 \end{vmatrix}} = \frac{142.93}{17.19}$$





$$= 8.31 \text{ kN}$$

$$R_2 = \frac{\begin{vmatrix} 37.5 & 182.08 \\ 6.25 & 20.83 \end{vmatrix}}{\begin{vmatrix} 37.5 & 6.25 \\ 6.25 & 1.5 \end{vmatrix}} = \frac{-356.88}{17.19}$$

$$= -20.76 \text{ kN-m}$$

Final Bending Moment Diagram



$w = 10 \text{ kN/m}, L = 5 \text{ m}, EI = 1000 \text{ kN-m}^2$

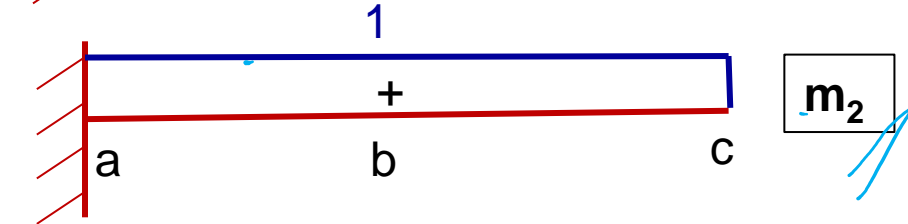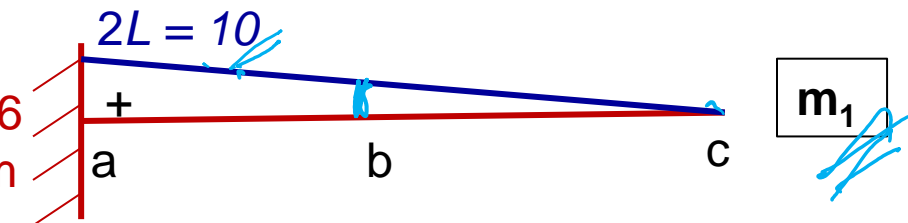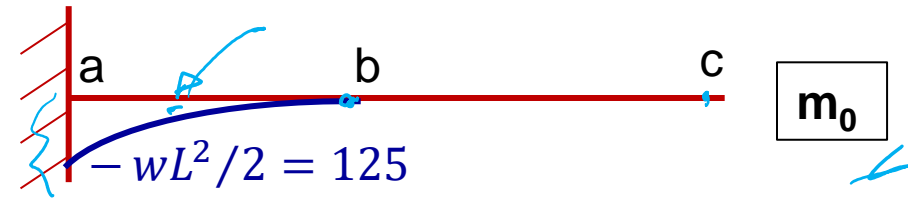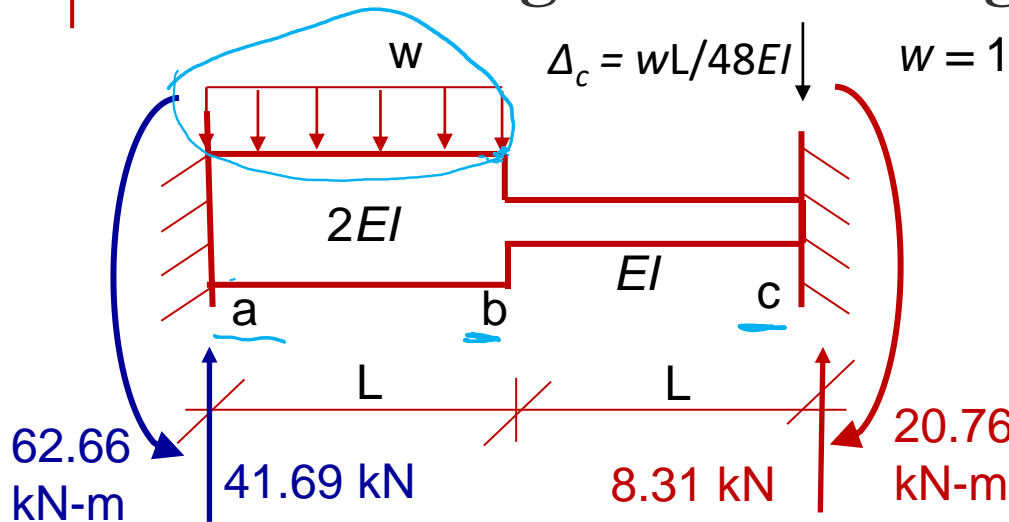

$$\{M\} = \{m_0\} + [m]\{R\}$$




$$\begin{Bmatrix} M_a \\ M_b \\ M_c \end{Bmatrix} = \begin{Bmatrix} -125 \\ 0 \\ 0 \end{Bmatrix} + \begin{bmatrix} 10 & 1 \\ 5 & 1 \\ 0 & 1 \end{bmatrix} \begin{Bmatrix} 8.31 \\ -20.76 \end{Bmatrix}$$

$$\begin{Bmatrix} M_a \\ M_b \\ M_c \end{Bmatrix} = \begin{Bmatrix} -62.66 \\ 20.79 \\ -20.76 \end{Bmatrix}$$

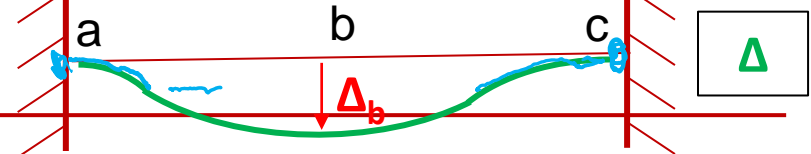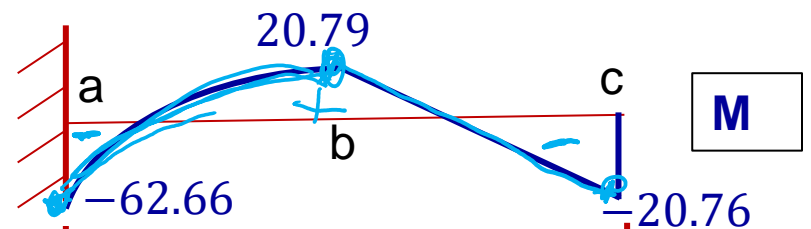

Deflection

$$\Delta_b = \Delta_{0b} + \Delta_{1b}R_1 + \Delta_{2b}R_2$$

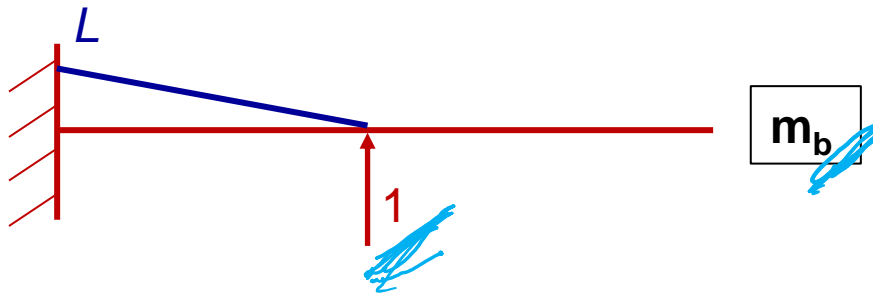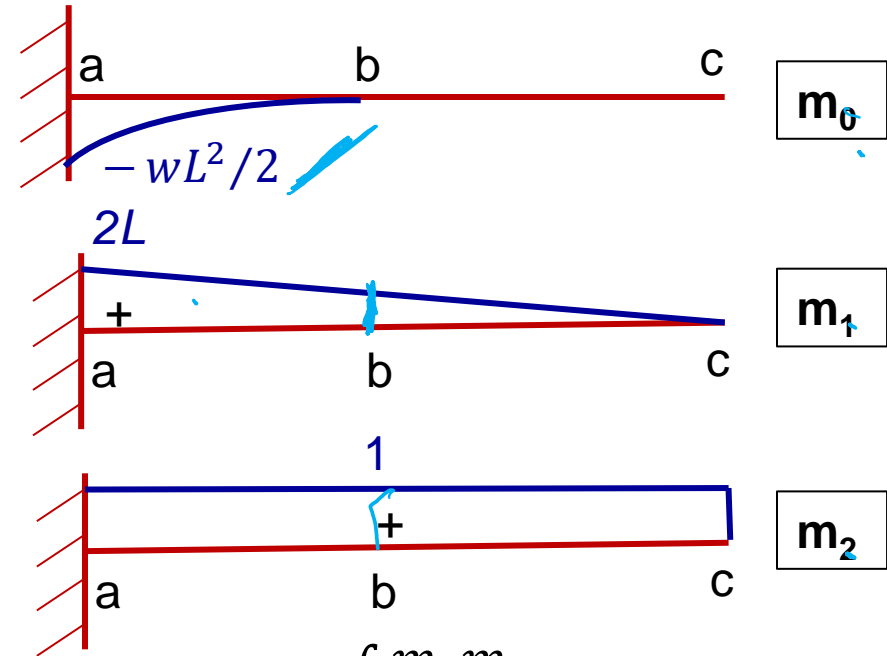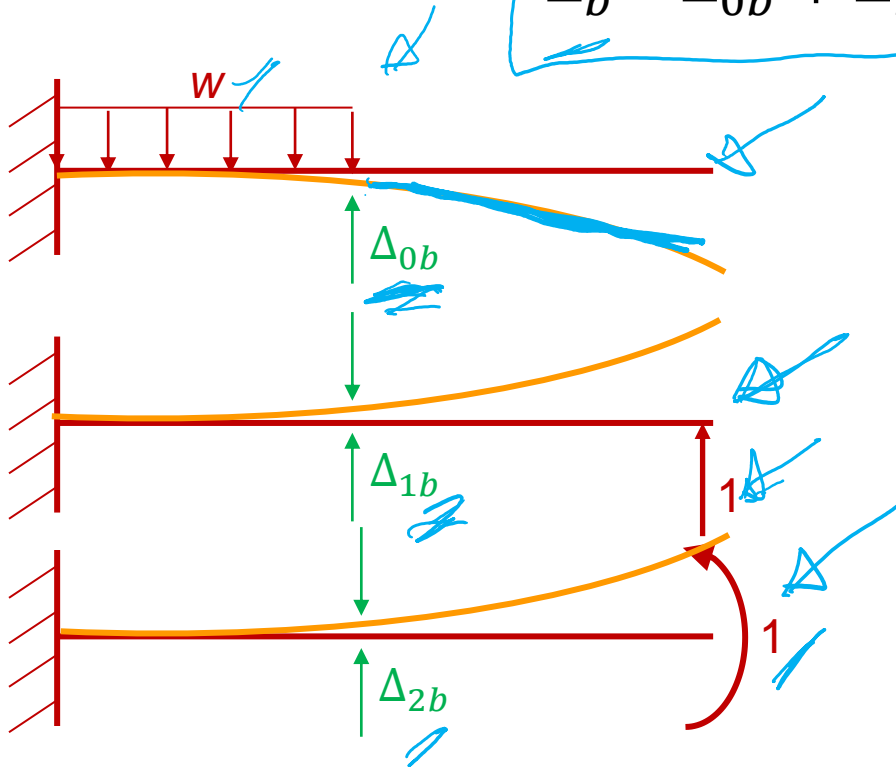


$$\Delta_{0b} = \int \frac{m_0 m_b}{EI} dx$$

$$\Delta_{1b} = \int \frac{m_1 m_b}{EI} dx$$

$$\Delta_{2b} = \int \frac{m_2 m_b}{EI} dx$$


Deflection Calculation

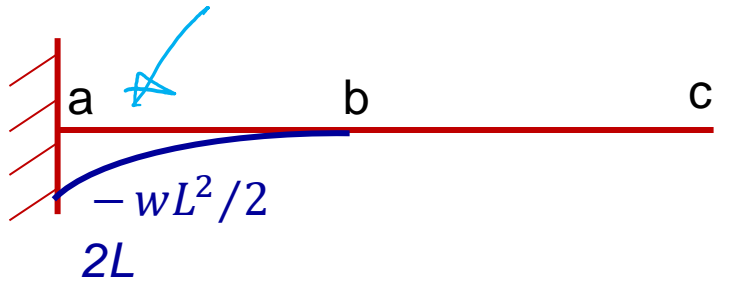

m_0

$$\Delta_{0b} = \int \frac{m_0 m_b}{EI} dx = \frac{L}{4 \times 2EI} \left(-\frac{wL^2}{2} \right) L$$


$$= -\frac{wL^4}{16EI} = -\frac{390.63}{EI}$$

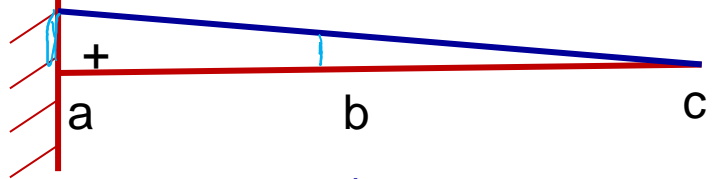

m_1

$$\Delta_{1b} = \int \frac{m_1 m_b}{EI} dx = \frac{L}{6 \times 2EI} L(4L + L)$$


$$= \frac{5L^3}{12EI} = \frac{52.08}{EI}$$

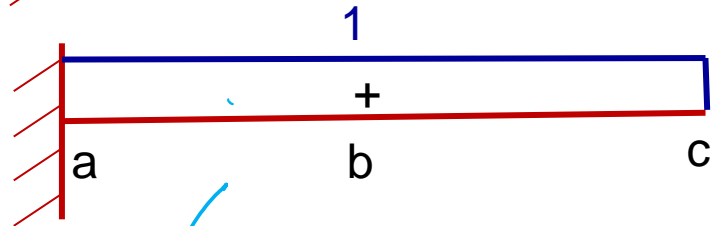

m_2

$$\Delta_{2b} = \int \frac{m_2 m_b}{EI} dx = \frac{L}{2 \times 2EI} L \times 1$$

$$= \frac{L^2}{4EI} = \frac{6.25}{EI}$$

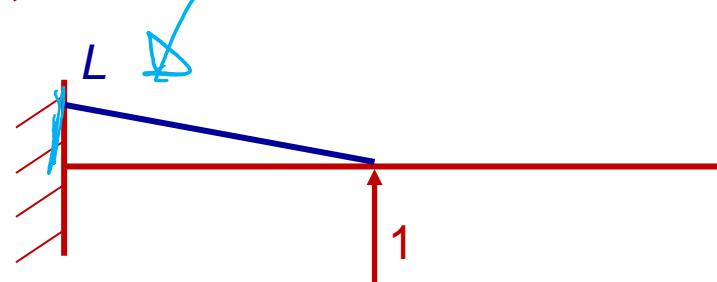


m_b

$$\Delta_b = \Delta_{0b} + \Delta_{1b} R_1 + \Delta_{2b} R_2$$

$$= -\frac{390.63}{EI} + \frac{52.08}{EI} \times 8.31 + \frac{6.25}{EI} (-20.76)$$

$$= -\frac{87.6}{EI}$$

Beam Problem with Internal Hinge

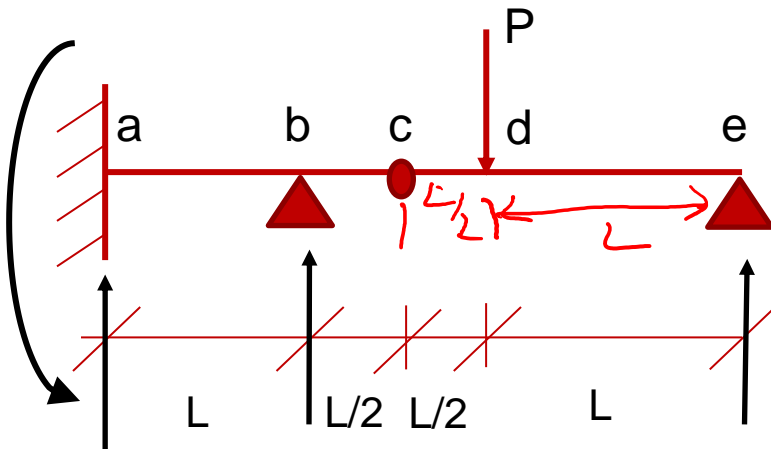




Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = 4 – 3 = 1

(Ignoring axial deformation for the beam problem)

Step 2: Select redundants and the released structure


The released structure must be stable.

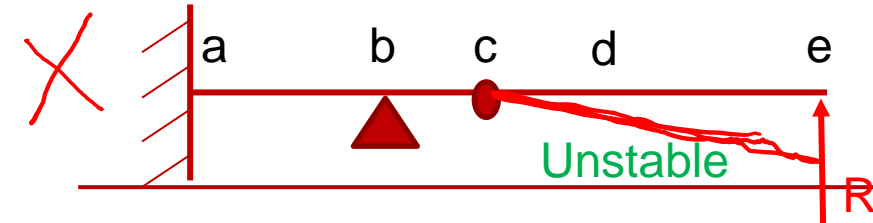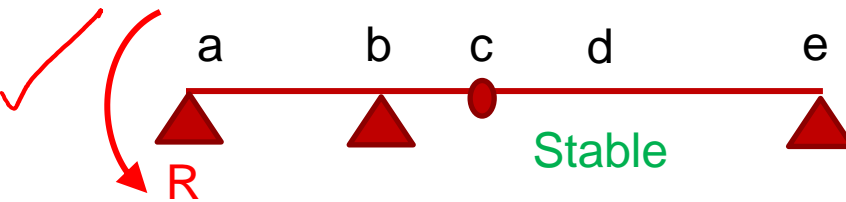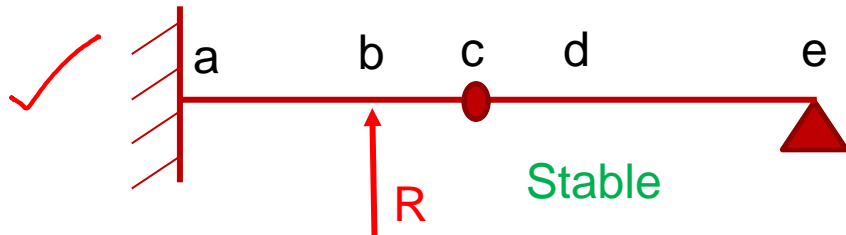

$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$

$$\underline{\Delta}_0 + \underline{\delta}\underline{R} = \underline{\Delta}_j$$

Solution of Flexibility Equation

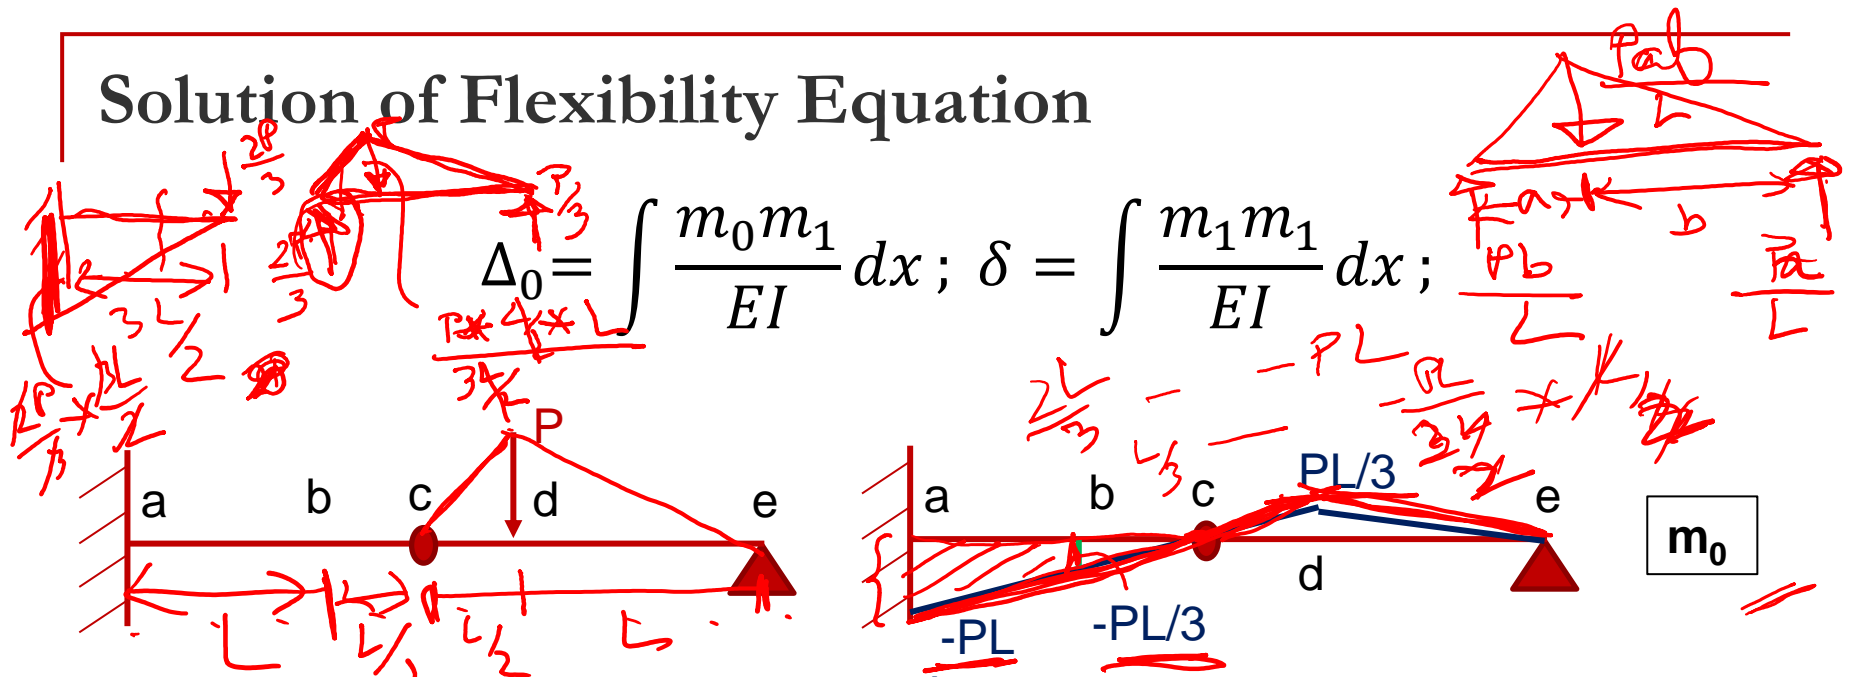


$$\Delta_0 = \int \frac{m_0 m_1}{EI} dx; \quad \delta = \int \frac{m_1 m_1}{EI} dx;$$

$$\Delta_0 = \int \frac{m_0 m_1}{EI} dx = \frac{L}{6EI} L \left(-PL \times 2 - \frac{PL}{3} \right) = \frac{-13PL^3}{18EI}$$

$$\delta = \int \frac{m_1 m_1}{EI} dx = \frac{L^3}{3EI} \quad \Delta_0 + \delta R = 0 \quad R = -\frac{\Delta_0}{\delta} = \frac{13PL^3/18EI}{L^3/3EI} = \frac{13}{6} P$$


Bending Moment Diagram and Deflected Shape

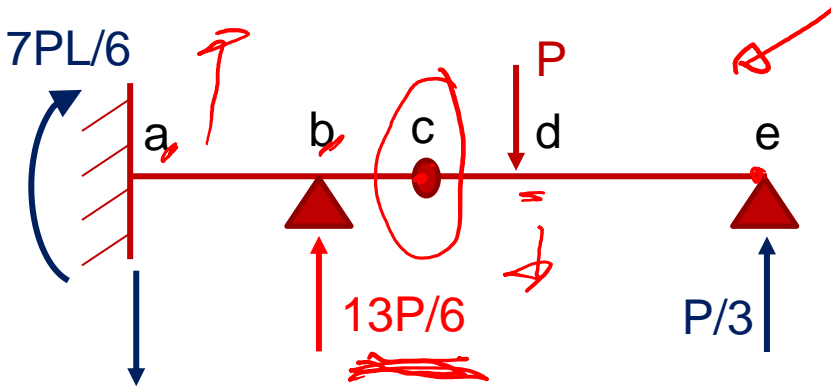


$$M = m_0 + m_1 R$$

$$\begin{Bmatrix} M_a \\ M_b \\ M_d \end{Bmatrix} = \begin{Bmatrix} -PL \\ PL \\ \frac{PL}{3} \end{Bmatrix} + \begin{Bmatrix} L \\ 0 \\ 0 \end{Bmatrix} \frac{13P}{6}$$


$$\begin{Bmatrix} M_a \\ M_b \\ M_d \end{Bmatrix} = \begin{Bmatrix} \frac{7PL}{6} \\ \frac{PL}{3} \\ \frac{PL}{3} \end{Bmatrix}$$

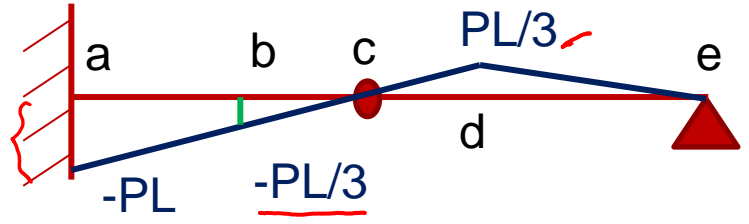


$$m_0$$

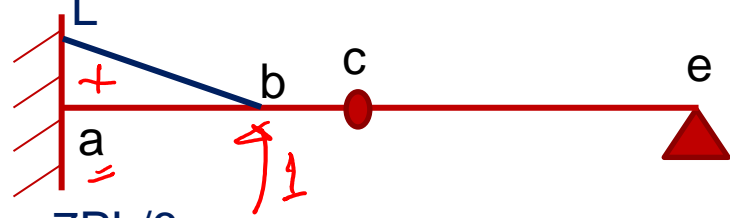

$$m_1$$

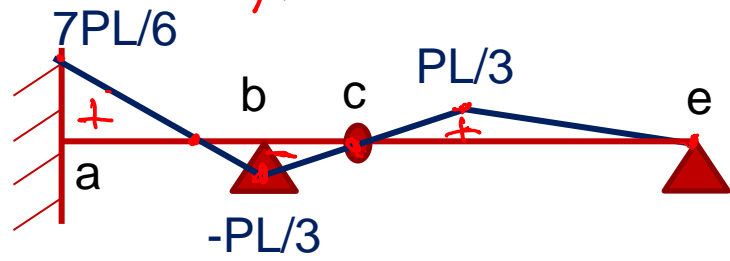


$$M$$

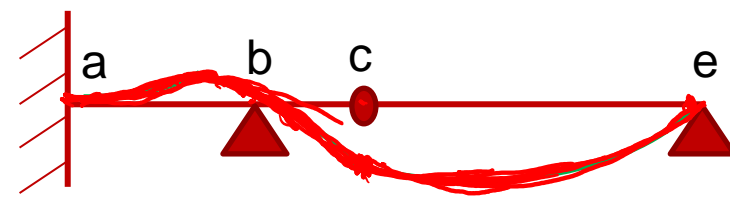

$$\Delta$$

Beam Problem With Support Settlement

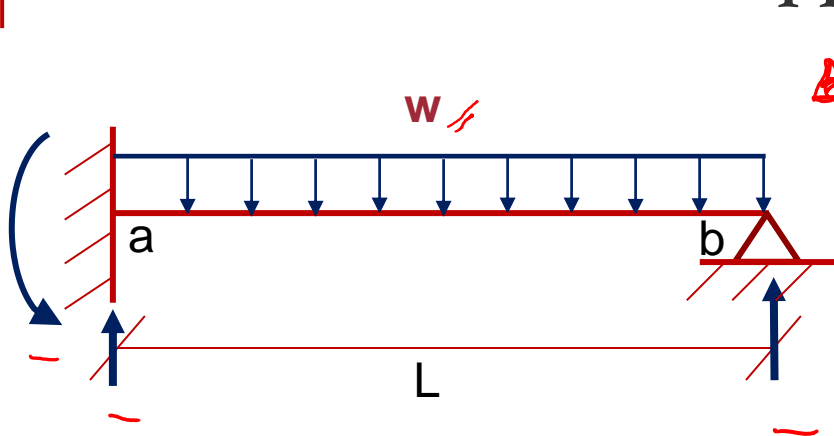

$$\Delta_b = \frac{L^3}{24EI} \quad (\downarrow)$$

Step 1: Identification of Degree of Static Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 3 - 2 = 1$$

(Ignoring axial deformation for the beam problem)



$$\Delta_o + \delta R = \Delta_j$$


$$\underline{R=1}$$

Step 2: Select redundants and the released structure


The released structure must be stable.

Bending Moment Diagrams for Deformation

Δ_0

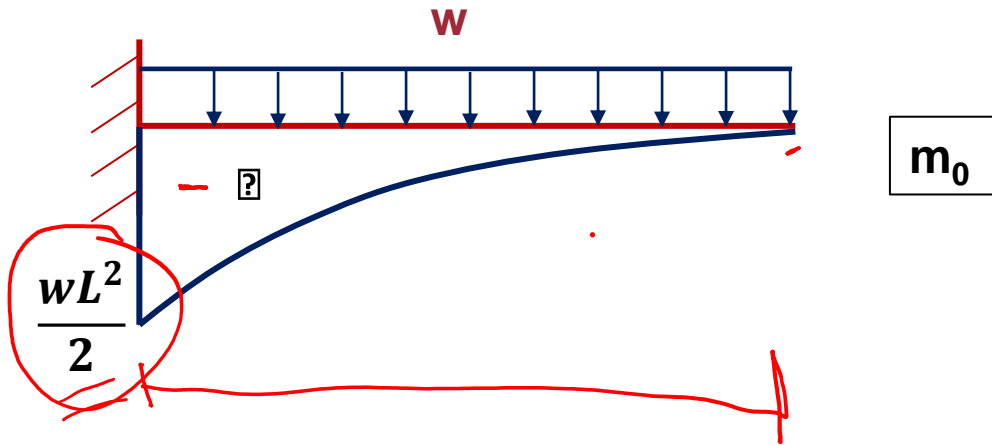

$$\begin{aligned}\Delta_0 &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L}{4EI} \left(-\frac{wL^2}{2} \right) L \\ &= -\frac{wL^4}{8EI}\end{aligned}$$

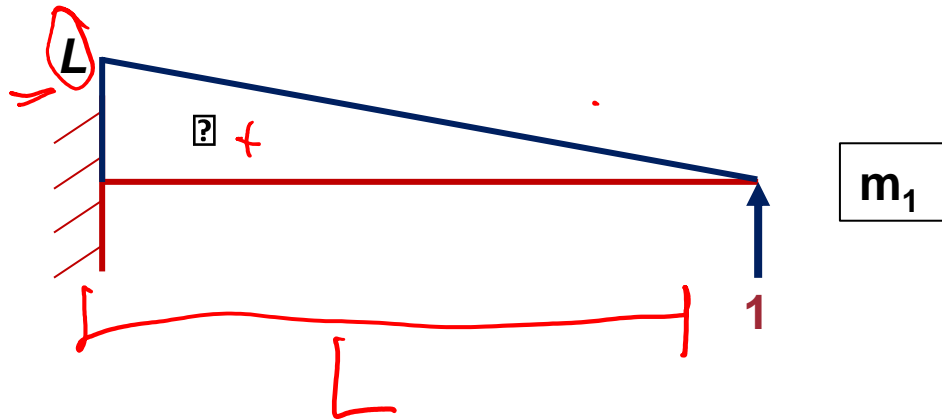

$$\begin{aligned}\delta &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{3EI}\end{aligned}$$

δ_{11}

Solution of Flexibility Equation

$$\Delta_0 + \delta R = \Delta_s$$

$$\frac{-wL^4}{8EI} + \frac{L^3}{3EI} R = \frac{-L^3}{24EI}$$

$$\frac{-wL}{8} + \frac{R}{3} = \frac{-1}{24}$$

$$\boxed{R = \frac{1}{8}(3wL - 1)}$$



$$\Delta_b = \frac{L^3}{24EI} (\downarrow)$$




$$M = m_0 + m_1 R$$

$$M_a = \frac{-wL^2}{2} + L \times \frac{1}{8}(3wL - 1)$$


$$= -\frac{wL^2}{2} + \frac{3wL^2}{8} - \frac{L}{8}$$

$$= -\frac{wL^2}{8} - \frac{L}{8}$$

$$= -\frac{L}{8}(wL + 1)$$

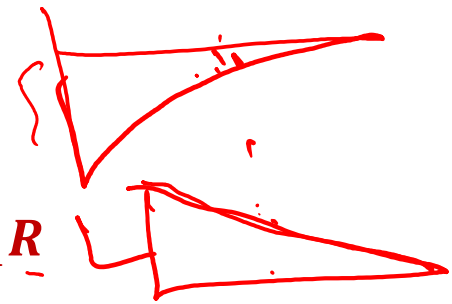


Beam Problem With Support Spring

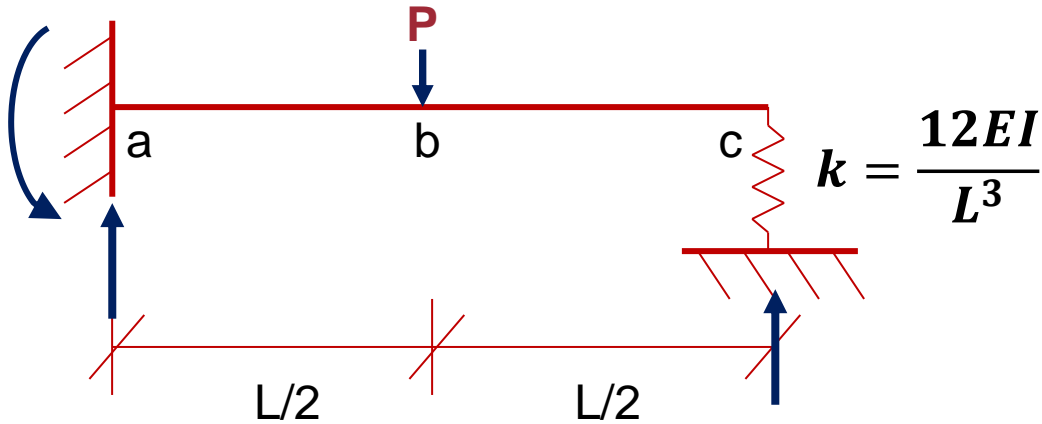

Step 1: Identification of Degree of Static Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = $3 - 2 = 1$
 (Ignoring axial deformation for the beam problem)

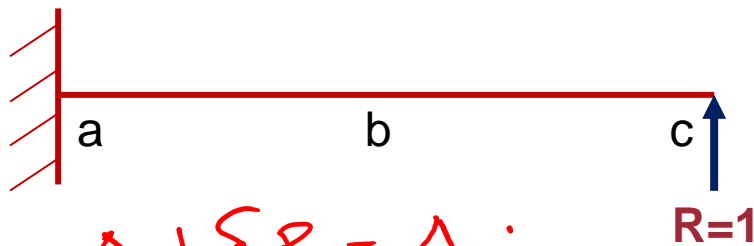


$$\Delta_0 + \delta R = \Delta_j$$


Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

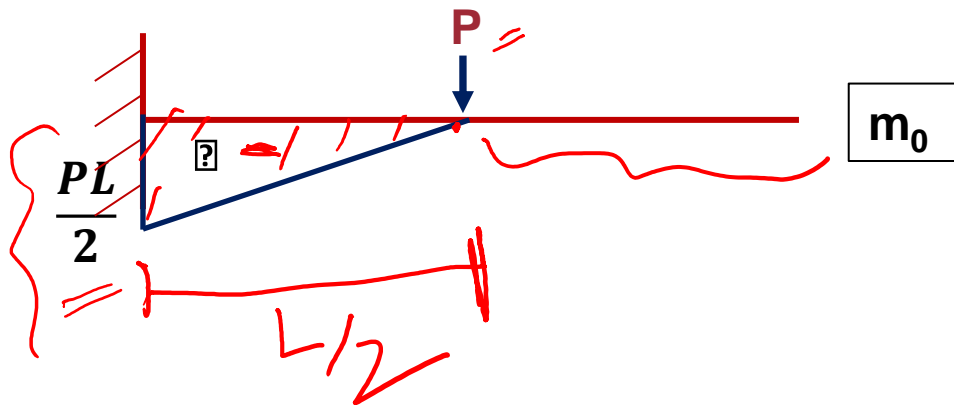


$$\begin{aligned} \Delta_0 &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L/2}{6EI} \left(-\frac{PL}{2} \right) \left(2L + \frac{L}{2} \right) \\ &= -\frac{PL^2}{24EI} \left(\frac{5L}{2} \right) \\ &= -\frac{5PL^3}{48EI} \end{aligned}$$

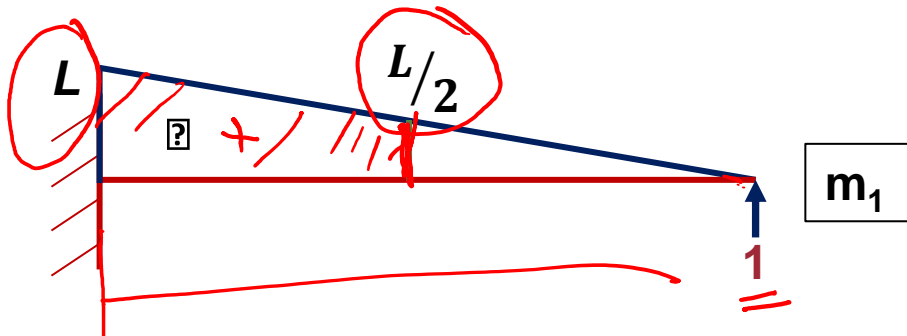

$$\begin{aligned} \delta &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{3EI} \end{aligned}$$

Solution of Flexibility Equation

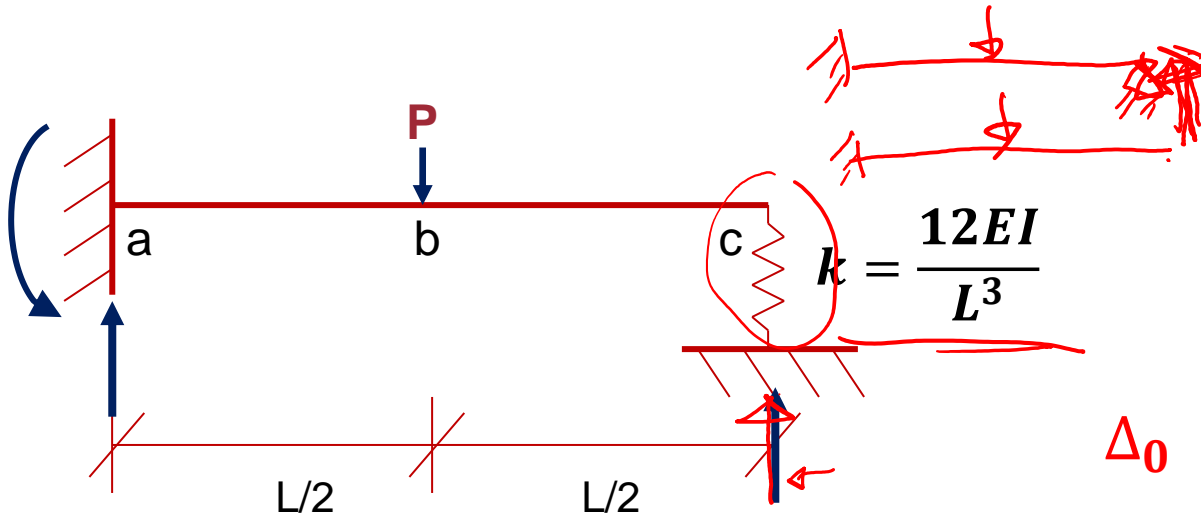

$$k = \frac{P}{\Delta}$$


$$k\Delta = P$$

$$\Delta_0 + \delta R = \Delta_s$$

$$-k\Delta_s = R ; \Delta_s = \frac{-R}{k}$$

$$= \frac{-R}{12EI/L^3}$$

$$= \frac{-RL^3}{12EI}$$


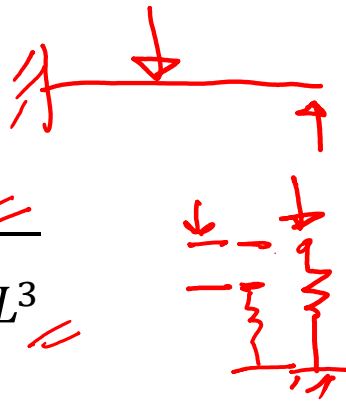


$$\frac{-5PL^3}{48EI} + \frac{L^3}{3EI} R = \frac{-L^3}{12EI} R$$



$$\frac{L^3}{EI} \left(\frac{1}{3} + \frac{1}{12} \right) R = \frac{5PL^3}{48EI}$$

$$+ \boxed{?} R = \frac{P}{4}$$

Bending Moment Diagram and Deflected Shape

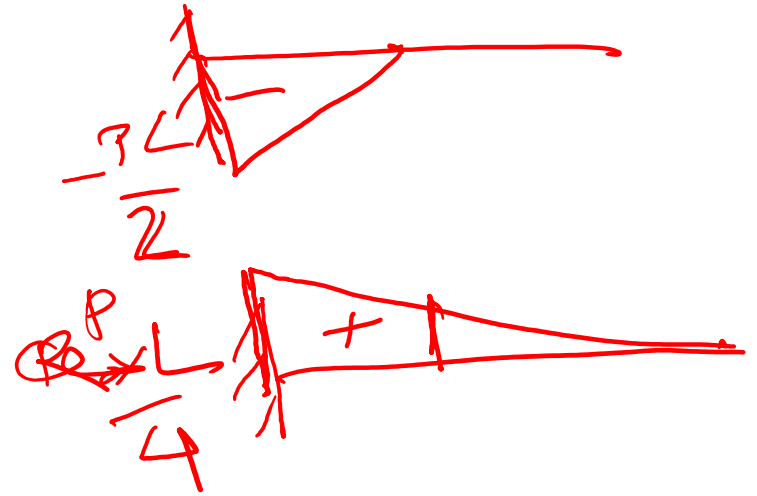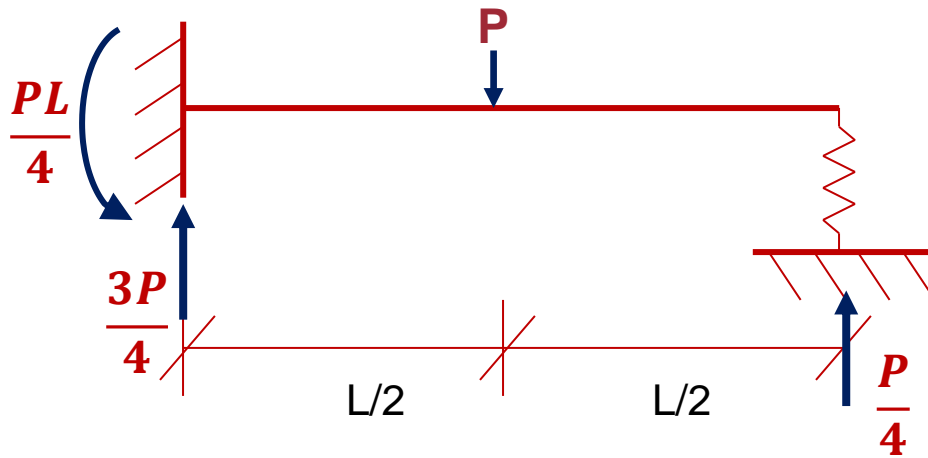

$$M = m_0 + m_1 R$$

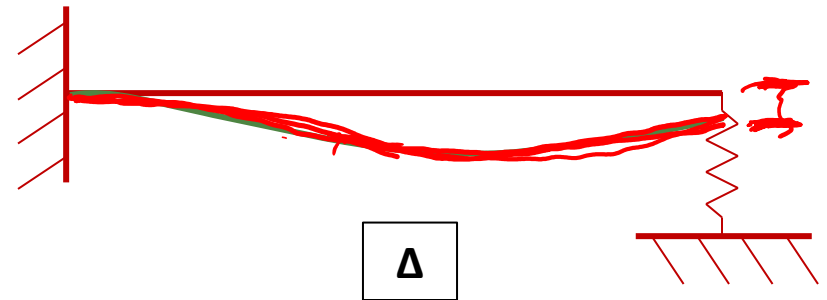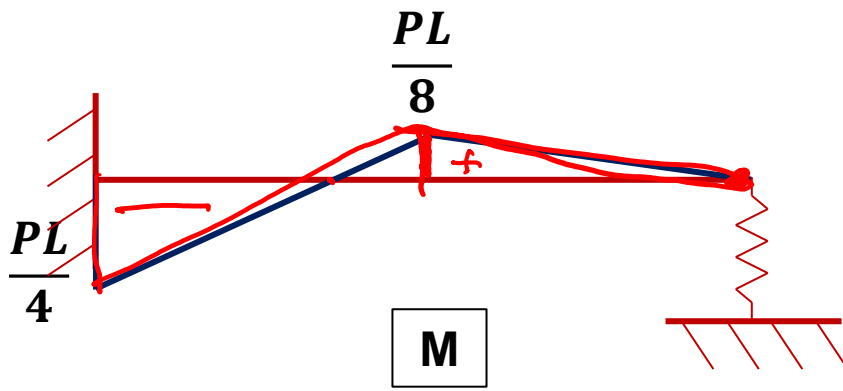

Week-(04-05)

MD Ehasan Kabir

Truss


- ❑ All members of the truss are two force member
- ❑ Conditions of two force members
 - All forces act at the joints only
 - Joints are pin connected
- ❑ Members can carry axial force, no bending moment if the members are straight.

$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_s\}$$

$$\Delta_{0i} = \sum \frac{N_0 N_i}{AE} L$$

$$\delta_{ij} = \sum \frac{N_i N_j}{AE} L$$

Truss Problem (DoSI = 1)

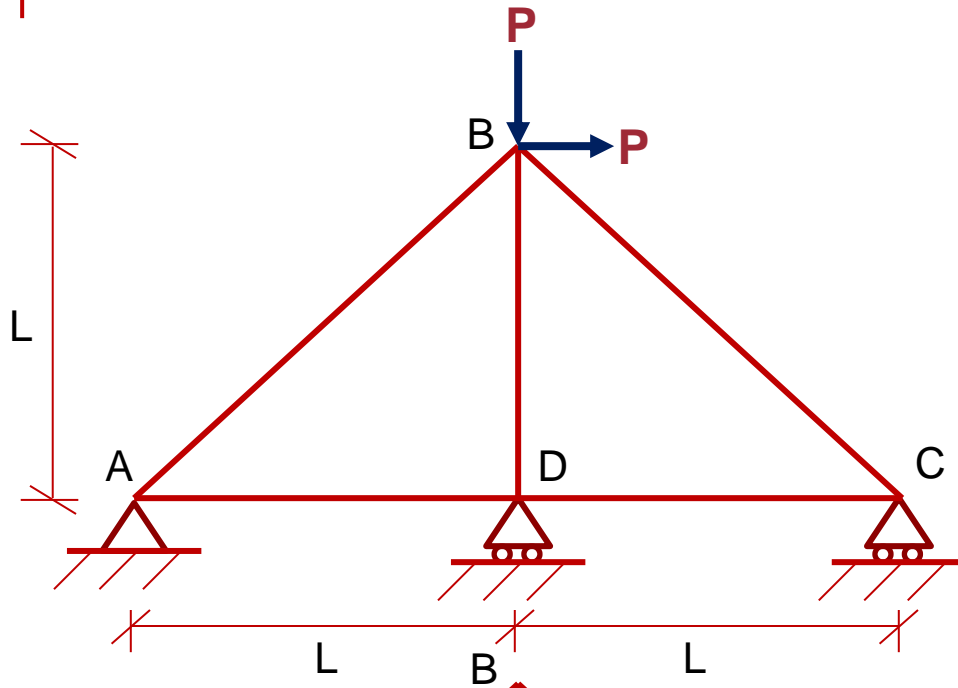


Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

DoSI = No. of Unknowns – No. of Equilibrium Equations = $b + r - 2j =$


$$9 - 8 = 1$$

Step 2: Select redundants and the released structure

The released structure must be stable.

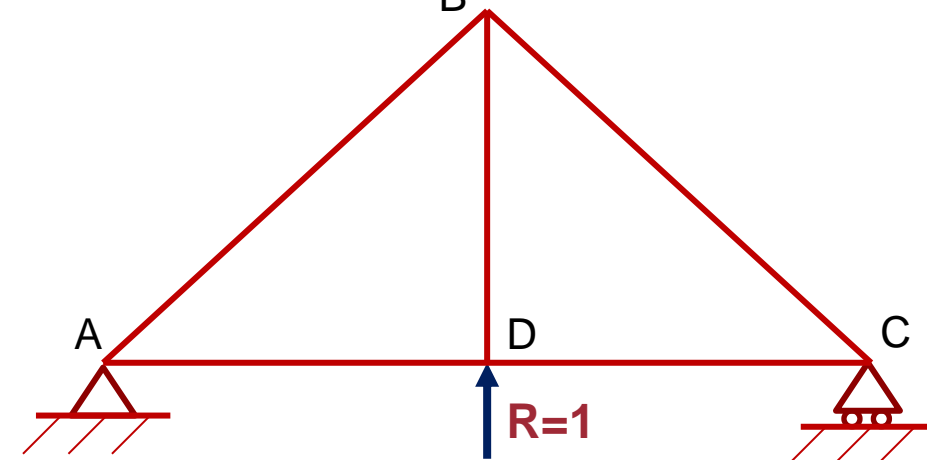

Member Force for Deformation

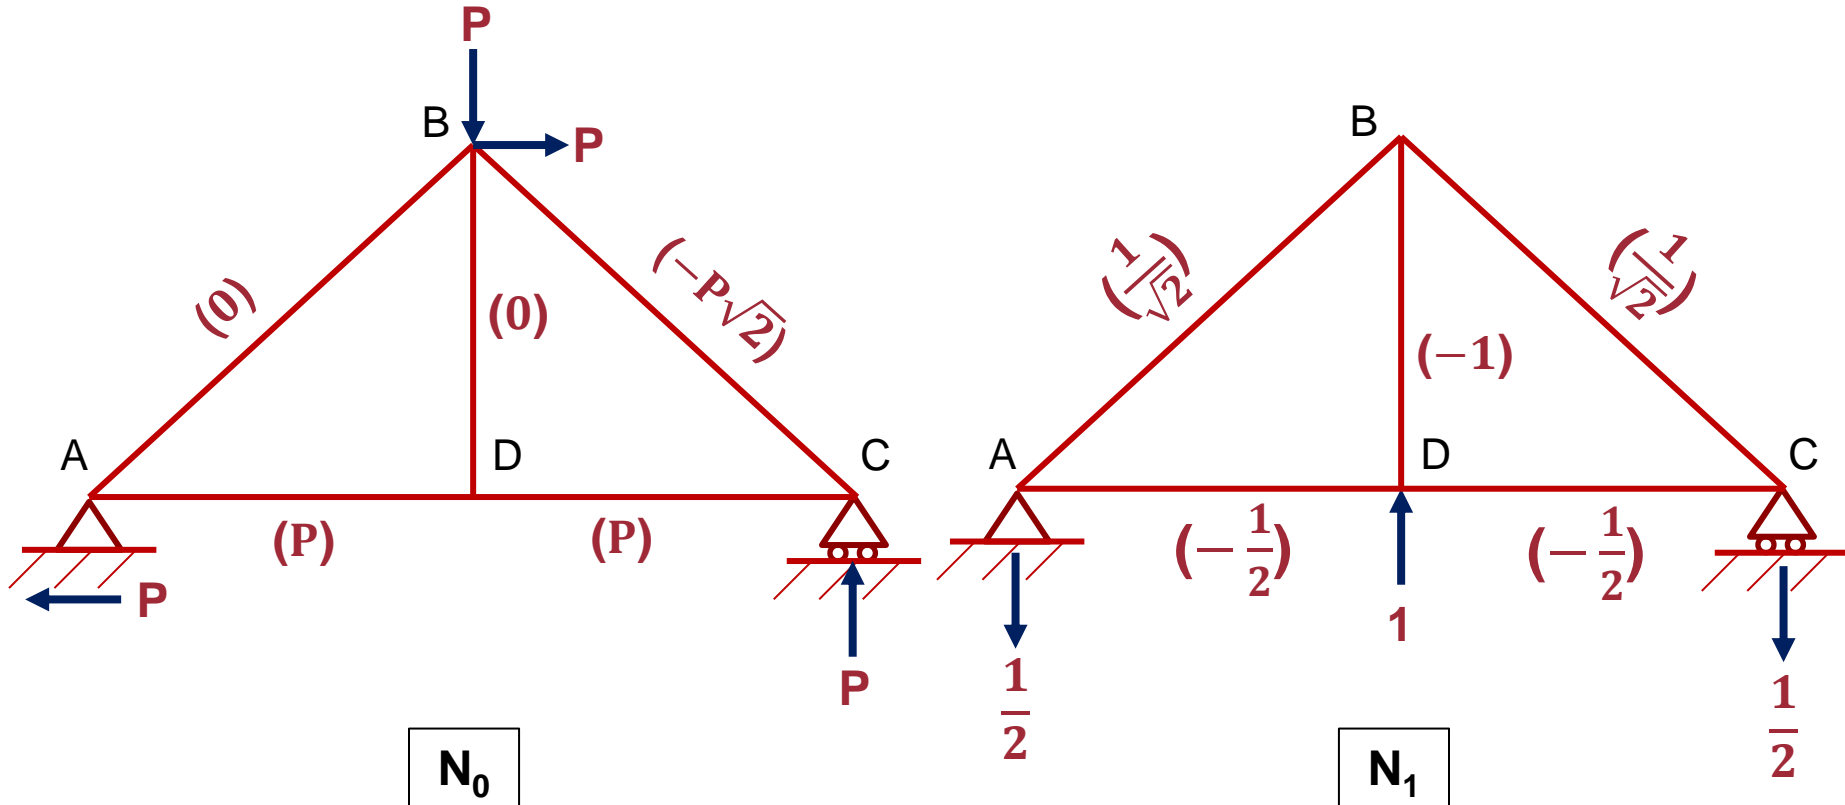

Calculation of Deformations & Flexibilities

Member	L	N_0	N_1	$N_0 N_1 L$	$N_1 N_1 L$	$N = N_0 + N_1 R$
AD	L	P	$-\frac{1}{2}$	$-\frac{PL}{2}$	$\frac{L}{4}$	0.586P
CD	L	P	$-\frac{1}{2}$	$-\frac{PL}{2}$	$\frac{L}{4}$	0.586P
BD	L	0	-1	0	L	-0.828P
AB	$L\sqrt{2}$	0	$\frac{1}{\sqrt{2}}$	0	$\frac{L}{\sqrt{2}}$	0.586P
BC	$L\sqrt{2}$	$-P\sqrt{2}$	$\frac{1}{\sqrt{2}}$	$-PL\sqrt{2}$	$\frac{L}{\sqrt{2}}$	-0.828P
Σ				$-PL(1 + \sqrt{2})$	$L(\frac{3}{2} + \sqrt{2})$	

Solution of Flexibility Equation

$$\Delta_0 = \sum \frac{N_0 N_1}{AE} L = \frac{-PL(1 + \sqrt{2})}{AE}$$


$$\delta = \sum \frac{N_1 N_1}{AE} L = \frac{L(\frac{3}{2} + \sqrt{2})}{AE}$$

$$\{\Delta_0\} + [\delta]\{R\} = \{\Delta_j\}$$

$$\frac{-PL(1 + \sqrt{2})}{AE} + \frac{L(\frac{3}{2} + \sqrt{2})}{AE} R = 0$$

$$\mathbf{R} = \frac{(1 + \sqrt{2})}{(\frac{3}{2} + \sqrt{2})} P$$

Truss Problem (DoSI = 2)

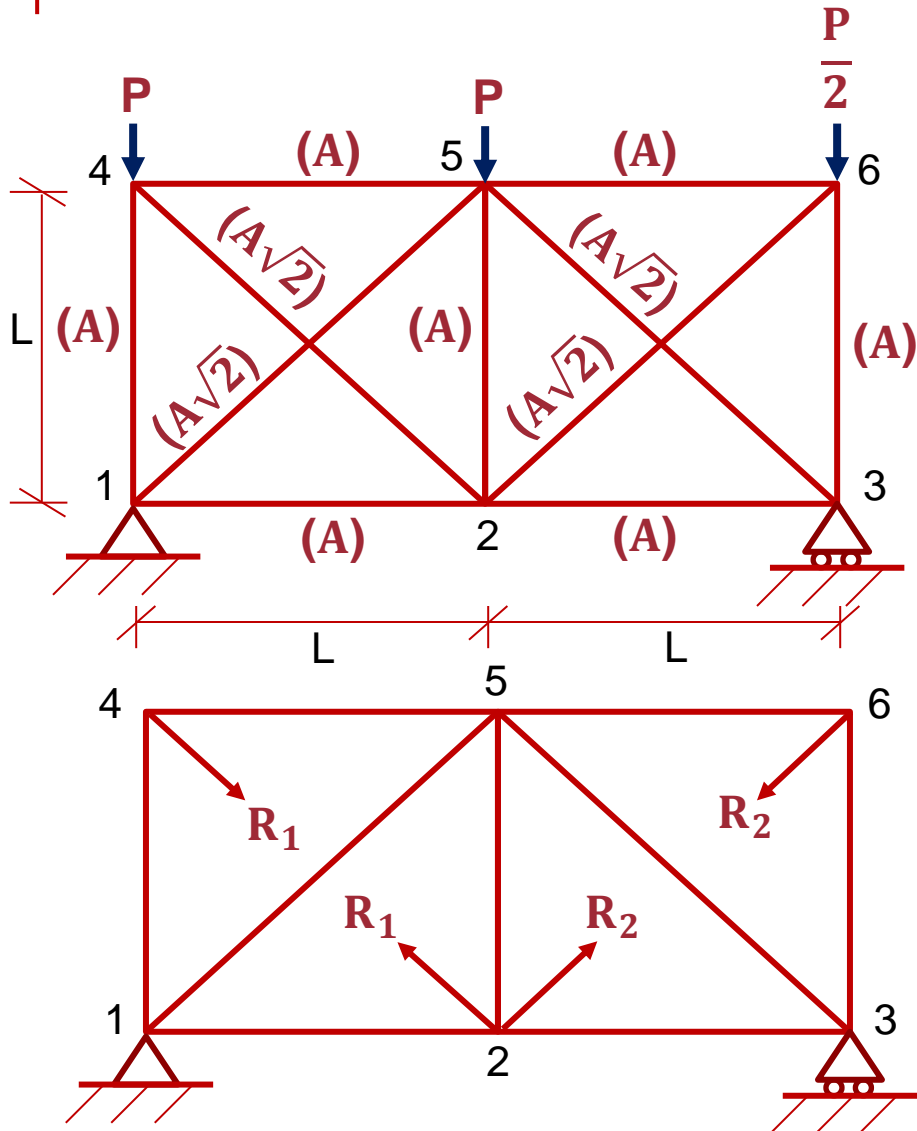


Step 1: Identification of Degree of Static Indeterminacy (DoSI)

DoSI = No. of Unknowns – No. of Equilibrium Equations = $b + r - 2j = 14 - 12 = 2$


Step 2: Select redundants and the released structure

The released structure must be stable.

Member Force for Deformation

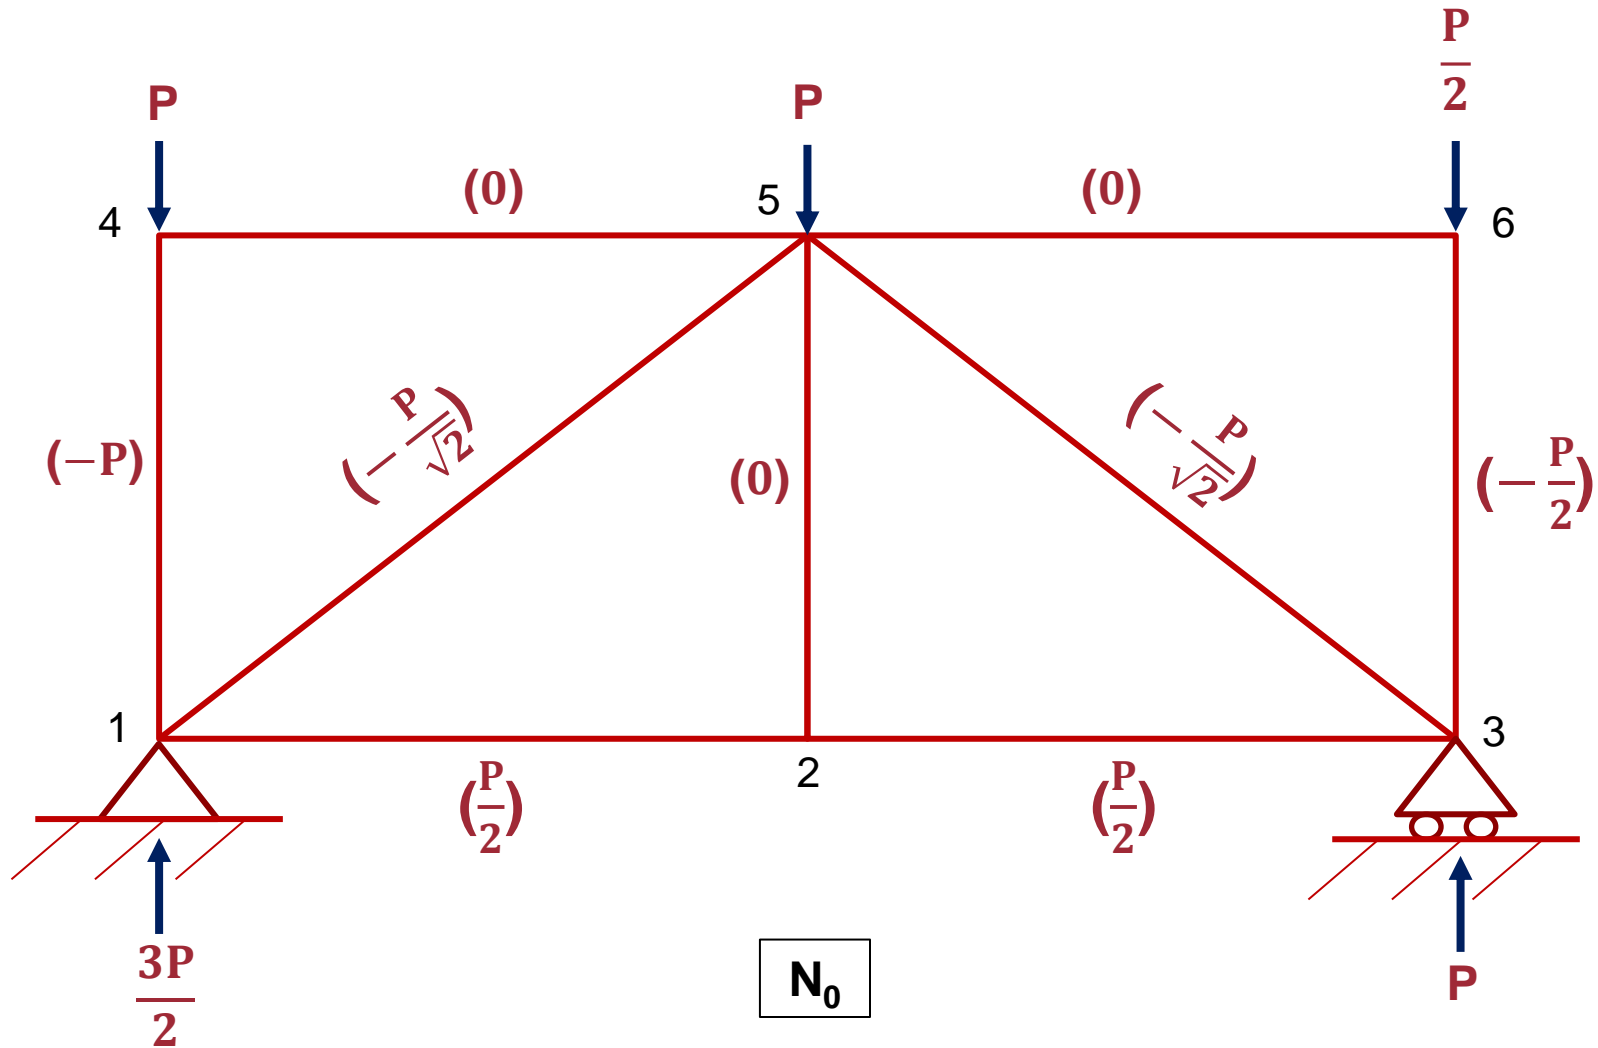


Member Force for Deformation

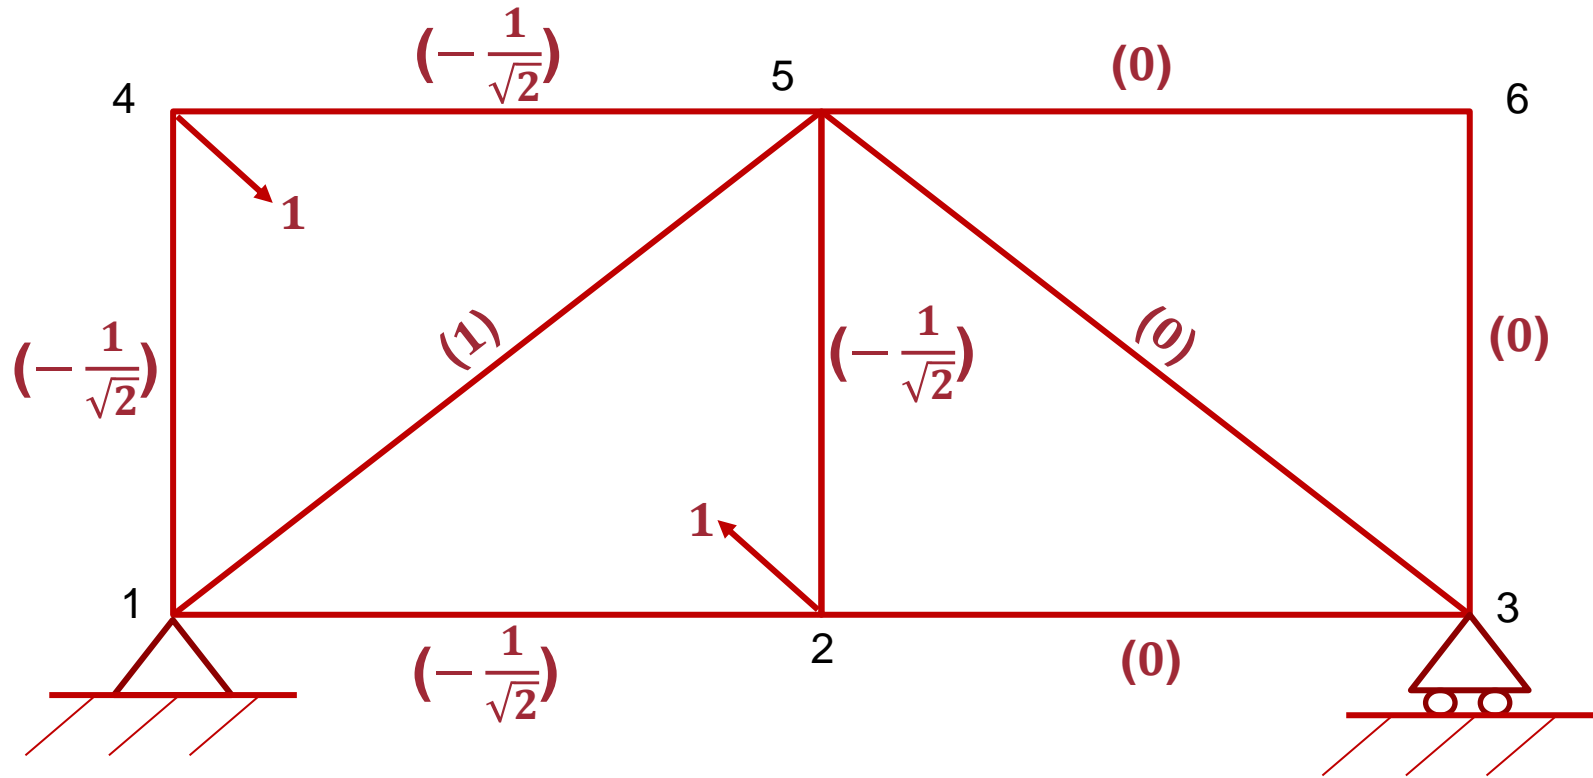

N_1

Member Force for Deformation

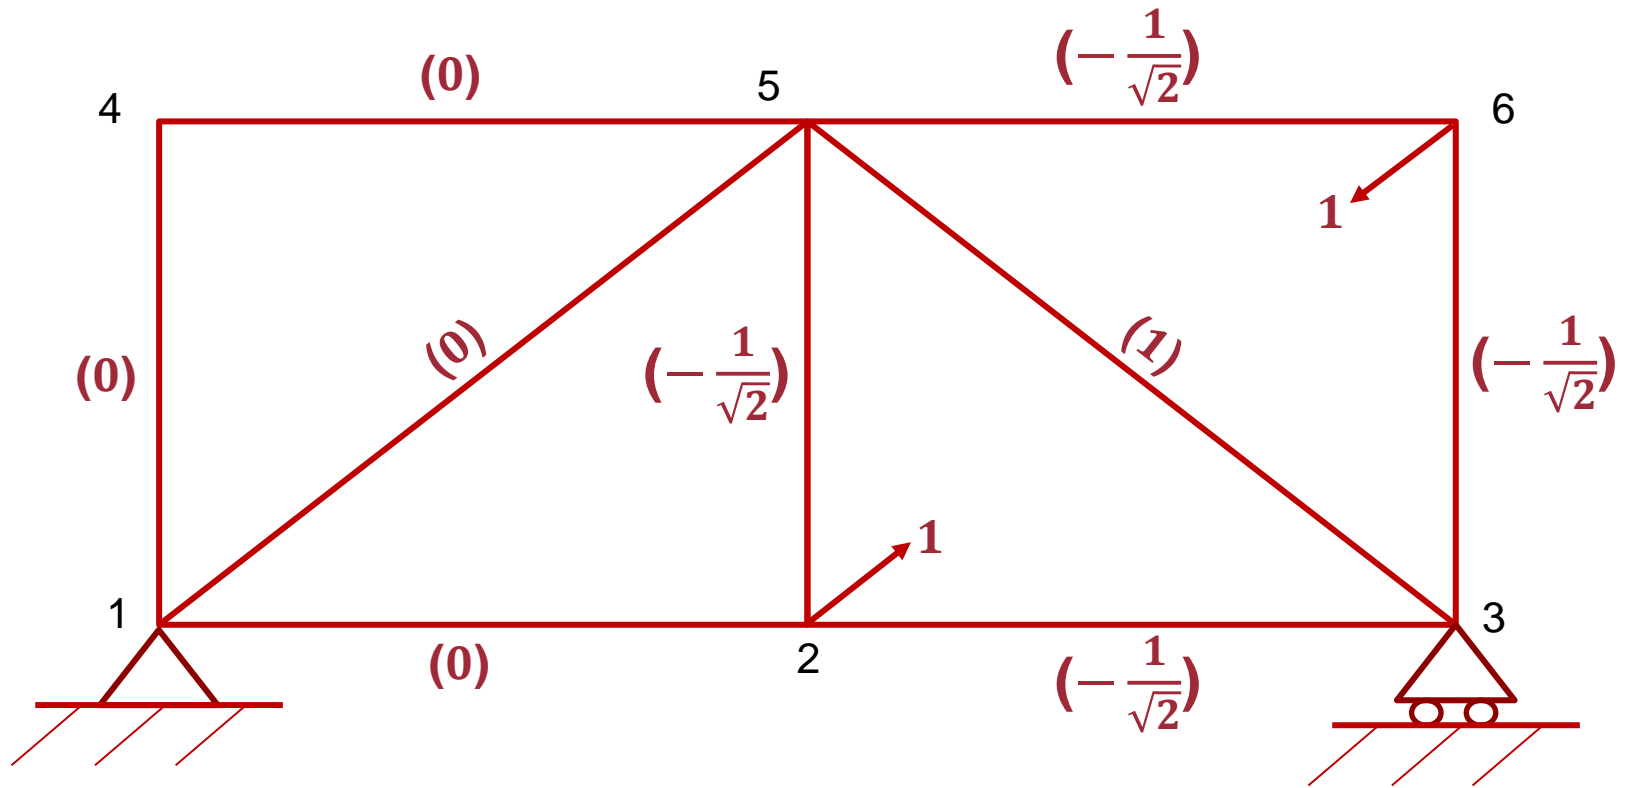

N_2

Calculation of Deformations & Flexibilities

Bar	L	A	N_0	N_1	N_2	$\frac{N_0 N_1 L}{A}$	$\frac{N_0 N_2 L}{A}$	$\frac{N_1 N_1 L}{A}$	$\frac{N_1 N_2 L}{A}$	$\frac{N_2 N_2 L}{A}$	N
12	L	A	$P/2$	$-1/\sqrt{2}$	0	$-\frac{PL}{2\sqrt{2}A}$	0	$\frac{L}{2A}$	0	0	$\frac{7}{15}P$
23	L	A	$P/2$	0	$-1/\sqrt{2}$	0	$-\frac{PL}{2\sqrt{2}A}$	0	0	$\frac{L}{2A}$	$\frac{23}{60}P$
45	L	A	0	$-1/\sqrt{2}$	0	0	0	$\frac{L}{2A}$	0	0	$-\frac{1}{30}P$
56	L	A	0	0	$-1/\sqrt{2}$	0	0	0	0	$\frac{L}{2A}$	$-\frac{7}{60}P$
14	L	A	$-P$	$-1/\sqrt{2}$	0	$\frac{PL}{\sqrt{2}A}$	0	$\frac{L}{2A}$	0	0	$-\frac{31}{30}P$
25	L	A	0	$-1/\sqrt{2}$	$-1/\sqrt{2}$	0	0	$\frac{L}{2A}$	$\frac{L}{2A}$	$\frac{L}{2A}$	$-\frac{3}{20}P$
36	L	A	$-P/2$	0	$-1/\sqrt{2}$	0	$\frac{PL}{2\sqrt{2}A}$	0	0	$\frac{L}{2A}$	$-\frac{37}{60}P$

Calculation of Deformations & Flexibilities

Bar	L	A	N_0	N_1	N_2	$\frac{N_0 N_1 L}{A}$	$\frac{N_0 N_2 L}{A}$	$\frac{N_1 N_1 L}{A}$	$\frac{N_1 N_2 L}{A}$	$\frac{N_2 N_2 L}{A}$	N
15	$L\sqrt{2}$	$A\sqrt{2}$	$-\frac{P}{\sqrt{2}}$	1	0	$-\frac{PL}{\sqrt{2}A}$	0	$\frac{L}{A}$	0	0	$-\frac{14}{15\sqrt{2}}P$
35	$L\sqrt{2}$	$A\sqrt{2}$	$-\frac{P}{\sqrt{2}}$	0	1	0	$-\frac{PL}{\sqrt{2}A}$	0	0	$\frac{L}{A}$	$-\frac{23}{30\sqrt{2}}P$
24	$L\sqrt{2}$	$A\sqrt{2}$	0	1	0	0	0	$\frac{L}{A}$	0	0	$\frac{1}{15\sqrt{2}}P$
26	$L\sqrt{2}$	$A\sqrt{2}$	0	0	1	0	0	0	0	$\frac{L}{A}$	$\frac{7}{30\sqrt{2}}P$
Σ						$-\frac{PL}{2\sqrt{2}A}$	$-\frac{PL}{\sqrt{2}A}$	$\frac{4L}{A}$	$\frac{L}{A}$	$\frac{4L}{A}$	

$$N = N_0 + N_1 R_1 + N_2 R_2$$

Solution of Flexibility Equation

$$\Delta_{01} = \sum \frac{N_0 N_1}{AE} L = \frac{-PL}{2\sqrt{2} AE}$$

$$\Delta_{02} = \sum \frac{N_0 N_2}{AE} L = \frac{-PL}{\sqrt{2} AE}$$

$$\delta_{11} = \sum \frac{N_1 N_1}{AE} L = \frac{4L}{AE}$$

$$\delta_{12} = \delta_{21} = \sum \frac{N_1 N_2}{AE} L = \frac{L}{AE}$$

$$\delta_{22} = \sum \frac{N_2 N_2}{AE} L = \frac{4L}{AE}$$

Solution of Flexibility Equation

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \end{Bmatrix}$$



$$\begin{Bmatrix} 1 \\ -\frac{1}{2\sqrt{2}} \\ 1 \\ -\frac{1}{\sqrt{2}} \end{Bmatrix} \frac{PL}{AE} + \begin{bmatrix} 4 & 1 \\ 1 & 4 \end{bmatrix} \frac{L}{AE} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\begin{bmatrix} 4 & 1 \\ 1 & 4 \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{1}{2\sqrt{2}} \\ \frac{1}{\sqrt{2}} \end{Bmatrix} P$$

$$R_1 = \frac{\begin{vmatrix} \frac{1}{2\sqrt{2}}P & 1 \\ \frac{1}{\sqrt{2}}P & 4 \end{vmatrix}}{\begin{vmatrix} 4 & 1 \\ 1 & 4 \end{vmatrix}} = \frac{\frac{1}{\sqrt{2}}P}{15} = \frac{1}{15\sqrt{2}}P$$

$$R_2 = \frac{\begin{vmatrix} 4 & \frac{1}{2\sqrt{2}}P \\ 1 & \frac{1}{\sqrt{2}}P \end{vmatrix}}{\begin{vmatrix} 4 & 1 \\ 1 & 4 \end{vmatrix}} = \frac{\frac{7}{2\sqrt{2}}P}{15} = \frac{7}{30\sqrt{2}}P$$

Truss Problem With Thermal Expansion

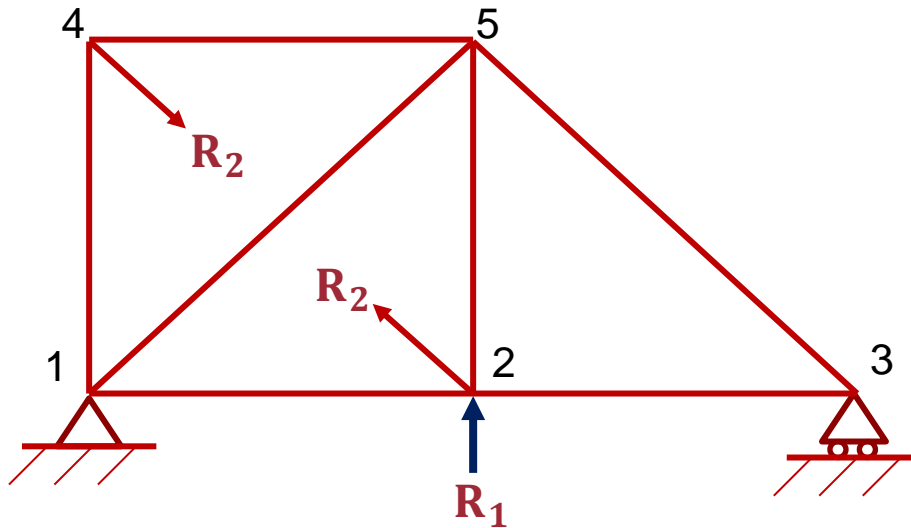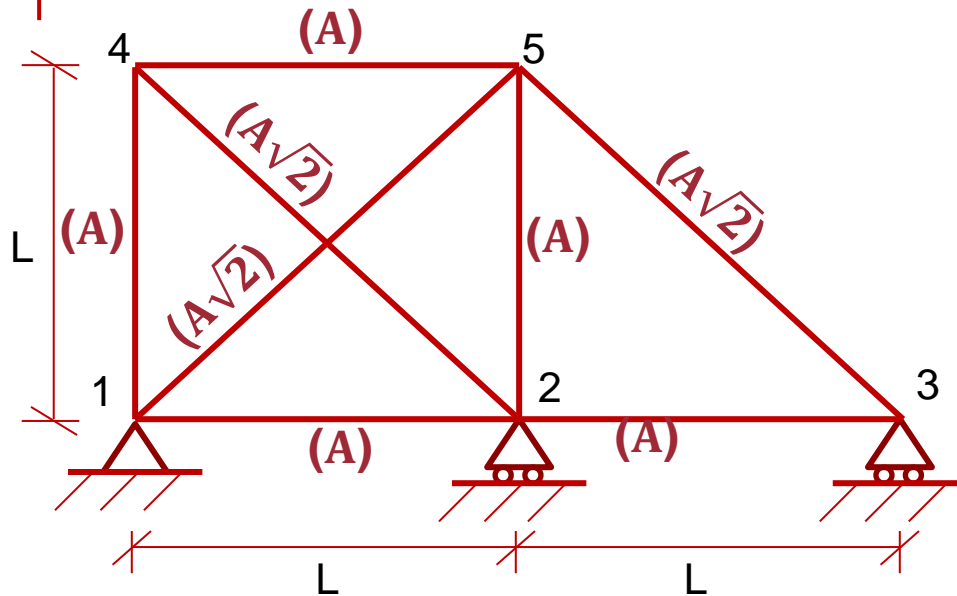

Thermal Expansion In Bar 45,
 $e = \alpha \Delta t L$

Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

DoSI = No. of Reactions – No. of Equilibrium Equations = $12 - 10 = 2$

Step 2: Select redundants and the released structure

The released structure must be stable.

Truss Problem With Thermal Expansion


$$\Delta_0 = \sum \frac{N_0 N_1}{AE} L + \sum N_1 e = \sum \frac{N_0 N_1}{AE} L + \sum N_1 \alpha \Delta T L$$

Where, α = Coefficient Of Thermal Expansion
 ΔT = Change In Temperature

α_{steel} = Coefficient Of Thermal Expansion of steel = $13 \times 10^{-6}/^{\circ}\text{C}$


Let the top cord experiences a temperature rise of 50°C , i.e., $\Delta T = 50^{\circ}\text{C}$

Member Force for Deformation

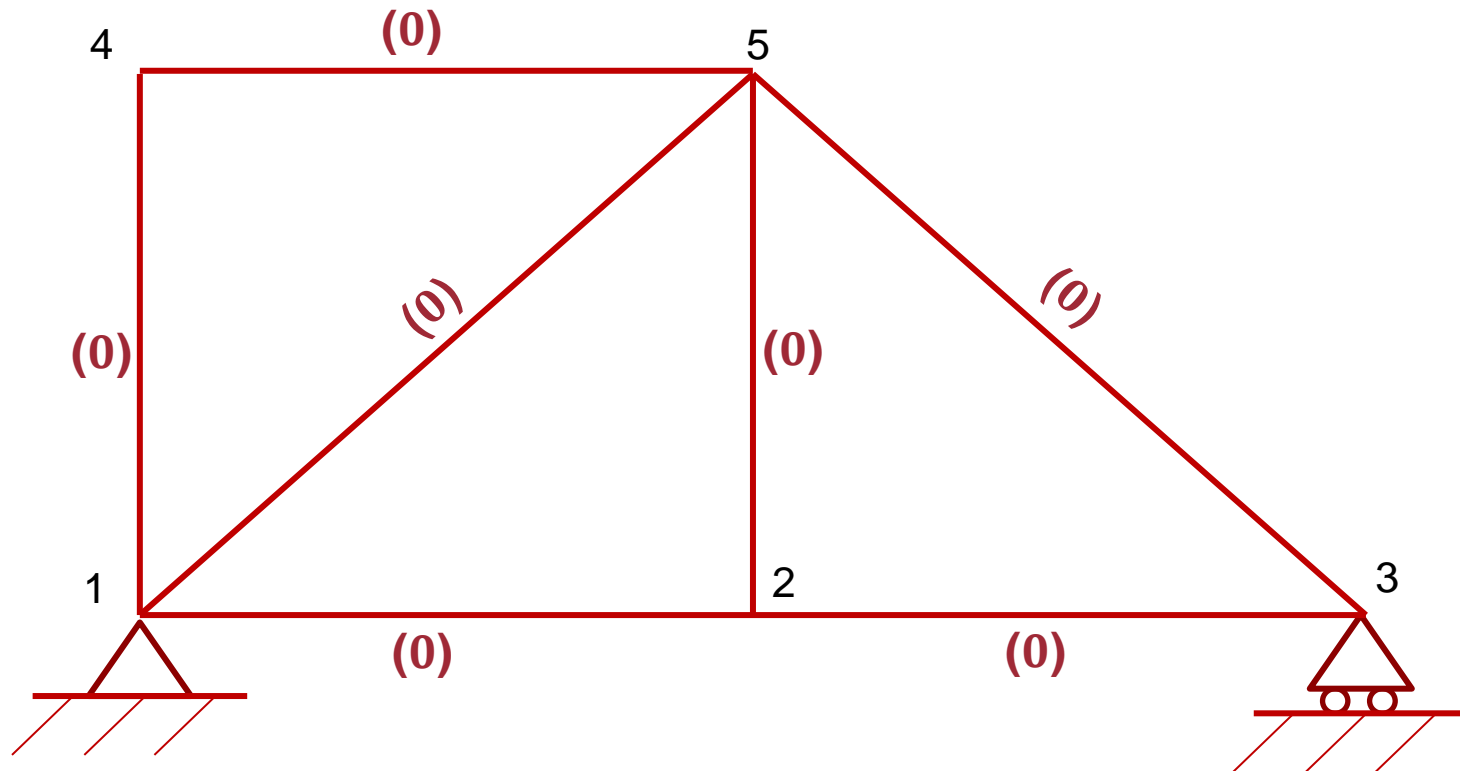


N_0

Member Force for Deformation

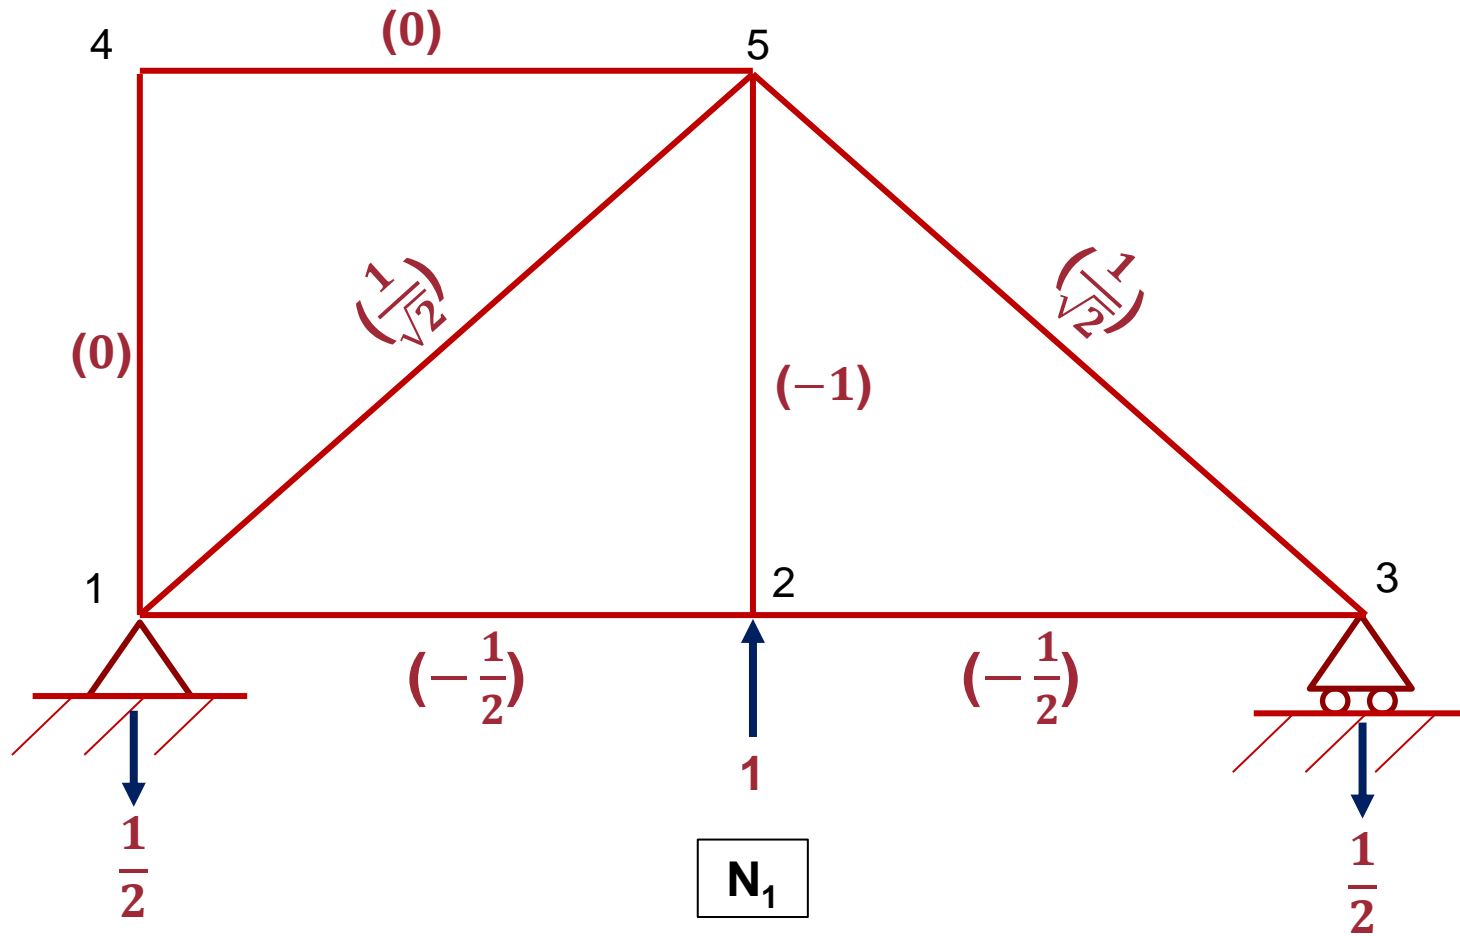

Member Force for Deformation

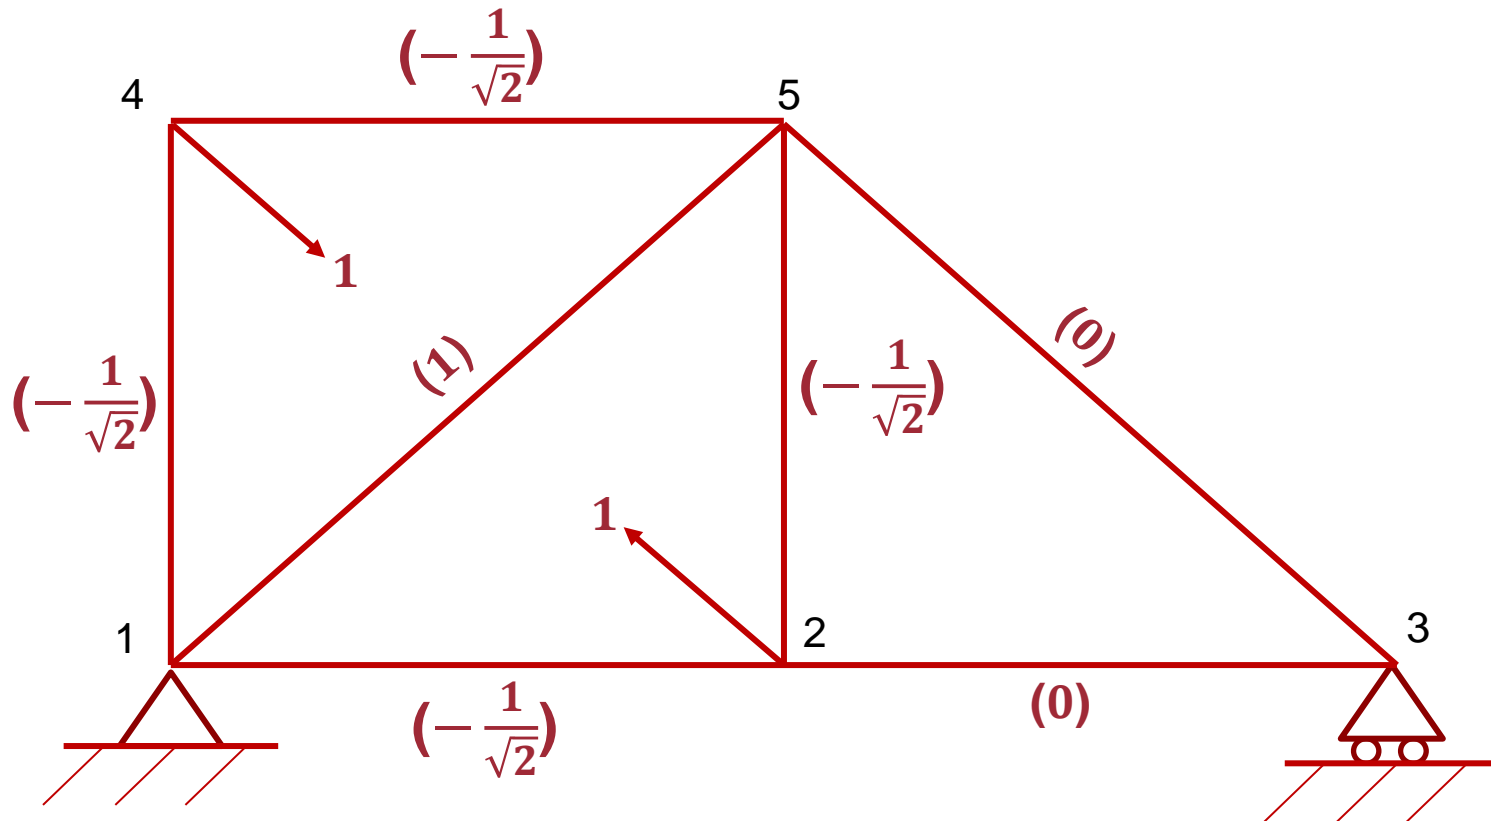

N_2

Calculation of Deformations & Flexibilities: ($p=0.00065AE$)

Bar	L	A	N_0	N_1	N_2	N_1e	N_2e	$\frac{N_1N_1L}{A}$	$\frac{N_1N_2L}{A}$	$\frac{N_2N_2L}{A}$	N
12	L	A	0	$-1/2$	$-1/\sqrt{2}$	0	0	$\frac{L}{4A}$	$\frac{L}{2\sqrt{2}A}$	$\frac{L}{2A}$	$-\frac{1}{9}p$
23	L	A	0	$-1/2$	0	0	0	$\frac{L}{4A}$	0	0	$\frac{1}{27}p$
45	L	A	0	0	$-1/\sqrt{2}$	0	$-\frac{0.00065L}{\sqrt{2}}$	0	0	$\frac{L}{2A}$	$-\frac{4}{27}p$
14	L	A	0	0	$-1/\sqrt{2}$	0	0	0	0	$\frac{L}{2A}$	$-\frac{4}{27}p$
25	L	A	0	-1	$-1/\sqrt{2}$	0	0	$\frac{L}{A}$	$\frac{L}{\sqrt{2}A}$	$\frac{L}{2A}$	$-\frac{2}{27}p$
15	$L\sqrt{2}$	$A\sqrt{2}$	0	$1/\sqrt{2}$	1	0	0	$\frac{L}{2A}$	$\frac{L}{\sqrt{2}A}$	$\frac{L}{A}$	$\frac{\sqrt{2}}{9}p$
35	$L\sqrt{2}$	$A\sqrt{2}$	0	$1/\sqrt{2}$	0	0	0	$\frac{L}{2A}$	0	0	$-\frac{\sqrt{2}}{27}p$
24	$L\sqrt{2}$	$A\sqrt{2}$	0	0	1	0	0	0	0	$\frac{L}{A}$	$\frac{8}{27\sqrt{2}}p$
Σ						0	$-\frac{0.00065L}{\sqrt{2}}$	$\frac{5L}{2A}$	$\frac{5L}{2\sqrt{2}A}$	$\frac{4L}{A}$	

Solution of Flexibility Equation

$$\Delta_{01} = \sum \frac{N_0 N_1}{AE} L + \sum N_1 \alpha \Delta T L = 0$$

$$\Delta_{02} = \sum \frac{N_0 N_2}{AE} L + \sum N_2 \alpha \Delta T L = \frac{-00065L}{\sqrt{2}}$$

$$\delta_{11} = \sum \frac{N_1 N_1}{AE} L = \frac{5L}{AE}$$

$$\delta_{12} = \delta_{21} = \sum \frac{N_1 N_2}{AE} L = \frac{5L}{2\sqrt{2} AE}$$

$$\delta_{22} = \sum \frac{N_2 N_2}{AE} L = \frac{4L}{AE}$$

Solution of Flexibility Equation

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \end{Bmatrix}$$



$$\begin{Bmatrix} 0 \\ 1 \\ -\frac{1}{\sqrt{2}} \end{Bmatrix} 0.00065L + \begin{bmatrix} 5 & \frac{5}{2\sqrt{2}} \\ \frac{5}{2\sqrt{2}} & 4 \end{bmatrix} \frac{L}{AE} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\begin{bmatrix} 5 & \frac{5}{2\sqrt{2}} \\ \frac{5}{2\sqrt{2}} & 4 \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ \frac{1}{\sqrt{2}} \end{Bmatrix} 0.00065AE$$

$$R_1 = \frac{\begin{vmatrix} 0 & \frac{5}{2\sqrt{2}} \\ \frac{1}{\sqrt{2}}p & 4 \end{vmatrix}}{\begin{vmatrix} 5 & \frac{5}{2\sqrt{2}} \\ \frac{5}{2\sqrt{2}} & 4 \end{vmatrix}} = \frac{-\frac{5}{4}p}{\frac{135}{8}} = -\frac{2}{27}p$$

$$R_2 = \frac{\begin{vmatrix} 5 & 0 \\ \frac{5}{2\sqrt{2}} & \frac{1}{\sqrt{2}}p \end{vmatrix}}{\begin{vmatrix} 5 & \frac{5}{2\sqrt{2}} \\ \frac{5}{2\sqrt{2}} & 4 \end{vmatrix}} = \frac{\frac{5}{\sqrt{2}}p}{\frac{135}{8}} = \frac{8}{27\sqrt{2}}p$$

Truss Problem With Misfit

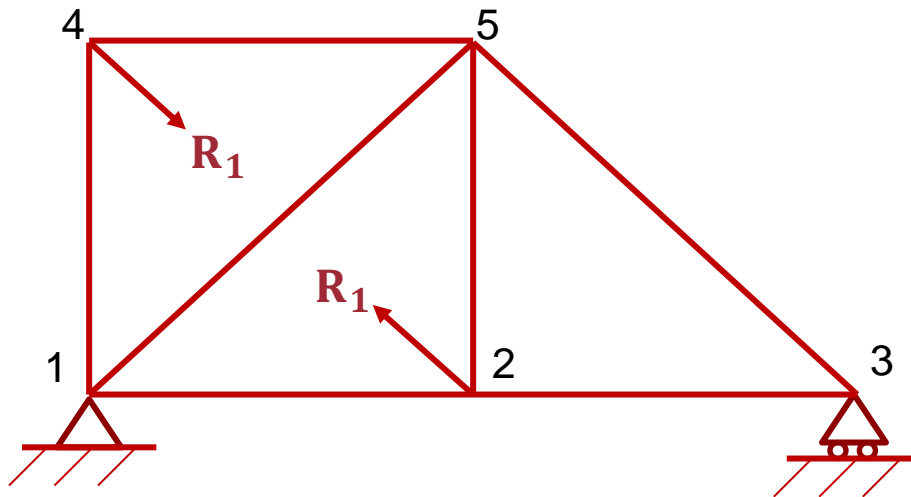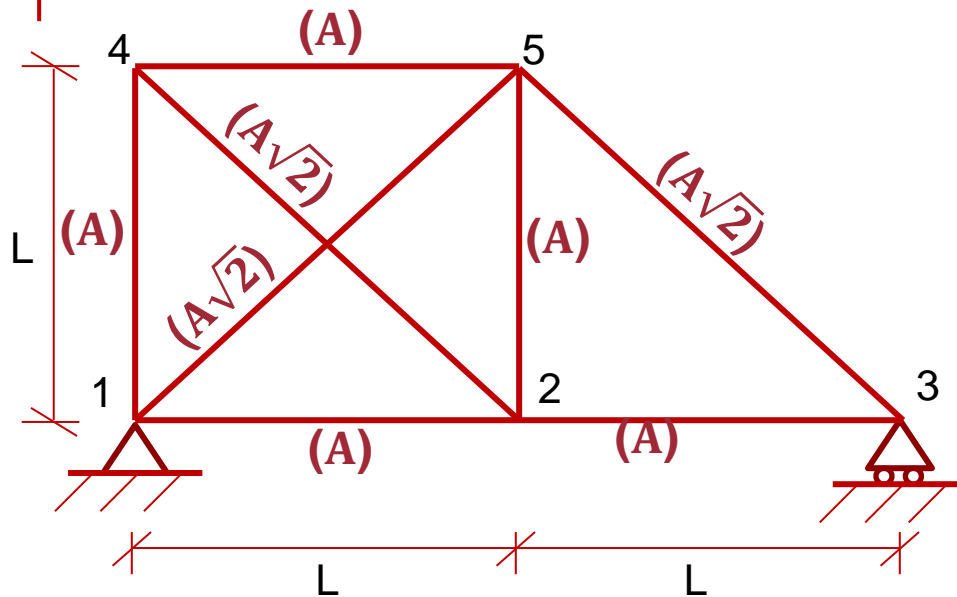

Misfit deformation δ

$$\Delta_0 = \sum \frac{N_0 N_1}{AE} L + \sum N_1 \delta$$

$$\text{Say, } \delta_{25} = \frac{\sqrt{2}L}{AE}$$


Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 11 - 10 = 1$$

Step 2: Select redundants and the released structure

The released structure must be stable.

Member Force for Deformation

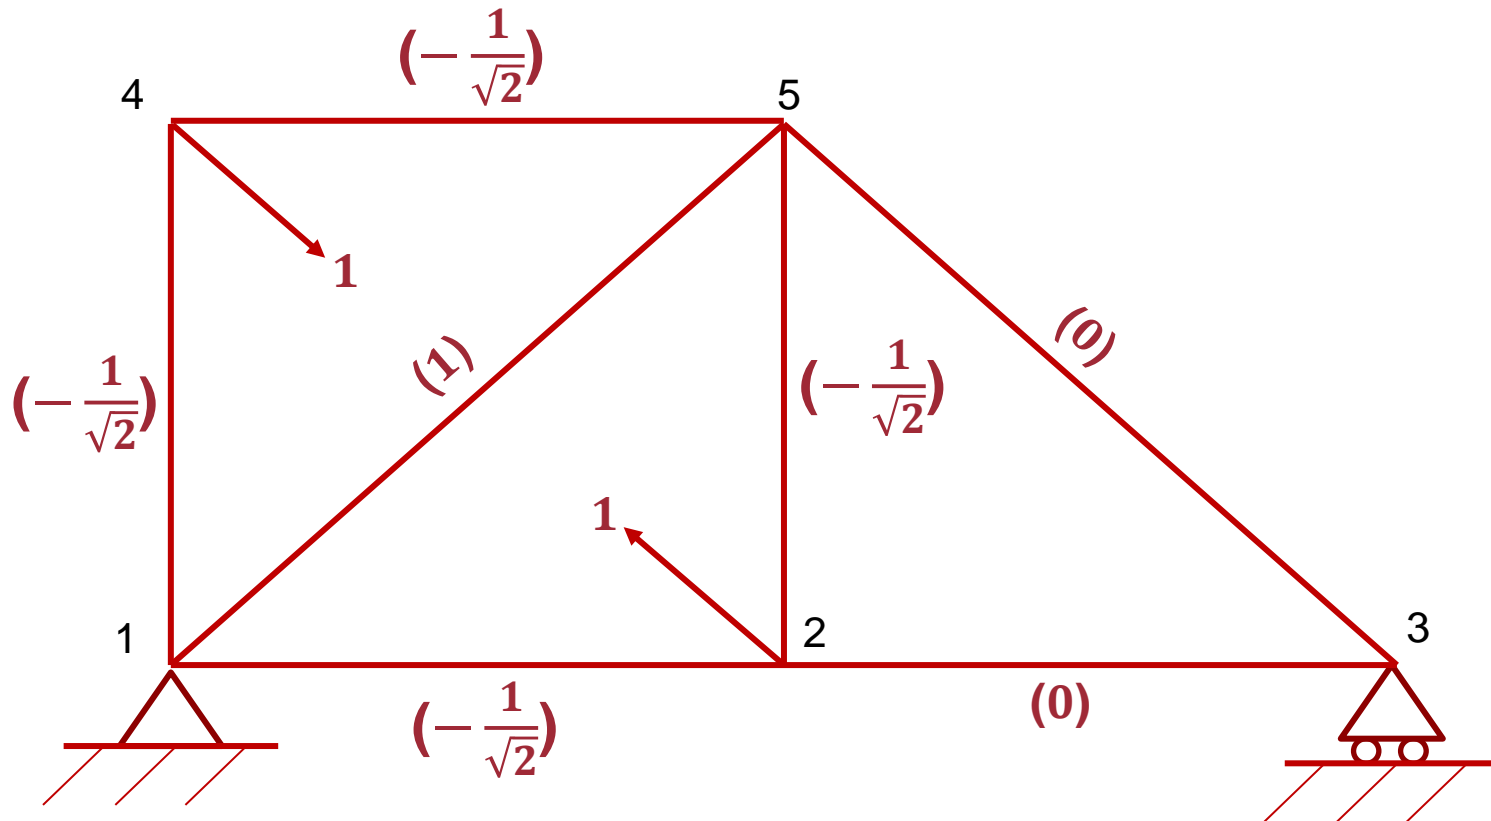

N_1

Calculation of Deformations & Flexibilities:

Bar	L	A	N_0	N_1	$N_1 e$	$\frac{N_1 N_1 L}{A}$	N
12	L	A	0	$-\frac{1}{\sqrt{2}}$	0	$\frac{L}{2A}$	$-\frac{1}{4\sqrt{2}}$
23	L	A	0	0	0	0	0
45	L	A	0	$-\frac{1}{\sqrt{2}}$	0	$\frac{L}{2A}$	$-\frac{1}{4\sqrt{2}}$
14	L	A	0	$-\frac{1}{\sqrt{2}}$	0	$\frac{L}{2A}$	$-\frac{1}{4\sqrt{2}}$
25	L	A	0	$-\frac{1}{\sqrt{2}}$	$-\frac{L}{AE}$	$\frac{L}{2A}$	$-\frac{1}{4\sqrt{2}}$
15	$L\sqrt{2}$	$A\sqrt{2}$	0	1	0	$\frac{L}{A}$	1/4
35	$L\sqrt{2}$	$A\sqrt{2}$	0	0	0	0	0
24	$L\sqrt{2}$	$A\sqrt{2}$	0	1	0	$\frac{L}{A}$	1/4
Σ					$-\frac{L}{AE}$	$\frac{4L}{A}$	

Solution of Flexibility Equation

$$\Delta_0 = \sum \frac{N_0 N_1}{AE} L + \sum N_1 \alpha \Delta T L = -\frac{L}{AE}$$

$$\delta = \sum \frac{N_1 N_1}{AE} L = \frac{4L}{AE}$$


$$\Delta_0 + \delta R = 0$$

$$R = -\frac{\Delta_0}{\delta} = \frac{1}{4}$$

Week-(06-08)

MD Ehasan Kabir

Frame Problem (DoSI=1)

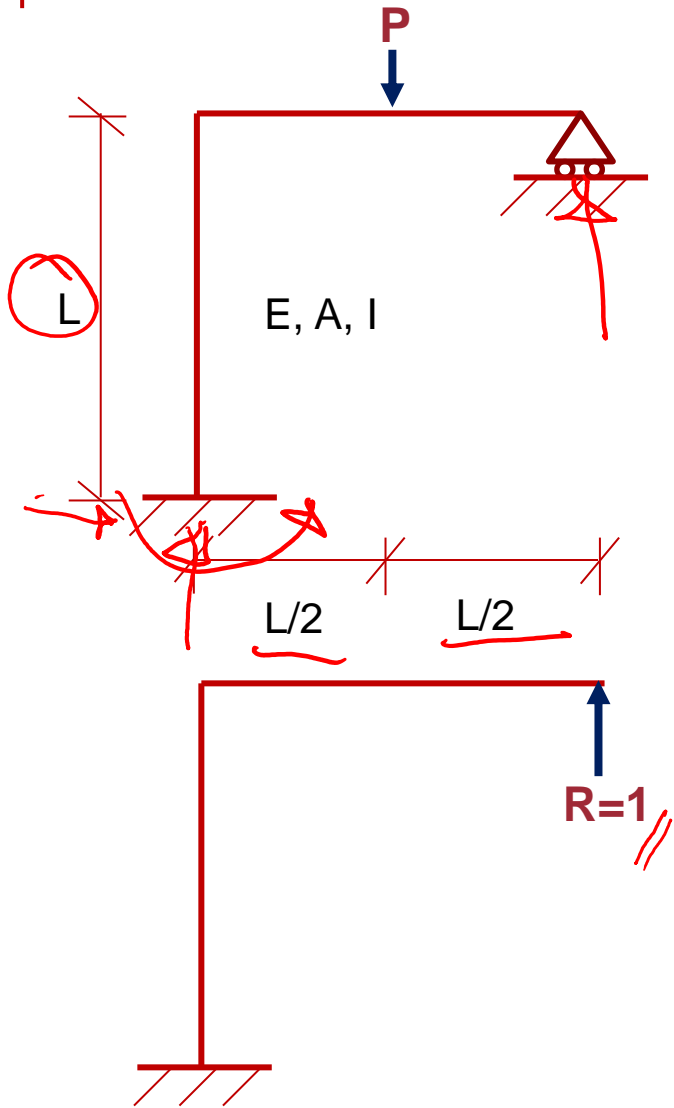

$$\{\Delta_o\} + [\delta]\{R\} = \{0\}$$

$$\Delta_o + \delta R = 0$$


Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 4 - 3 = 1 //$$

Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

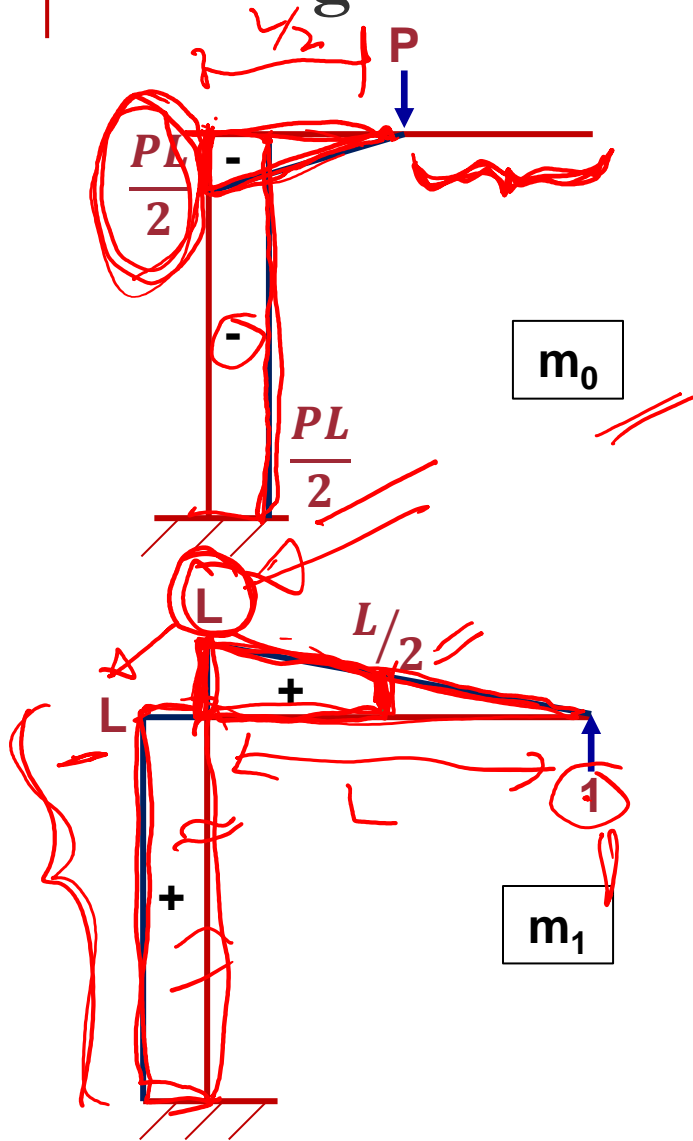

$$\Delta_0 = \int \frac{m_0 m_1}{EI} dx$$

$$= \frac{L}{EI} \left(\frac{-PL}{2} \right) L + \frac{L/2}{6EI} \left(\frac{-PL}{2} \right) \left(2L + \frac{L}{2} \right)$$

$$= -\frac{PL^3}{2EI} - \frac{5PL^3}{48EI} = -\frac{29PL^3}{48EI}$$

$$\delta = \int \frac{m_1 m_1}{EI} dx$$

$$= \frac{L \times L \times L}{EI} + \frac{L \times L \times L}{3EI}$$

$$= \frac{L^3}{EI} + \frac{L^3}{3EI} = \frac{4L^3}{3EI}$$



Solution of Flexibility Equation & Final Bending Moment Diagram

$$\Delta_0 + \delta R = \Delta_s$$

$$-\frac{29PL^3}{48EI} + \frac{4L^3}{3EI}R = 0$$


$$R = \frac{29}{64}P$$

$$M_A = -\frac{PL}{2} + L * \frac{29P}{64} = -\frac{3PL}{64} \quad M = m_0 + m_1 R$$

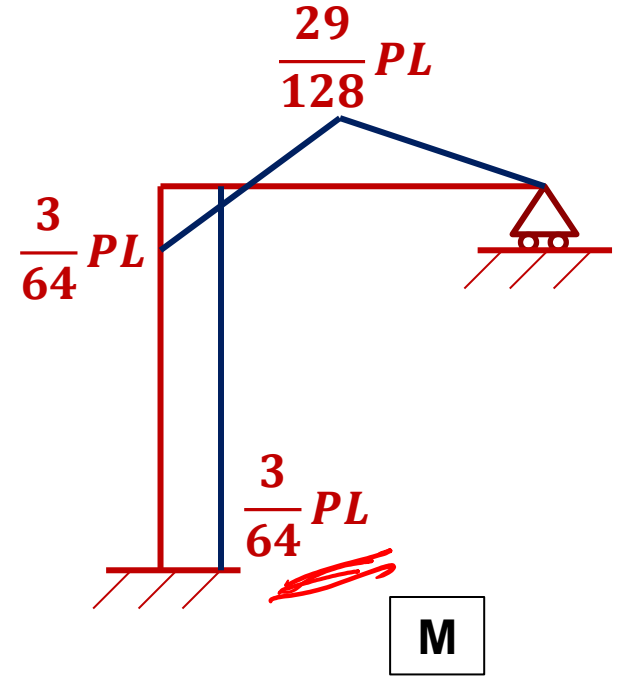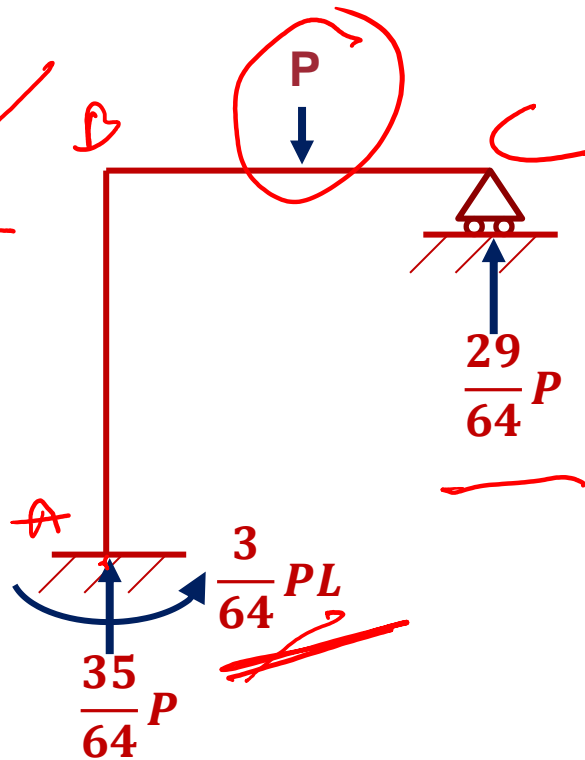

Axial Force Diagrams for Deformation

Considering Axial Deformation

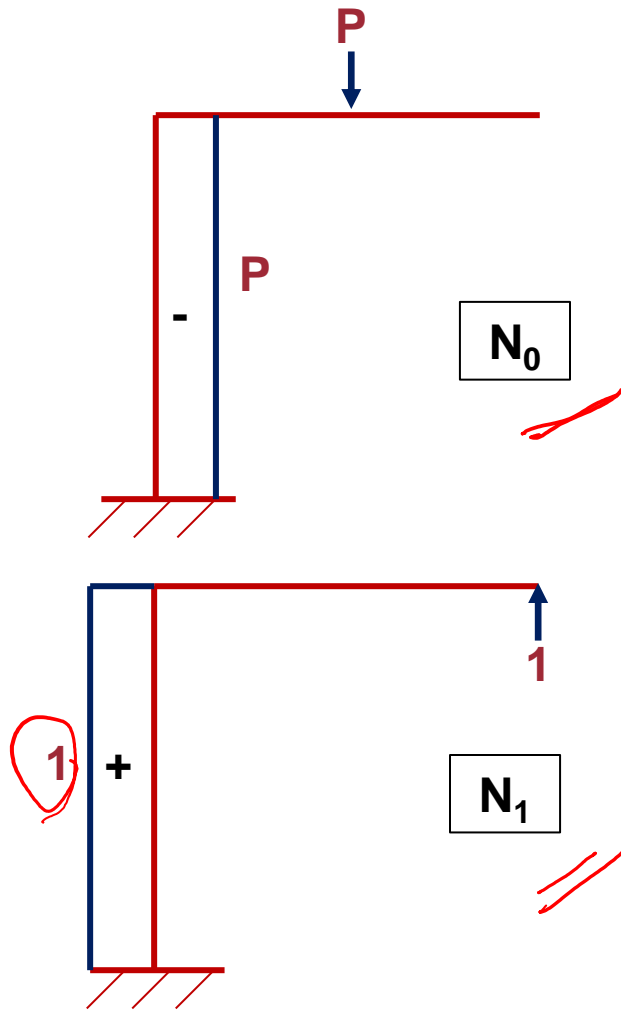

$$\begin{aligned} \Delta_0 &= \int \frac{m_0 m_1}{EI} dx + \sum \frac{N_0 N_1}{AE} L \\ &= -\frac{29PL^3}{48EI} + \frac{-P \times 1}{AE} L \\ &= -\frac{29PL^3}{48EI} - \frac{PL}{AE} \end{aligned}$$

$$\begin{aligned} \delta &= \int \frac{m_1 m_1}{EI} dx + \sum \frac{N_1 N_1}{AE} L \\ &= \frac{4L^3}{3EI} + \frac{1 \times 1}{AE} L \\ &= \frac{4L^3}{3EI} + \frac{L}{AE} \end{aligned}$$

Solution of Flexibility Equation

$$\Delta_0 + \delta R = \Delta_s$$

$$-\frac{29PL^3}{48EI} - \frac{PL}{AE} + \left(\frac{4L^3}{3EI} + \frac{L}{AE} \right) R = 0$$

$$R = \frac{\frac{29PL^3}{48EI} + \frac{PL}{AE}}{\frac{4L^3}{3EI} + \frac{L}{AE}}$$

Let, $L = 10 \text{ ft} = 120 \text{ in}$

$P = 10 \text{ kip}$

$E = 3000 \text{ ksi}$

$A = 100 \text{ in}^2$

$I = 1000 \text{ in}^4$

Considering Axial Deformation

$$R = \frac{\frac{29 \times 10 \times 120^3}{48 \times 3000 \times 1000} + \frac{10 \times 120}{100 \times 3000}}{\frac{4 \times 120^3}{3 \times 3000 \times 1000} + \frac{120}{100 \times 3000}}$$

$$= 4.534 \text{ kip}$$


Ignoring Axial Deformation

$$R = \frac{29}{64} P$$

$$= \frac{29}{64} \times 10$$

$$= 4.531 \text{ kip}$$

Frame Problem (DoSI=2)

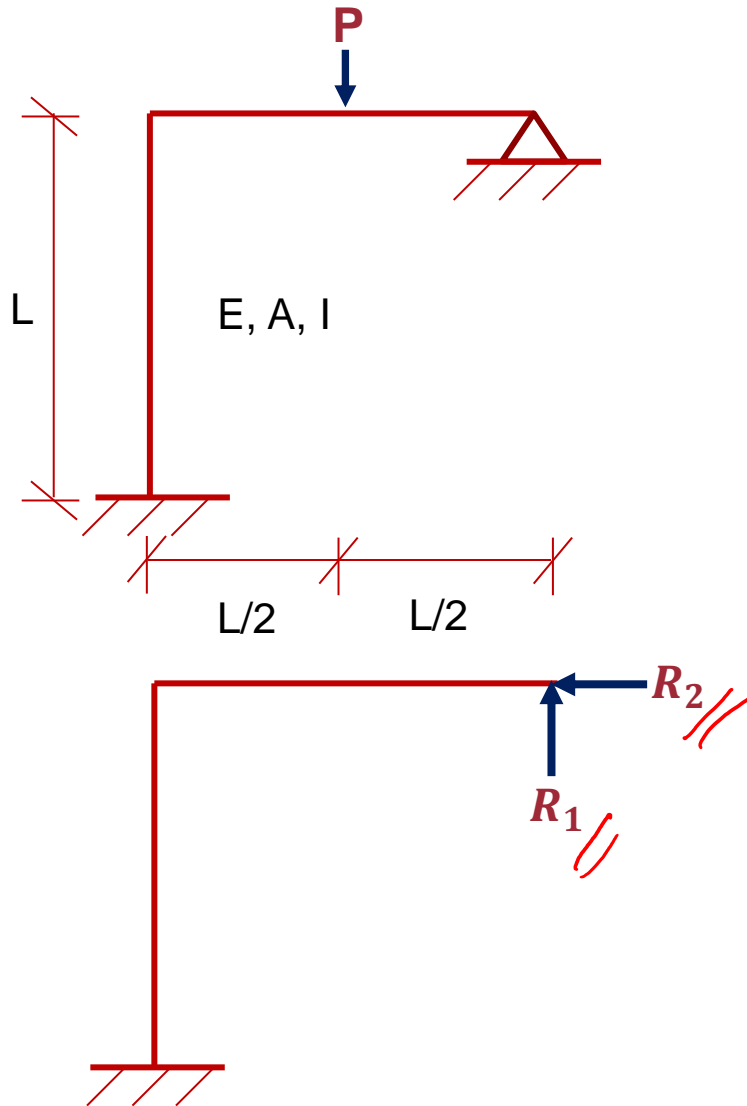


Step 1: Identification of Degree of Static Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 5 - 3 = 2$$


Step 2: Select redundants and the released structure

The released structure must be stable.


Bending Moment Diagrams for Deformation

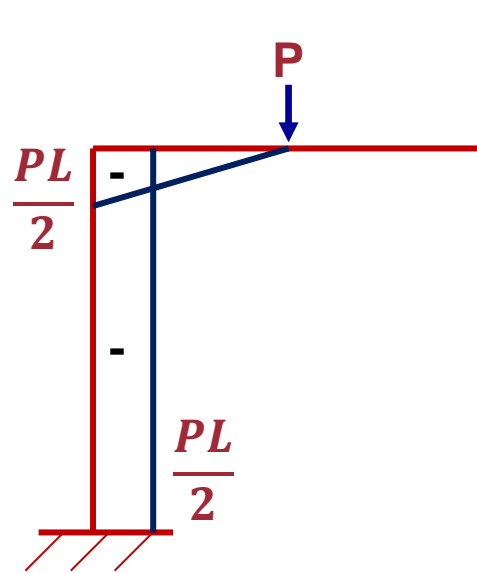

m_0

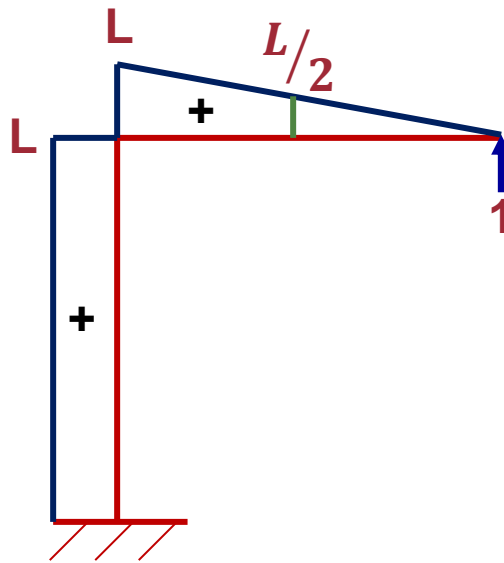

m_1

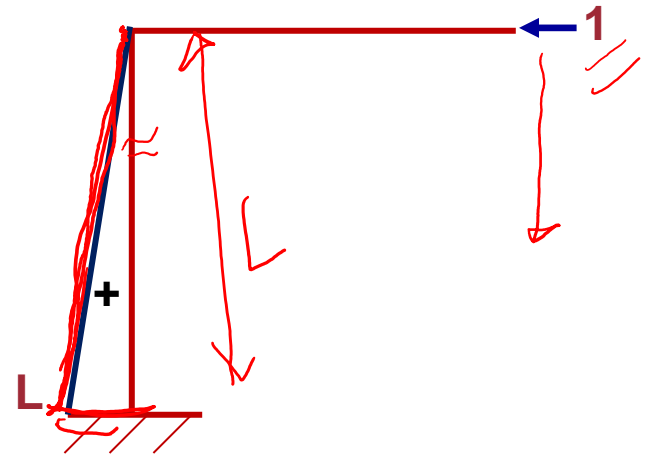

m_2

Calculation of Deformations

$$\Delta_{01} = \int \frac{m_0 m_1}{EI} dx$$



$$= \frac{L}{EI} \left(\frac{-PL}{2} \right) L + \frac{L/2}{6EI} \left(\frac{-PL}{2} \right) \left(2L + \frac{L}{2} \right)$$

$$= -\frac{PL^3}{2EI} - \frac{5PL^3}{48EI} = -\frac{29PL^3}{48EI}$$

$$\Delta_{02} = \int \frac{m_0 m_2}{EI} dx$$

$$= \frac{L}{2EI} \left(\frac{-PL}{2} \right) \times L$$

$$= -\frac{PL^3}{4EI}$$

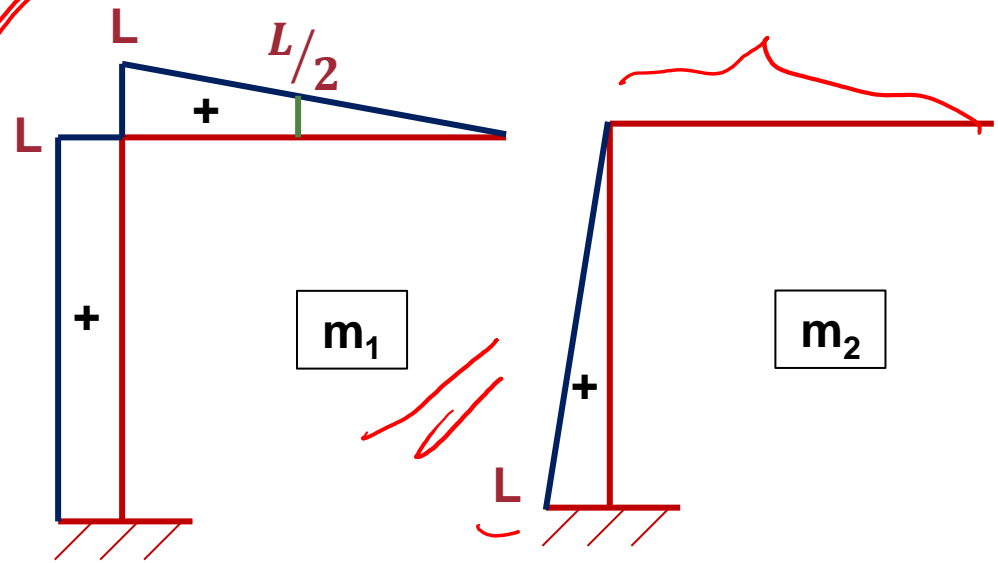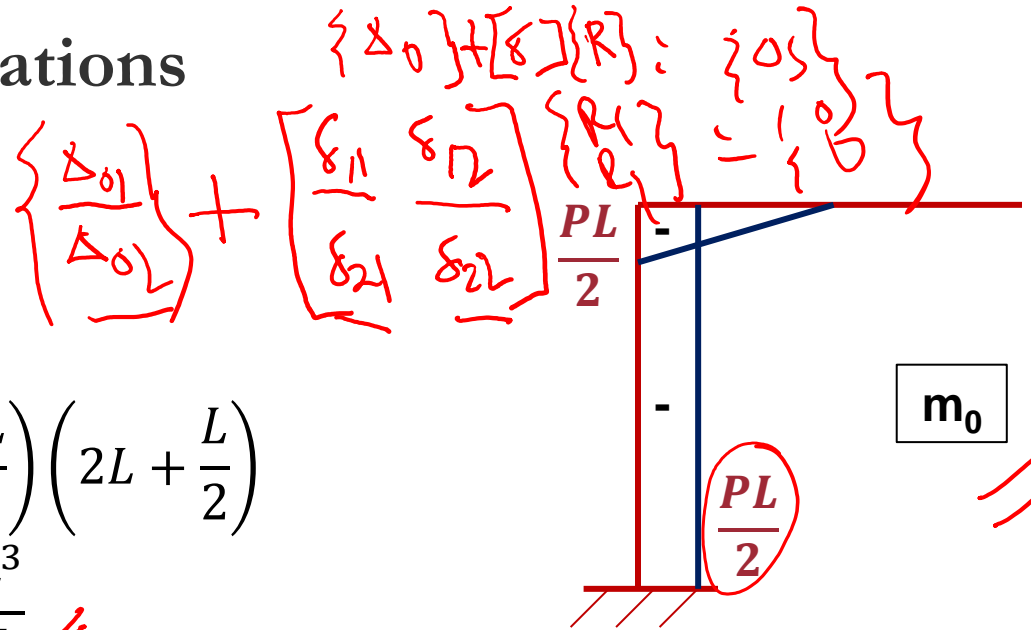


Calculation of Flexibilities

$$\begin{aligned} \delta_{11} &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{EI} + \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{EI} + \frac{L^3}{3EI} = \frac{4L^3}{3EI} \end{aligned}$$

$$\begin{aligned} \delta_{12} &= \delta_{21} = \int \frac{m_1 m_2}{EI} dx \\ &= \frac{L \times L \times L}{2EI} = \frac{L^3}{2EI} \end{aligned}$$

$$\begin{aligned} \delta_{22} &= \int \frac{m_2 m_2}{EI} dx \\ &= \frac{L \times L \times L}{3EI} = \frac{L^3}{3EI} \end{aligned}$$

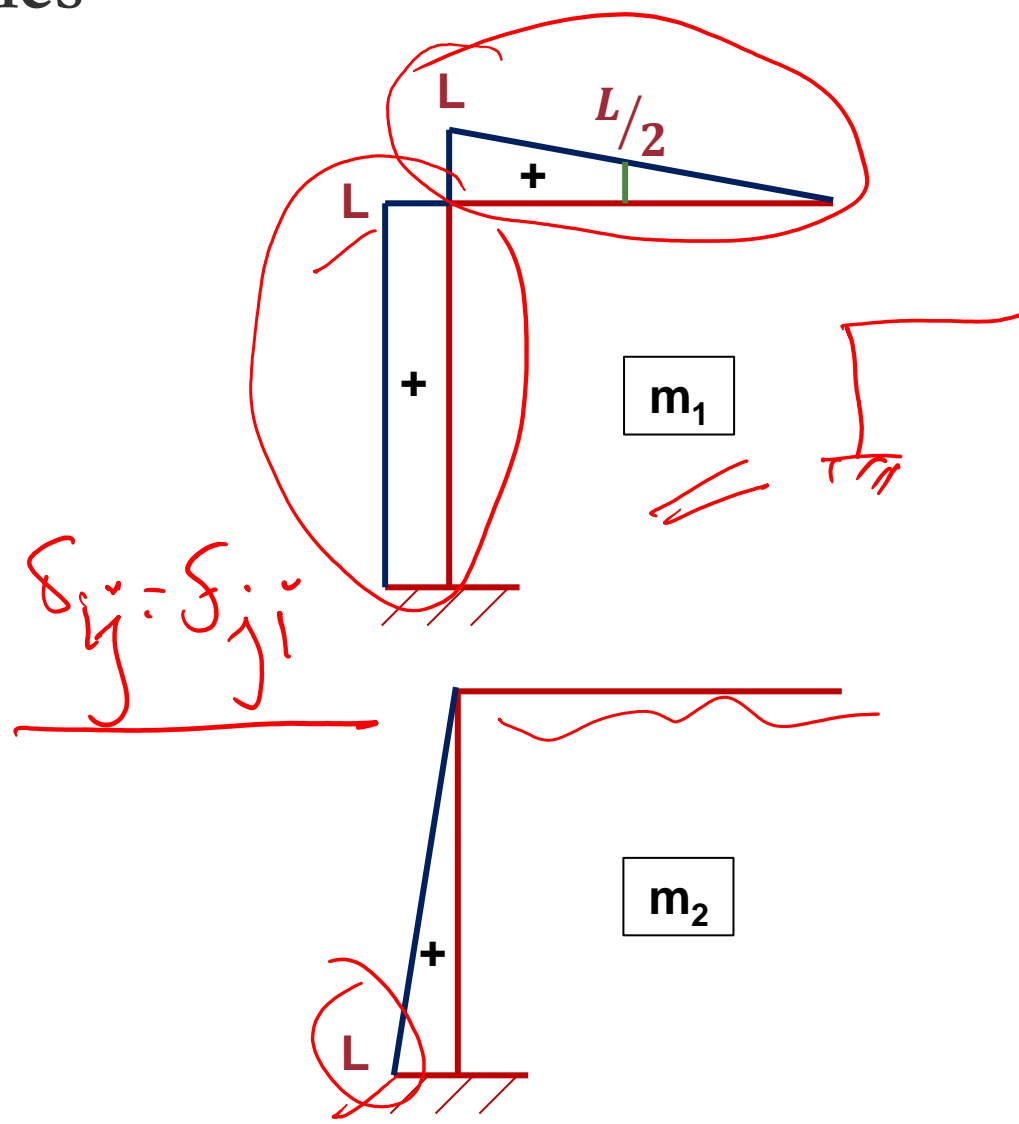

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \end{Bmatrix}$$

$$R_1 = \frac{\begin{vmatrix} \frac{29}{48}P & \frac{1}{2} \\ \frac{1}{4}P & \frac{1}{3} \end{vmatrix}}{\begin{vmatrix} \frac{4}{3} & \frac{1}{2} \\ \frac{1}{2} & \frac{1}{3} \end{vmatrix}} = \frac{\frac{11}{144}P}{\frac{7}{36}} = \frac{11}{28}P$$

$$\begin{Bmatrix} -\frac{29}{48} \\ \frac{1}{4} \\ -\frac{1}{2} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{4}{3} & \frac{1}{2} \\ \frac{1}{2} & \frac{1}{3} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$




$$\begin{bmatrix} \frac{4}{3} & \frac{1}{2} \\ \frac{1}{2} & \frac{1}{3} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{29}{48} \\ \frac{1}{4} \end{Bmatrix} P$$

Properties of Flexibility matrix:

1. Square
2. Symmetric
3. Positive Definite

$$R_2 = \frac{\begin{vmatrix} \frac{4}{3} & \frac{29}{48}P \\ \frac{1}{2} & \frac{1}{4}P \end{vmatrix}}{\begin{vmatrix} \frac{4}{3} & \frac{1}{2} \\ \frac{1}{2} & \frac{1}{3} \end{vmatrix}} = \frac{\frac{1}{32}P}{\frac{7}{36}} = \frac{9}{56}P$$

Final Bending Moment Diagram

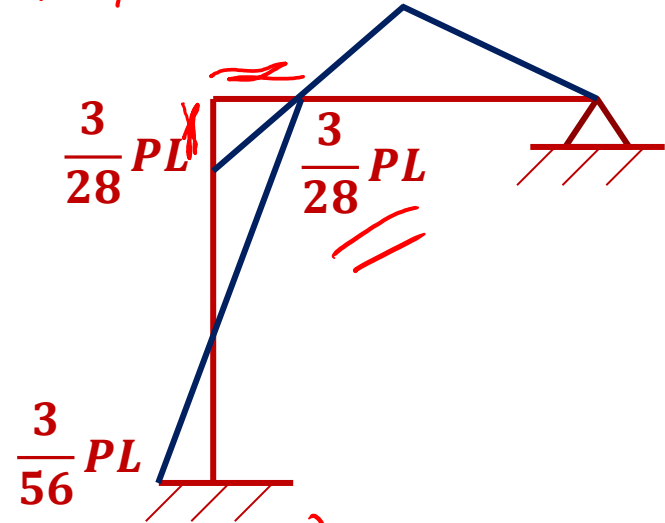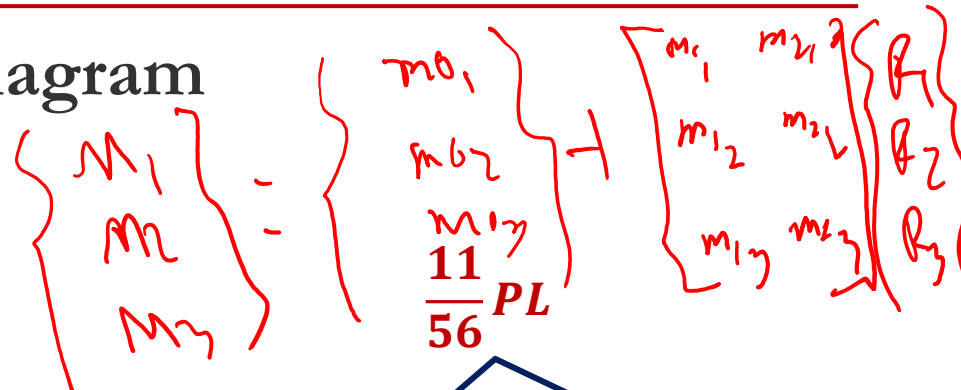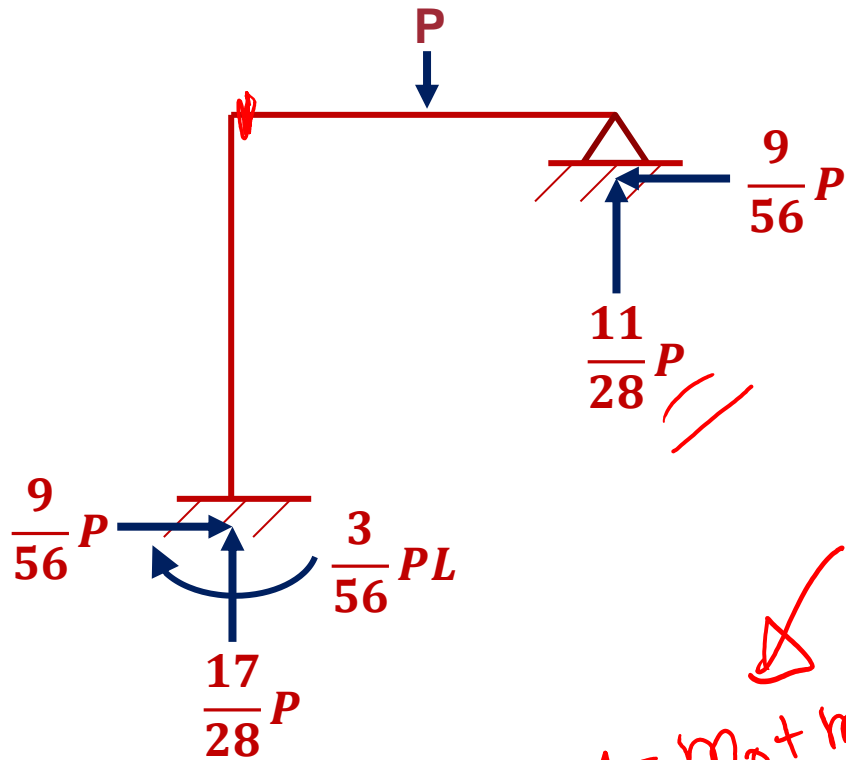



Handwritten equation for the final bending moment M :

$$M = m_0 + m_1 R_1 + m_2 R_2$$

$$= \frac{PL}{2} + L \frac{11}{28} P = \frac{17}{28} PL$$

M

Frame Problem (DoSI=3)

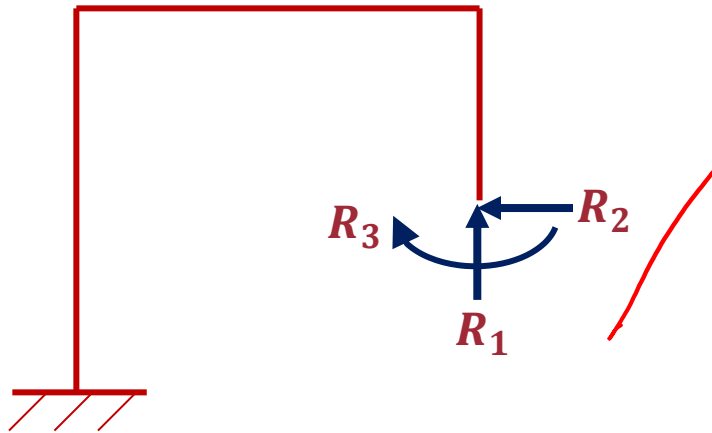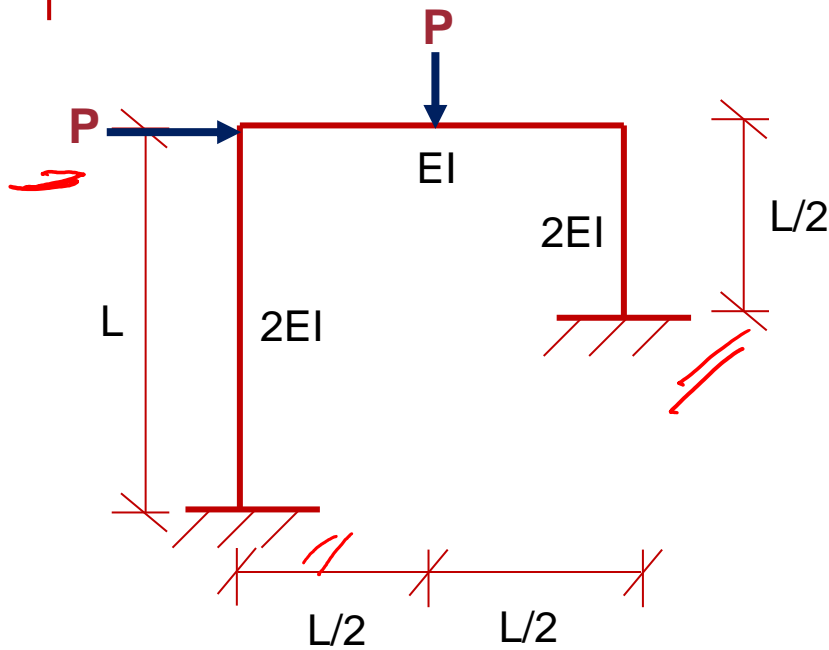


Step 1: Identification of Degree of Static Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 6 - 3 = 3$$


Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

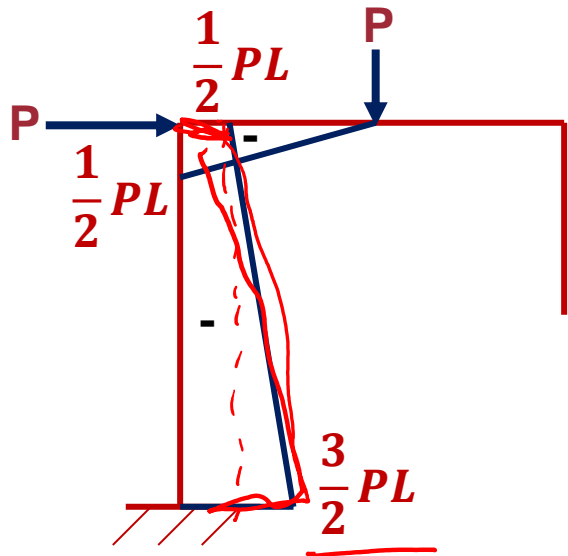


m_0

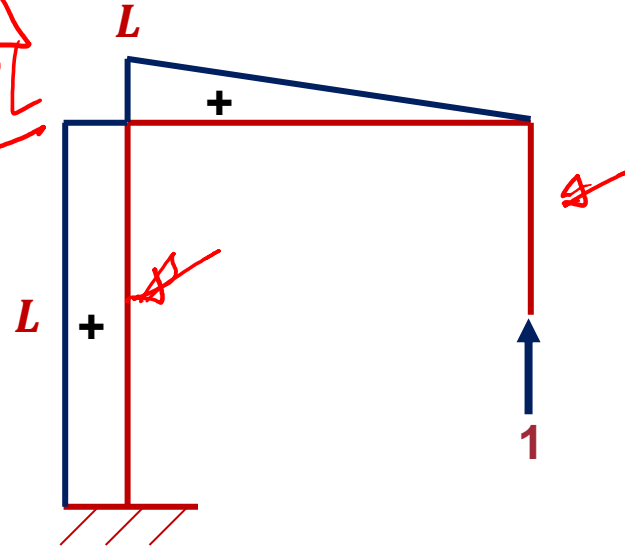


m_1

Bending Moment Diagrams for Deformation

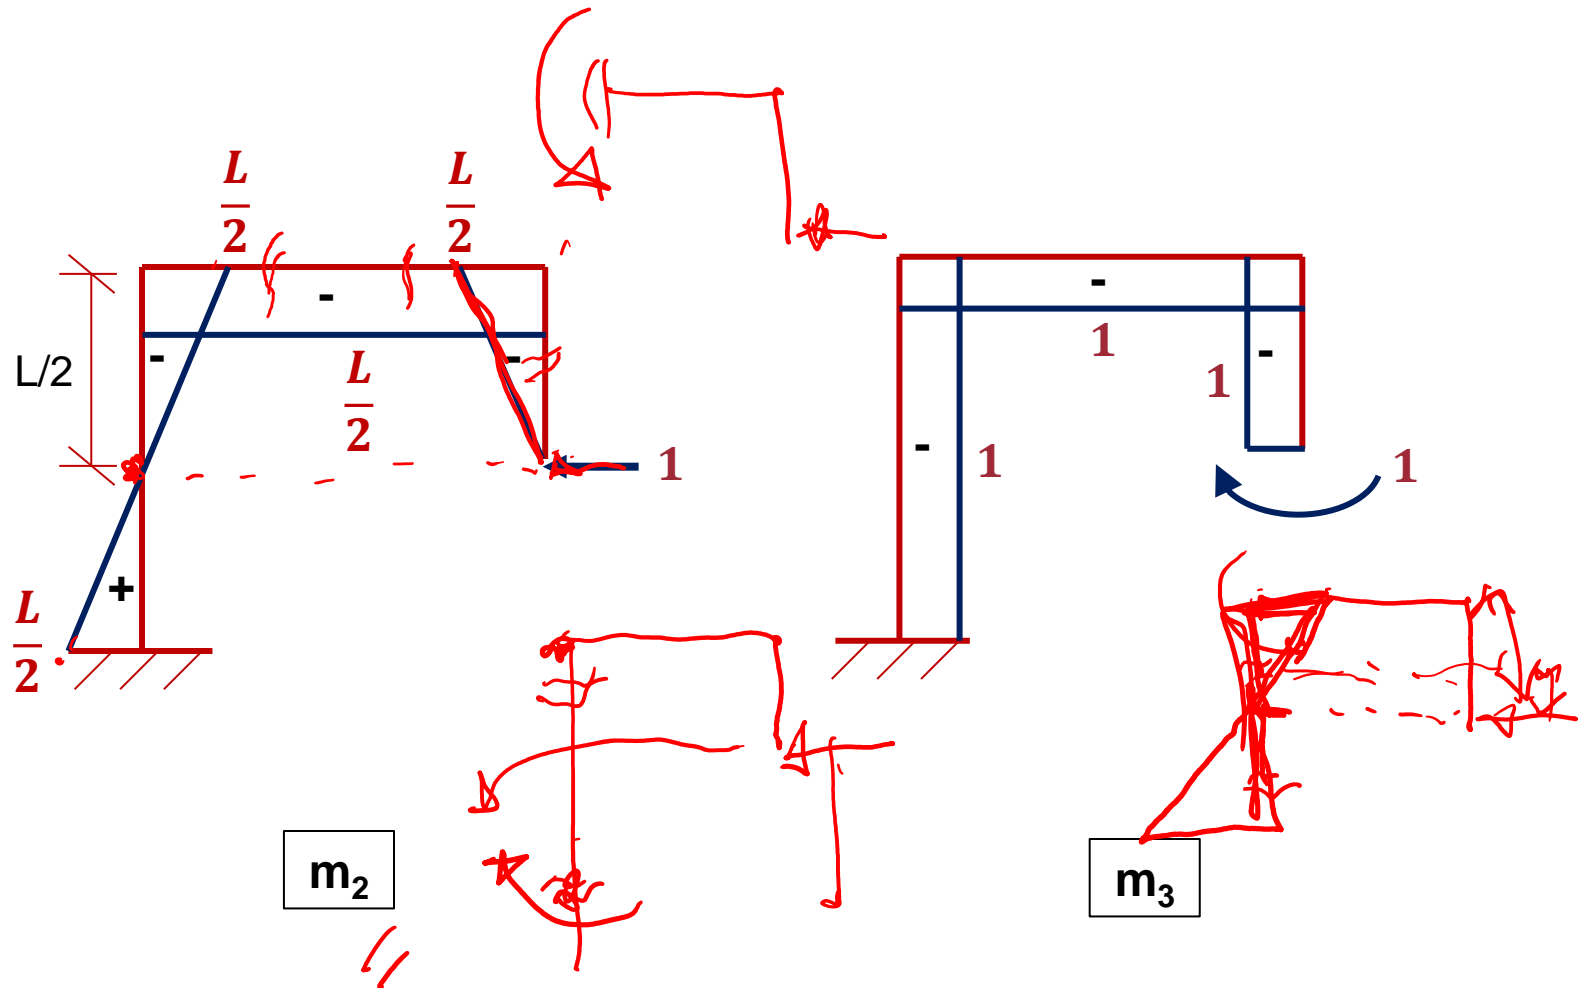


Calculation of Deformations

$$\begin{aligned}
 \Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\
 &= \frac{L/2}{6EI} \left(\frac{-PL}{2} \right) \left(2L + \frac{L}{2} \right) \\
 &\quad + \frac{L}{2 \times 2EI} \left(\frac{-3PL}{2} + \frac{-PL}{2} \right) L \\
 &= -\frac{5PL^3}{48EI} - \frac{PL^3}{2EI} \\
 &= -\frac{29PL^3}{48EI}
 \end{aligned}$$

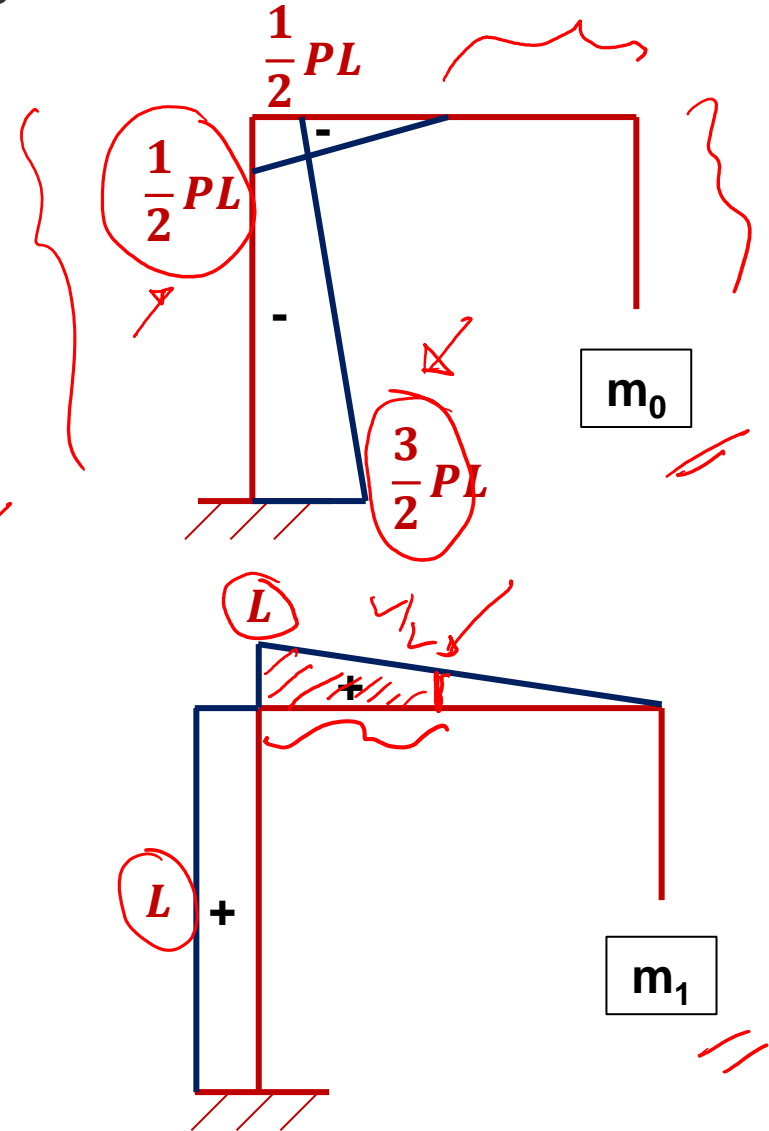


Calculation of Deformations

$$\begin{aligned}
 \Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\
 &= \frac{L/2}{2EI} \left(\frac{-PL}{2} \right) \left(\frac{-L}{2} \right) \\
 &\quad + \frac{L}{6 \times 2EI} \left[\left(\frac{-PL}{2} \right) \left(2 \times \frac{-L}{2} + \frac{L}{2} \right) \right. \\
 &\quad \left. + \left(\frac{-3PL}{2} \right) \left(\frac{-L}{2} + 2 \times \frac{L}{2} \right) \right] \\
 &= \frac{PL^3}{16EI} - \frac{PL^3}{24EI} \\
 &= \frac{PL^3}{48EI} //
 \end{aligned}$$

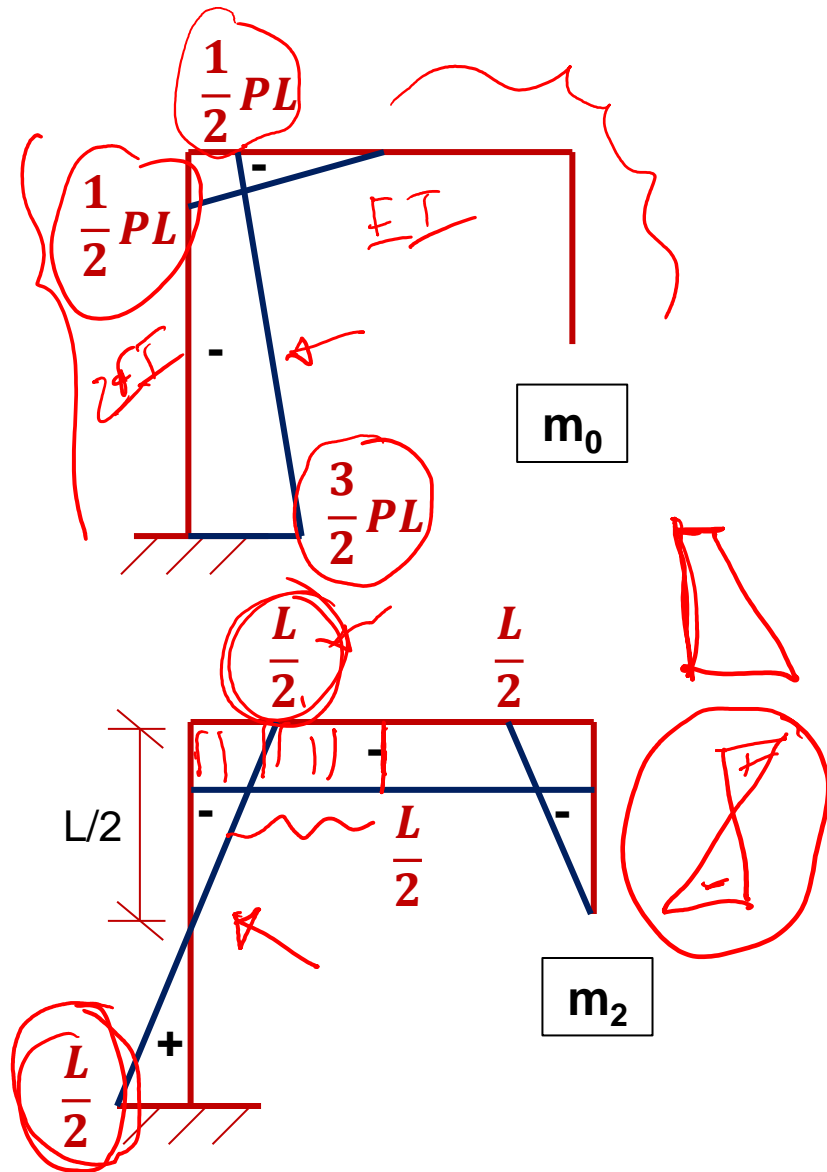


Calculation of Deformations

$$\begin{aligned}
 \Delta_{03} &= \int \frac{m_0 m_3}{EI} dx \\
 &= \frac{L/2}{2EI} \left(\frac{-PL}{2} \right) (-1) \\
 &\quad + \frac{L}{2 \times 2EI} \left(\frac{-3PL}{2} + \frac{-PL}{2} \right) (-1) \\
 &= \frac{PL^2}{8EI} + \frac{PL^2}{2EI} \\
 &= \frac{5PL^2}{8EI}
 \end{aligned}$$

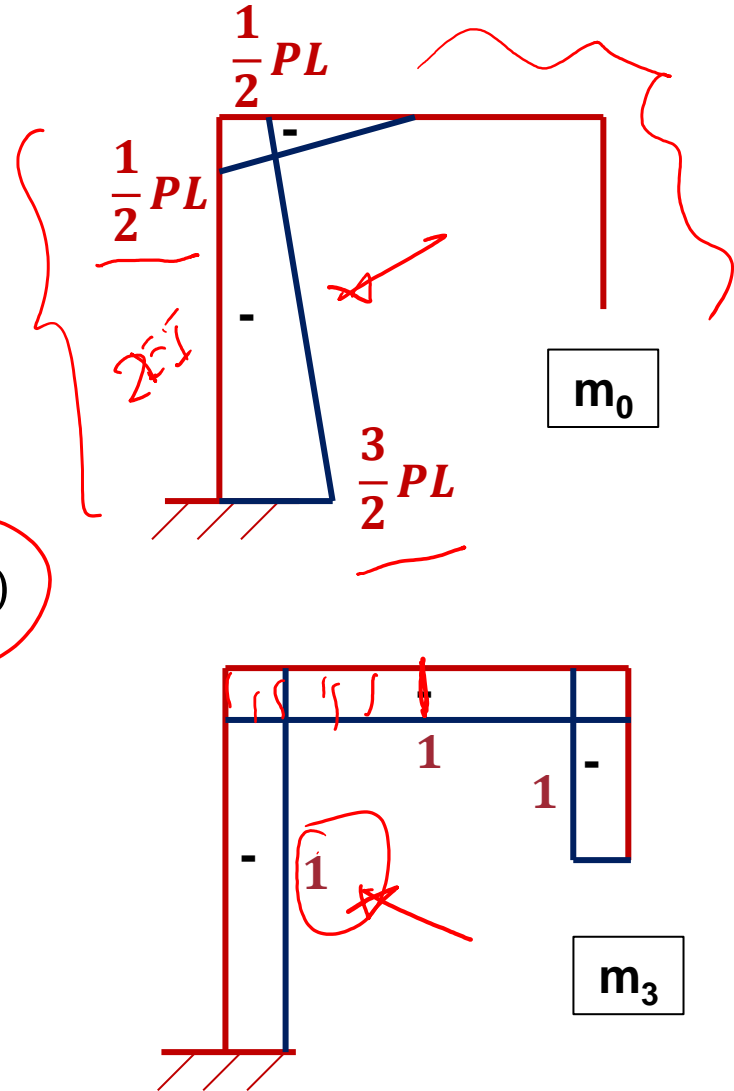


Calculation of Flexibilities

$$\begin{aligned} \delta_{11} &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{3EI} + \frac{L \times L \times L}{2EI} \\ &= \frac{L^3}{3EI} + \frac{L^3}{2EI} = \frac{5L^3}{6EI} \end{aligned}$$

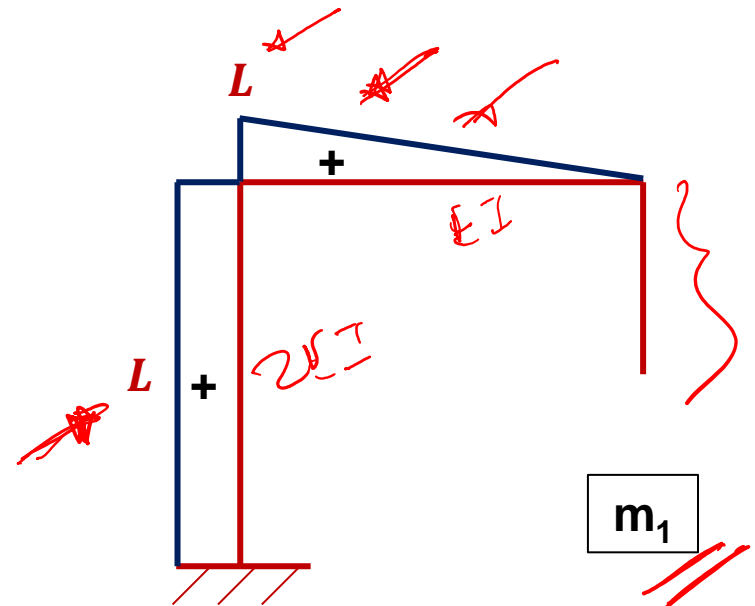

$$\begin{aligned} \delta_{12} = \delta_{21} &= \int \frac{m_1 m_2}{EI} dx \\ &= \frac{L}{2EI} \times L \times \frac{-L}{2} + \frac{L}{2 \times 2EI} \times L \times \left(\frac{-L}{2} + \frac{L}{2} \right) \\ &= -\frac{L^3}{4EI} + 0 = -\frac{L^3}{4EI} \end{aligned}$$

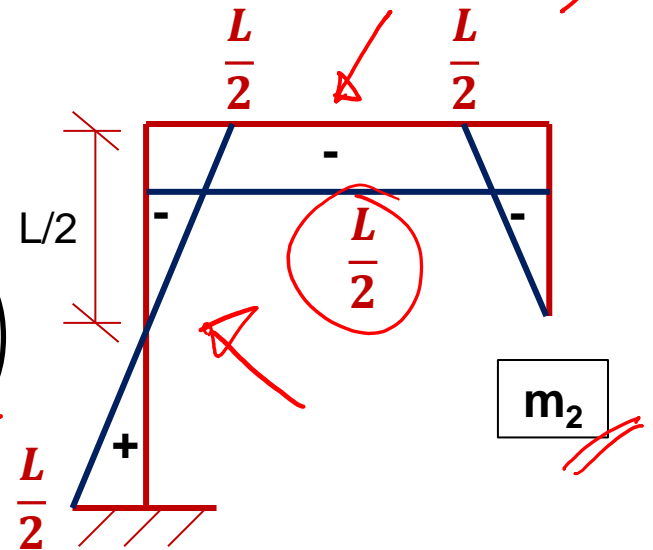


Calculation of Flexibilities

$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx$$

$$= \frac{\frac{L}{2}}{3 \times 2EI} \times \frac{L}{2} \times \frac{L}{2} \times 3 + \frac{L}{EI} \times \frac{-L}{2} \times \frac{-L}{2}$$

$$= \frac{L^3}{16EI} + \frac{L^3}{4EI} = \frac{5L^3}{16EI}$$

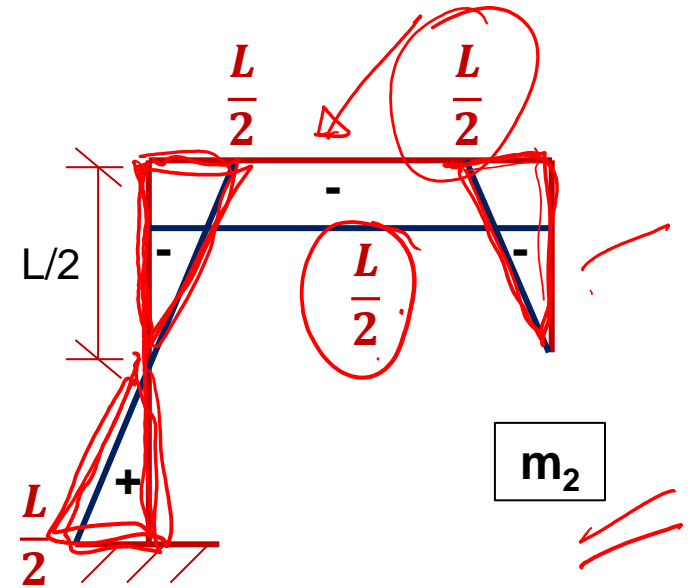


$$\delta_{23} = \delta_{32} = \int \frac{m_2 m_3}{EI} dx$$

$$= \frac{L}{2 \times 2EI} \times \left(\frac{-L}{2} + \frac{L}{2} \right) \times (-1)$$

$$+ \frac{L}{EI} \times \frac{-L}{2} \times (-1) + \frac{\frac{L}{2}}{2 \times 2EI} \times \frac{-L}{2} \times (-1)$$



$$= \frac{L^2}{2EI} + \frac{L^2}{16EI} = \frac{9L^2}{16EI}$$

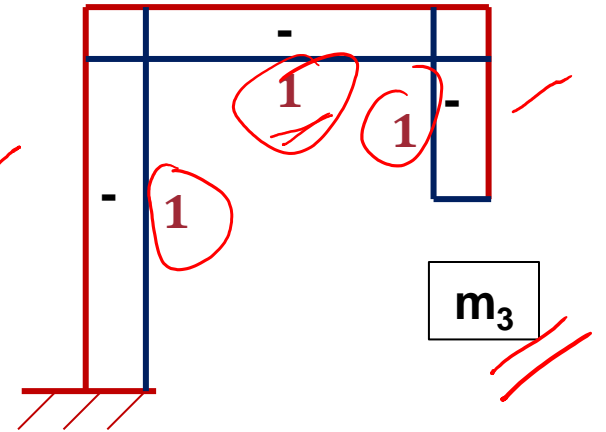

Calculation of Flexibilities

$$\begin{aligned}
 \delta_{33} &= \int \frac{m_3 m_3}{EI} dx \\
 &= \frac{L \times (-1) \times (-1)}{2EI} + \frac{L \times (-1) \times (-1)}{EI} \\
 &\quad + \frac{\frac{L}{2} \times (-1) \times (-1)}{2EI} \\
 &= \frac{L}{2EI} + \frac{L}{EI} + \frac{L}{4EI} = \frac{7L}{4EI}
 \end{aligned}$$

$$\begin{aligned}
 \delta_{13} &= \delta_{31} = \int \frac{m_1 m_3}{EI} dx \\
 &= \frac{L \times L \times (-1)}{2EI} + \frac{L \times L \times (-1)}{2EI} \\
 &= -\frac{L^2}{2EI} - \frac{L^2}{2EI} = -\frac{L^2}{EI}
 \end{aligned}$$

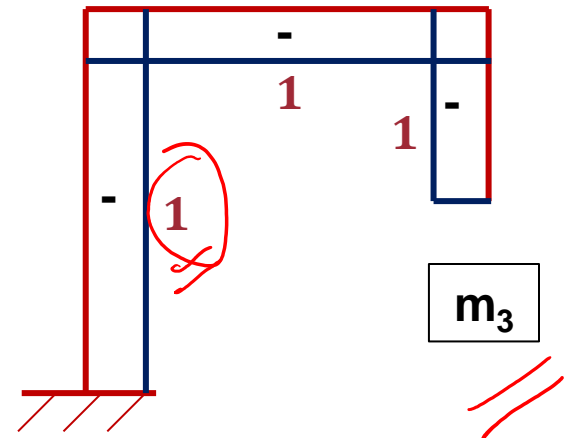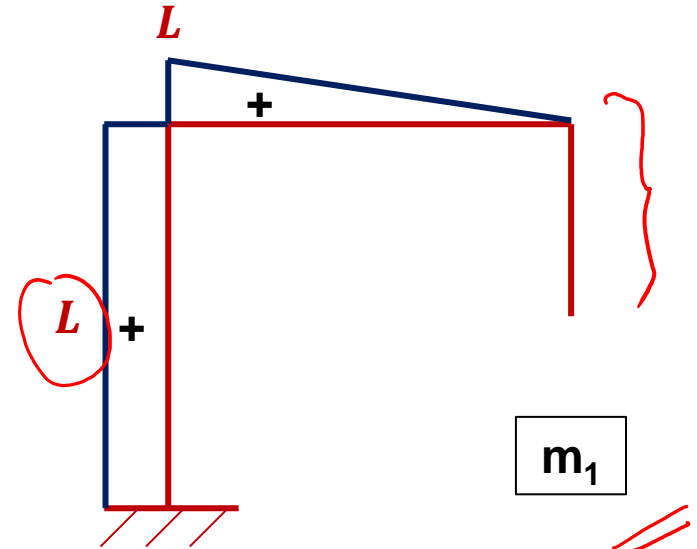

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \\ \Delta_{03} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} & \delta_{13} \\ \delta_{21} & \delta_{22} & \delta_{23} \\ \delta_{31} & \delta_{32} & \delta_{33} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \\ \Delta_3 \end{Bmatrix}$$

$$\begin{Bmatrix} \frac{-29}{48} \\ \frac{1}{48} \\ \frac{5}{8L} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \\ 0 \end{Bmatrix}$$

$$\begin{bmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} \frac{29}{48} \\ \frac{-1}{48} \\ \frac{-5}{8L} \end{Bmatrix} P$$

Flexibility Equation and Solution

$$R_1 = \frac{\begin{vmatrix} \frac{29}{48}P & -\frac{1}{4} & -\frac{1}{L} \\ \frac{-1}{48}P & \frac{5}{16} & \frac{9}{16L} \\ \frac{-5}{8L}P & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}}{\begin{vmatrix} \frac{5}{6} & -\frac{1}{4} & -\frac{1}{L} \\ -\frac{1}{4} & \frac{5}{16} & \frac{9}{16L} \\ -\frac{1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}} = \frac{\frac{141P}{4096L^2}}{\frac{79}{1536L^2}} = \frac{423}{632}P$$

Flexibility Equation and Solution


$$R_2 = \frac{\begin{vmatrix} \frac{5}{6} & \frac{29}{48}P & \frac{-1}{L} \\ \frac{-1}{4} & \frac{-1}{48}P & \frac{9}{16L} \\ \frac{-1}{L} & \frac{-5}{8L}P & \frac{7}{4L^2} \end{vmatrix}}{\begin{vmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}} = \frac{\frac{119P}{2304L^2}}{\frac{79}{1536L^2}} = \frac{238}{237}P$$

Flexibility Equation and Solution


$$M = m_0 + m_1 R_1 + m_2 R_2 + m_3 R_3$$

$$R_3 = \frac{\begin{vmatrix} \frac{5}{6} & -\frac{1}{4} & \frac{29}{48}P \\ -\frac{1}{4} & \frac{5}{16} & -\frac{1}{48}P \\ -\frac{1}{L} & \frac{9}{16L} & -\frac{5}{8L}P \end{vmatrix}}{\begin{vmatrix} \frac{5}{6} & -\frac{1}{4} & -\frac{1}{L} \\ -\frac{1}{4} & \frac{5}{16} & \frac{9}{16L} \\ -\frac{1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}} = \frac{-\frac{47P}{3072L}}{\frac{79}{1536L^2}} = -\frac{47}{158}PL$$

Final Bending Moment Diagram

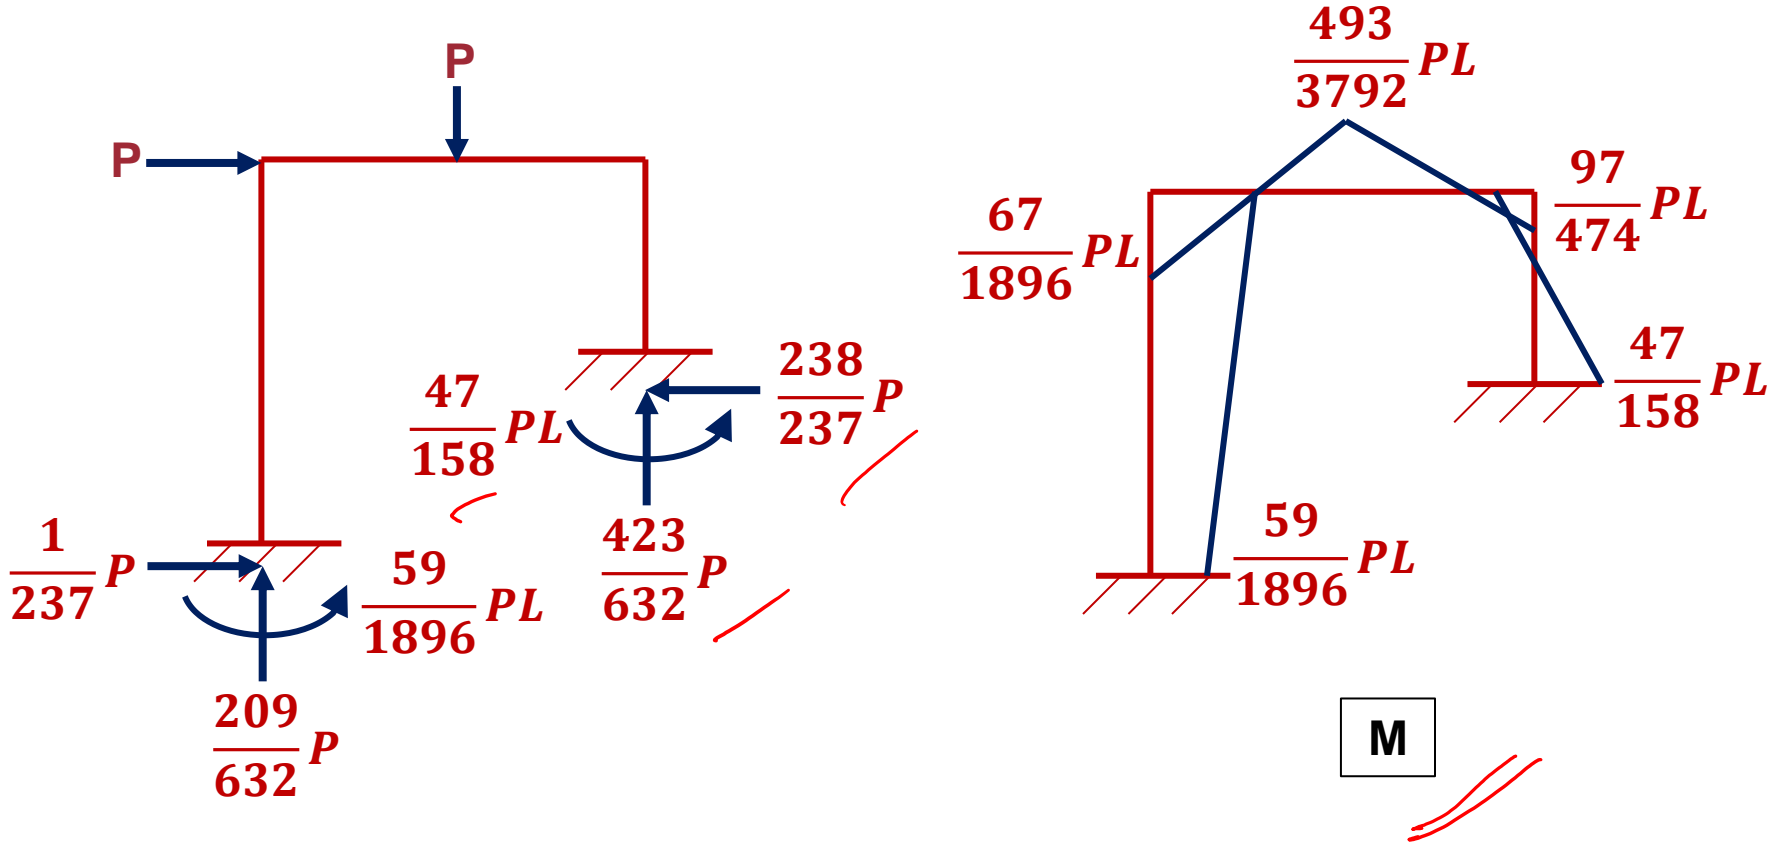


Frame Problem: Inclined Legs

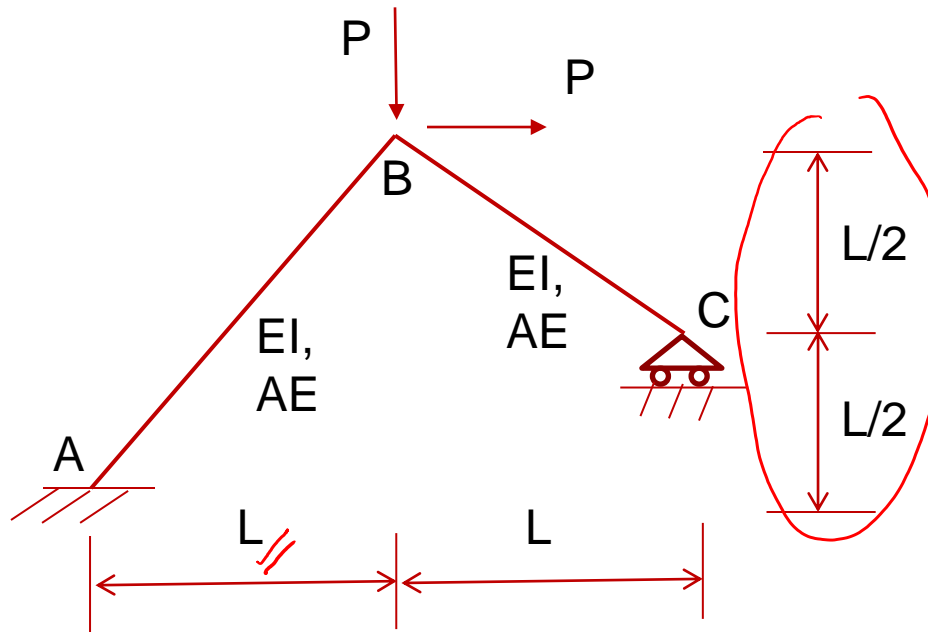

Step 1: Identification of Degree of Static Indeterminacy (DoSI)


$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 4 - 3 = 1$$

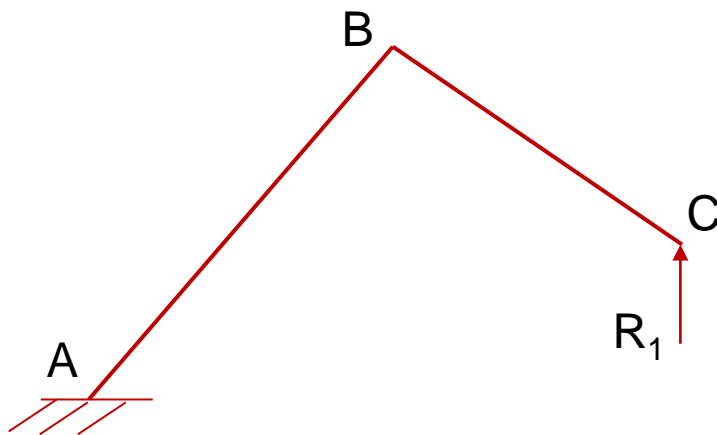

Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment and Axial Force Diagrams

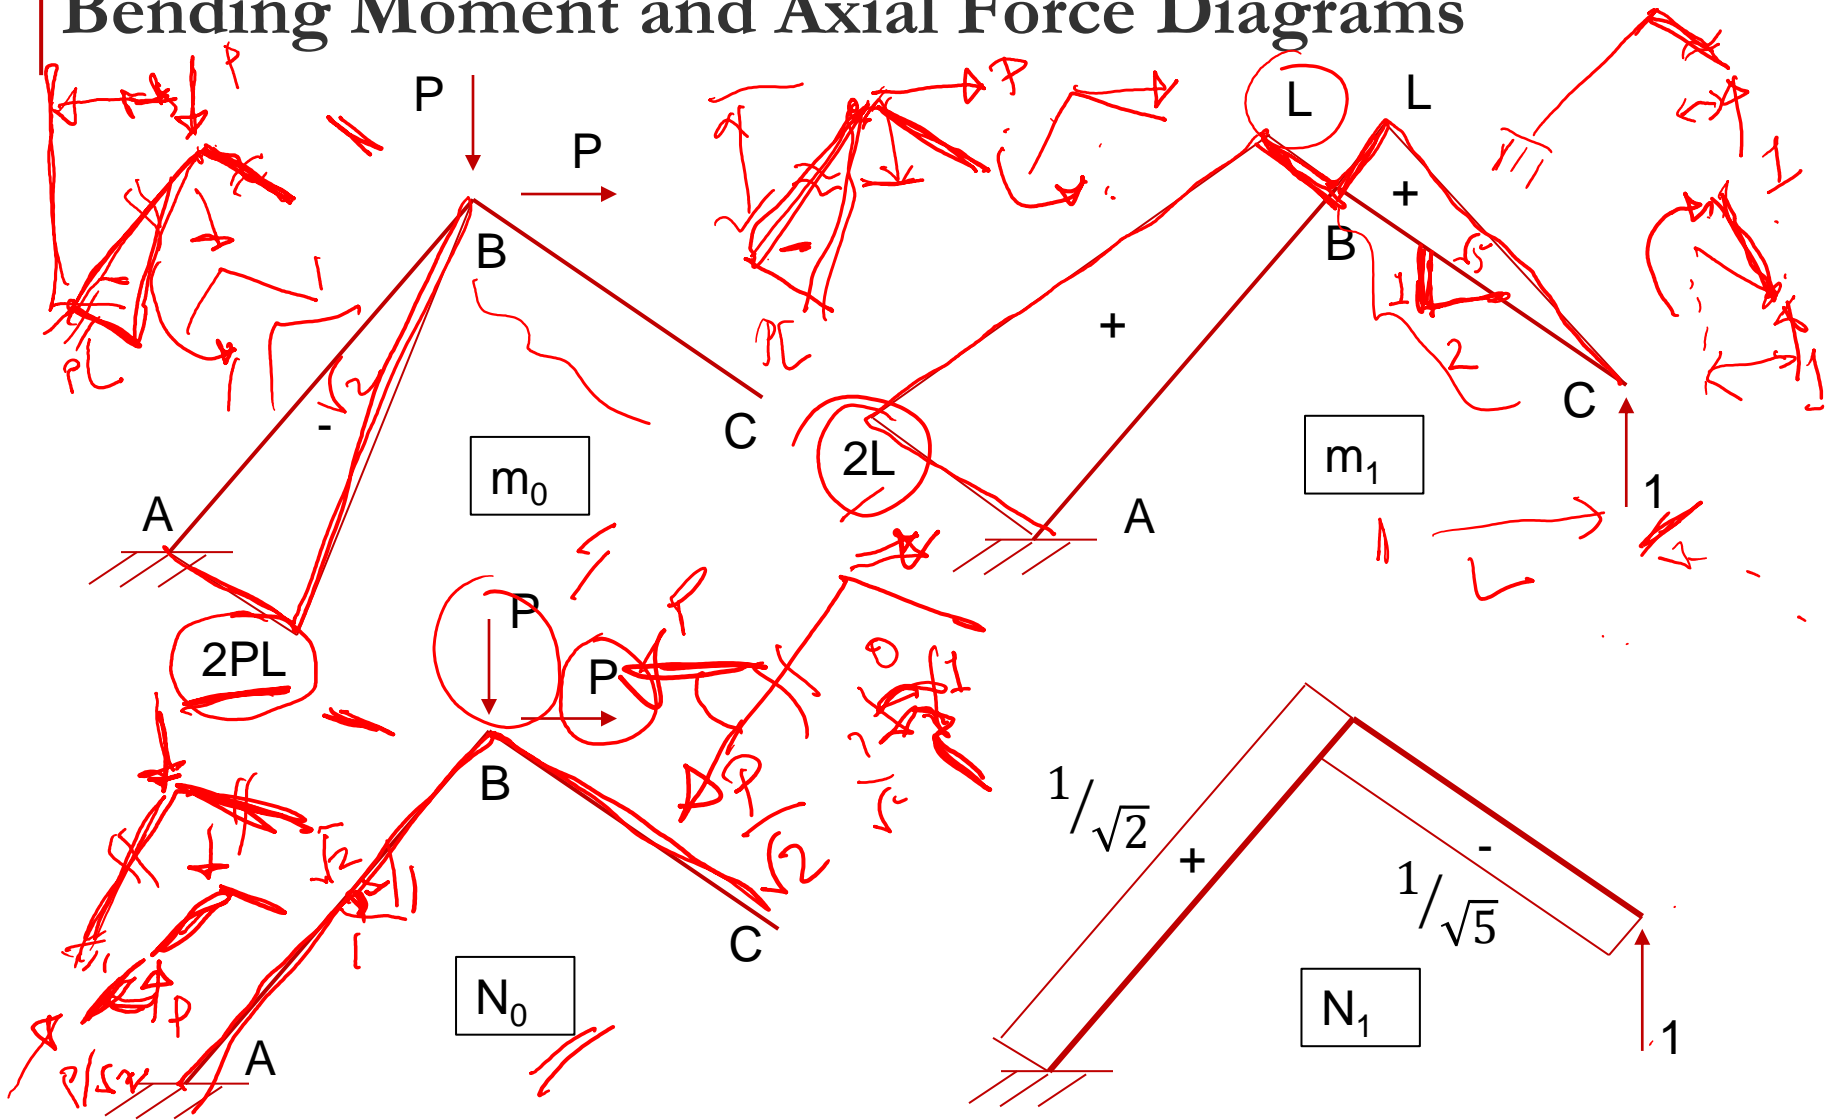

Calculation of Deformation and Flexibility

$$\begin{aligned} \Delta_0 &= \int \frac{m_0 m_1}{EI} dx + \sum \frac{N_0 N_1}{AE} L \\ &= \frac{\sqrt{2}L}{6EI} (-2PL)(4L + L) + 0 \\ &= -\frac{5\sqrt{2}PL^3}{3EI} \end{aligned}$$

$$\begin{aligned} \delta &= \int \frac{m_1 m_1}{EI} dx + \sum \frac{N_1 N_1}{AE} L \\ &= \frac{\sqrt{5}}{2} L \times L \times L + \frac{\sqrt{2}L}{6EI} \{L(2L + 2L) + 2L(L + 4L)\} + \frac{-\frac{1}{\sqrt{5}} \times \left(-\frac{1}{\sqrt{5}}\right) \sqrt{5}}{AE} \frac{\sqrt{5}}{2} L \\ &+ \frac{\frac{1}{\sqrt{2}} \times \left(\frac{1}{\sqrt{2}}\right) \sqrt{2}L}{AE} = \frac{\sqrt{5}L^3}{6EI} + \frac{7\sqrt{2}L^3}{3EI} + \frac{L}{2\sqrt{5}AE} + \frac{L}{\sqrt{2}AE} = \frac{(\sqrt{5} + 14\sqrt{2})L^3}{6EI} + \frac{(1 + \sqrt{10})L}{2\sqrt{5}AE} \end{aligned}$$

Solution of Flexibility Equation

$$\Delta_0 + \delta R = \Delta_s$$

$$-\frac{5\sqrt{2}PL^3}{3EI} + \left(\frac{(\sqrt{5} + 14\sqrt{2})L^3}{6EI} + \frac{(1 + \sqrt{10})L}{2\sqrt{5}AE} \right) R = 0$$

Let, $L = 10 \text{ ft} = 120 \text{ in}$
 $P = 10 \text{ kip}$
 $E = 3000 \text{ ksi}$
 $A = 100 \text{ in}^2$
 $I = 1000 \text{ in}^4$

$$R = \frac{\frac{5\sqrt{2}PL^3}{3EI}}{\frac{(\sqrt{5} + 14\sqrt{2})L^3}{6EI} + \frac{(1 + \sqrt{10})L}{2\sqrt{5}AE}}$$

Considering Axial Deformation


$$R = \frac{\frac{5\sqrt{2} \times 10 \times 120^3}{3 \times 3000 \times 1000}}{\frac{(\sqrt{5} + 14\sqrt{2}) \times 120^3}{6 \times 3000 \times 1000} + \frac{(1 + \sqrt{10}) \times 120}{2\sqrt{5} \times 100 \times 3000}}$$

$$= 6.417 \text{ kip}$$

Ignoring Axial Deformation

$$R = \frac{10\sqrt{2}}{(\sqrt{5} + 14\sqrt{2})} P = 6.418 \text{ kip}$$


BM and AF Diagrams of the Indeterminate Structure

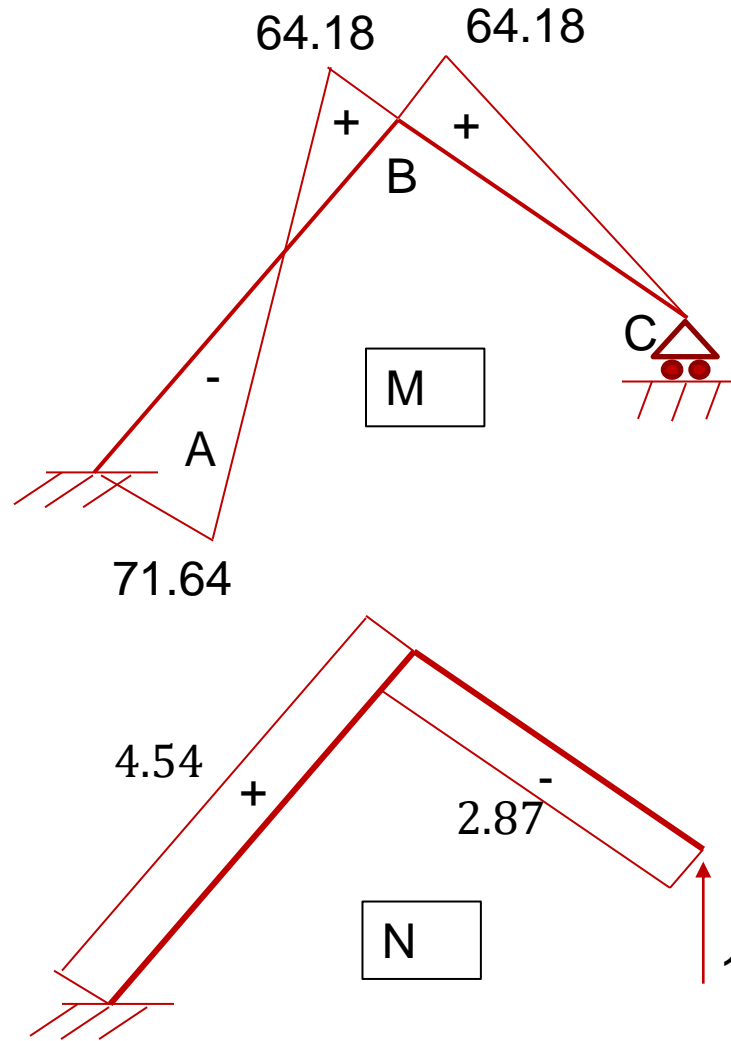

$$M = m_0 + m_1 R_1$$

$$N = N_0 + N_1 R_1$$

Frame Problem (DoSI=1)

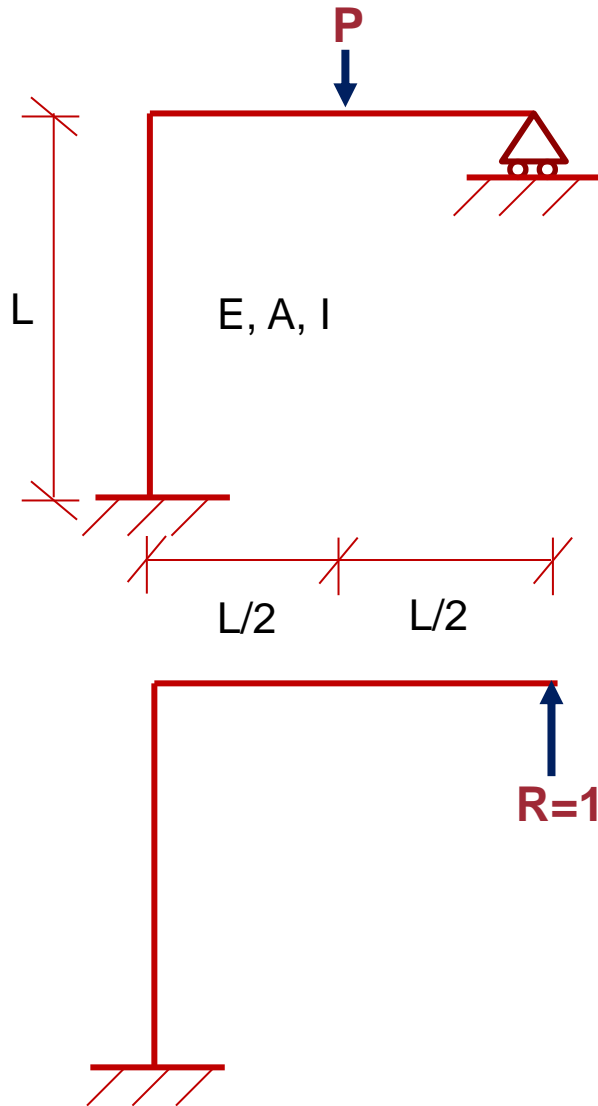


Step 1: Identification of Degree of Statical Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 4 - 3 = 1$$


Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

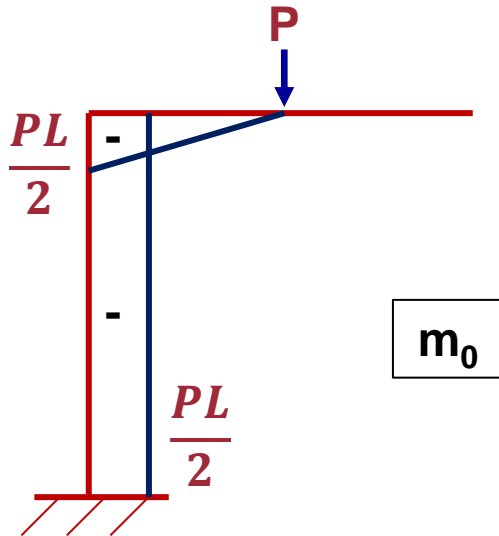

$$\begin{aligned}\Delta_0 &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L}{EI} \left(\frac{-PL}{2} \right) L + \frac{L/2}{6EI} \left(\frac{-PL}{2} \right) \left(2L + \frac{L}{2} \right) \\ &= -\frac{PL^3}{2EI} - \frac{5PL^3}{48EI} = -\frac{29PL^3}{48EI}\end{aligned}$$

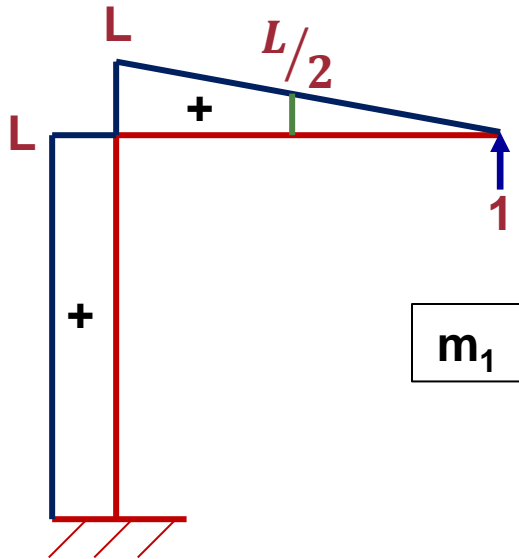


$$\begin{aligned}\delta &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{EI} + \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{EI} + \frac{L^3}{3EI} = \frac{4L^3}{3EI}\end{aligned}$$

Solution of Flexibility Equation & Final Bending Moment Diagram

$$\Delta_0 + \delta R = \Delta_s$$


$$-\frac{29PL^3}{48EI} + \frac{4L^3}{3EI}R = 0$$

$$\boxed{R = \frac{29}{64}P}$$

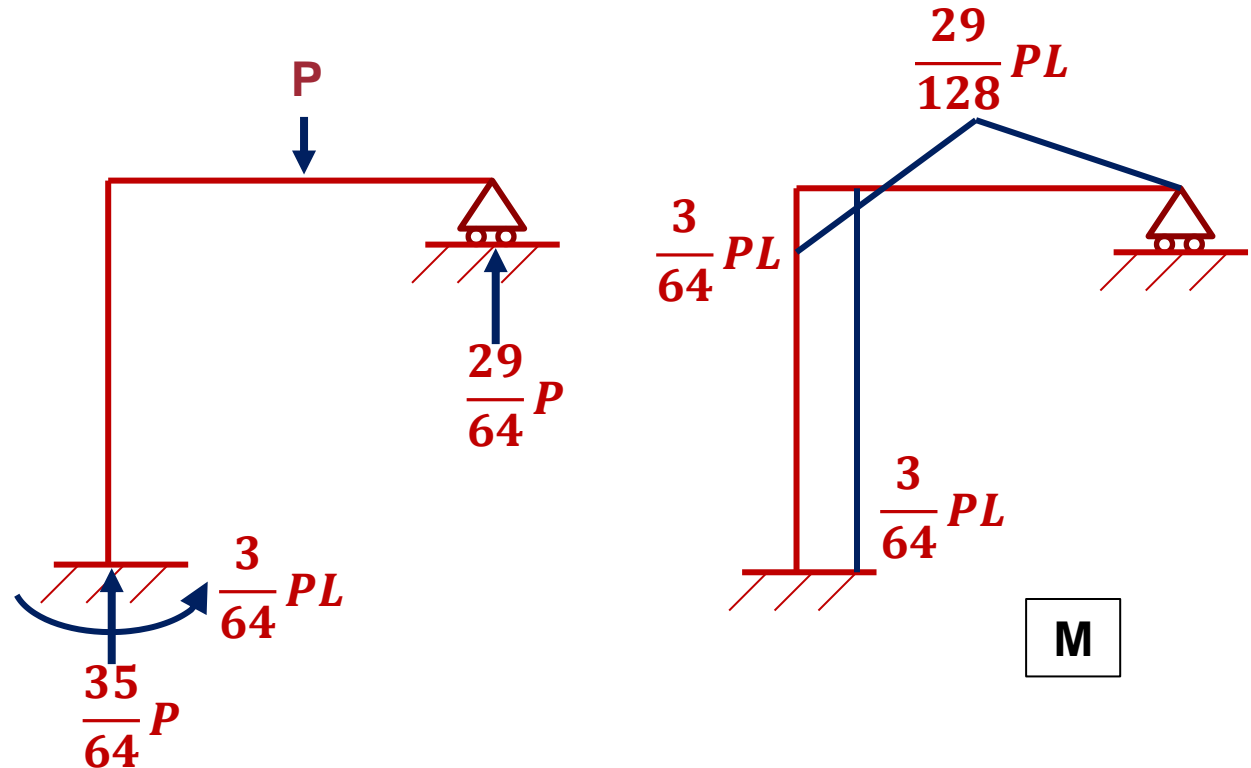

Axial Force Diagrams for Deformation

Considering Axial Deformation

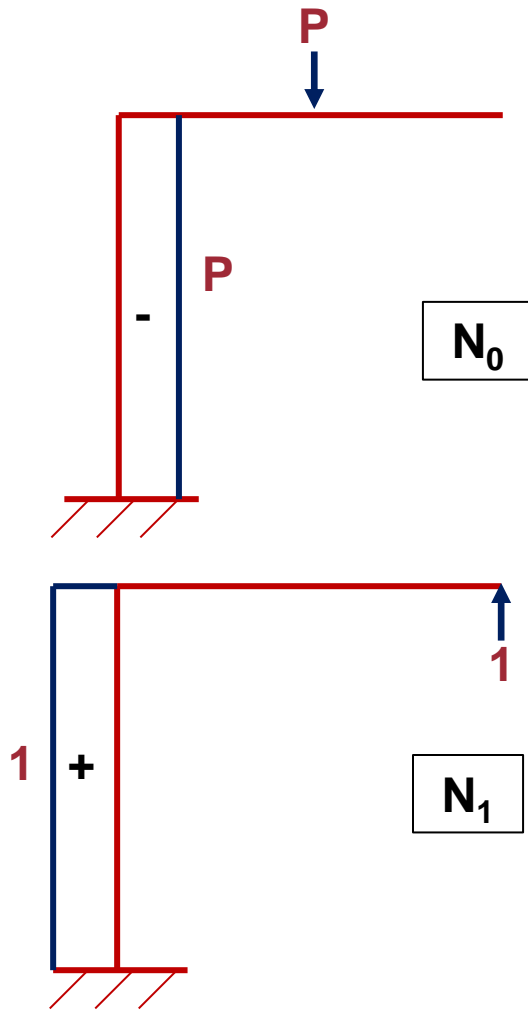

$$\begin{aligned}\Delta_0 &= \int \frac{m_0 m_1}{EI} dx + \sum \frac{N_0 N_1}{AE} L \\ &= -\frac{29PL^3}{48EI} + \frac{-P \times 1}{AE} L \\ &= -\frac{29PL^3}{48EI} - \frac{PL}{AE}\end{aligned}$$

$$\begin{aligned}\delta &= \int \frac{m_1 m_1}{EI} dx + \sum \frac{N_1 N_1}{AE} L \\ &= \frac{4L^3}{3EI} + \frac{1 \times 1}{AE} L \\ &= \frac{4L^3}{3EI} + \frac{L}{AE}\end{aligned}$$

Solution of Flexibility Equation

$$\Delta_0 + \delta R = \Delta_s$$

$$-\frac{29PL^3}{48EI} - \frac{PL}{AE} + \left(\frac{4L^3}{3EI} + \frac{L}{AE} \right) R = 0$$

$$\boxed{?} R = \frac{\frac{29PL^3}{48EI} + \frac{PL}{AE}}{\frac{4L^3}{3EI} + \frac{L}{AE}}$$

Let, $L = 10 \text{ ft} = 120 \text{ in}$

$P = 10 \text{ kip}$

$E = 3000 \text{ ksi}$

$A = 100 \text{ in}^2$

$I = 1000 \text{ in}^4$


Considering Axial Deformation

$$R = \frac{\frac{29 \times 10 \times 120^3}{48 \times 3000 \times 1000} + \frac{10 \times 120}{100 \times 3000}}{\frac{4 \times 120^3}{3 \times 3000 \times 1000} + \frac{120}{100 \times 3000}}$$
$$= 4.534 \text{ kip}$$

Ignoring Axial Deformation

$$R = \frac{29}{64} P$$
$$= \frac{29}{64} \times 10$$
$$= 4.531 \text{ kip}$$

Frame Problem (DoSI=2)

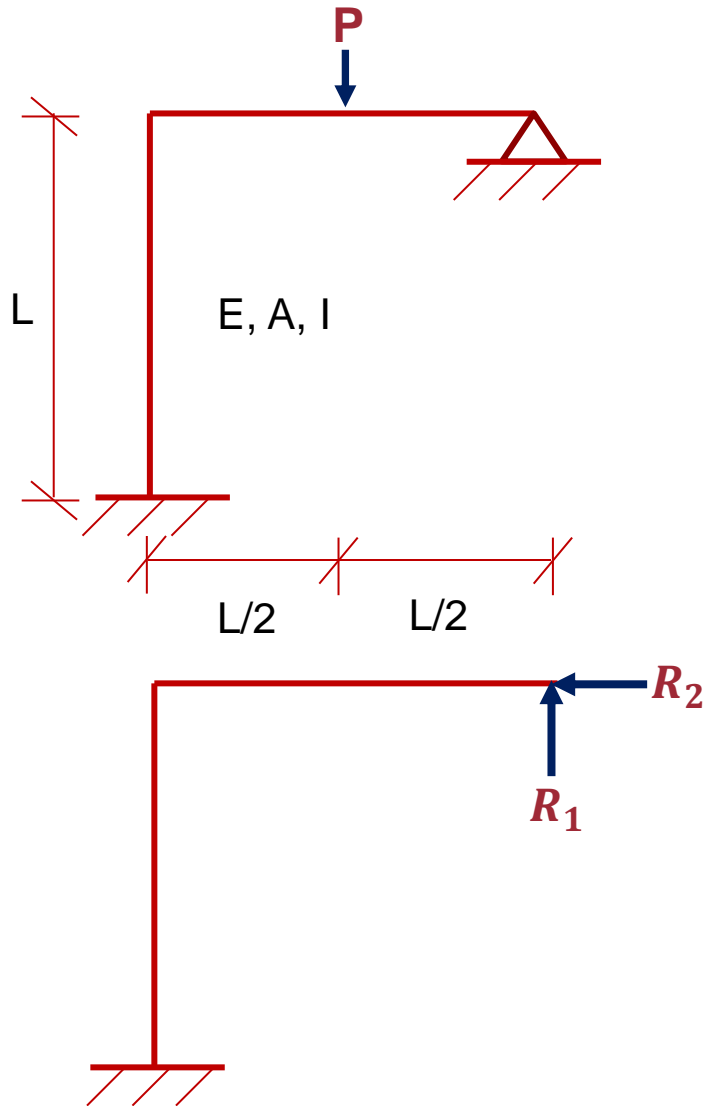


Step 1: Identification of Degree of Static Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 5 - 3 = 2$$

Step 2: Select redundants and the released structure

The released structure must be stable.




Bending Moment Diagrams for Deformation

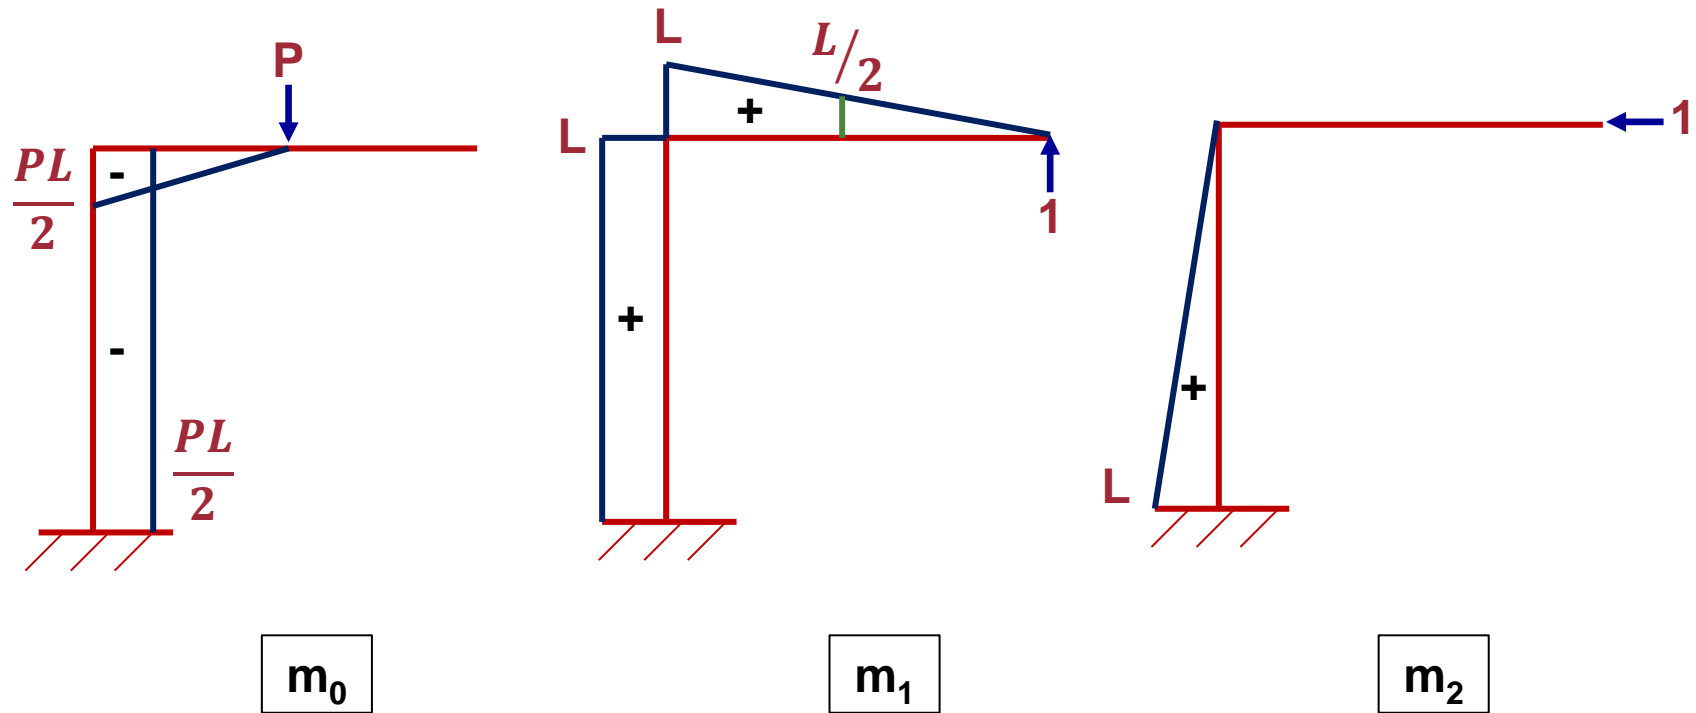

Calculation of Deformations

$$\begin{aligned}\Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\ &= \frac{L}{EI} \left(\frac{-PL}{2} \right) L + \frac{L/2}{6EI} \left(\frac{-PL}{2} \right) \left(2L + \frac{L}{2} \right) \\ &= -\frac{PL^3}{2EI} - \frac{5PL^3}{48EI} = -\frac{29PL^3}{48EI}\end{aligned}$$

$$\begin{aligned}\Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\ &= \frac{L}{2EI} \left(\frac{-PL}{2} \right) \times L \\ &= -\frac{PL^3}{4EI}\end{aligned}$$

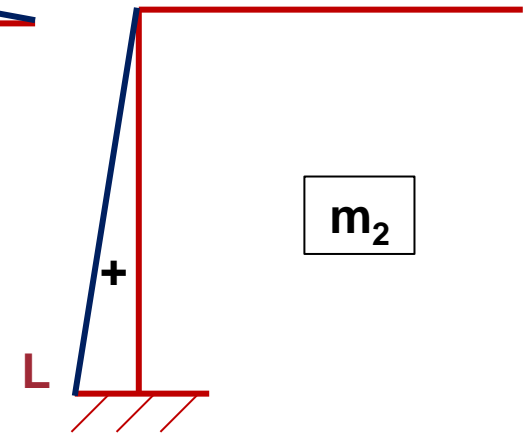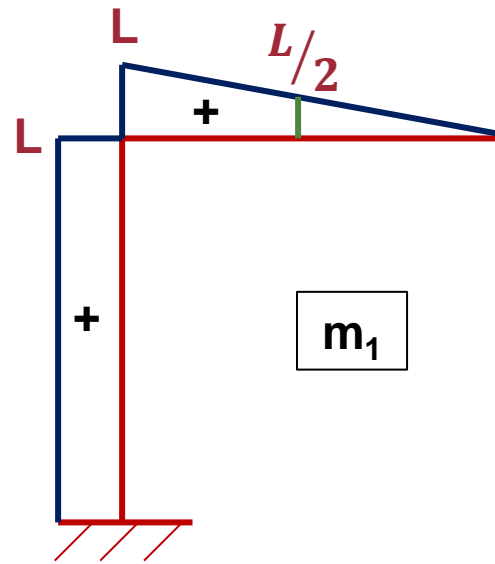
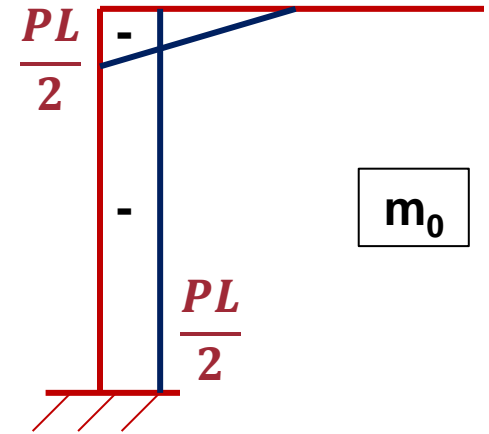


Calculation of Flexibilities

$$\begin{aligned}\delta_{11} &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{EI} + \frac{L \times L \times L}{3EI} \\ &= \frac{L^3}{EI} + \frac{L^3}{3EI} = \frac{4L^3}{3EI}\end{aligned}$$

$$\begin{aligned}\delta_{12} &= \delta_{21} = \int \frac{m_1 m_2}{EI} dx \\ &= \frac{L \times L \times L}{2EI} = \frac{L^3}{2EI}\end{aligned}$$

$$\begin{aligned}\delta_{22} &= \int \frac{m_2 m_2}{EI} dx \\ &= \frac{L \times L \times L}{3EI} = \frac{L^3}{3EI}\end{aligned}$$

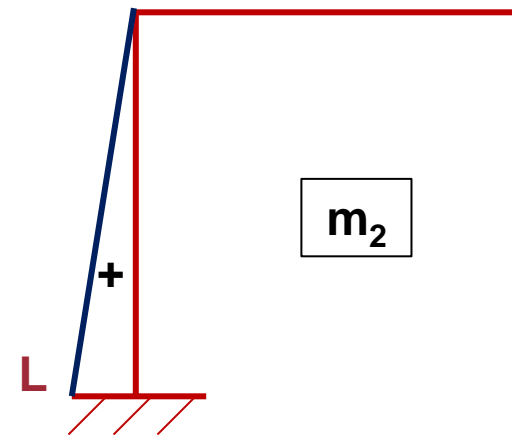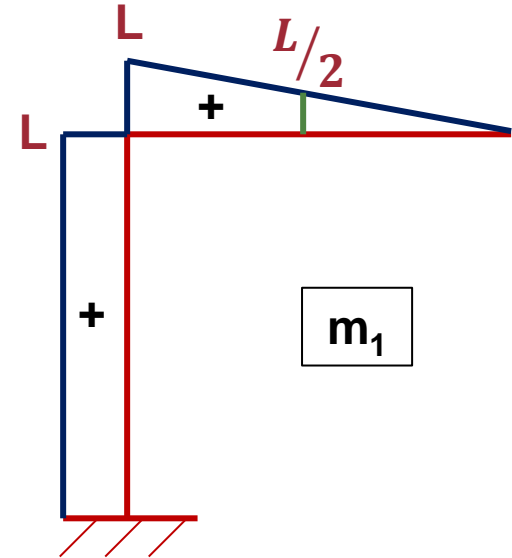

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} \\ \delta_{21} & \delta_{22} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \end{Bmatrix}$$


$$\begin{Bmatrix} -\frac{29}{48} \\ 1 \\ -\frac{1}{4} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{4}{3} & \frac{1}{2} \\ 1 & 1 \\ \frac{1}{2} & \frac{1}{3} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix}$$

$$\begin{bmatrix} \frac{4}{3} & \frac{1}{2} \\ 1 & 1 \\ \frac{1}{2} & \frac{1}{3} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \end{Bmatrix} = \begin{Bmatrix} \frac{29}{48} \\ 1 \\ \frac{1}{4} \end{Bmatrix} P$$



$$R_1 = \frac{\begin{vmatrix} \frac{29}{48}P & \frac{1}{2} \\ \frac{1}{4}P & \frac{1}{3} \end{vmatrix}}{\begin{vmatrix} \frac{4}{3} & \frac{1}{2} \\ 1 & 1 \\ \frac{1}{2} & \frac{1}{3} \end{vmatrix}} = \frac{\frac{11}{144}P}{\frac{7}{36}} = \frac{11}{28}P$$

$$R_2 = \frac{\begin{vmatrix} \frac{4}{3} & \frac{29}{48}P \\ 1 & \frac{1}{4}P \end{vmatrix}}{\begin{vmatrix} \frac{4}{3} & \frac{1}{2} \\ 1 & 1 \\ \frac{1}{2} & \frac{1}{3} \end{vmatrix}} = \frac{\frac{1}{32}P}{\frac{7}{36}} = \frac{9}{56}P$$

Final Bending Moment Diagram

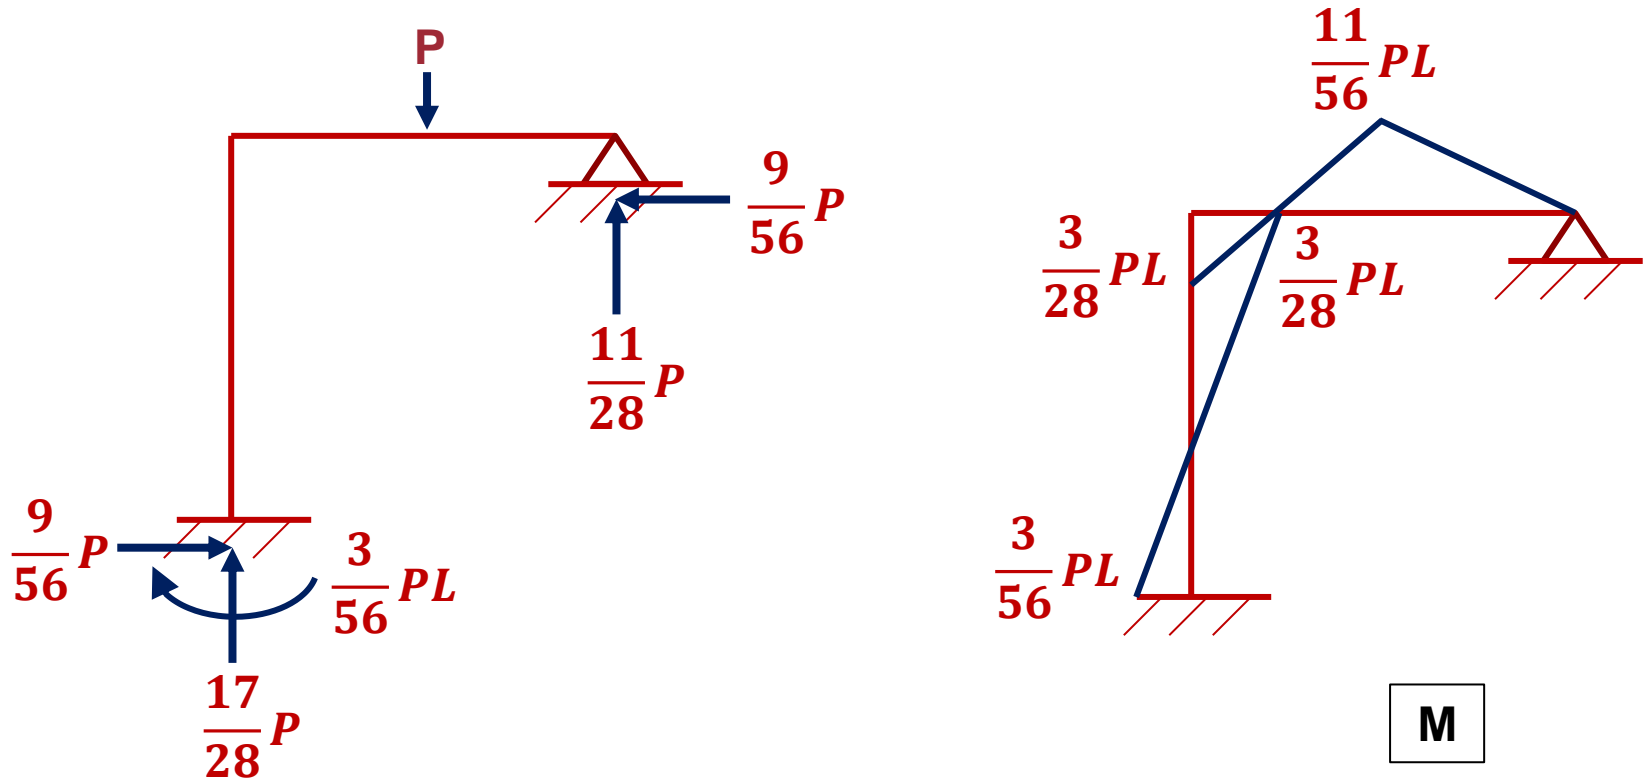

Frame Problem (DoSI=3)

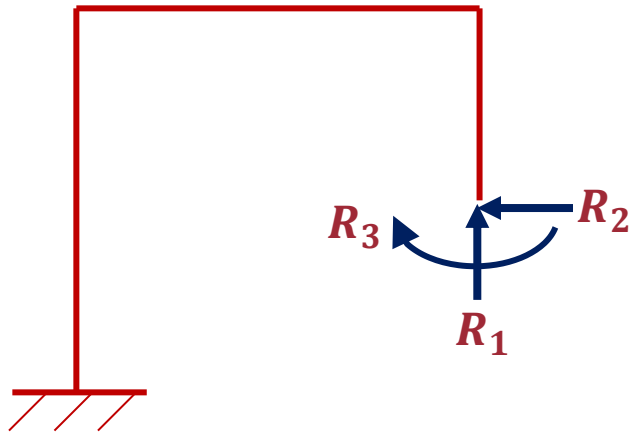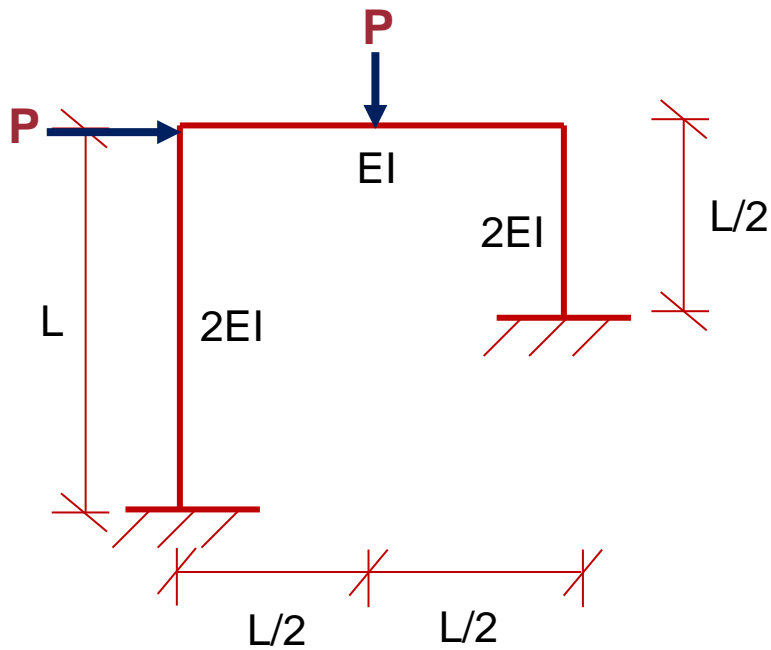


Step 1: Identification of Degree of Static Indeterminacy (DoSI)

$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 6 - 3 = 3$$


Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment Diagrams for Deformation

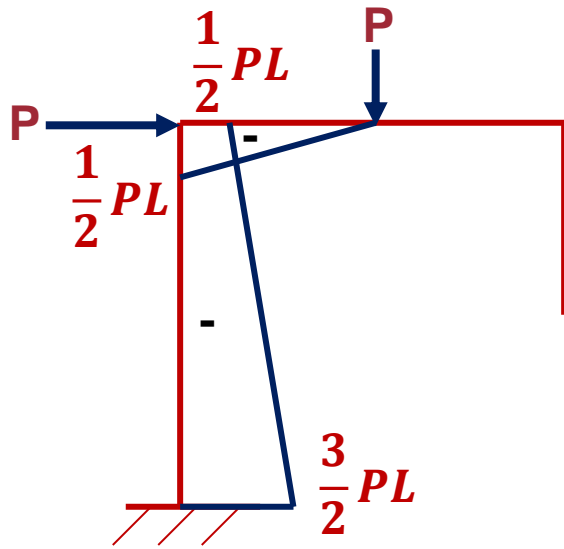


m_0

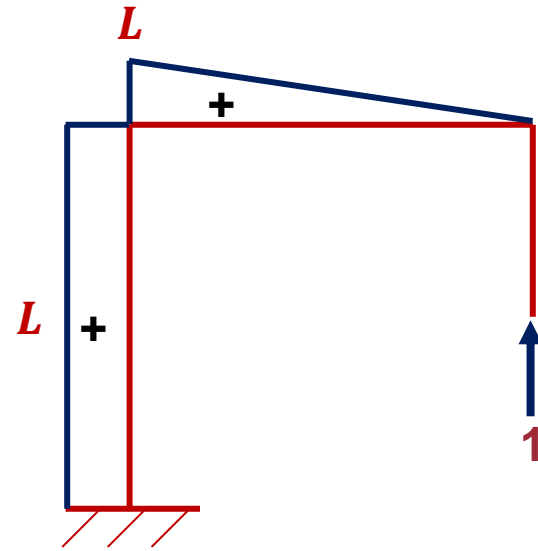


m_1

Bending Moment Diagrams for Deformation

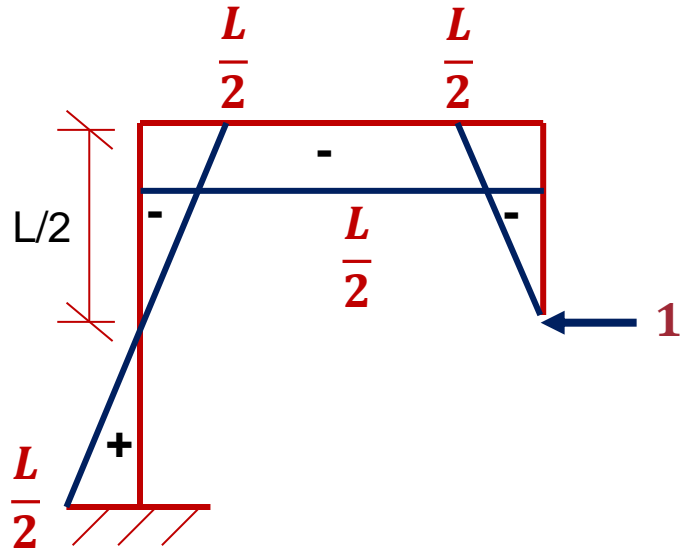


m_2

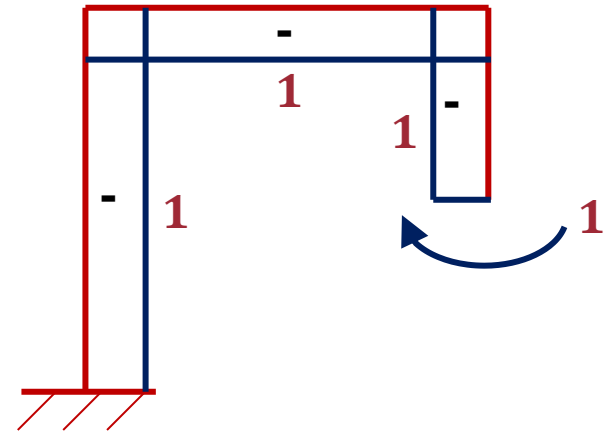

m_3


Calculation of Deformations

$$\begin{aligned}
 \Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\
 &= \frac{L/2}{6EI} \left(\frac{-PL}{2} \right) \left(2L + \frac{L}{2} \right) \\
 &\quad + \frac{L}{2 \times 2EI} \left(\frac{-3PL}{2} + \frac{-PL}{2} \right) L \\
 &= -\frac{5PL^3}{48EI} - \frac{PL^3}{2EI} \\
 &= -\frac{29PL^3}{48EI}
 \end{aligned}$$

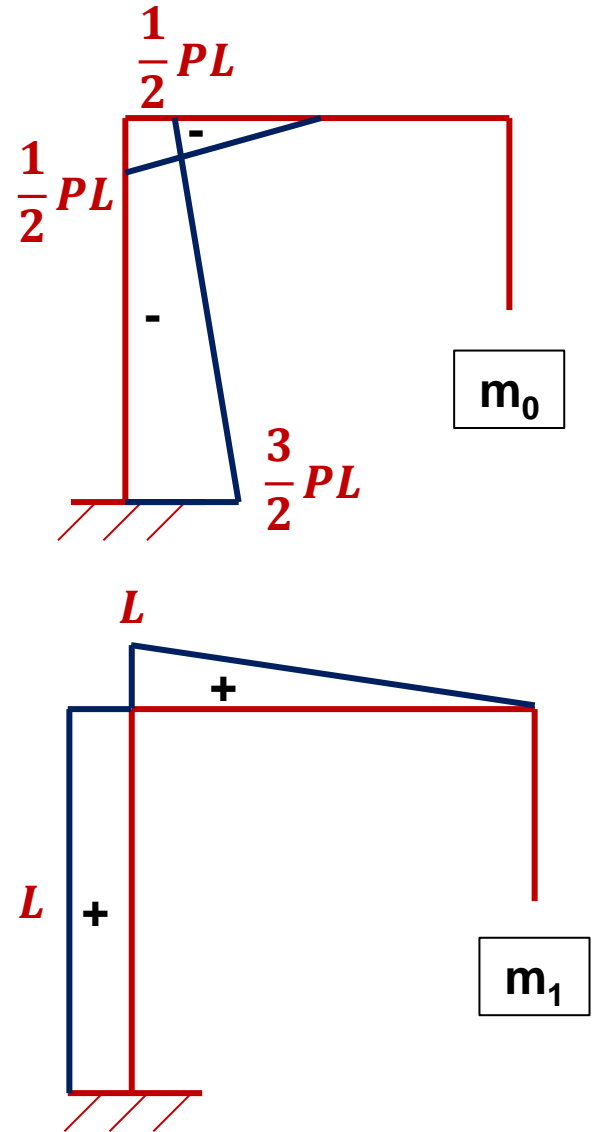



Calculation of Deformations

$$\begin{aligned}
 \Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\
 &= \frac{L/2}{2EI} \left(\frac{-PL}{2} \right) \left(\frac{-L}{2} \right) \\
 &\quad + \frac{L}{6 \times 2EI} \left[\left(\frac{-PL}{2} \right) \left(2 \times \frac{-L}{2} + \frac{L}{2} \right) \right. \\
 &\quad \left. + \left(\frac{-3PL}{2} \right) \left(\frac{-L}{2} + 2 \times \frac{L}{2} \right) \right] \\
 &= \frac{PL^3}{16EI} - \frac{PL^3}{24EI} \\
 &= \frac{PL^3}{48EI}
 \end{aligned}$$

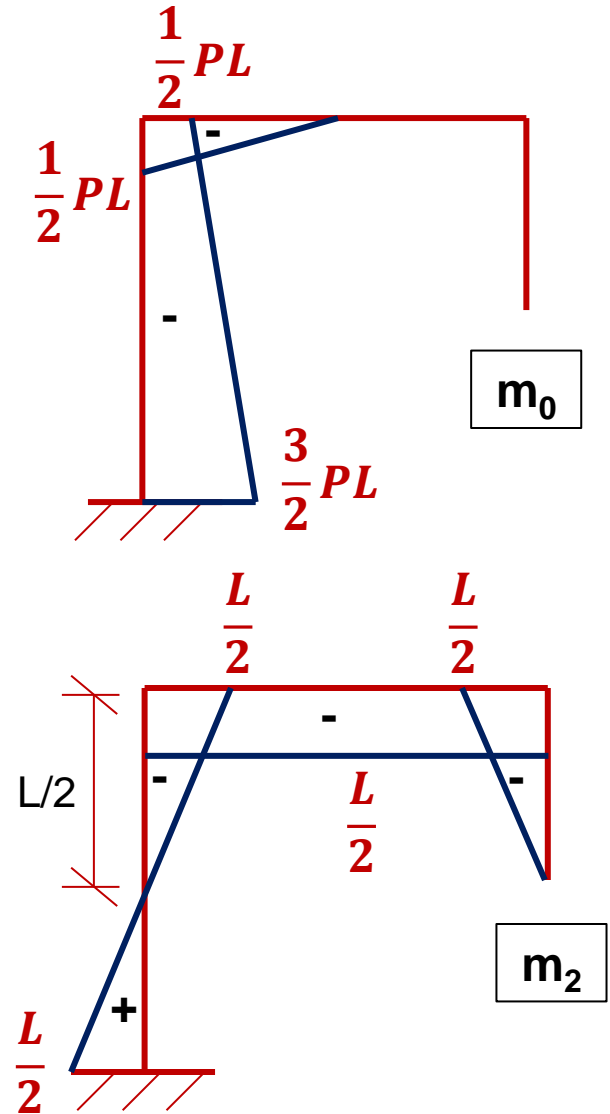


Calculation of Deformations

$$\begin{aligned}
 \Delta_{03} &= \int \frac{m_0 m_3}{EI} dx \\
 &= \frac{L/2}{2EI} \left(\frac{-PL}{2} \right) (-1) \\
 &\quad + \frac{L}{2 \times 2EI} \left(\frac{-3PL}{2} + \frac{-PL}{2} \right) (-1) \\
 &= \frac{PL^2}{8EI} + \frac{PL^2}{2EI} \\
 &= \frac{5PL^2}{8EI}
 \end{aligned}$$

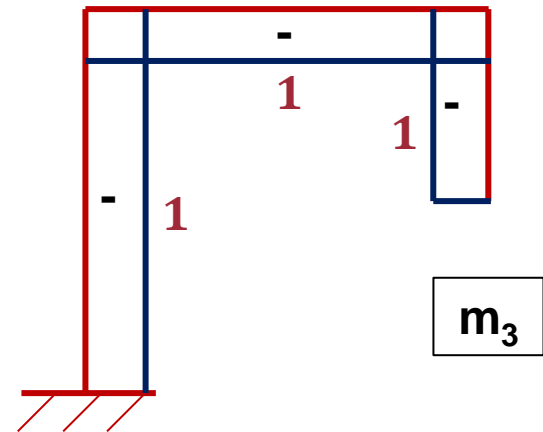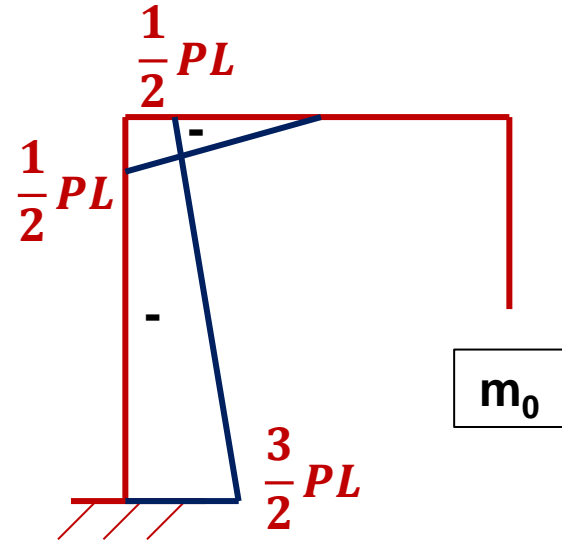


Calculation of Flexibilities

$$\begin{aligned}\delta_{11} &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L \times L \times L}{3EI} + \frac{L \times L \times L}{2EI} \\ &= \frac{L^3}{3EI} + \frac{L^3}{2EI} = \frac{5L^3}{6EI}\end{aligned}$$

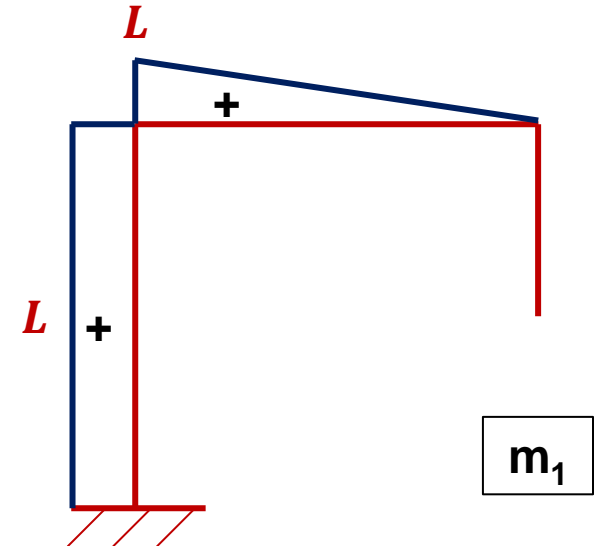

$$\begin{aligned}\delta_{12} = \delta_{21} &= \int \frac{m_1 m_2}{EI} dx \\ &= \frac{L}{2EI} \times L \times \frac{-L}{2} + \frac{L}{2 \times 2EI} \times L \times \left(\frac{-L}{2} + \frac{L}{2} \right) \\ &= -\frac{L^3}{4EI} + 0 = -\frac{L^3}{4EI}\end{aligned}$$

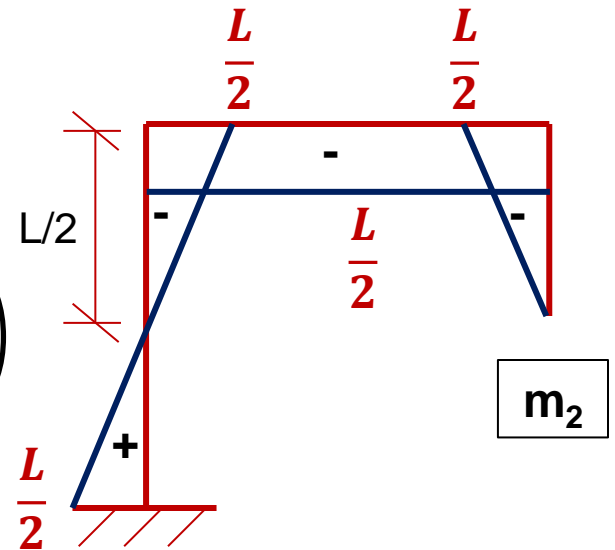

Calculation of Flexibilities

$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx$$

$$= \frac{\frac{L}{2}}{3 \times 2EI} \times \frac{L}{2} \times \frac{L}{2} \times 3 + \frac{L}{EI} \times \frac{-L}{2} \times \frac{-L}{2}$$



$$= \frac{L^3}{16EI} + \frac{L^3}{4EI} = \frac{5L^3}{16EI}$$

$$\delta_{23} = \delta_{32} = \int \frac{m_2 m_3}{EI} dx$$

$$= \frac{L}{2 \times 2EI} \times \left(\frac{-L}{2} + \frac{L}{2} \right) \times (-1)$$

$$+ \frac{L}{EI} \times \frac{-L}{2} \times (-1) + \frac{\frac{L}{2}}{2 \times 2EI} \times \frac{-L}{2} \times (-1)$$



$$= \frac{L^2}{2EI} + \frac{L^2}{16EI} = \frac{9L^2}{16EI}$$

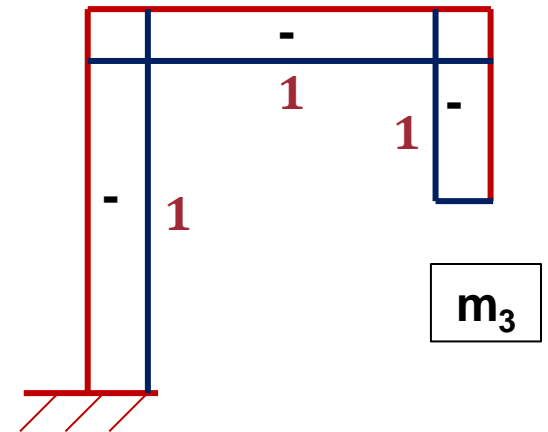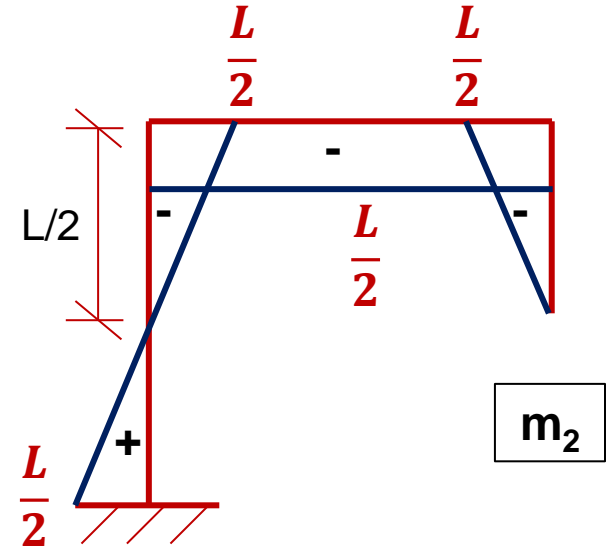

Calculation of Flexibilities

$$\begin{aligned}\delta_{33} &= \int \frac{m_3 m_3}{EI} dx \\ &= \frac{L \times (-1) \times (-1)}{2EI} + \frac{L \times (-1) \times (-1)}{EI} \\ &\quad + \frac{\frac{L}{2} \times (-1) \times (-1)}{2EI} \\ &= \frac{L}{2EI} + \frac{L}{EI} + \frac{L}{4EI} = \frac{7L}{4EI}\end{aligned}$$

$$\begin{aligned}\delta_{13} &= \delta_{31} = \int \frac{m_1 m_3}{EI} dx \\ &= \frac{L \times L \times (-1)}{2EI} + \frac{L \times L \times (-1)}{2EI} \\ &= -\frac{L^2}{2EI} - \frac{L^2}{2EI} = -\frac{L^2}{EI}\end{aligned}$$

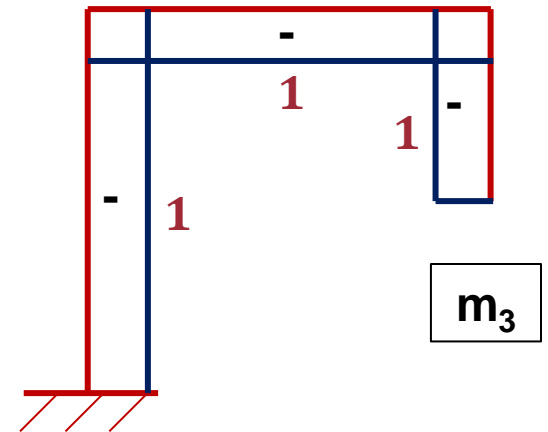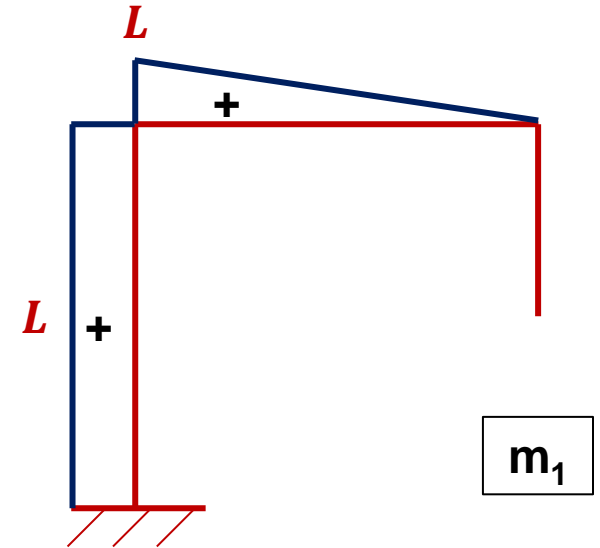

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \\ \Delta_{03} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} & \delta_{13} \\ \delta_{21} & \delta_{22} & \delta_{23} \\ \delta_{31} & \delta_{32} & \delta_{33} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \\ \Delta_3 \end{Bmatrix}$$

$$\begin{Bmatrix} \frac{-29}{48} \\ \frac{1}{48} \\ \frac{5}{8L} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \\ 0 \end{Bmatrix}$$

$$\begin{bmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} \frac{29}{48} \\ \frac{-1}{48} \\ \frac{-5}{8L} \end{Bmatrix} P$$

Flexibility Equation and Solution

$$R_1 = \frac{\begin{vmatrix} \frac{29}{48}P & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{48}P & \frac{5}{16} & \frac{9}{16L} \\ \frac{-5}{8L}P & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}}{\begin{vmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}} = \frac{\frac{141P}{4096L^2}}{\frac{79}{1536L^2}} = \frac{423}{632}P$$


Flexibility Equation and Solution

$$R_2 = \frac{\begin{vmatrix} \frac{5}{6} & \frac{29}{48}P & \frac{-1}{L} \\ \frac{-1}{4} & \frac{-1}{48}P & \frac{9}{16L} \\ \frac{-1}{L} & \frac{-5}{8L}P & \frac{7}{4L^2} \end{vmatrix}}{\begin{vmatrix} \frac{5}{6} & \frac{-1}{4} & \frac{-1}{L} \\ \frac{-1}{4} & \frac{5}{16} & \frac{9}{16L} \\ \frac{-1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}} = \frac{\frac{119P}{2304L^2}}{\frac{79}{1536L^2}} = \frac{238}{237}P$$


Flexibility Equation and Solution

$$R_3 = \frac{\begin{vmatrix} \frac{5}{6} & -\frac{1}{4} & \frac{29}{48}P \\ -\frac{1}{4} & \frac{5}{16} & -\frac{1}{48}P \\ -\frac{1}{L} & \frac{9}{16L} & \frac{-5}{8L}P \end{vmatrix}}{\begin{vmatrix} \frac{5}{6} & -\frac{1}{4} & -\frac{1}{L} \\ -\frac{1}{4} & \frac{5}{16} & \frac{9}{16L} \\ -\frac{1}{L} & \frac{9}{16L} & \frac{7}{4L^2} \end{vmatrix}} = \frac{-\frac{47P}{3072L}}{\frac{79}{1536L^2}} = -\frac{47}{158}PL$$

Final Bending Moment Diagram

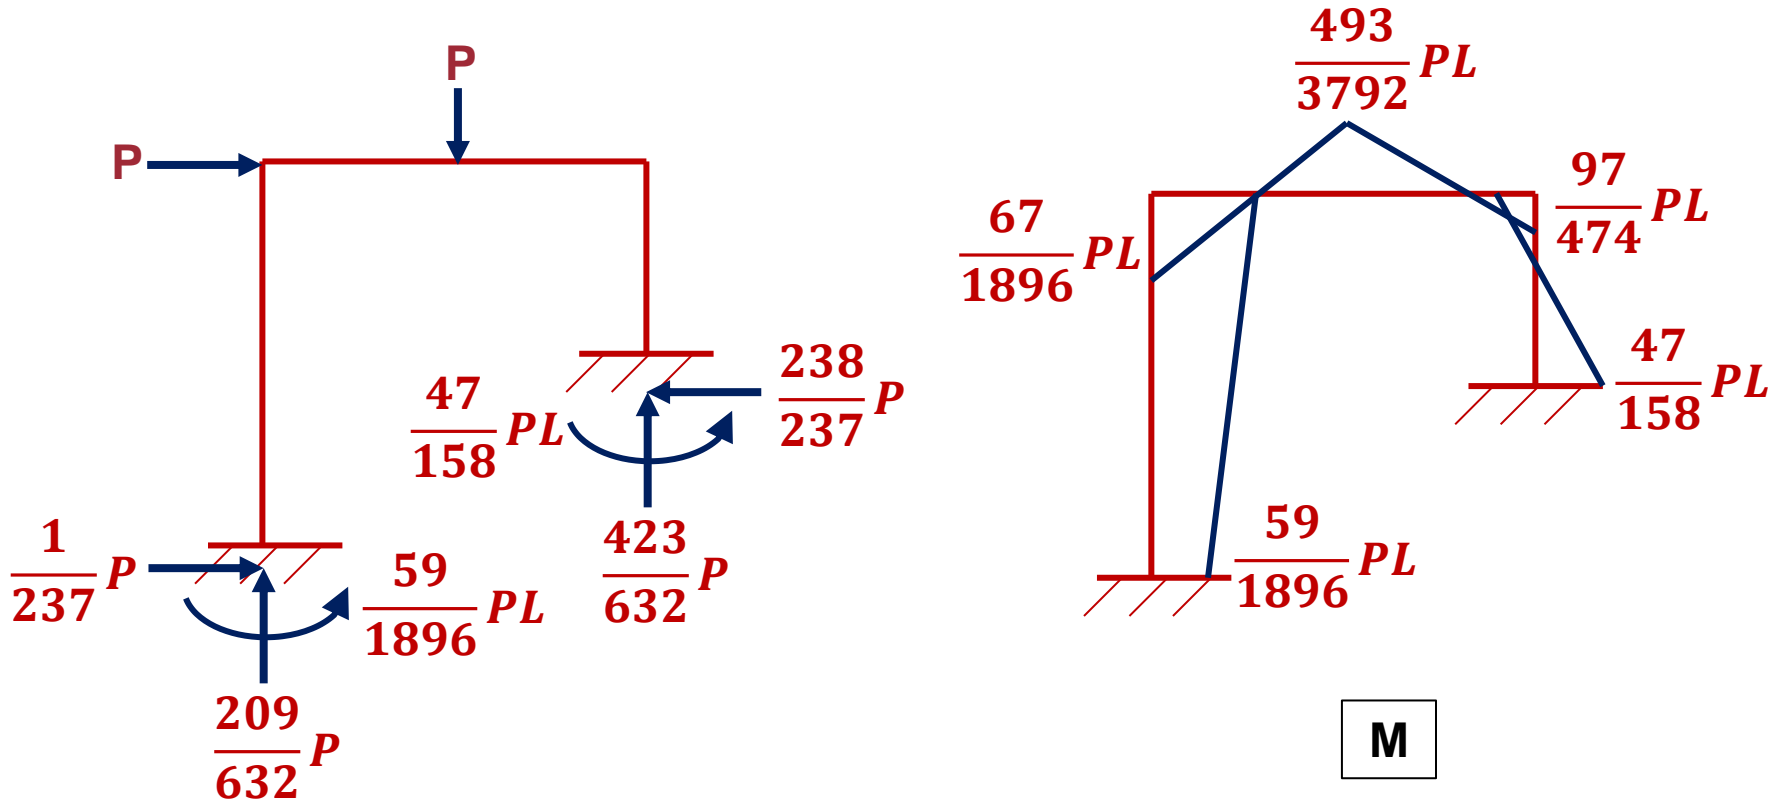


Frame Problem: Inclined Legs

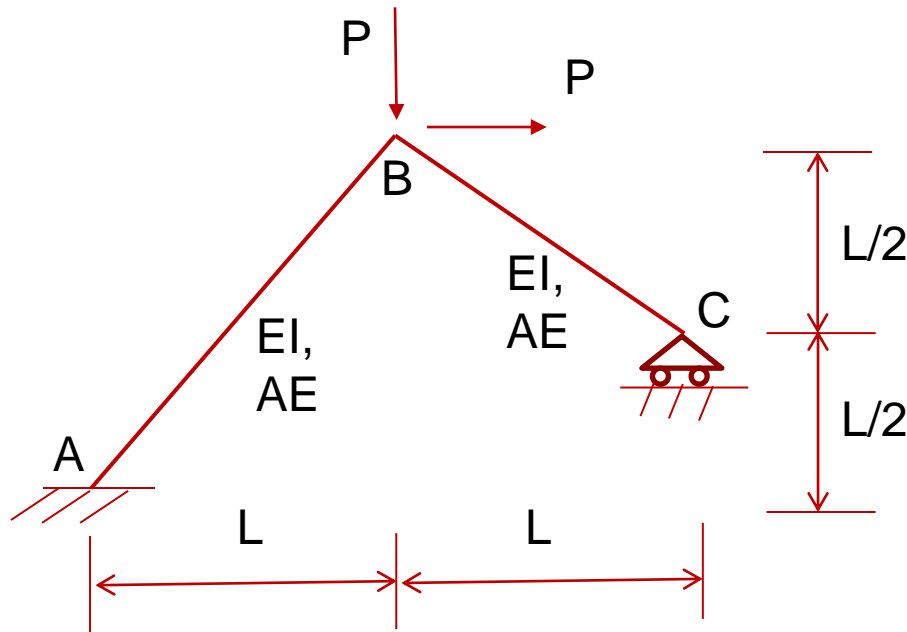

Step 1: Identification of Degree of Statical Indeterminacy (DoSI)





$$\text{DoSI} = \text{No. of Reactions} - \text{No. of Equilibrium Equations} = 4 - 3 = 1$$

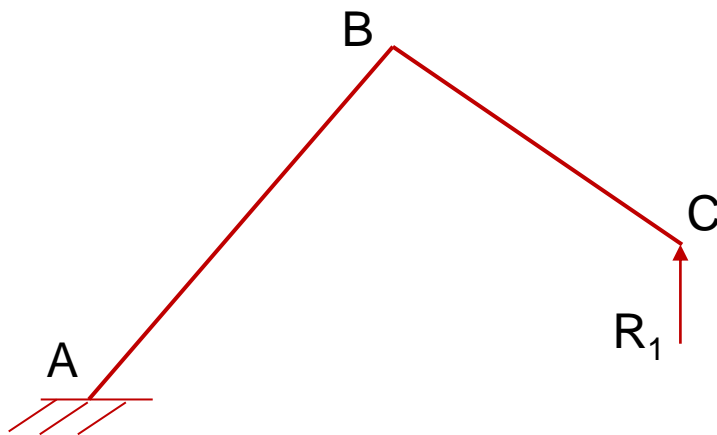

Step 2: Select redundants and the released structure

The released structure must be stable.

Bending Moment and Axial Force Diagrams

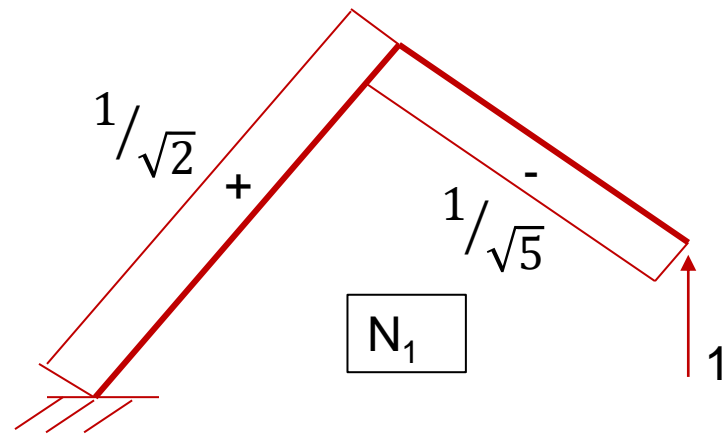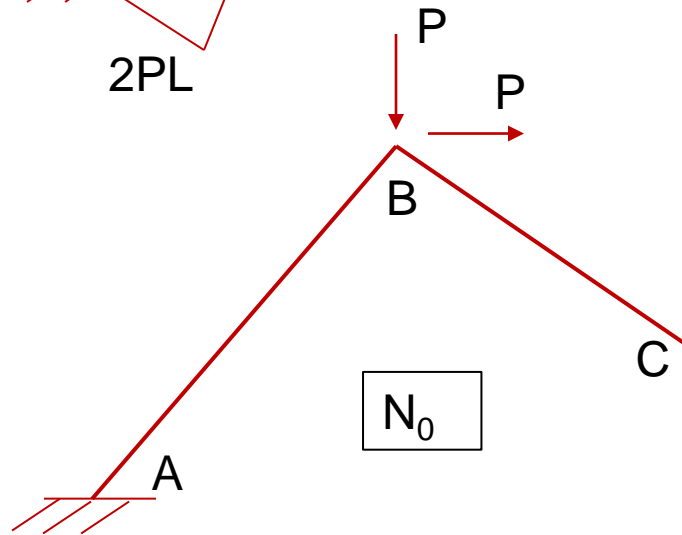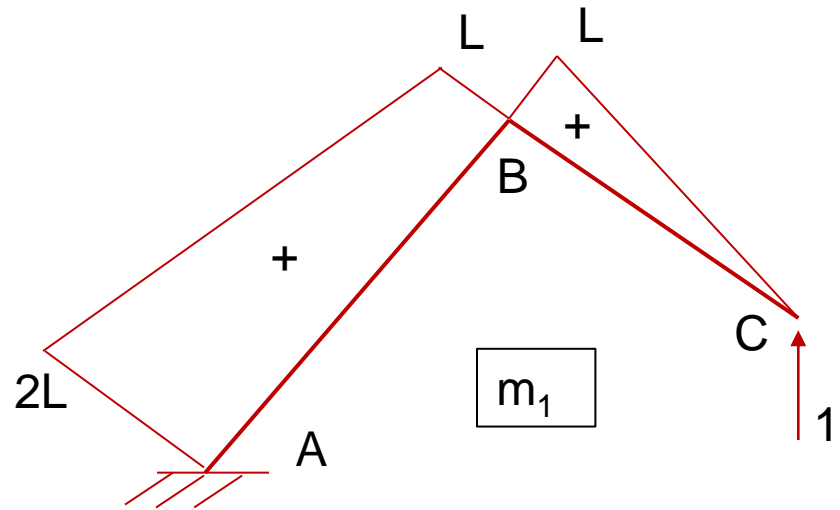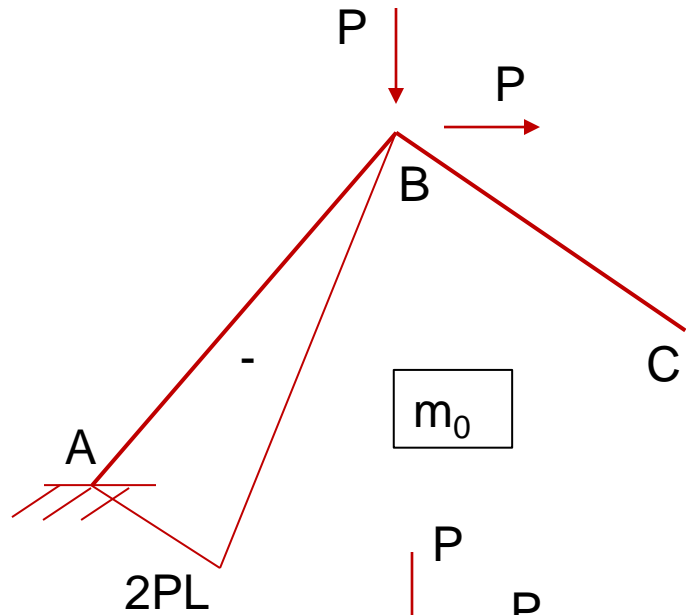

Calculation of Deformation and Flexibility

$$\begin{aligned}\Delta_0 &= \int \frac{m_0 m_1}{EI} dx + \sum \frac{N_0 N_1}{AE} L \\ &= \frac{\sqrt{2}L}{6EI} (-2PL)(4L + L) + 0 \\ &= -\frac{5\sqrt{2}PL^3}{3EI}\end{aligned}$$

$$\begin{aligned}\delta &= \int \frac{m_1 m_1}{EI} dx + \sum \frac{N_1 N_1}{AE} L \\ &= \frac{\sqrt{5}}{2}L \times L \times L + \frac{\sqrt{2}L}{6EI} \{L(2L + 2L) + 2L(L + 4L)\} + \frac{-\frac{1}{\sqrt{5}} \times \left(-\frac{1}{\sqrt{5}}\right) \sqrt{5}}{AE} \frac{\sqrt{5}}{2}L \\ &+ \frac{\frac{1}{\sqrt{2}} \times \left(\frac{1}{\sqrt{2}}\right) \sqrt{2}L}{AE} = \frac{\sqrt{5}L^3}{6EI} + \frac{7\sqrt{2}L^3}{3EI} + \frac{L}{2\sqrt{5}AE} + \frac{L}{\sqrt{2}AE} = \frac{(\sqrt{5} + 14\sqrt{2})L^3}{6EI} + \frac{(1 + \sqrt{10})L}{2\sqrt{5}AE}\end{aligned}$$

Solution of Flexibility Equation

$$\Delta_0 + \delta R = \Delta_s$$

$$-\frac{5\sqrt{2}PL^3}{3EI} + \left(\frac{(\sqrt{5} + 14\sqrt{2})L^3}{6EI} + \frac{(1 + \sqrt{10})L}{2\sqrt{5}AE} \right) R = 0$$

Let, $L = 10 \text{ ft} = 120 \text{ in}$

$P = 10 \text{ kip}$

$E = 3000 \text{ ksi}$

$A = 100 \text{ in}^2$

$I = 1000 \text{ in}^4$

$$R = \frac{\frac{5\sqrt{2}PL^3}{3EI}}{\frac{(\sqrt{5} + 14\sqrt{2})L^3}{6EI} + \frac{(1 + \sqrt{10})L}{2\sqrt{5}AE}}$$

Considering Axial Deformation


$$R = \frac{\frac{5\sqrt{2} \times 10 \times 120^3}{3 \times 3000 \times 1000}}{\frac{(\sqrt{5} + 14\sqrt{2}) \times 120^3}{6 \times 3000 \times 1000} + \frac{(1 + \sqrt{10}) \times 120}{2\sqrt{5} \times 100 \times 3000}}$$

$$= \mathbf{6.417 \text{ kip}}$$


Ignoring Axial Deformation

$$R = \frac{10\sqrt{2}}{(\sqrt{5} + 14\sqrt{2})} P$$
$$= \mathbf{6.418 \text{ kip}}$$

BM and AF Diagrams of the Indeterminate Structure

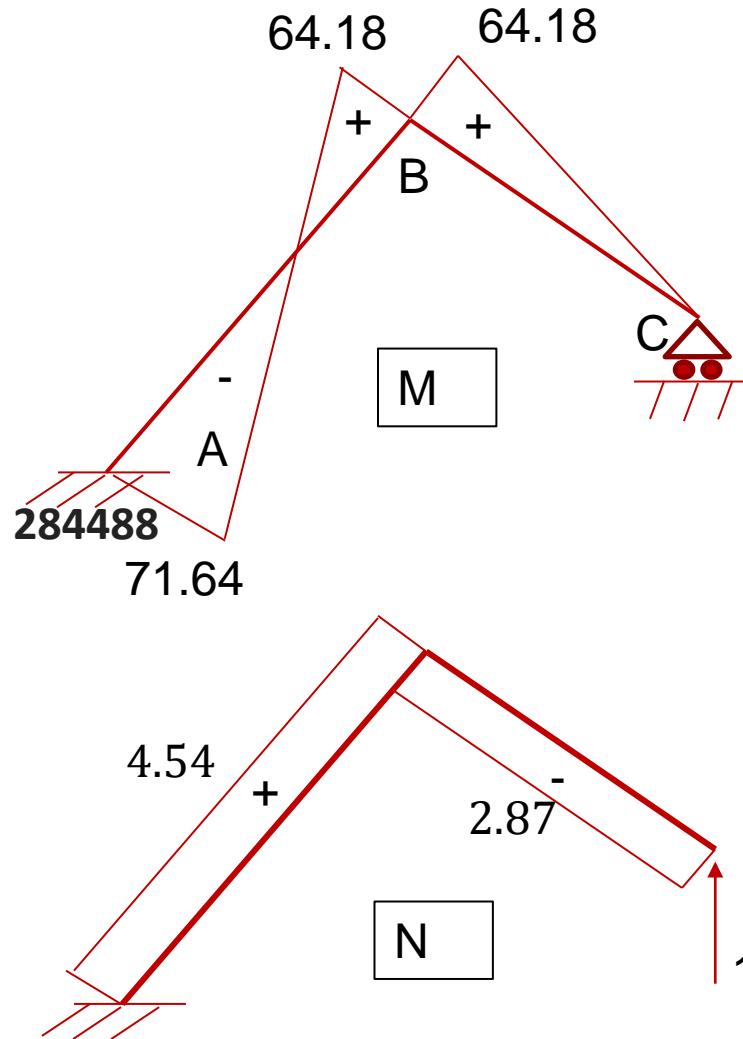


Selection of Redundants and Released Structure

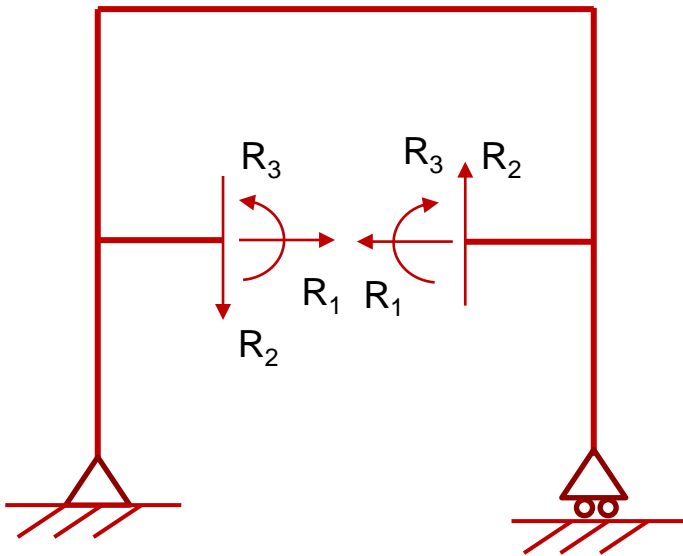


Step 2: Select redundants and the released structure

The released structure must be stable.


m_0 Diagram

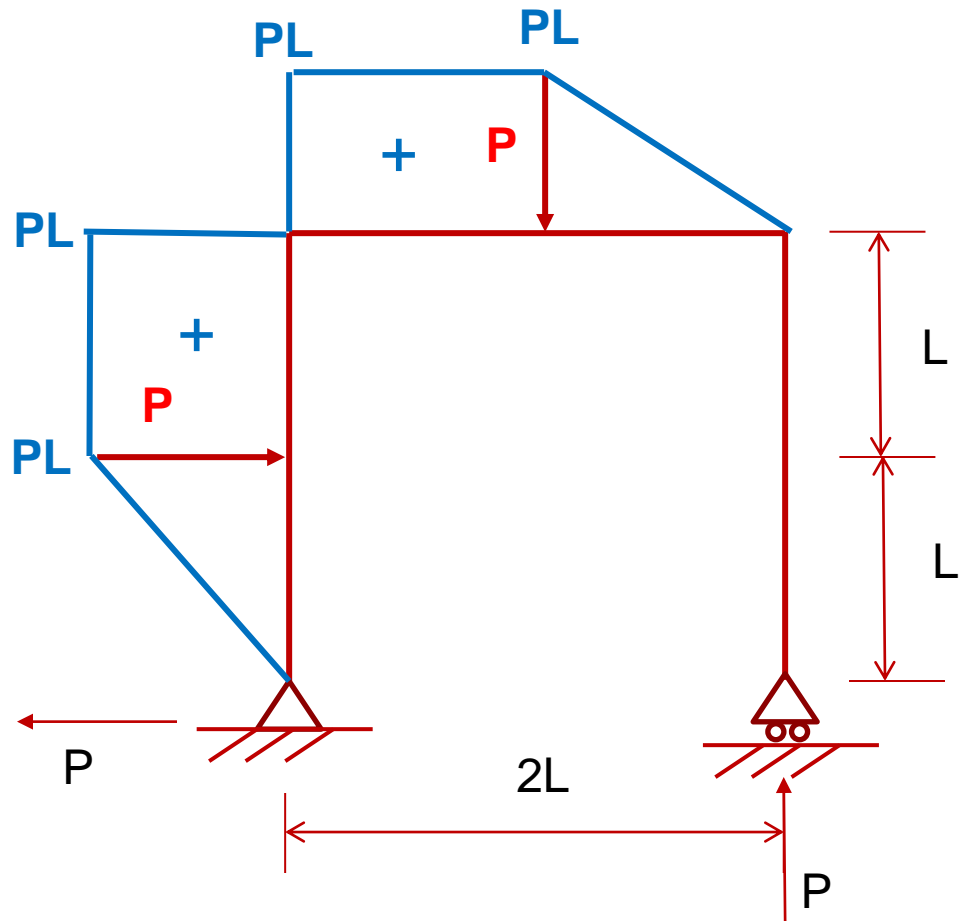


m_1 Diagram

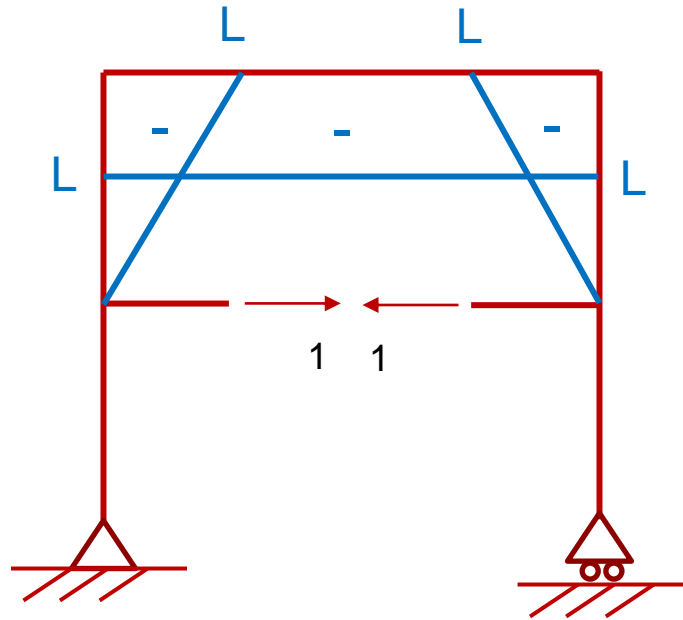

m_2 Diagram


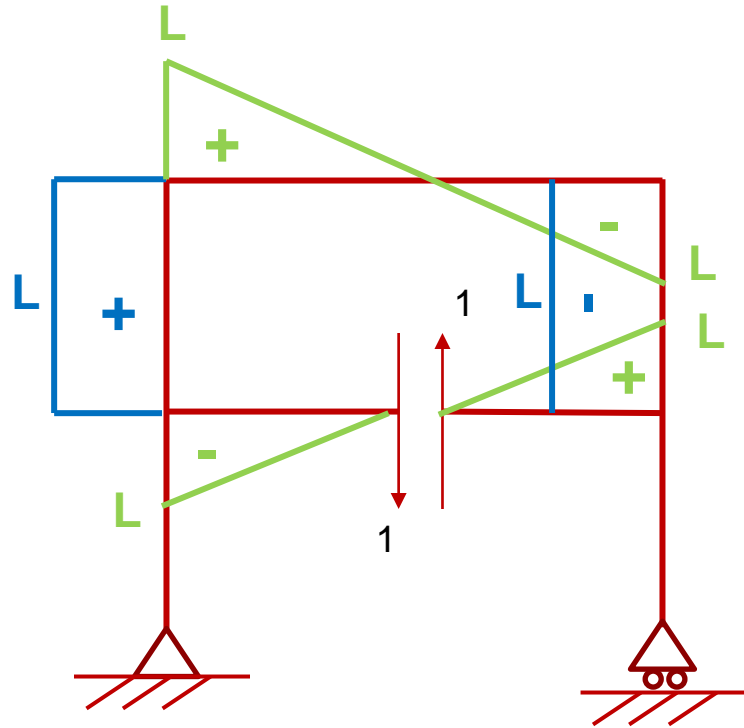


m_3 Diagram

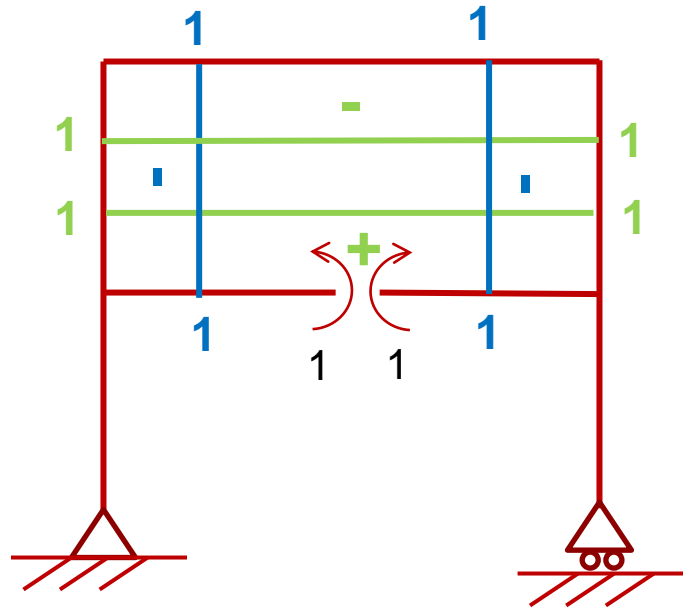

Calculation of Deformations

$$\begin{aligned}
 \Delta_{01} &= \int \frac{m_0 m_1}{EI} dx \\
 &= \frac{L}{2 \times 2EI} (PL)(-L) \\
 &\quad + \frac{L}{EI} (-L)PL \\
 &\quad + \frac{L}{2 \times EI} (PL)(-L) \\
 &= -\frac{PL^3}{4EI} - \frac{PL^3}{EI} - \frac{PL^3}{2EI} \\
 &= -\frac{7PL^3}{4EI}
 \end{aligned}$$

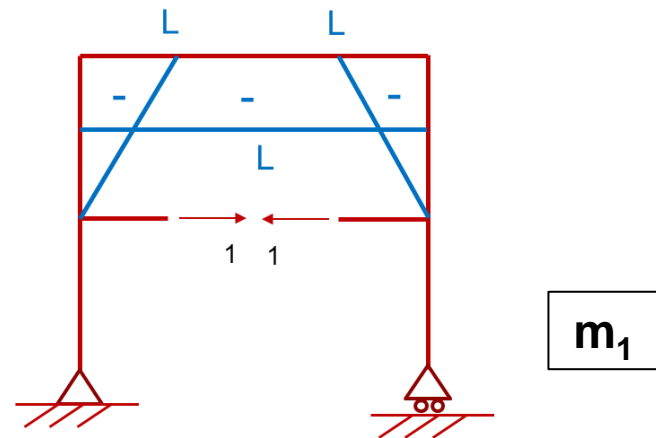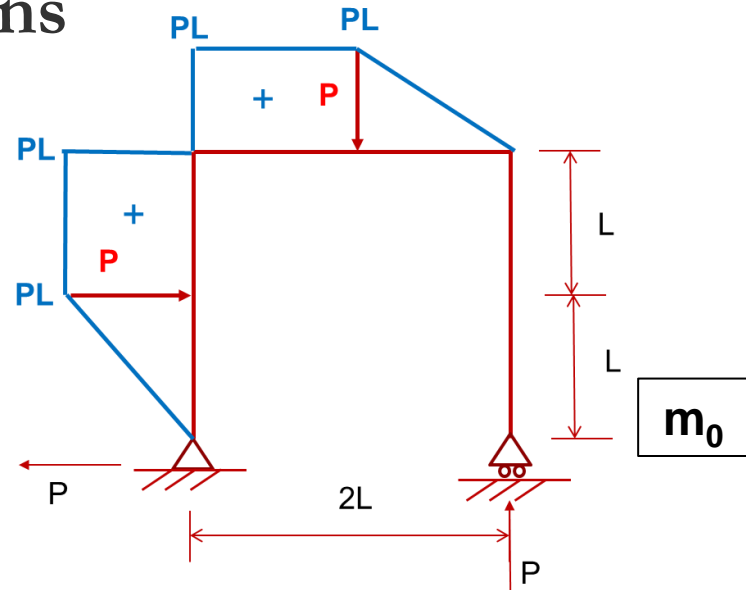


Calculation of Deformations

$$\begin{aligned} \Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\ &= \frac{L}{2EI} (PL)L \\ &\quad + \frac{L}{2 \times EI} (PL)L \\ &\quad + \frac{L}{3 \times EI} (PL)(-L) \\ &= \frac{PL^3}{2EI} + \frac{PL^3}{2EI} - \frac{PL^3}{3EI} \\ &= \frac{2PL^3}{3EI} \end{aligned}$$

$$\begin{aligned} \Delta_{02} &= \int \frac{m_0 m_2}{EI} dx \\ &= \frac{L}{2EI} (PL)L \\ &\quad + \frac{L}{2 \times EI} (PL)L \\ &\quad + \frac{L}{3 \times EI} (PL)(-L) \\ &= \frac{PL^3}{2EI} + \frac{PL^3}{2EI} - \frac{PL^3}{3EI} \\ &= \frac{2PL^3}{3EI} \end{aligned}$$



m_0

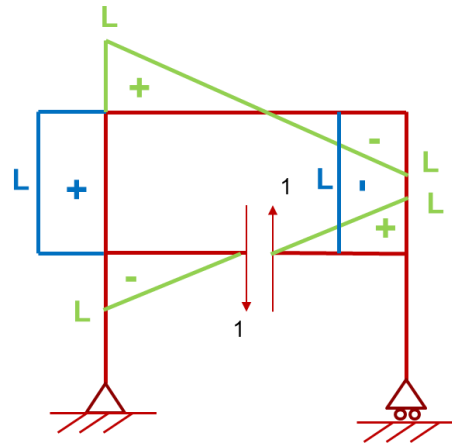

m_2

Calculation of Deformations


$$\begin{aligned}
 \Delta_{03} &= \int \frac{m_0 m_3}{EI} dx \\
 &= \frac{L}{2EI} (PL)(-1) \\
 &\quad + \frac{L}{EI} (PL)(-1) \\
 &\quad + \frac{L}{2 \times EI} (PL)(-1) \\
 &= -\frac{PL^2}{2EI} - \frac{PL^2}{EI} - \frac{PL^2}{2EI} \\
 &= -\frac{2PL^2}{EI}
 \end{aligned}$$

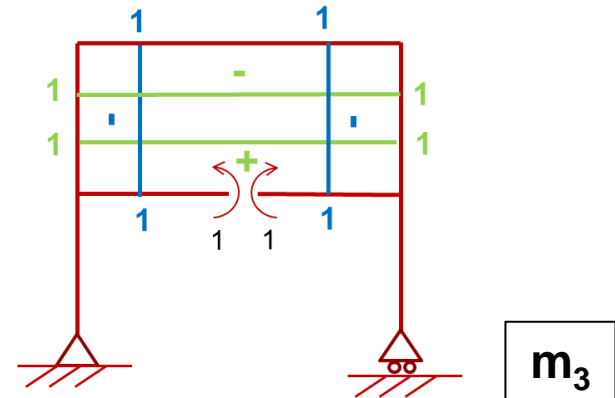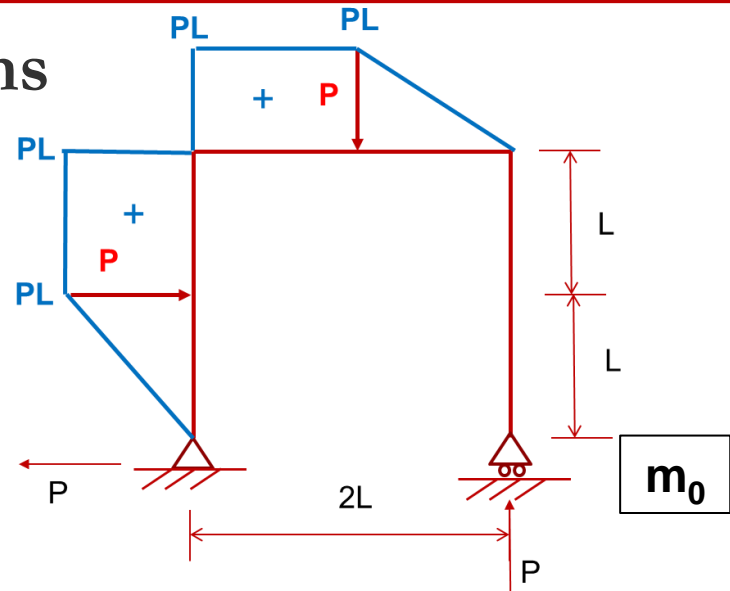

Calculation of Flexibilities

$$\begin{aligned}\delta_{11} &= \int \frac{m_1 m_1}{EI} dx \\ &= \frac{L(-L)(-L)}{3 \times 2EI} \times 2 + \frac{2L(-L)(-L)}{EI} \\ &= \frac{L^3}{3EI} + \frac{2L^3}{EI} = \frac{7L^3}{3EI}\end{aligned}$$

$$\begin{aligned}\delta_{12} &= \delta_{21} = \int \frac{m_1 m_2}{EI} dx \\ &= 0\end{aligned}$$

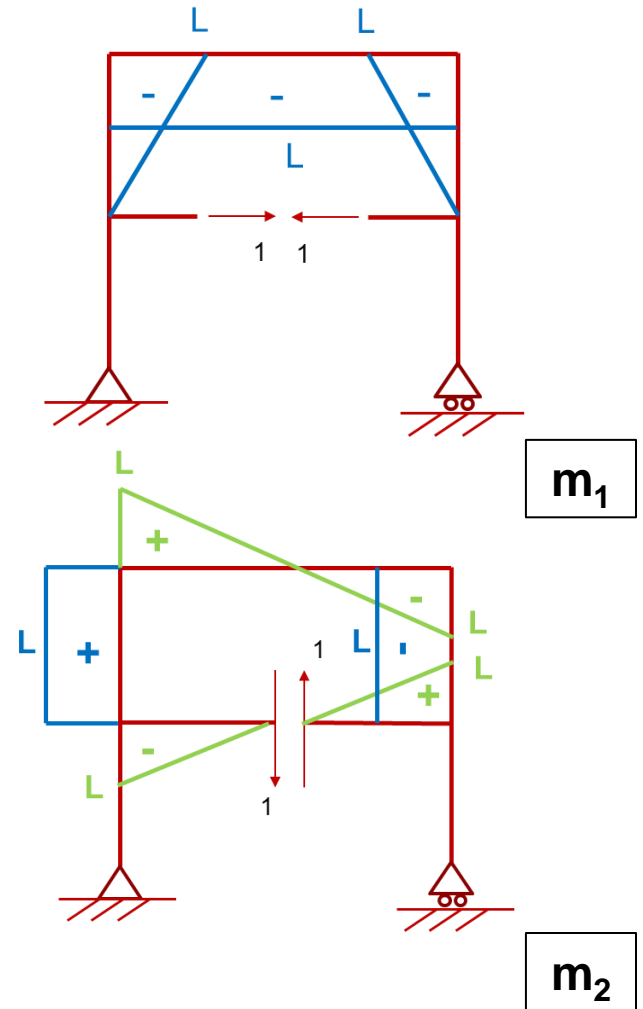

Calculation of Flexibilities


$$\delta_{22} = \int \frac{m_2 m_2}{EI} dx$$

$$= \frac{L}{2EI} \times L \times L \times 2 + \frac{L}{3 \times EI} \times L \times L \times 4$$


$$= \frac{L^3}{EI} + \frac{4L^3}{3EI} = \frac{7L^3}{3EI}$$

$$\delta_{23} = \delta_{32} = \int \frac{m_2 m_3}{EI} dx$$

$$= 0$$

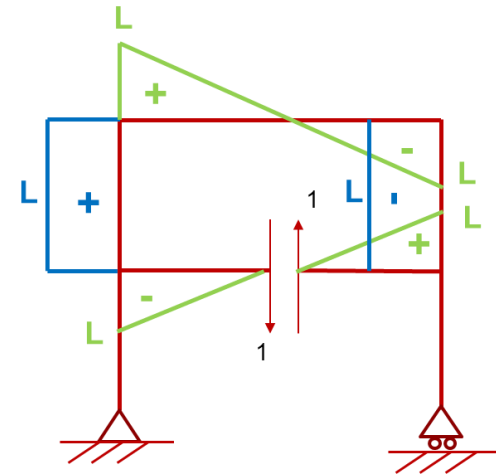

m_2


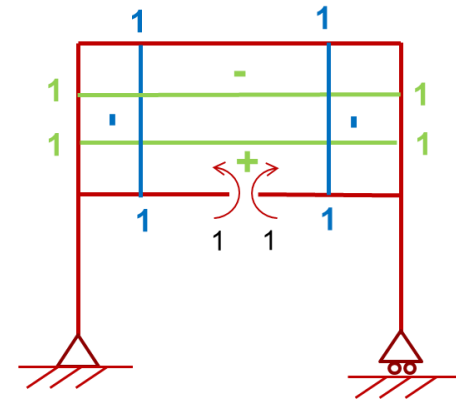


m_3

Calculation of Flexibilities

$$\begin{aligned}\delta_{33} &= \int \frac{m_3 m_3}{EI} dx \\ &= \frac{L \times (-1) \times (-1)}{2EI} \times 2 + \frac{2L \times (-1) \times (-1)}{EI} \times 2 \\ &= \frac{L}{EI} + \frac{4L}{EI} = \frac{5L}{EI}\end{aligned}$$

$$\begin{aligned}\delta_{13} = \delta_{31} &= \int \frac{m_1 m_3}{EI} dx \\ &= \frac{L(-L)(-1)}{2 \times 2EI} \times 2 + \frac{2L(-L)(-1)}{EI} \\ &= \frac{L^2}{2EI} + \frac{2L^2}{EI} = \frac{5L^2}{2EI}\end{aligned}$$

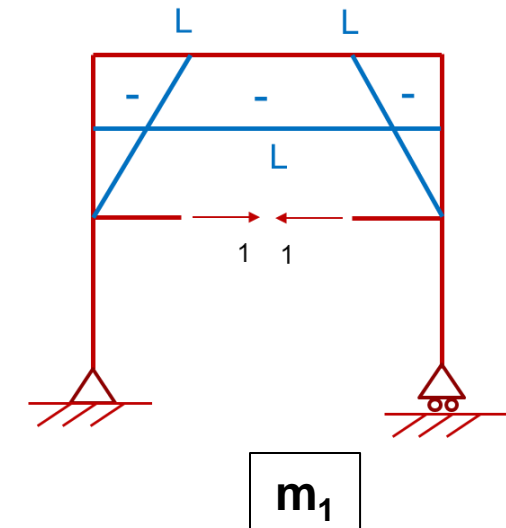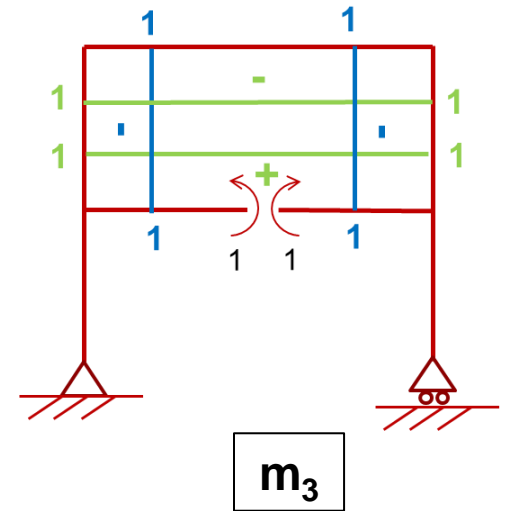

Flexibility Equation and Solution

$$\begin{Bmatrix} \Delta_{01} \\ \Delta_{02} \\ \Delta_{03} \end{Bmatrix} + \begin{bmatrix} \delta_{11} & \delta_{12} & \delta_{13} \\ \delta_{21} & \delta_{22} & \delta_{23} \\ \delta_{31} & \delta_{32} & \delta_{33} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} \Delta_1 \\ \Delta_2 \\ \Delta_3 \end{Bmatrix}$$

$$\begin{Bmatrix} -\frac{7}{3} \\ \frac{4}{3} \\ \frac{2}{3} \\ -\frac{2}{L} \end{Bmatrix} \frac{PL^3}{EI} + \begin{bmatrix} \frac{7}{3} & 0 & \frac{5}{2L} \\ 0 & \frac{7}{3} & 0 \\ \frac{5}{2L} & 0 & \frac{5}{L^2} \end{bmatrix} \frac{L^3}{EI} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \\ 0 \end{Bmatrix}$$

$$\begin{bmatrix} \frac{7}{3} & 0 & \frac{5}{2L} \\ 0 & \frac{7}{3} & 0 \\ \frac{5}{2L} & 0 & \frac{5}{L^2} \end{bmatrix} \begin{Bmatrix} R_1 \\ R_2 \\ R_3 \end{Bmatrix} = \begin{Bmatrix} \frac{7}{3} \\ \frac{4}{3} \\ -\frac{2}{3} \\ \frac{2}{L} \end{Bmatrix} P$$

Flexibility Equation and Solution

$$R_1 = \frac{\begin{vmatrix} \frac{7}{4}P & 0 & \frac{5}{2L} \\ -\frac{2}{3}P & \frac{7}{3} & 0 \\ \frac{2}{L}P & 0 & \frac{5}{L^2} \end{vmatrix}}{\begin{vmatrix} 7 & 0 & \frac{5}{2L} \\ \frac{7}{3} & \frac{7}{3} & 0 \\ 0 & \frac{7}{3} & 0 \\ \frac{5}{2L} & 0 & \frac{5}{L^2} \end{vmatrix}} = \frac{\frac{35P}{4L^2}}{\frac{35 \times 13}{36L^2}} = \frac{9}{13}P$$

Flexibility Equation and Solution

$$R_2 = \frac{\begin{vmatrix} \frac{7}{3} & \frac{7}{4}P & \frac{5}{2L} \\ 0 & -\frac{2}{3}P & 0 \\ \frac{5}{2L} & \frac{2}{L}P & \frac{5}{L^2} \end{vmatrix}}{\begin{vmatrix} 7 & 0 & 5 \\ \frac{3}{3} & 0 & \frac{2L}{2L} \\ 0 & \frac{7}{3} & 0 \\ \frac{5}{2L} & 0 & \frac{5}{L^2} \end{vmatrix}} = \frac{-\frac{15P}{2L^2}}{\frac{35 \times 13}{36L^2}} = -\frac{54}{91}P$$

Flexibility Equation and Solution

$$R_3 = \frac{\begin{vmatrix} \frac{7}{3} & 0 & \frac{7}{4}P \\ 0 & \frac{7}{3} & -\frac{2}{3}P \\ \frac{5}{2L} & 0 & \frac{2}{L}P \end{vmatrix}}{\begin{vmatrix} \frac{7}{3} & 0 & \frac{5}{2L} \\ 0 & \frac{7}{3} & 0 \\ \frac{5}{2L} & 0 & \frac{5}{L^2} \end{vmatrix}} = \frac{-\frac{49P}{72L}}{\frac{35 \times 13}{36L^2}} = -\frac{7}{130}PL$$

Week-(09)

MD Ehasan Kabir

Chapter 4 - Matrix Stiffness Method

4.1 Introduction	3
4.1.1 Background.....	3
4.1.2 Basic Concepts.....	4
4.1.3 Computer Programs to Support Learning.....	6
4.2 Basic Approach.....	10
4.2.1 Individual Element	10
4.2.2 Assemblies of Elements.....	12
4.2.3 Example 1	14
4.2.4 General Methodology	20
4.2.5 Member contribution to global stiffness matrix	22
4.2.6 Interpretation of Stiffness Matrix	27
4.2.7 Restricting a Matrix – Imposing Restraints.....	29
4.3 Plane Trusses	32
4.3.1 Introduction.....	32
4.3.2 Truss Element Stiffness Matrix	35
4.3.3 Element Forces	40
4.3.4 Example 2: Basic Truss	43
4.3.5 Example 3: Adding Members.....	52
4.3.6 Example 4: Using Symmetry.....	56
4.3.7 Self-Strained Structures	59
4.3.8 Example 5 – Truss with Differential Temperature.....	63
4.3.9 Example 6 – Truss with Loads & Self Strains	69

4.3.10	Problems	74
4.4	Beams.....	77
4.4.1	Beam Element Stiffness Matrix.....	77
4.4.2	Beam Element Loading	82
4.4.3	Example 7 – Simple Two-Span Beam.....	84
4.4.4	Example 8 – Non-Prismatic Beam	88
4.4.5	Problems	92
4.5	Plane Frames.....	95
4.5.1	Plane Frame Element Stiffness Matrix.....	95
4.5.2	Example 9 – Simple Plane Frame	104
4.5.3	Example 10 –Plane Frame Using Symmetry.....	109
4.5.4	Problems	115
4.6	Appendix	120
4.6.1	Plane Truss Element Stiffness Matrix in Global Coordinates.....	120
4.6.2	Coordinate Transformations	129
4.6.3	Past Exam Questions	137
4.7	References	148

Rev. 1

4.1 Introduction

4.1.1 Background

The matrix stiffness method is the basis of almost all commercial structural analysis programs. It is a specific case of the more general finite element method, and was in part responsible for the development of the finite element method. An understanding of the underlying theory, limitations and means of application of the method is therefore essential so that the user of analysis software is not just operating a ‘black box’. Such users must be able to understand any errors in the modelling of structures which usually come as obtuse warnings such as ‘zero pivot’ or ‘determinant zero: structure unstable: aborting’. Understanding the basics presented herein should hopefully lead to more fruitful use of the available software.

4.1.2 Basic Concepts

Node

The more general name for a connection between adjacent members is termed a node. For trusses and frames the terms joint and node are interchangeable. For more complex structures (e.g. plates), they are not.

Element

For trusses and frames element means the same as member. For more complex structures this is not the case.

Degree of Freedom

The number of possible directions that displacements or forces at a node can exist in is termed a degree of freedom (dof). Some examples are:

- Plane truss: has 2 degrees of freedom at each node: translation/forces in the x and y directions.
- Beams: have 2 degrees of freedom per node: vertical displacement/forces and rotation/moment.
- Plane Frame: has 3 degrees of freedom at each node: the translations/forces similar to a plane truss and in addition, the rotation or moment at the joint.
- Space Truss: a truss in three dimensions has 3 degrees of freedom: translation or forces along each axis in space.
- Space Frame: has 6 degrees of freedom at each node: translation/forces along each axis, and rotation/moments about each axis.

Thus a plane truss with 10 joints has 20 degrees of freedom. A plane frame with two members will have three joints (one common to both members) and thus 9 degrees of freedom in total.

Local and Global

Forces, displacements and stiffness matrices are often derived and defined for an axis system local to the member. However there will exist an overall, or global, axis system for the structure as a whole. We must therefore transform forces, displacements etc from the local coordinate system into the global coordinate system.

4.1.3 Computer Programs to Support Learning

Matlab Truss Analysis Program

Description

To support the ideas developed here we will introduce some Matlab scripts at each point to demonstrate how the theory described can be implemented for computer calculation. This collection of scripts will build into a program that can analyse pin-jointed trusses. The scripts will only demonstrate the calculations process, and do not have any graphical user interface facilities. This keeps the calculation process unencumbered by extra code. (In fact probably 90+% of code in commercial programs is for the graphical user interface and not for the actual calculations process.) Of course, this is not to say that graphical displays of results are unimportant; gross mistakes in data entry can sometimes only be found with careful examination of the graphical display of the input data.

The scripts that are developed in these notes are written to explain the underlying concepts, and not to illustrate best programming practice. The code could actually be a lot more efficient computationally, but this would be at cost to the clarity of calculation. In fact, a full finite element analysis program can be implemented in under 50 lines (Alberty et al, 1999)!

It is necessary to use a scripting language like Matlab, rather than a spreadsheet program (like MS Excel) since the number of members and member connectivity can change from structure to structure.

The program will be able to analyse plane pin-jointed-trusses subject to nodal loads only. It will not deal with member prestress, support stiffness or lack of fits: it is quite rudimentary on purpose.

Use

To use the program, download it from the course website (www.colincaprani.com). Extract the files to a folder and change the current Matlab directory to that folder. After preparing the data (as will be explained later), execute the following statement at the command line:


```
>> [D F R] = AnalyzeTruss(nData,eData)
```

This assumes that the nodal data is stored in the matrix `nData`, and the element data matrix is stored in `eData` – these names are arbitrary. Entering the required data into Matlab will also be explained later.

TrussMaster

To provide a bridge between the obvious workings of the Matlab program and the more ‘black box’ nature of commercial programs, *TrussMaster* has been developed. This program can analyse plane trusses of any size. It has a front end that illustrates a fairly rudimentary commercial program interface, coupled with a back end (and some dialogs) that expose the calculations the program carries out. In this manner it is easy to link the hand calculations of the examples with the computer output, strengthening the link between theory and practice of the method.


TrussMaster is available on the college computers. The help file can be downloaded from the course website (www.colincaprani.com). It will be used in some labs.

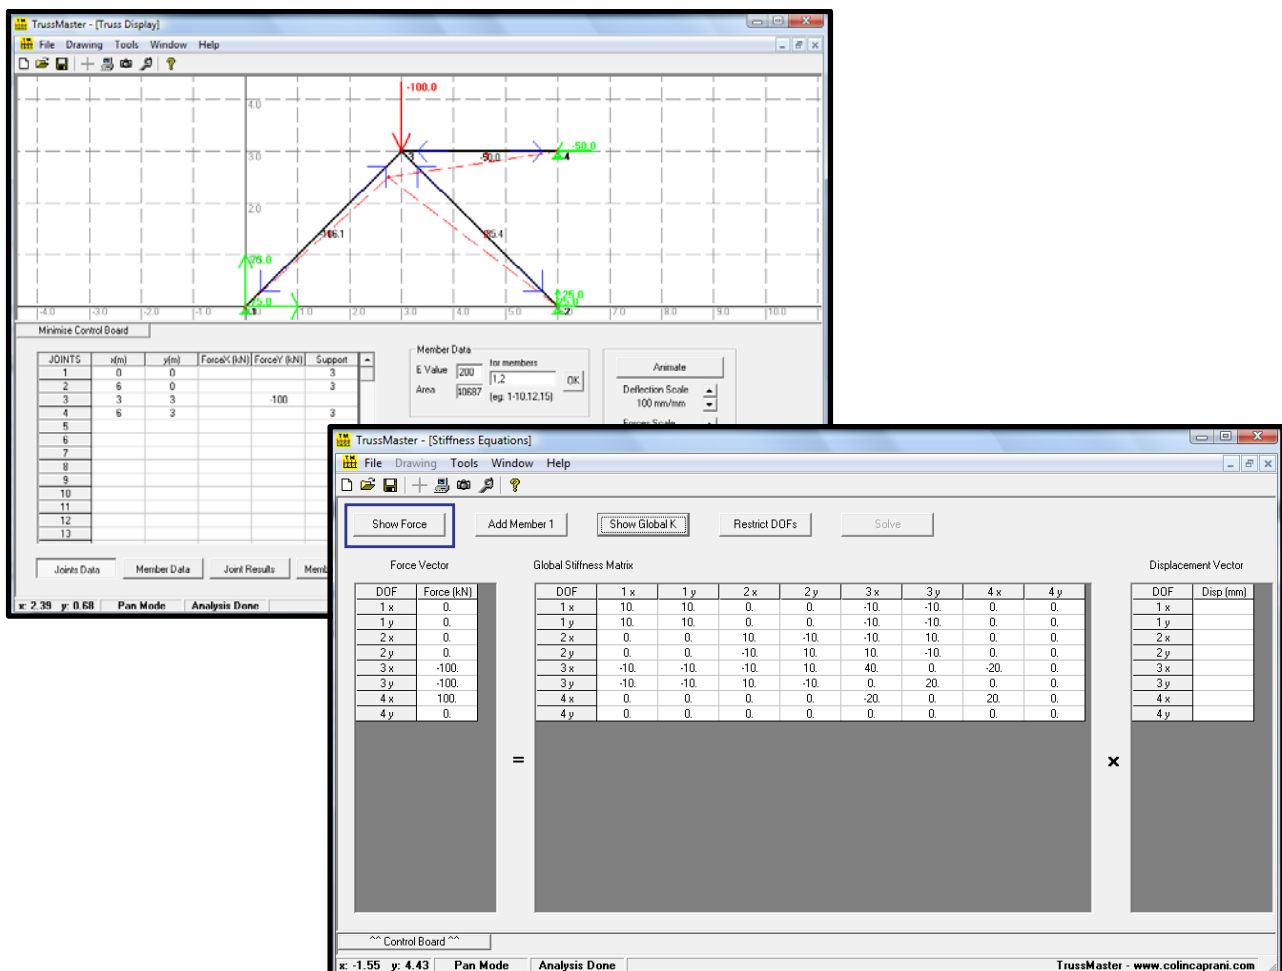

LinPro

LinPro is very useful as a study aid for this topic: for example, right click on a member and select “Stiffness Matrix” to see the stiffness matrix for any member. The latest version (2.7.3) has a very useful “Study Mode”, which exposes the structure and member stiffness matrices to the user. A user familiar with the underlying theory can then use the program for more advanced purposes, such as spring supports, for example.

You can download *LinPro* from www.line.co.ba.

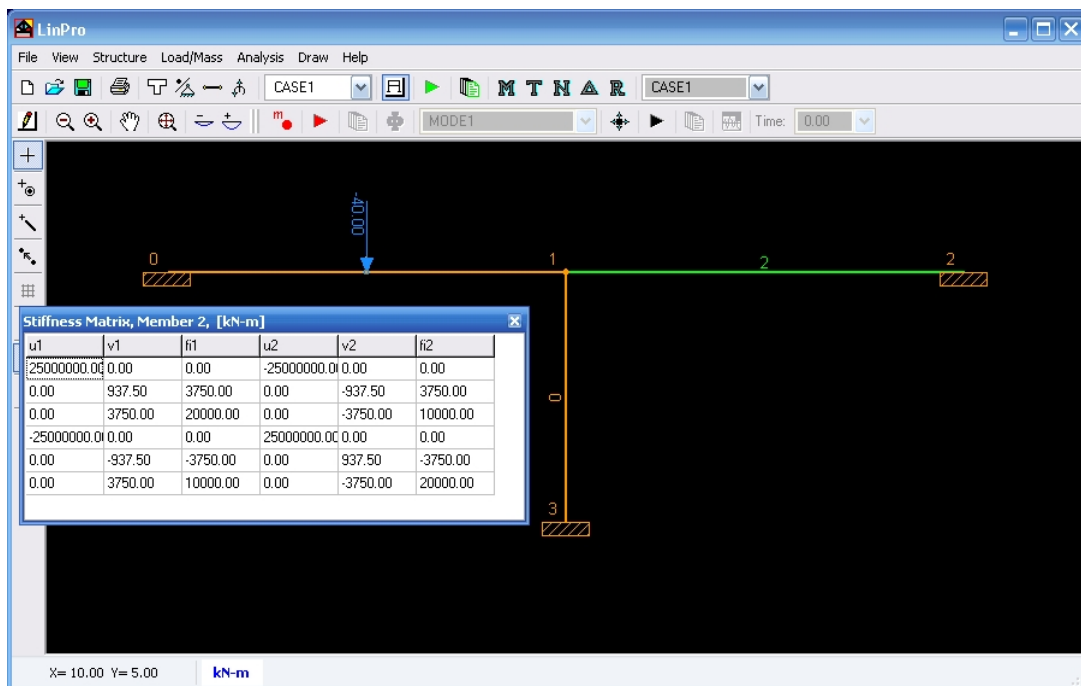


Week-(10)

MD Ehasan Kabir

4.2 Basic Approach

4.2.1 Individual Element

We consider here the most basic form of stiffness analysis. We represent a structural member by a spring which has a node (or connection) at each end. We also consider that it can only move in the x -direction. Thus it only has 1 DOF per node. At each of its nodes, it can have a force and a displacement (again both in the x -direction):

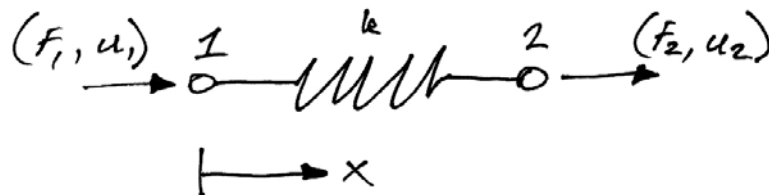

Notice that we have drawn the force and displacement vector arrows in the positive x -direction. Matrix analysis requires us to be very strict in our sign conventions.

Using the basic relationship that force is equal to stiffness times displacement, we can determine the force at node 1 as:

$$F_1 = k(\text{net displacement at 1})$$

Thus:

$$F_1 = k(u_1 - u_2) = ku_1 - ku_2 \quad (4.2.1)$$

Similarly for node 2:

$$F_2 = k(u_2 - u_1) = -ku_1 + ku_2 \quad (4.2.2)$$

We can write equations (4.2.1) and (4.2.2) in matrix form to get the element stiffness matrix for a 1-DOF axial element:

$$\begin{Bmatrix} F_1 \\ F_2 \end{Bmatrix} = \begin{bmatrix} k & -k \\ -k & k \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \end{Bmatrix} \quad (4.2.3)$$

And using matrix notation, we write:

$$\{\mathbf{F}^e\} = [\mathbf{k}]\{\mathbf{u}^e\} \quad (4.2.4)$$

Here:

- $\{\mathbf{F}^e\}$ is the element force vector;
- $[\mathbf{k}]$ is the element stiffness matrix;
- $\{\mathbf{u}^e\}$ is the element displacement vector.


It should be clear that the element stiffness matrix is of crucial importance – it links nodal forces to nodal displacements; it encapsulates how the element behaves under load.

The derivation of the element stiffness matrix for different types of elements is probably the most awkward part of the matrix stiffness method. However, this does not pose as a major disadvantage since we only have a few types of elements to derive, and once derived they are readily available for use in any problem.

4.2.2 Assemblies of Elements

Real structures are made up of assemblies of elements, thus we must determine how to connect the stiffness matrices of individual elements to form an overall (or global) stiffness matrix for the structure.

Consider the following simple structure:

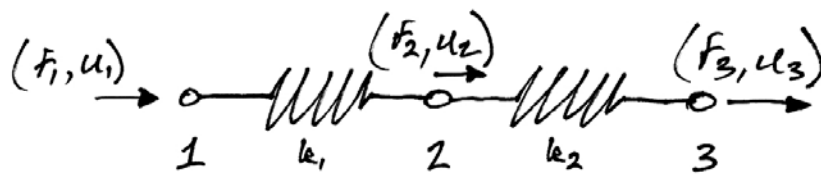

Note that the individual elements have different stiffnesses, k_1 and k_2 . Thus we can write the force displacement relationships for both elements as:

$$\begin{Bmatrix} F_1 \\ F_2 \end{Bmatrix} = \begin{bmatrix} k_1 & -k_1 \\ -k_1 & k_1 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \end{Bmatrix} \quad (4.2.5)$$

$$\begin{Bmatrix} F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} k_2 & -k_2 \\ -k_2 & k_2 \end{bmatrix} \begin{Bmatrix} u_2 \\ u_3 \end{Bmatrix} \quad (4.2.6)$$

We can expand these equations so that they encompass all the nodes in the structure:

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} k_1 & -k_1 & 0 \\ -k_1 & k_1 & 0 \\ 0 & 0 & 0 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \end{Bmatrix} \quad (4.2.7)$$

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} 0 & 0 & 0 \\ 0 & k_2 & -k_2 \\ 0 & -k_2 & k_2 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \end{Bmatrix} \quad (4.2.8)$$

We can add equations (4.2.7) and (4.2.8) to determine the total of both the forces and displacements at each node in the structure:

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} k_1 & -k_1 & 0 \\ -k_1 & k_1 + k_2 & -k_2 \\ 0 & -k_2 & k_2 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \end{Bmatrix} \quad (4.2.9)$$

As can be seen from this equation, by adding, we have the total stiffness at each node, with contributions as appropriate by each member. In particular node 2, where the members meet, has total stiffness $k_1 + k_2$. We can re-write this equation as:

$$\{\mathbf{F}\} = [\mathbf{K}]\{\mathbf{u}\} \quad (4.2.10)$$


In which:

- $\{\mathbf{F}\}$ is the force vector for the structure;
- $[\mathbf{K}]$ is the global stiffness matrix for the structure;
- $\{\mathbf{u}\}$ is the displacement vector for the structure.

4.2.3 Example 1

Problem

The following axially-loaded structure has loads applied as shown:

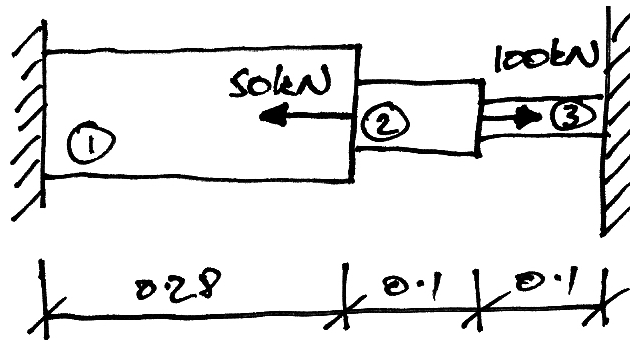


The individual member properties are:

Member	Length (m)	Area (mm ²)	Material, E (kN/mm ²)
1	0.28	400	70
2	0.1	200	100
3	0.1	70	200

Find the displacements of the connections and the forces in each member.

Solution

Our first step is to model the structure with elements and nodes, as shown:

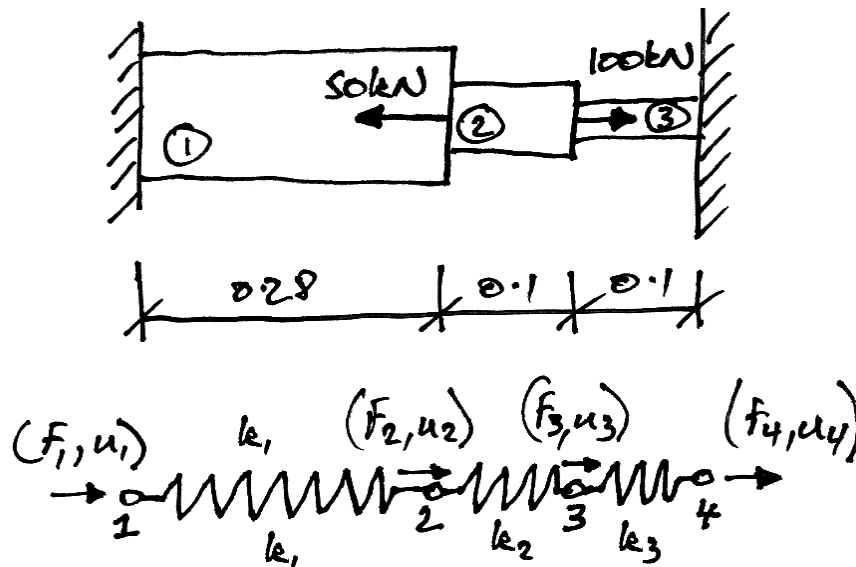

Calculate the spring stiffnesses for each member:

$$k_1 = \left(\frac{EA}{L} \right)_1 = \frac{70 \cdot 400}{0.28} = 100 \times 10^3 \text{ kN/m} \quad (4.2.11)$$

$$k_2 = \left(\frac{EA}{L} \right)_2 = \frac{100 \cdot 200}{0.1} = 200 \times 10^3 \text{ kN/m} \quad (4.2.12)$$

$$k_3 = \left(\frac{EA}{L} \right)_3 = \frac{200 \cdot 70}{0.1} = 140 \times 10^3 \text{ kN/m} \quad (4.2.13)$$

Next we calculate the individual element stiffness matrices:

$$\begin{Bmatrix} F_1 \\ F_2 \end{Bmatrix} = 10^3 \begin{bmatrix} 100 & -100 \\ -100 & 100 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \end{Bmatrix} \quad (4.2.14)$$

$$\begin{Bmatrix} F_2 \\ F_3 \end{Bmatrix} = 10^3 \begin{bmatrix} 200 & -200 \\ -200 & 200 \end{bmatrix} \begin{Bmatrix} u_2 \\ u_3 \end{Bmatrix} \quad (4.2.15)$$

$$\begin{Bmatrix} F_3 \\ F_4 \end{Bmatrix} = 10^3 \begin{bmatrix} 140 & -140 \\ -140 & 140 \end{bmatrix} \begin{Bmatrix} u_3 \\ u_4 \end{Bmatrix} \quad (4.2.16)$$

We expand and add the element stiffness matrices to get:

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \\ F_4 \end{Bmatrix} = 10^3 \begin{bmatrix} 100 & -100 & 0 & 0 \\ -100 & (100+200) & -200 & 0 \\ 0 & -200 & (200+140) & -140 \\ 0 & 0 & -140 & 140 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \\ u_4 \end{Bmatrix} \quad (4.2.17)$$

Notice how each member contributes to the global stiffness matrix:

	Node 1	Node 2	Node 3	Node 4
Node 1		Member 1	0	0
Node 2	Member 1		Member 2	0
Node 3	0	Member 2		Member 3
Node 4	0	0	Member 3	

Notice also that where the member stiffness matrices overlap in the global stiffness matrix that the components (or entries) are added. Also notice that zeros are entered where there is no connection between nodes, e.g. node 1 to node 3.

We cannot yet solve equation (4.2.17) as we have not introduced the restraints of the structure: the supports at nodes 1 and 4. We must modify equation (4.2.17) in such a way that we will obtain the known results for the displacements at nodes 1 and 4. Thus:

$$\begin{Bmatrix} 0 \\ F_2 \\ F_3 \\ 0 \end{Bmatrix} = 10^3 \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & (100+200) & -200 & 0 \\ 0 & -200 & (200+140) & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \\ u_4 \end{Bmatrix} \quad (4.2.18)$$

What we have done here is to ‘restrict’ the matrix: we have introduced a 1 on the diagonal of the node number, and set all other entries on the corresponding row and column to zero. We have entered the known displacement as the corresponding entry in force vector (zero). Thus when we now solve we will obtain $u_1 = u_4 = 0$.

For the remaining two equations, we have:

$$\begin{Bmatrix} F_2 \\ F_3 \end{Bmatrix} = 10^3 \begin{bmatrix} 300 & -200 \\ -200 & 340 \end{bmatrix} \begin{Bmatrix} u_2 \\ u_3 \end{Bmatrix} \quad (4.2.19)$$

And so:


$$\begin{aligned} \begin{Bmatrix} u_2 \\ u_3 \end{Bmatrix} &= \frac{1}{10^3} \cdot \frac{1}{(300)(340) - (-200)(-200)} \begin{bmatrix} 340 & 200 \\ 200 & 300 \end{bmatrix} \begin{Bmatrix} -50 \\ 100 \end{Bmatrix} = \frac{1}{62} \begin{Bmatrix} 3 \\ 20 \end{Bmatrix} \times 10^{-3} \text{ m} \\ &= \begin{Bmatrix} 0.048 \\ 0.322 \end{Bmatrix} \text{ mm} \end{aligned} \quad (4.2.20)$$

To find the forces in the bars, we can now use the member stiffness matrices, since we know the end displacements:

Member 1

$$\begin{Bmatrix} F_1 \\ F_2 \end{Bmatrix} = 10^3 \begin{bmatrix} 100 & -100 \\ -100 & 100 \end{bmatrix} \begin{Bmatrix} 0 \\ 0.048 \end{Bmatrix} \times 10^{-3} = \begin{Bmatrix} -4.8 \\ 4.8 \end{Bmatrix} \quad (4.2.21)$$

Thus Member 1 has a tension of 4.8 kN, since the directions of the member forces are interpreted by our sign convention:

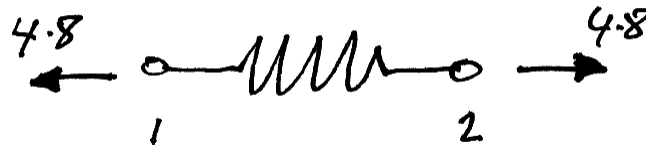

Also note that it is in equilibrium (as we might expect).

Member 2

$$\begin{Bmatrix} F_2 \\ F_3 \end{Bmatrix} = 10^3 \begin{bmatrix} 200 & -200 \\ -200 & 200 \end{bmatrix} \begin{Bmatrix} 0.048 \\ 0.322 \end{Bmatrix} \times 10^{-3} = \begin{Bmatrix} -54.8 \\ 54.8 \end{Bmatrix} \quad (4.2.22)$$

Member 2 thus has tension of 54.8 kN.


Member 3

$$\begin{Bmatrix} F_3 \\ F_4 \end{Bmatrix} = 10^3 \begin{bmatrix} 140 & -140 \\ -140 & 140 \end{bmatrix} \begin{Bmatrix} 0.322 \\ 0 \end{Bmatrix} \times 10^{-3} = \begin{Bmatrix} 45.08 \\ -45.08 \end{Bmatrix} \quad (4.2.23)$$

Thus Member 3 has a compression of 45.08 kN applied to it.

Problem

Find the displacements of the connections and the forces in each member for the following structure:

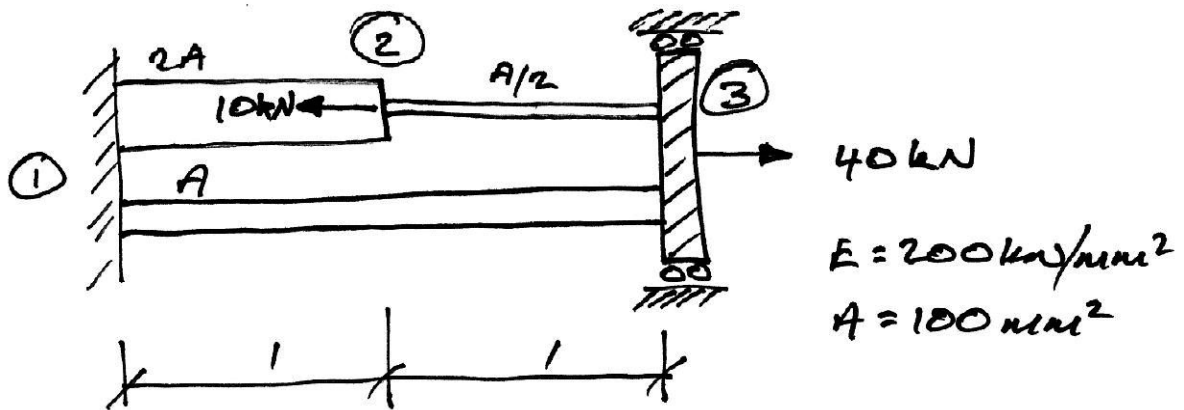

Ans. 0.22 mm, 2.11 mm

4.2.4 General Methodology

Steps

The general steps in Matrix Stiffness Method are:

1. Calculate the member stiffness matrices
2. Assemble the global stiffness matrix
3. Restrict the global stiffness matrix and force vector
4. Solve for the unknown displacements
5. Determine member forces from the known displacements and member stiffness matrices
6. Determine the reactions knowing member end forces.

Matlab Program - Implementation

These steps are implemented in the Matlab Program as follows:

```
function [D F R] = AnalyzeTruss(nData,eData)
% This function analyzes the truss defined by nData and eData:
% nData = [x, y, xLoad, yLoad, xRestraint, yRestraint]
% eData = [iNode, jNode, E, A];

kg = AssembleTrussK(nData, eData);      % Assemble global stiffness matrix
fv = AssembleForceVector(nData);        % And the force vector
[kgr fv] = Restrict(kg, fv, nData);     % Impose restraints
D = fv/kgr;                             % Solve for displacements
F = ElementForces(nData,eData,D);      % Get the element forces
R = D*kg;                                % Get the reactions
```

The output from the function `AnalyzeTruss` is:

- D : vector of nodal deflections;
- F : vector of element forces;
- R : vector of nodal forces (indicating the reactions and applied loads).

The input data required (`nData` and `eData`) will be explained later.

4.2.5 Member contribution to global stiffness matrix

Consider a member, ij , which links node i to node j . Its member stiffness matrix will be:

	Node i	Node j
Node i	$k_{11_{ij}}$	$k_{12_{ij}}$
Node j	$k_{21_{ij}}$	$k_{22_{ij}}$

Its entries must then contribute to the corresponding entries in the global stiffness matrix:

	...	Node i	...	Node j	...
...
Node i	...	$k_{11_{ij}}$...	$k_{12_{ij}}$...
...
Node j	...	$k_{21_{ij}}$...	$k_{22_{ij}}$...
...

If we now consider another member, jl , which links node j to node l . Its member stiffness matrix will be:

	Node j	Node l
Node j	$k_{11_{jl}}$	$k_{12_{jl}}$
Node l	$k_{21_{jl}}$	$k_{22_{jl}}$

And now the global stiffness matrix becomes:

	...	Node i	...	Node j	...	Node l	...
...
Node i	...	$k_{11_{ij}}$...	$k_{12_{ij}}$
...
Node j	...	$k_{21_{ij}}$...	$k_{22_{ij}} + k_{11_{jl}}$...	$k_{12_{jl}}$...
...
Node l	$k_{21_{lj}}$...	$k_{22_{jl}}$...
...

In the above, the identifiers k_{11} etc are sub-matrices of dimension:

$$ndof \times ndof$$

where $ndof$ refers to the number of degrees of freedom that each node has.

Matlab Program – Element Contribution

Considering trusses, we have 2 degrees of freedom (DOFs) per node, the x direction and the y direction. Thus, for a truss with nn number of nodes, there are $2nn$ DOFs in total. The x -DOF for any node i is thus located at $2i-1$ and the y -DOF at $2i$.

Consider a truss member connecting nodes i and j . To add the 4×4 truss element stiffness matrix into the truss global stiffness matrix, we see that each row adds into the following matrix columns:

$$2i-1 \quad 2i \quad 2j-1 \quad 2j$$

The rows in the global stiffness matrix corresponding to the rows of the element stiffness matrix are:

1. **Row 1:** Adds to row $2i-1$ of the global stiffness matrix;
2. **Row 2:** Adds to row $2i$;
3. **Row 3:** adds to row $2j-1$;
4. **Row 4:** adds to row $2j$.

Note of course that the column and row entries occur in the same order.

These rules are implemented for our Truss Analysis Program as follows:

```
function kg = AddElement(iEle,eData,ke,kg)
% This function adds member iEle stiffness matrix ke to the global
% stiffness matrix kg.

% What nodes does the element connect to?
iNode = eData(iEle,1);
jNode = eData(iEle,2);

% The DOFs in kg to enter the properties into
DOFs = [2*iNode-1 2*iNode 2*jNode-1 2*jNode];

% For each row of ke
for i = 1:4
    % Add the row to the correct entries in kg
    kg(DOFs(i),DOFs) = kg(DOFs(i),DOFs) + ke(i,:);
end
```

Matlab Program – Global Stiffness Matrix Assembly

The function that assembles the truss global stiffness matrix for the truss is as follows:

```
function kg = AssembleTrussK(nData, eData)
% This function assembles the global stiffness matrix for a truss from the
% joint and member data matrices

% How many nodes and elements are there?
[ne ~] = size(eData);
[nn ~] = size(nData);

% Set up a blank global stiffness matrix
kg = zeros(2*nn,2*nn);

% For each element
for i = 1:ne
    E = eData(i,3);           % Get its E and A
    A = eData(i,4);
    [L c s] = TrussElementGeom(i,nData,eData); % Geometric Properties
    ke = TrussElementK(E,A,L,c,s); % Stiffness matrix
    kg = AddElement(i,eData,ke,kg); % Enter it into kg
end
```

Note that we have not yet covered the calculation of the truss element stiffness matrix. However, the point here is to see that each element stiffness matrix is calculated and then added to the global stiffness matrix.

Matlab Program – Force Vector

Examine again the overall equation (4.2.10) to be solved:

$$\{\mathbf{F}\} = [\mathbf{K}]\{\mathbf{u}\}$$

We now have the global stiffness matrix, we aim to calculate the deflections thus we need to have a force vector representing the applied nodal loads. Again remember that each node has two DOFs (x - and y -loads). The code for the force vector is thus:

```
function f = AssembleForceVector(nData)
% This function assembles the force vector


% How many nodes are there?
[nn ~] = size(nData);

% Set up a blank force vector
f = zeros(1,2*nn);

% For each node
for i = 1:nn
    f(2*i - 1) = nData(i, 3);    % x-load into x-DOF
    f(2*i) = nData(i, 4);      % y-load into y-DOF
end
```

4.2.6 Interpretation of Stiffness Matrix



It is useful to understand what each term in a stiffness matrix represents. If we consider a simple example structure:

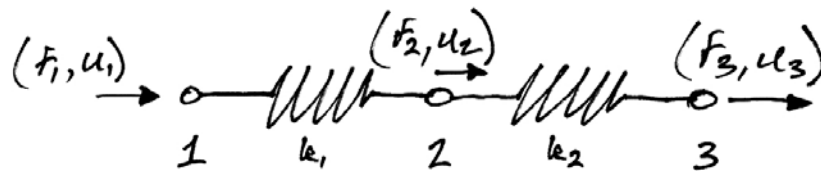

We saw that the global stiffness matrix for this is:

$$\mathbf{K} = \begin{bmatrix} K_{11} & K_{12} & K_{13} \\ K_{21} & K_{22} & K_{23} \\ K_{31} & K_{32} & K_{33} \end{bmatrix} = \begin{bmatrix} k_1 & -k_1 & 0 \\ -k_1 & k_1 + k_2 & -k_2 \\ 0 & -k_2 & k_2 \end{bmatrix}$$

If we imagine that all nodes are fixed against displacement except for node 2, then we have the following:

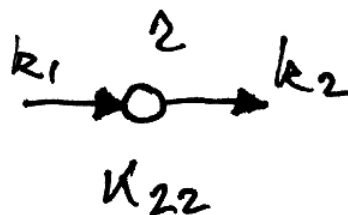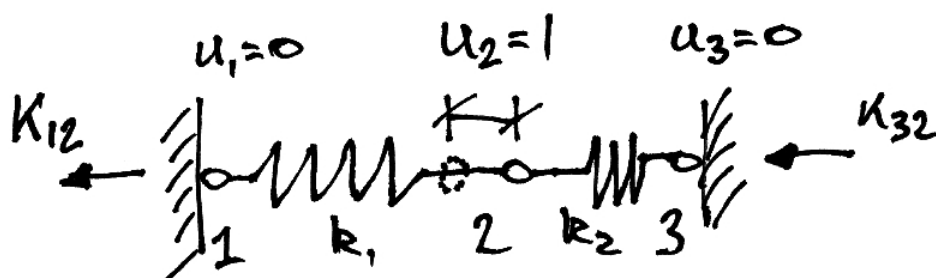

From our general equation:

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} K_{11} & K_{12} & K_{13} \\ K_{21} & K_{22} & K_{23} \\ K_{31} & K_{32} & K_{33} \end{bmatrix} \begin{Bmatrix} 0 \\ 1 \\ 0 \end{Bmatrix} = \begin{Bmatrix} K_{12} \\ K_{22} \\ K_{32} \end{Bmatrix} \quad (4.2.24)$$

Thus:

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{Bmatrix} K_{12} \\ K_{22} \\ K_{32} \end{Bmatrix} = \begin{Bmatrix} -k_1 \\ k_1 + k_2 \\ -k_2 \end{Bmatrix} \quad (4.2.25)$$

These forces are illustrated in the above diagram, along with a free-body diagram of node 2.

Thus we see that each column in a stiffness matrix represents the forces required to maintain equilibrium when the column's DOF has been given a unit displacement.

This provides a very useful way to derive member stiffness matrices.

4.2.7 Restricting a Matrix – Imposing Restraints

In Example 1 we solved the structure by applying the known supports into the global stiffness matrix. We did this because otherwise the system is unsolvable; technically the determinant of the stiffness matrix is zero. This mathematically represents the fact that until we apply boundary conditions, the structure is floating in space.

To impose known displacements (i.e. supports) on the structure equations we modify the global stiffness matrix and the force vector so that we get back the zero displacement result we know.

Considering our two-element example again, if node 1 is supported, $u_1 = 0$. Consider the system equation:

$$\begin{Bmatrix} F_1 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} K_{11} & K_{12} & K_{13} \\ K_{21} & K_{22} & K_{23} \\ K_{31} & K_{32} & K_{33} \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \end{Bmatrix} \quad (4.2.26)$$

Therefore to obtain $u_1 = 0$ from this, we change \mathbf{K} and \mathbf{F} as follows:

$$\begin{Bmatrix} 0 \\ F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & K_{22} & K_{23} \\ 0 & K_{32} & K_{33} \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \\ u_3 \end{Bmatrix} \quad (4.2.27)$$

Now when we solve for u_1 we will get the answer we want: $u_1 = 0$. In fact, since we now do not need this first equation, we could just consider the remaining equations:

$$\begin{Bmatrix} F_2 \\ F_3 \end{Bmatrix} = \begin{bmatrix} K_{22} & K_{23} \\ K_{32} & K_{33} \end{bmatrix} \begin{Bmatrix} u_2 \\ u_3 \end{Bmatrix} \quad (4.2.28)$$

And these are perfectly solvable.

Thus to summarize:

To impose a support condition at degree of freedom i :

1. Make the force vector element of DOF i zero;
2. Make the i column and row entries of the stiffness matrix all zero;
3. Make the diagonal entry (i,i) of the stiffness matrix 1.

Matlab Program – Imposing Restraints

To implement these rules for our Truss Analysis Program, we will first create of vector which tells us whether or not a DOF is restrained. This vector will have a zero if the DOF is not restrained, and a 1 if it is.

Once we have this vector of restraints, we can go through each DOF and modify the force vector and global stiffness matrix as described before. The implementation of this is as follows:

```
function [kg f] = Restrict(kg, f, nData)
% This function imposes the restraints on the global stiffness matrix and
% the force vector

% How may nodes are there?
[nn ~] = size(nData);

% Store each restrained DOF in a vector
RestrainedDOFs = zeros(2*nn,1);

% For each node, store if there is a restraint
for i = 1:nn
    % x-direction
    if nData(i,5) ~= 0 % if there is a non-zero entry (i.e. supported)
        RestrainedDOFs(2*i-1) = 1;
    end
    % y-direction
    if nData(i,6) ~= 0 % if there is a support
        RestrainedDOFs(2*i) = 1;
    end
end

% for each DOF
for i = 1:2*nn
    if RestrainedDOFs(i) == 1 % if it is restrained
        f(i) = 0; % Ensure force zero at this DOF
        kg(i,:) = 0; % make entire row zero
        kg(:,i) = 0; % make entire column zero
        kg(i,i) = 1; % put 1 on the diagonal
    end
end
end
```

Week-(11-12)

MD Ehasan Kabir


4.3 Plane Trusses

4.3.1 Introduction

Trusses are assemblies of members whose actions can be linked directly to that of the simple spring studied already:

$$k = \frac{EA}{L} \quad (4.3.1)$$

There is one main difference, however: truss members may be oriented at any angle in the xy coordinate system (Cartesian) plane:

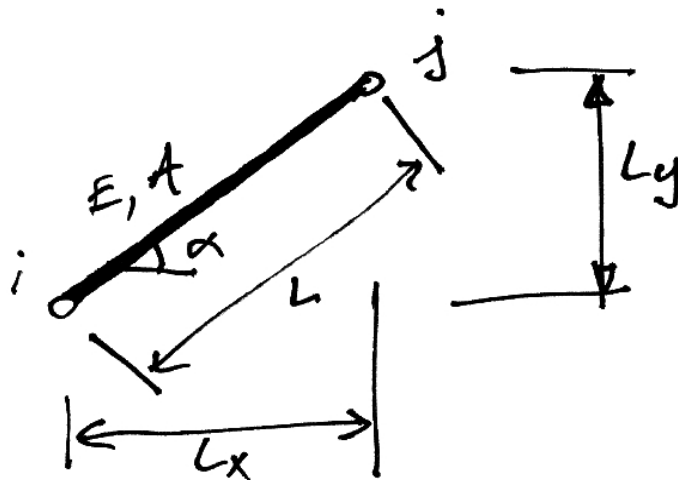

Thus we must account for the coordinate transformations from the local member axis system to the global axis system.

Matlab Program – Data Preparation

In the following sections we will put the final pieces of code together for our Truss Analysis Program. At this point we must identify what information is required as input to the program, and in what format it will be delivered.

The node data is stored in a matrix $nData$. Each node of the truss is represented by a row of data. In the row, we put the following information in consecutive order in columns:

1. **x-coordinate**;
2. **y-coordinate**;
3. **x-load**: 0 or the value of load;
4. **y-load**: 0 or the value of load;
5. **x-restraint**: 0 if unrestrained, any other number if restrained;
6. **y-restraint**: 0 if unrestrained, any other number if restrained.

The element data is stored in a matrix called $eData$. Each element has a row of data and for each element the information stored in the columns in order is:

1. **i-Node number**: the node number at the start of the element;
2. **j-Node number**: the other node the element connects to;
3. **E**: the Modulus of Elasticity of the element material;
4. **A**: the element area;


We will prepare input data matrices in the above formats for some of the examples that follow so that the concepts are clear. In doing so we keep the units consistent:

- Dimensions are in m;
- Forces in kN
- Elastic modulus is in kN/mm^2 ;
- Area is mm^2 .


Matlab Program – Data Entry

To enter the required data, one way is:


1. Create a new variable in the workspace (click on New Variable);

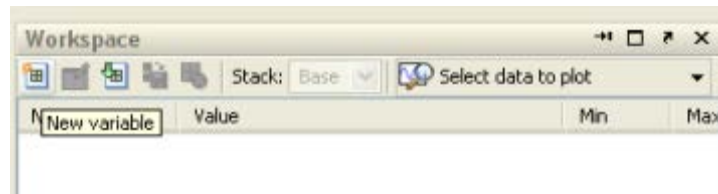

2. Name it eData for example;

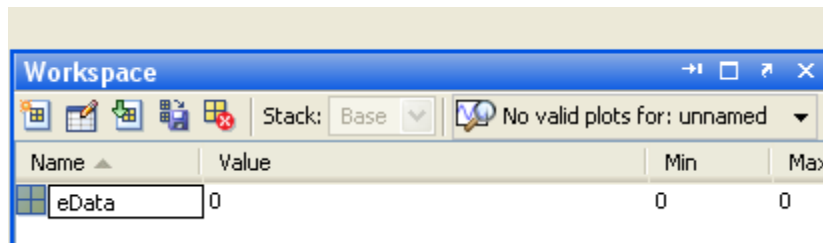

3. Double click on the new variable to open the Matlab Variable Editor;

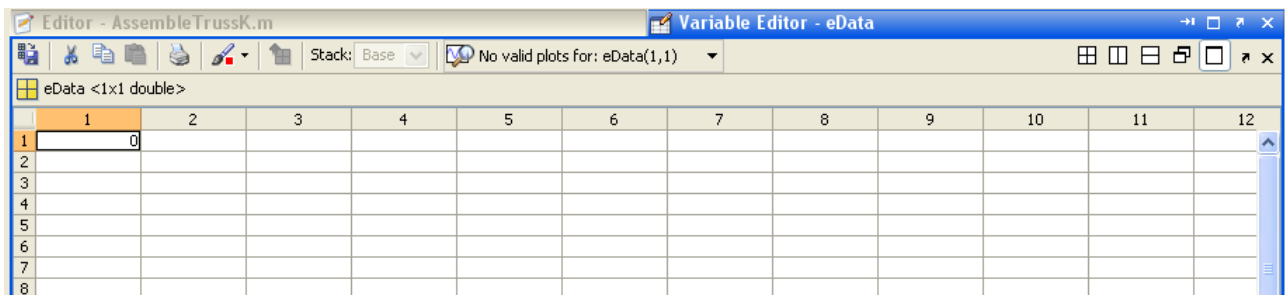

4. Enter the necessary input data (can paste in from MS Excel, or type in);
5. Repeat for the nodal data.

4.3.2 Truss Element Stiffness Matrix

For many element types it is very difficult to express the element stiffness matrix in global coordinates. However, this is not so for truss elements. Firstly we note that the local axis system element stiffness matrix is given by equation (4.2.3):

$$[\mathbf{k}] = \begin{bmatrix} k & -k \\ -k & k \end{bmatrix} = k \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix} \quad (4.3.2)$$

Next, introducing equation (4.3.1), we have:

$$[\mathbf{k}] = \frac{EA}{L} \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix} \quad (4.3.3)$$

However, this equation was written for a 1-dimensional element. Expanding this to a two-dimensional axis system is straightforward since there are no y-axis values:

$$[\mathbf{k}] = \frac{EA}{L} \begin{bmatrix} 1 & 0 & -1 & 0 \\ 0 & 0 & 0 & 0 \\ -1 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} \begin{matrix} \leftarrow x_i \\ \leftarrow y_i \\ \leftarrow x_j \\ \leftarrow y_j \end{matrix} \quad (4.3.4)$$

Next, using the general element stiffness transformation equation (See the Appendix):

$$[\mathbf{k}] = [\mathbf{T}]^T [\mathbf{k}] [\mathbf{T}] \quad (4.3.5)$$

And noting the transformation matrix for a plane truss element from the Appendix:

$$\mathbf{T} = \begin{bmatrix} \mathbf{T}_p & \mathbf{0} \\ \mathbf{0} & \mathbf{T}_p \end{bmatrix} = \begin{bmatrix} \cos \alpha & \sin \alpha & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & 0 \\ 0 & 0 & \cos \alpha & \sin \alpha \\ 0 & 0 & -\sin \alpha & \cos \alpha \end{bmatrix} \quad (4.3.6)$$

We have:

$$[\mathbf{k}] = \frac{EA}{L} \begin{bmatrix} \cos \alpha & \sin \alpha & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & 0 \\ 0 & 0 & \cos \alpha & \sin \alpha \\ 0 & 0 & -\sin \alpha & \cos \alpha \end{bmatrix}^{-1} \begin{bmatrix} 1 & 0 & -1 & 0 \\ 0 & 0 & 0 & 0 \\ -1 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix}. \quad (4.3.7)$$

$$\begin{bmatrix} \cos \alpha & \sin \alpha & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & 0 \\ 0 & 0 & \cos \alpha & \sin \alpha \\ 0 & 0 & -\sin \alpha & \cos \alpha \end{bmatrix}$$

Carrying out the multiplication gives:

$$\mathbf{k} = \frac{EA}{L} \left[\begin{array}{cc|cc} \cos^2 \alpha & \cos \alpha \sin \alpha & -\cos^2 \alpha & -\cos \alpha \sin \alpha \\ \cos \alpha \sin \alpha & \sin^2 \alpha & -\cos \alpha \sin \alpha & -\sin^2 \alpha \\ \hline -\cos^2 \alpha & -\cos \alpha \sin \alpha & \cos^2 \alpha & \cos \alpha \sin \alpha \\ -\cos \alpha \sin \alpha & -\sin^2 \alpha & \cos \alpha \sin \alpha & \sin^2 \alpha \end{array} \right] \quad (4.3.8)$$

If we examine the nodal sub-matrices and write $c \equiv \cos \alpha$, $s \equiv \sin \alpha$:

$$[\mathbf{k}] = \frac{EA}{L} \left[\begin{array}{cc|cc} c^2 & cs & -c^2 & -cs \\ cs & s^2 & -cs & -s^2 \\ \hline -c^2 & -cs & c^2 & cs \\ -cs & -s^2 & cs & s^2 \end{array} \right] \quad (4.3.9)$$

Labelling the **nodal sub-matrices** as:

$$[\mathbf{k}] = \begin{bmatrix} \mathbf{k11} & \mathbf{k12} \\ \mathbf{k21} & \mathbf{k22} \end{bmatrix} \quad (4.3.10)$$

Then we see that the sub-matrices are of dimension 2×2 (No. DOF \times No. DOF) and are:

$$\mathbf{k11} = \frac{EA}{L} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} \quad (4.3.11)$$

And also note:

$$\mathbf{k11} = \mathbf{k22} = -\mathbf{k12} = -\mathbf{k21} \quad (4.3.12)$$

Therefore, we need only evaluate a single nodal sub-matrix (**k11**) in order to find the total element stiffness matrix in global coordinates.

Matlab Program – Element Stiffness Matrix

Calculating the element stiffness matrix for our Truss Analysis Program is easy. The only complexity is extracting the relevant data from the input node and element data matrices. Rather than try determine the angle that the truss member is at (remember we only have the nodal coordinates), we can calculate $\cos\alpha$ and $\sin\alpha$ directly (e.g. adjacent/hypotenuse). Further, the element length can be found using Pythagoras, given the nodal coordinates. These element properties are found in the script below:

```
function [L c s] = TrussElementGeom(iEle,nData,eData);
% This function returns the element length

% What nodes does the element connect to?
iNode = eData(iEle,1);
jNode = eData(iEle,2);

% What are the coordinates of these nodes?
iNodeX = nData(iNode,1);
iNodeY = nData(iNode,2);
jNodeX = nData(jNode,1);
jNodeY = nData(jNode,2);

% Use Pythagoras to work out the member length
L = sqrt((jNodeX - iNodeX)^ 2 + (jNodeY - iNodeY)^ 2);

% Cos is adjacent over hyp, sin is opp over hyp
c = (jNodeX - iNodeX)/L;
s = (jNodeY - iNodeY)/L;
```

The E and A values for each element are directly found from the input data element matrix as follows:

```
E = eData(i,3); % Get its E and A
A = eData(i,4);
```

Thus, with all the relevant data assembled, we can calculate the truss element stiffness matrix. In the following Matlab function, note that we make use of the fact that each nodal sub-matrix can be determined from the nodal sub-matrix **k11**:

```
function k = TrussElementK(E,A,L,c,s)
% This function returns the stiffness matrix for a truss element

k11 = [ c^2 c*s;
        c*s s^2];

k = (E*A/L) * [ k11 -k11;
                -k11 k11];
```

4.3.3 Element Forces

The forces applied to a member's ends are got from the element equation:

$$\{\mathbf{F}^e\} = [\mathbf{k}]\{\mathbf{u}^e\} \quad (4.3.13)$$

Expanding this in terms of nodal equations we have:

$$\begin{Bmatrix} \mathbf{F}_i \\ \mathbf{F}_j \end{Bmatrix} = \begin{bmatrix} \mathbf{k11} & \mathbf{k12} \\ \mathbf{k21} & \mathbf{k22} \end{bmatrix} \begin{Bmatrix} \delta_i \\ \delta_j \end{Bmatrix} \quad (4.3.14)$$

Thus we know:

$$\mathbf{F}_j = \mathbf{k21} \cdot \delta_i + \mathbf{k22} \cdot \delta_j \quad (4.3.15)$$

From which we could determine the member's axial force. However, for truss members, we can determine a simple expression to use if we consider the change in length in terms of the member end displacements:

$$\Delta L_x = \delta_{jx} - \delta_{ix} \quad (4.3.16)$$

$$\Delta L_y = \delta_{jy} - \delta_{iy} \quad (4.3.17)$$

And using the coordinate transforms idea:

$$\Delta L = \Delta L_x \cos \alpha + \Delta L_y \sin \alpha \quad (4.3.18)$$

Also we know that the member force is related to the member elongation by:

$$F = \frac{EA}{L} \cdot \Delta L \quad (4.3.19)$$

Thus we have:

$$F = \frac{EA}{L} \cdot [\Delta L_x \cos \alpha + \Delta L_y \sin \alpha] \quad (4.3.20)$$

And introducing equations (4.3.16) and (4.3.17) gives:

$$F = \frac{EA}{L} \cdot [\cos \alpha \quad \sin \alpha] \begin{Bmatrix} \delta_{jx} - \delta_{ix} \\ \delta_{jy} - \delta_{iy} \end{Bmatrix} \quad (4.3.21)$$

A positive result from this means tension and negative compression.

Matlab Program – Element Force

Once the element nodal deflections are known, the element forces are found as described above. Most of the programming effort is dedicated to extracting the nodal deflections that are relevant for the particular member under consideration:

```
function F = TrussElementForce(nData, eData, d, iEle)
% This function returns the element force for iEle given the global
% displacement vector, d, and the node and element data matrices.

% What nodes does the element connect to?
iNode = eData(iEle,1);
jNode = eData(iEle,2);

% Get the element properties
E = eData(iEle,3);           % Get its E and A
A = eData(iEle,4);
[L c s] = TrussElementGeom(iEle,nData,eData); % Geometric Properties

dix = d(2*iNode-1);        % x-displacement at node i
diy = d(2*iNode);          % y-displacement at node i
djx = d(2*jNode-1);        % x-displacement at node j
dgy = d(2*jNode);          % y-displacement at node j

F = (E*A/L) * (c*(djx-dix) + s*(dgy-diy));
```

Note also that the way the program is written assumes that tension is positive and compression is negative. We also want to return all of the element forces, so we use the function just described to calculate all the truss elements' forces:

```
function F = ElementForces(nData,eData,d)
% This function returns a vector of the element forces

% How many elements are there?
[ne ~] = size(eData);


% Set up a blank element force vector
F = zeros(ne,1);

% For each element
for i = 1:ne
    % Get its force and enter into vector
    F(i) = TrussElementForce(nData, eData, d, i);
end
```

4.3.4 Example 2: Basic Truss

Problem

Analyse the following truss using the stiffness matrix method.

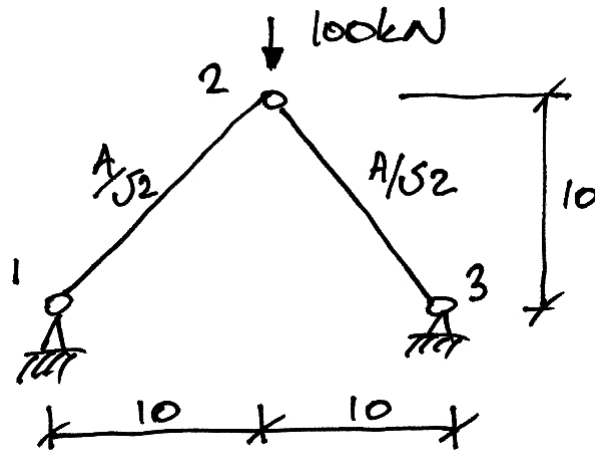

Note that:


- $E = 200 \text{ kN/mm}^2$;
- The reference area is $A = 100 \text{ mm}^2$.

Solution

STEP 1: Determine the member stiffness matrices:

Member 12

The angle this member makes to the global axis system and the relevant values are:

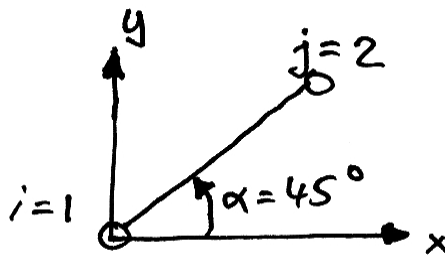

$$c \equiv \cos \alpha = \cos 45^\circ = \frac{1}{\sqrt{2}} \Rightarrow c^2 = \frac{1}{2}$$

$$s \equiv \sin \alpha = \sin 45^\circ = \frac{1}{\sqrt{2}} \Rightarrow s^2 = \frac{1}{2} \Rightarrow cs = \frac{1}{2}$$

Therefore:

$$\mathbf{k11}_{12} = \left(\frac{EA}{L} \right)_{12} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} = \frac{200 \cdot 100 / \sqrt{2}}{10\sqrt{2}} \begin{bmatrix} 0.5 & 0.5 \\ 0.5 & 0.5 \end{bmatrix}$$


Thus:

$$\mathbf{k11}_{12} = 10^3 \begin{bmatrix} 0.5 & 0.5 \\ 0.5 & 0.5 \end{bmatrix} \quad (4.3.22)$$

Notice that the matrix is symmetrical as it should be.

Member 23

The angle this member makes to the global axis system and the relevant values are:

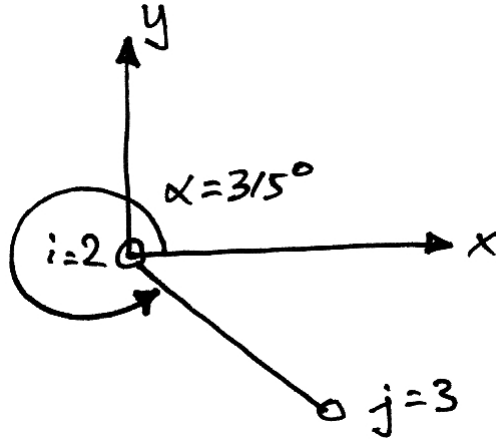

$$c \equiv \cos \alpha = \cos 315^\circ = \frac{1}{\sqrt{2}} \Rightarrow c^2 = \frac{1}{2}$$

$$s \equiv \sin \alpha = \sin 315^\circ = -\frac{1}{\sqrt{2}} \quad \Rightarrow s^2 = \frac{1}{2} \quad \Rightarrow cs = -\frac{1}{2}$$

Therefore:

$$\mathbf{k11}_{23} = \left(\frac{EA}{L} \right)_{23} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} = \frac{200 \cdot 100 / \sqrt{2}}{10\sqrt{2}} \begin{bmatrix} 0.5 & -0.5 \\ -0.5 & 0.5 \end{bmatrix}$$

Thus:

$$\mathbf{k11}_{23} = 10^3 \begin{bmatrix} 0.5 & -0.5 \\ -0.5 & 0.5 \end{bmatrix} \quad (4.3.23)$$

Again the matrix is symmetrical.

STEP 2: Assemble the global stiffness matrix

For 3 nodes, the unrestricted global stiffness matrix will look as follows:

$$\mathbf{K} = \begin{bmatrix} \mathbf{K}_{11} & \mathbf{K}_{12} & \mathbf{K}_{13} \\ \mathbf{K}_{21} & \mathbf{K}_{22} & \mathbf{K}_{23} \\ \mathbf{K}_{31} & \mathbf{K}_{32} & \mathbf{K}_{33} \end{bmatrix} \begin{array}{l} \leftarrow \text{Node 1} \\ \leftarrow \text{Node 2} \\ \leftarrow \text{Node 3} \end{array} \quad (4.3.24)$$

Note that each of the sub-matrices is a 2×2 matrix, e.g.:

$$\mathbf{K}_{11} = \begin{bmatrix} k_{11,xx} & k_{12,xy} \\ k_{21,yx} & k_{22,yy} \end{bmatrix} \begin{array}{l} \leftarrow \text{Node 1 } x \\ \leftarrow \text{Node 1 } y \end{array} \quad (4.3.25)$$

The member stiffness nodal sub-matrices contribute to the global stiffness nodal sub-matrices as follows:

$$\mathbf{K} = \begin{bmatrix} \mathbf{K}_{11} & \mathbf{K}_{12} & \mathbf{K}_{13} \\ \mathbf{K}_{21} & \mathbf{K}_{22} & \mathbf{K}_{23} \\ \mathbf{K}_{31} & \mathbf{K}_{32} & \mathbf{K}_{33} \end{bmatrix} = \begin{bmatrix} \mathbf{k11}_{12} & \mathbf{k12}_{12} & \mathbf{0} \\ \mathbf{k21}_{12} & \mathbf{k22}_{12} + \mathbf{k11}_{23} & \mathbf{k12}_{23} \\ \mathbf{0} & \mathbf{k21}_{23} & \mathbf{k22}_{23} \end{bmatrix} \quad (4.3.26)$$

Expanding this out and filling in the relevant entries from equations (4.3.22) and (4.3.23) whilst using equation (4.3.12) gives:

$$\mathbf{K} = 10^3 \begin{bmatrix} 0.5 & 0.5 & -0.5 & -0.5 & 0 & 0 \\ 0.5 & 0.5 & -0.5 & -0.5 & 0 & 0 \\ \hline -0.5 & -0.5 & 1 & 0 & -0.5 & 0.5 \\ -0.5 & -0.5 & 0 & 1 & 0.5 & -0.5 \\ \hline 0 & 0 & -0.5 & 0.5 & 0.5 & -0.5 \\ 0 & 0 & 0.5 & -0.5 & -0.5 & 0.5 \end{bmatrix} \quad (4.3.27)$$

STEP 3: Write the solution equation in full

$$\{\mathbf{F}\} = [\mathbf{K}]\{\boldsymbol{\delta}\} \quad (4.3.28)$$

Thus, keeping the nodal sub-matrices identifiable for clarity:

$$\begin{Bmatrix} R_{1x} \\ R_{1y} \\ \hline 0 \\ -100 \\ \hline R_{3x} \\ R_{3y} \end{Bmatrix} = 10^3 \begin{bmatrix} 0.5 & 0.5 & -0.5 & -0.5 & 0 & 0 \\ 0.5 & 0.5 & -0.5 & -0.5 & 0 & 0 \\ \hline -0.5 & -0.5 & 1 & 0 & -0.5 & 0.5 \\ -0.5 & -0.5 & 0 & 1 & 0.5 & -0.5 \\ \hline 0 & 0 & -0.5 & 0.5 & 0.5 & -0.5 \\ 0 & 0 & 0.5 & -0.5 & -0.5 & 0.5 \end{bmatrix} \begin{Bmatrix} \delta_{1x} \\ \delta_{1y} \\ \hline \delta_{2x} \\ \delta_{2y} \\ \hline \delta_{3x} \\ \delta_{3y} \end{Bmatrix} \quad (4.3.29)$$

In which we have noted:

- R_{1x} is the reaction at node 1 in the x -direction (and similarly for the others);
- The force at node 2 is 0 in the x -direction and -100 kN (downwards) in the y -direction.

STEP 4: Restrict the equation.

Now we impose the boundary conditions on the problem. We know:

- $\delta_{1x} = \delta_{1y} = 0$ since node 1 is pinned;
- $\delta_{3x} = \delta_{3y} = 0$ again, since node 3 is pinned.

Thus equation (4.3.29) becomes:

$$\begin{Bmatrix} 0 \\ 0 \\ -100 \\ 0 \\ 0 \end{Bmatrix} = 10^3 \begin{bmatrix} 1 & 0 & 0 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 \end{bmatrix} \begin{Bmatrix} \delta_{1x} \\ \delta_{1y} \\ \delta_{2x} \\ \delta_{2y} \\ \delta_{3x} \\ \delta_{3y} \end{Bmatrix} \quad (4.3.30)$$

Since both DOFs are restricted for nodes 1 and 3, we can thus write the remaining equations for node 2:

$$\begin{Bmatrix} 0 \\ -100 \end{Bmatrix} = 10^3 \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix} \begin{Bmatrix} \delta_{2x} \\ \delta_{2y} \end{Bmatrix} \quad (4.3.31)$$

STEP 5: Solve the system

The y-direction is thus the only active equation:

$$-100 = 10^3 \delta_{2y} \quad (4.3.32)$$

Thus:

$$\delta_{2y} = -0.1 \text{ m} = 100 \text{ mm} \downarrow \quad (4.3.33)$$

STEP 6: Determine the member forces

For truss member's we outlined a simple method encompassed in equation (4.3.21).

In applying this to Member 12 we note:

- $\delta_{1x} = \delta_{1y} = 0$ since it is a support;
- $\delta_{2x} = 0$ by solution;
- $\delta_{2y} = -0.1$ again by solution.

Thus:

$$F = \frac{EA}{L} \cdot [\cos \alpha \quad \sin \alpha] \begin{Bmatrix} \delta_{jx} - \delta_{ix} \\ \delta_{jy} - \delta_{iy} \end{Bmatrix}$$

$$F = 10^3 \left[\frac{1}{\sqrt{2}} \quad \frac{1}{\sqrt{2}} \right] \begin{Bmatrix} 0 - 0 \\ -0.1 - 0 \end{Bmatrix} = -\frac{100}{\sqrt{2}} = -50\sqrt{2} \text{ kN} \quad (4.3.34)$$

And so Member 12 is in compression, as may be expected. For Member 23 we similarly have:

$$F = 10^3 \left[\frac{1}{\sqrt{2}} \quad -\frac{1}{\sqrt{2}} \right] \begin{Bmatrix} 0 - 0 \\ 0 - (-0.1) \end{Bmatrix} = -\frac{100}{\sqrt{2}} = -50\sqrt{2} \text{ kN} \quad (4.3.35)$$

And again Member 23 is in compression. Further, since the structure is symmetrical and is symmetrically loaded, it makes sense that Member's 12 and 23 have the same force.

STEP 7: Determine the reactions

To determine the remaining unknown forces we can use the basic equation now that all displacements are known:

$$\begin{Bmatrix} R_{1x} \\ R_{1y} \\ 0 \\ -100 \\ R_{3x} \\ R_{3y} \end{Bmatrix} = 10^3 \begin{bmatrix} 0.5 & 0.5 & -0.5 & -0.5 & 0 & 0 \\ 0.5 & 0.5 & -0.5 & -0.5 & 0 & 0 \\ \hline -0.5 & -0.5 & 1 & 0 & -0.5 & 0.5 \\ -0.5 & -0.5 & 0 & 1 & 0.5 & -0.5 \\ \hline 0 & 0 & -0.5 & 0.5 & 0.5 & -0.5 \\ 0 & 0 & 0.5 & -0.5 & -0.5 & 0.5 \end{bmatrix} \begin{Bmatrix} 0 \\ 0 \\ 0 \\ -0.1 \\ 0 \\ 0 \end{Bmatrix} \quad (4.3.36)$$

Thus we have:

$$R_{1x} = [-0.5 \quad -0.5] \begin{Bmatrix} 0 \\ -0.1 \end{Bmatrix} = +50 \text{ kN} \quad (4.3.37)$$


$$R_{1y} = [-0.5 \quad -0.5] \begin{Bmatrix} 0 \\ -0.1 \end{Bmatrix} = +50 \text{ kN} \quad (4.3.38)$$

$$R_{3x} = [-0.5 \quad 0.5] \begin{Bmatrix} 0 \\ -0.1 \end{Bmatrix} = -50 \text{ kN} \quad (4.3.39)$$

$$R_{3y} = [0.5 \quad -0.5] \begin{Bmatrix} 0 \\ -0.1 \end{Bmatrix} = +50 \text{ kN} \quad (4.3.40)$$

Again note that the sign indicates the direction along the global coordinate system.

We can now plot the full solution:

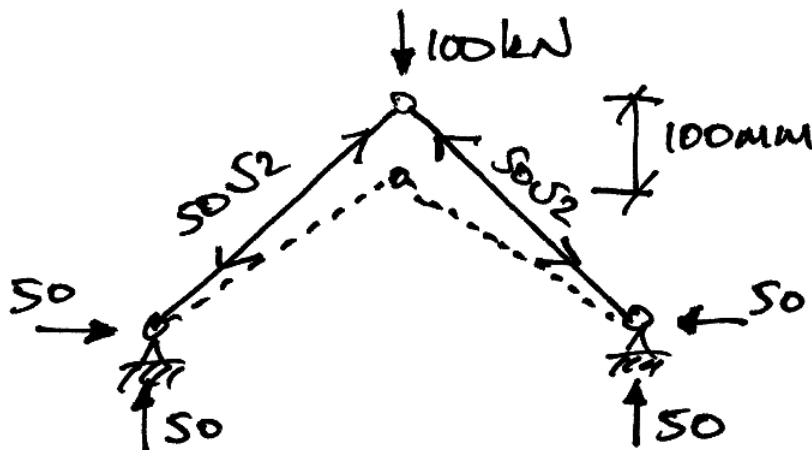

Matlab Program – First Use

All necessary functions have been explained. The main function is given on page 21. This also gives the single line of code that finds the reactions. The input data for the example truss just given is:

Node Data						Element Data			
x	y	F_x	F_y	R_x	R_y	Node i	Node j	E	A
0	0	0	0	1	1	1	2	200	70.71
10	10	0	-100	0	0	2	3	200	70.71
20	0	0	0	1	1				

And the results from the program are:

Node	DOF	D	R	Element	F
1	x	0	50	1	-70.71
	y	0	50	2	-70.71
2	x	0	0		
	y	-0.100	-100		
3	x	0	-50		
	y	0	50		


These results, of course, correspond to those found by hand.

The importance of the graphical display of the results should also be noted: there could have been clear mistakes made in the preparation of the input data that would not reveal themselves unless the physical interpretation of the results is appreciated by drawing the deflected shape, the member forces, and the directions of the reactions.

4.3.5 Example 3: Adding Members

Problem

Analyse the truss of Example 2 but with the following member 14 added:

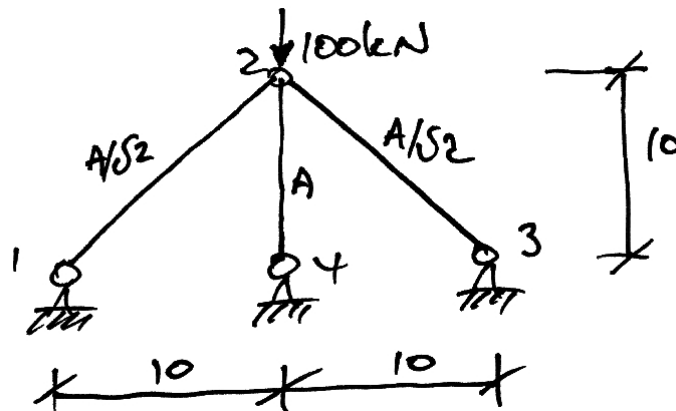

Solution

With the addition of node 4 we now know that the nodal sub-matrices global stiffness equation will be 4×4 with the fully expanded matrix being 16×16 . Rather than determine every entry in this, let's restrict it now and only determine the values we will actually use. Since nodes 1, 3 and 4 are pinned, all their DOFs are fully restricted out. The restricted equation thus becomes:

$$\{\mathbf{F}_2\} = [\mathbf{K22}]\{\delta_2\} \quad (4.3.41)$$

Next we must identify the contributions from each member:

- We already know the contributions of Members 12 and 23 from Example 2.
- The contribution of Member 24 is to nodes 2 and 4. Since node 4 is restricted, we only have the contribution $\mathbf{k11}_{24}$ to $\mathbf{K22}$.

Thus $\mathbf{K22}$ becomes:

$$\mathbf{K22} = \mathbf{k22}_{12} + \mathbf{k11}_{23} + \mathbf{k11}_{24} \quad (4.3.42)$$

Next determine $\mathbf{k11}_{24}$: this member makes an angle of 270° to the global axis system giving:

$$c \equiv \cos \alpha = \cos 270^\circ = 0 \quad \Rightarrow c^2 = 0$$

$$s \equiv \sin \alpha = \sin 270^\circ = -1 \quad \Rightarrow s^2 = 1 \quad \Rightarrow cs = 0$$

Therefore:

$$\mathbf{k11}_{24} = \left(\frac{EA}{L} \right)_{24} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} = \frac{200 \cdot 100}{10} \begin{bmatrix} 0 & 0 \\ 0 & 1 \end{bmatrix} = 2 \times 10^3 \begin{bmatrix} 0 & 0 \\ 0 & 1 \end{bmatrix}$$

Thus:

$$\mathbf{k11}_{24} = 10^3 \begin{bmatrix} 0 & 0 \\ 0 & 2 \end{bmatrix} \quad (4.3.43)$$

Hence the global restricted stiffness matrix becomes:

$$\mathbf{K22} = 10^3 \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix} + 10^3 \begin{bmatrix} 0 & 0 \\ 0 & 2 \end{bmatrix} = 10^3 \begin{bmatrix} 1 & 0 \\ 0 & 3 \end{bmatrix} \quad (4.3.44)$$

Writing the restricted equation, we have:

$$\begin{Bmatrix} 0 \\ -100 \end{Bmatrix} = 10^3 \begin{bmatrix} 1 & 0 \\ 0 & 3 \end{bmatrix} \begin{Bmatrix} \delta_{2,x} \\ \delta_{2,y} \end{Bmatrix} \quad (4.3.45)$$

From which we find the only equation

$$-100 = 10^3 (3\delta_{2y}) \quad (4.3.46)$$

Thus:

$$\delta_{2y} = -0.033 \text{ m} = 33.3 \text{ mm} \downarrow \quad (4.3.47)$$


The member forces are:

$$F_{12} = 10^3 \begin{bmatrix} \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \end{bmatrix} \begin{Bmatrix} 0-0 \\ -0.033-0 \end{Bmatrix} = -23.6 \text{ kN} \quad (4.3.48)$$

$$F_{23} = 10^3 \begin{bmatrix} \frac{1}{\sqrt{2}} & -\frac{1}{\sqrt{2}} \end{bmatrix} \begin{Bmatrix} 0-0 \\ 0-(-0.033) \end{Bmatrix} = -23.6 \text{ kN} \quad (4.3.49)$$

$$F_{24} = 10^3 \begin{bmatrix} 0 & 2 \end{bmatrix} \begin{Bmatrix} 0-0 \\ -0.033-0 \end{Bmatrix} = -66.6 \text{ kN} \quad (4.3.50)$$

Thus we have the following solution:

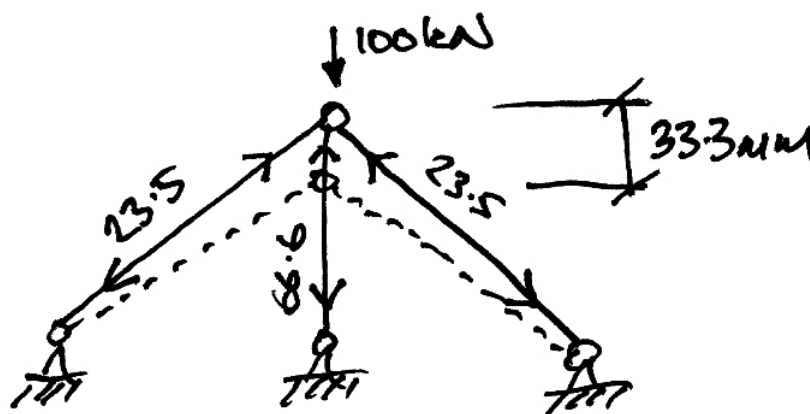

Matlab Program – Input/Output

The input data for this example is:

Node Data						Element Data			
x	y	F_x	F_y	R_x	R_y	Node i	Node j	E	A
0	0	0	0	1	1	1	2	200	70.71
10	10	0	-100	0	0	2	3	200	70.71
20	0	0	0	1	1	2	4	200	100
10	0	0	0	1	1				


The results are:

Node	DOF	D	R	Element	F
1	x	0	16.66	1	-23.57
	y	0	16.66		2
2	x	0	0	3	66.66
	y	-0.033	-100		
3	x	0	-16.66		
	y	0	16.66		
4	x	0	0		
	y	0	66.66		

4.3.6 Example 4: Using Symmetry


Problem

Analyse the truss of Example 3 taking advantage of any symmetry:

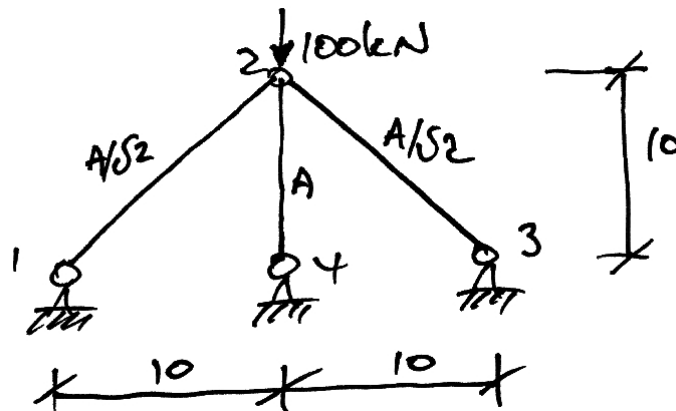

Solution

Looking at the structure it is clear that by splitting the structure down the middle along member 24 that we will have two equal halves:

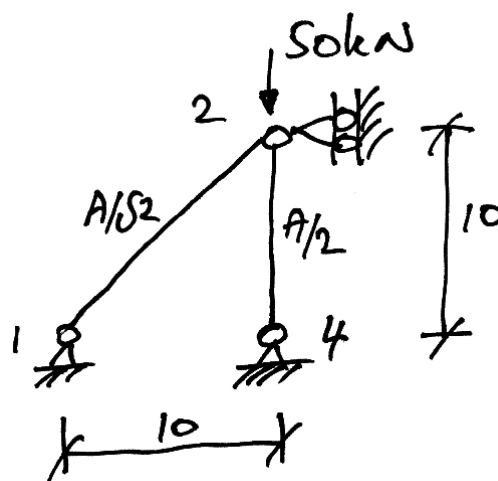

Notice that we have changed the following:

- The load is halved since it is now equally shared amongst two halves;
- Similarly the area of member 24 is halved.

We now analyse this new truss as usual. However, we can make use of some previous results. For Member 12:

$$\mathbf{k11}_{12} = 10^3 \begin{bmatrix} 0.5 & 0.5 \\ 0.5 & 0.5 \end{bmatrix} \quad (4.3.51)$$

And for Member 24

$$\mathbf{k11}_{24} = \frac{1}{2} \left\{ 10^3 \begin{bmatrix} 0 & 0 \\ 0 & 2 \end{bmatrix} \right\} = 10^3 \begin{bmatrix} 0 & 0 \\ 0 & 1 \end{bmatrix} \quad (4.3.52)$$

Since the area is halved from that of Example 3, its stiffnesses are halved.

In restricting we note that the only possible displacement is node 2 in the y -direction. However, we will keep using the node 2 sub-matrices until the last moment:

$$\mathbf{K22} = 10^3 \begin{bmatrix} 0.5 & 0 \\ 0 & 0.5 \end{bmatrix} + 10^3 \begin{bmatrix} 0 & 0 \\ 0 & 1 \end{bmatrix} = 10^3 \begin{bmatrix} 0.5 & 0 \\ 0 & 1.5 \end{bmatrix} \quad (4.3.53)$$

Thus:

$$\begin{Bmatrix} 0 \\ -50 \end{Bmatrix} = 10^3 \begin{bmatrix} 0.5 & 0 \\ 0 & 1.5 \end{bmatrix} \begin{Bmatrix} \delta_{2x} \\ \delta_{2y} \end{Bmatrix} \quad (4.3.54)$$

And now imposing the boundary condition $\delta_{2x} = 0$:

$$\{-50\} = 10^3 [1.5] \{\delta_{2y}\} \quad (4.3.55)$$

From which we solve for the displacement:

$$\begin{aligned} \{-50\} &= 10^3 [1.5] \{\delta_{2y}\} \\ \delta_{2y} &= -0.033 \text{ m} = 33.3 \text{ mm} \downarrow \end{aligned} \quad (4.3.56)$$

This (of course) is the same result we obtained in Example 3. For the member forces we have:

$$F_{12} = 10^3 \begin{bmatrix} 1 & 1 \\ \sqrt{2} & \sqrt{2} \end{bmatrix} \begin{Bmatrix} 0-0 \\ -0.033-0 \end{Bmatrix} = -23.6 \text{ kN} \quad (4.3.57)$$

$$F_{24} = 10^3 [0 \quad -1] \begin{Bmatrix} 0-0 \\ 0-(-0.033) \end{Bmatrix} = -33.3 \text{ kN} \quad (4.3.58)$$


Member 12 has the same force as per Example 3 as is expected.

It might appear that Member 24 has an erroneous force result. It must be remembered that this is the force in the half-member (brought about since we are using symmetry). Therefore the force in the full member is $2 \times 33.3 = 66.6 \text{ kN}$ as per Example 3.


4.3.7 Self-Strained Structures

Introduction


A self-strained structure is one where strains are induced by sources other than externally applied loads. The two main examples are temperature difference and lack of fit of a member. For example consider the effect if member 13 in the following structure was too long and had to be 'squeezed' into place:

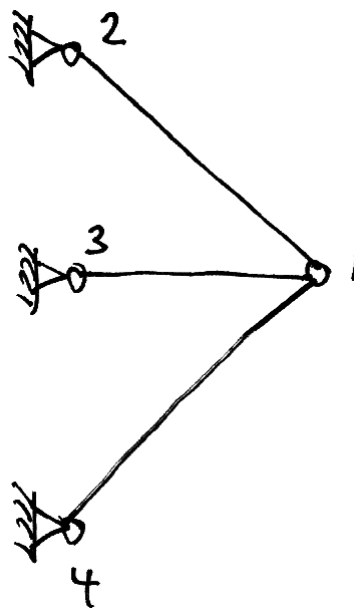

It should be intuitively obvious that to 'squeeze' the member into place a compressive force was required to shorten it to the required length:

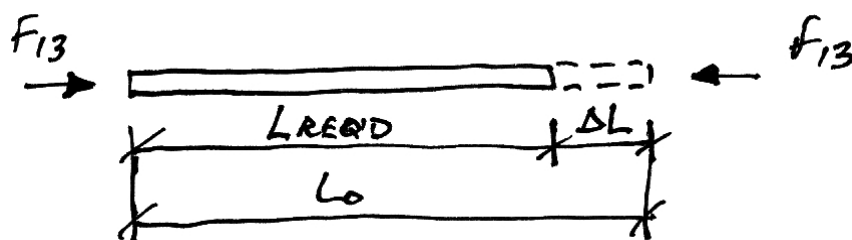

Once the member has been put in place, the source of the ‘squeezing’ is removed. Since the member wants to spring back to its original length, it pushes on its joints:

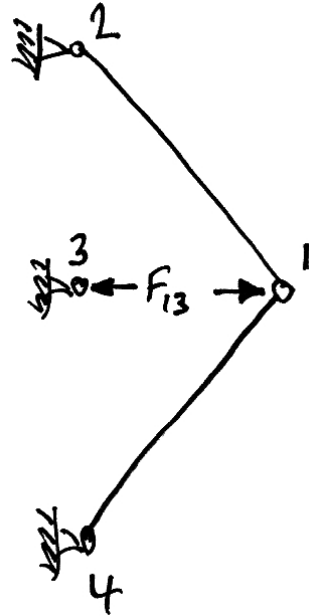

In this way members 12 and 14 will now go into tension whilst member 13 will remain in compression, but a smaller compression than when it was ‘squeezed’ into place since joint 1 will deflect to the right some amount.

In a similar way to lack of fit, examined above, if member 13 had been subject to a temperature increase it would try to elongate. However this elongation is restrained by the other members inducing them into tension and member 13 into some compression.

Lack of Fit

We consider a member with original length of L_o that is required to be of length $L_{\text{Req'd}}$. Thus a change in length of ΔL must be applied:

$$L_{\text{Req'd}} = L_o + \Delta L \quad (4.3.59)$$

Thus:

- ΔL is positive: the member is too short and must be lengthened to get into place;
- ΔL is negative, it is too long and must be shortened to get into place.

Thus we must apply a force to the member that will cause a change in length of ΔL .

From basic mechanics:

$$\Delta L = \frac{FL_o}{EA} \quad (4.3.60)$$

Thus the force required is:

$$F = EA \cdot \frac{\Delta L}{L_o} \quad (4.3.61)$$

From the above sign convention for ΔL :

- F is positive when the member must be put into tension to get it in place;
- F is negative when the member must be put into compression to get it in place.

Lastly, remember to apply the member force in *opposite direction* to the member's nodes.

Temperature Change

We consider a member that is subject to a differential (i.e. different to the rest of the structure) temperature change of ΔT degrees Celsius. Also we must know the coefficient of linear thermal expansion, α , for the material. This is the change in length, per unit length, per unit change in temperature:

$$\alpha \equiv \left(\frac{\Delta L}{L_o} \right) / ^\circ C \quad (4.3.62)$$

Thus the thermal strain induced in the member is:

$$\varepsilon_T = \alpha \Delta T \quad (4.3.63)$$

And so the change in length is:

$$\Delta L = \alpha L_o \Delta T \quad (4.3.64)$$

Also, since $\sigma = E\varepsilon$, we find the force in the member:

$$F_T = \sigma_T A = EA\varepsilon_T \quad (4.3.65)$$

So finally, from equation (4.3.63), the force required to suppress the temperature change is:


$F_T = EA\alpha \Delta T \quad (4.3.66)$
--

Once again, apply this force in the opposite direction to the member's nodes.

4.3.8 Example 5 – Truss with Differential Temperature

Problem

Member 13 of the following truss is subject to a temperature change of $+100\text{ }^{\circ}\text{C}$. Calculate the deflections of node 1 and the final forces in the members.

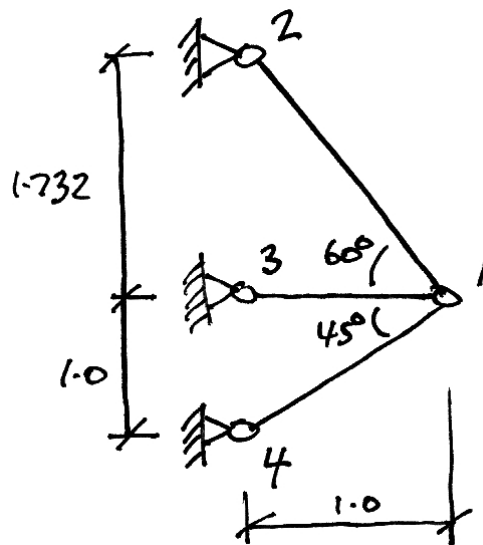


Take: $\alpha = 2 \times 10^{-5}\text{ }^{\circ}\text{C}^{-1}$; $EA = 2 \times 10^4\text{ kN}$; the area of member 12 as $2A$; the area of member 13 as A ; and, the area of member 14 as $A\sqrt{2}$.

Solution

First we must recognize that there are two stages to the actions in the members:

- Stage I: all displacements are suppressed and only the temperature force in member 13 is allowed for;
- Stage II: displacements are allowed and the actions of the temperature force in member 13 upon the rest of the structure are analyzed for.

The final result is then the summation of these two stages:

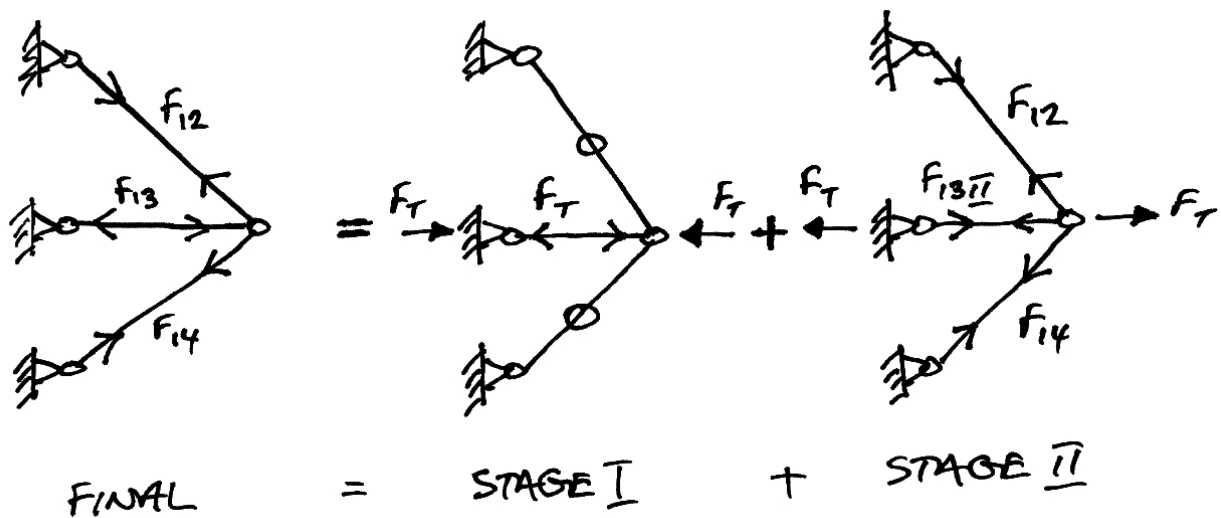

The force induced in member 13 when displacements are suppressed is:

$$\begin{aligned}
 F_T &= EA\alpha\Delta T \\
 &= (2 \times 10^4)(2 \times 10^{-5})(+100) \\
 &= 40 \text{ kN}
 \end{aligned}
 \tag{4.3.67}$$

Stage I

All displacements are suppressed. Thus:

$$\delta_{1x} = 0; \quad \delta_{1y} = 0 \quad (4.3.68)$$

$$F_{12}^I = 0; \quad F_{13}^I = F_T; \quad F_{14}^I = 0 \quad (4.3.69)$$

Stage II


Displacements are allowed occur and thus we must analyse the truss. Using the matrix stiffness method, and recognizing that only joint 1 can displace, we have:

$$\{\mathbf{F}_1\} = [\mathbf{K11}]\{\boldsymbol{\delta}_1\} \quad (4.3.70)$$

Also, since we cleverly chose the node numbers, the member contributions are just:

$$\mathbf{K11} = \mathbf{k11}_{12} + \mathbf{k11}_{13} + \mathbf{k11}_{14} \quad (4.3.71)$$

- Member 12:

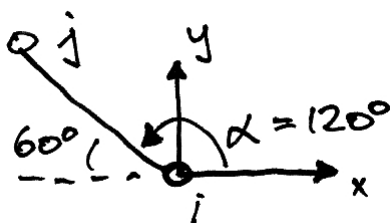


$$c \equiv \cos \alpha = \cos 120^\circ = -\frac{1}{2} \Rightarrow c^2 = \frac{1}{4}$$

$$s \equiv \sin \alpha = \sin 120^\circ = \frac{\sqrt{3}}{2} \Rightarrow s^2 = \frac{3}{4} \Rightarrow cs = -\frac{\sqrt{3}}{4}$$

$$\mathbf{k11}_{12} = \left(\frac{EA}{L} \right)_{23} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} = \frac{2 \times 10^4 (2)}{2.0} \begin{bmatrix} \frac{1}{4} & -\frac{\sqrt{3}}{4} \\ -\frac{\sqrt{3}}{4} & \frac{3}{4} \end{bmatrix}$$

- Member 13:

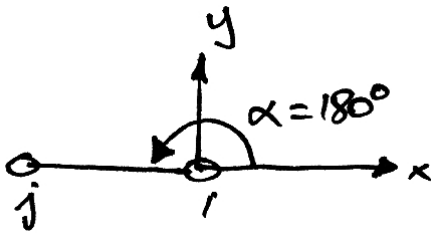


$$c \equiv \cos \alpha = \cos 180^\circ = -1 \Rightarrow c^2 = 1$$

$$s \equiv \sin \alpha = \sin 180^\circ = 0 \Rightarrow s^2 = 0 \Rightarrow cs = 0$$

$$\mathbf{k11}_{13} = \left(\frac{EA}{L} \right)_{23} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} = \frac{2 \times 10^4}{1.0} \begin{bmatrix} 1 & 0 \\ 0 & 0 \end{bmatrix}$$

- Member 14:

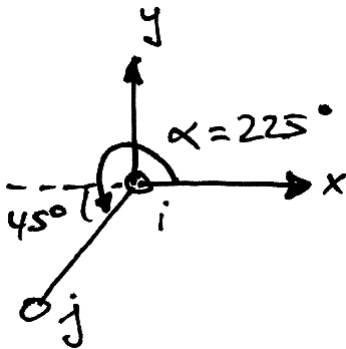

$$c \equiv \cos \alpha = \cos 225^\circ = -\frac{1}{\sqrt{2}} \Rightarrow c^2 = \frac{1}{2}$$

$$s \equiv \sin \alpha = \sin 225^\circ = -\frac{1}{\sqrt{2}} \Rightarrow s^2 = \frac{1}{2} \Rightarrow cs = \frac{1}{2}$$

$$\mathbf{k11}_{14} = \left(\frac{EA}{L} \right)_{23} \begin{bmatrix} c^2 & cs \\ cs & s^2 \end{bmatrix} = \frac{2 \times 10^4 (\sqrt{2})}{1.0 \sqrt{2}} \begin{bmatrix} 0.5 & 0.5 \\ 0.5 & 0.5 \end{bmatrix}$$

Thus from equation (4.3.71) we have:

$$\mathbf{K11} = \frac{2 \times 10^4}{4} \begin{bmatrix} 7 & 2 - \sqrt{3} \\ 2 - \sqrt{3} & 5 \end{bmatrix} \quad (4.3.72)$$

From the diagram for Stage II, we can see that the force applied to joint 1 is acting to the right and so is positive. Thus:

$$\begin{Bmatrix} 40 \\ 0 \end{Bmatrix} = \frac{2 \times 10^4}{4} \begin{bmatrix} 7 & 2 - \sqrt{3} \\ 2 - \sqrt{3} & 5 \end{bmatrix} \begin{Bmatrix} \delta_{1x} \\ \delta_{1y} \end{Bmatrix} \quad (4.3.73)$$

Solve this to get:

$$\begin{aligned} \begin{Bmatrix} \delta_{1x} \\ \delta_{1y} \end{Bmatrix} &= \frac{4}{2 \times 10^4} \frac{1}{\begin{bmatrix} 7 \cdot 5 - (2 - \sqrt{3})^2 \end{bmatrix}} \begin{bmatrix} 5 & \sqrt{3} - 2 \\ \sqrt{3} - 2 & 7 \end{bmatrix} \begin{Bmatrix} 40 \\ 0 \end{Bmatrix} \\ &= 10^{-3} \begin{Bmatrix} 1.15 \\ -0.06 \end{Bmatrix} \text{ m} \end{aligned} \quad (4.3.74)$$

Using equation (4.3.21) we can now find the member forces for Stage II:

$$F_{12}'' = \frac{2 \times 10^4 (2)}{2.0} \cdot \begin{bmatrix} -\frac{1}{2} & \frac{\sqrt{3}}{2} \end{bmatrix} \begin{Bmatrix} 0 - (1.15) \\ 0 - (-0.06) \end{Bmatrix} 10^{-3} = +12.54 \text{ kN} \quad (4.3.75)$$

$$F_{13}'' = \frac{2 \times 10^4}{1.0} \cdot \begin{bmatrix} -1 & 0 \end{bmatrix} \begin{Bmatrix} 0 - (1.15) \\ 0 - (-0.06) \end{Bmatrix} 10^{-3} = +23.0 \text{ kN} \quad (4.3.76)$$

$$F_{14}'' = \frac{2 \times 10^4 (\sqrt{2})}{1.0 \sqrt{2}} \cdot \begin{bmatrix} -\frac{1}{\sqrt{2}} & -\frac{1}{\sqrt{2}} \end{bmatrix} \begin{Bmatrix} 0 - (1.15) \\ 0 - (-0.06) \end{Bmatrix} 10^{-3} = +15.4 \text{ kN} \quad (4.3.77)$$

Final


The final member forces are the superposition of Stage I and Stage II forces:

$$F_{12} = F_{12}^I + F_{12}^{II} = 0 + 12.54 = 12.54 \text{ kN} \quad (4.3.78)$$

$$F_{13} = F_{13}^I + F_{13}^{II} = -40 + 23.0 = -17.0 \text{ kN} \quad (4.3.79)$$

$$F_{14} = F_{14}^I + F_{14}^{II} = 0 + 15.4 = 15.4 \text{ kN} \quad (4.3.80)$$

Thus the final result is:

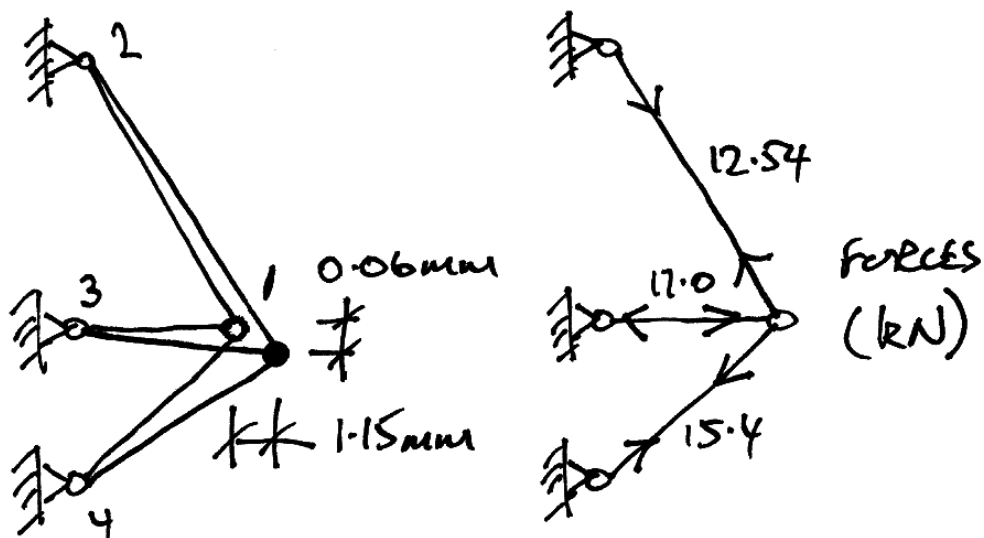


4.3.9 Example 6 – Truss with Loads & Self Strains

Problem

Analyse the same truss as Example 5, allowing for the following additional load sources:

- 80 kN acting horizontally to the left at node 1;
- 100 kN acting vertically downwards at node 1;
- Member 14 is $5\sqrt{2}$ mm too short upon arrival on site.

All as shown below:

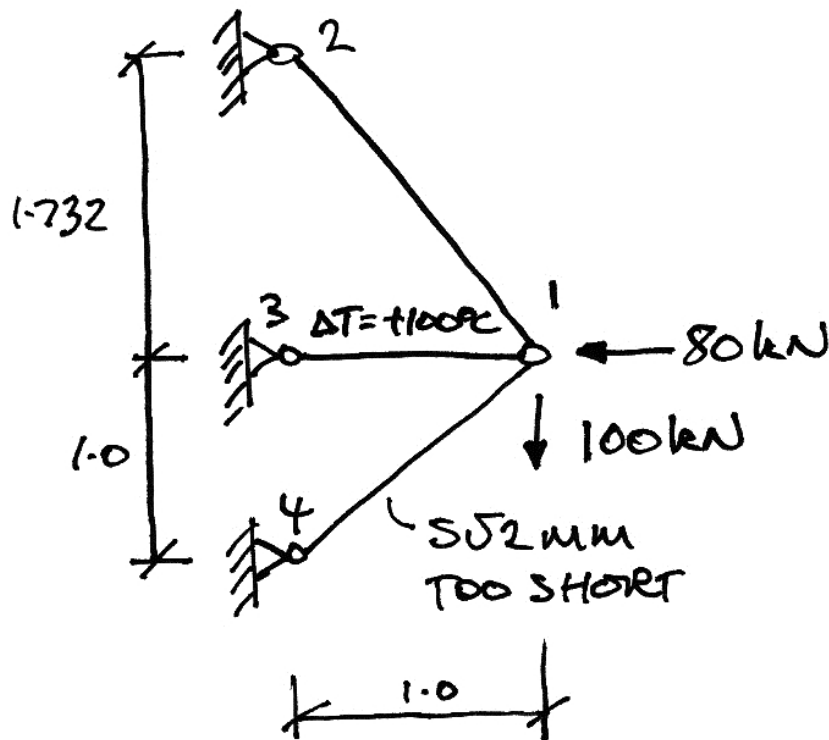


Solution

Again we will separate the actions into Stage I and Stage II scenarios.

Stage I

Displacements are suppressed and as a result the only sources of forces are self-straining forces:

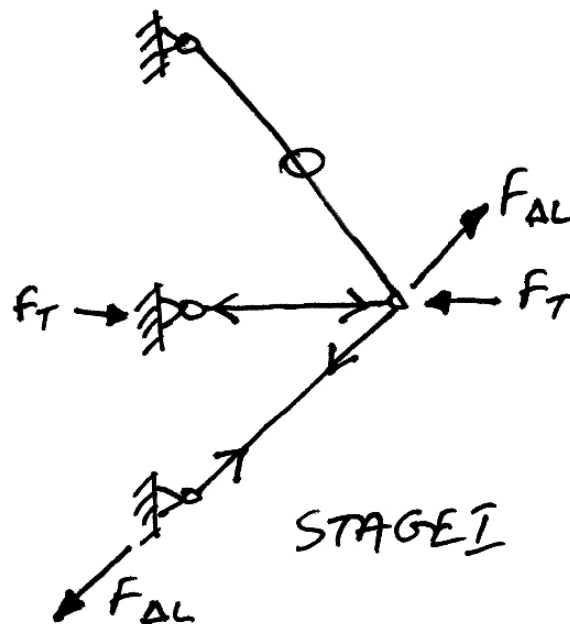

The forces and displacements for Stage I are thus:

$$F_T = 40 \text{ kN as before,}$$


$$F_{\Delta L} = EA \frac{\Delta L}{L} = \sqrt{2} (2 \times 10^4) \frac{5\sqrt{2} \times 10^{-3}}{\sqrt{2}} = 100\sqrt{2} \text{ kN} \quad (4.3.81)$$

$$\delta_{1x} = 0; \quad \delta_{1y} = 0 \quad (4.3.82)$$


$$F_{12}^I = 0; \quad F_{13}^I = -40; \quad F_{14}^I = 100\sqrt{2} \quad (4.3.83)$$

Stage II

In this stage displacements are allowed and the forces in the self-strained members are now applied to the joints, in addition to any external loads. Thus we have:

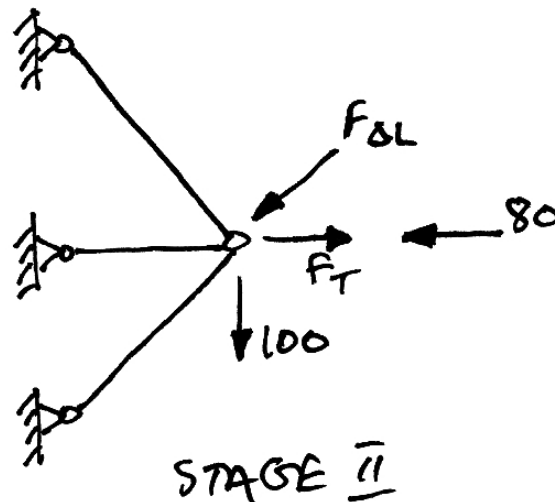

Clearly we need to resolve the forces at node 1 into net vertical and horizontal forces:

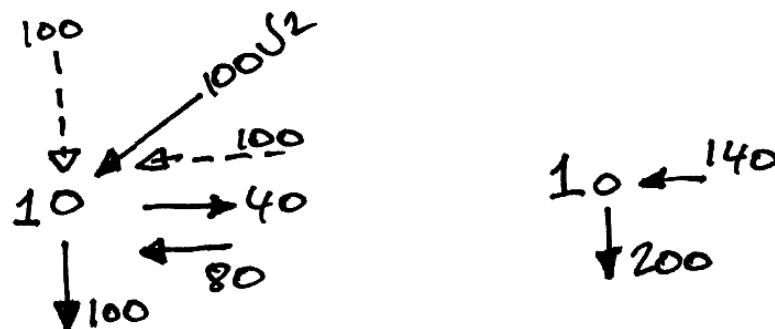

Since the members have not changed from Example 5, we can use the same stiffness matrix. Therefore we have :

$$\begin{Bmatrix} -140 \\ -200 \end{Bmatrix} = \frac{2 \times 10^4}{4} \begin{bmatrix} 7 & 2 - \sqrt{3} \\ 2 - \sqrt{3} & 5 \end{bmatrix} \begin{Bmatrix} \delta_{1x} \\ \delta_{1y} \end{Bmatrix} \quad (4.3.84)$$

Solve this:

$$\begin{aligned} \begin{Bmatrix} \delta_{1x} \\ \delta_{1y} \end{Bmatrix} &= \frac{4}{2 \times 10^4} \frac{1}{\left[7.5 - (2 - \sqrt{3})^2\right]} \begin{bmatrix} 5 & \sqrt{3} - 2 \\ \sqrt{3} - 2 & 7 \end{bmatrix} \begin{Bmatrix} -140 \\ -200 \end{Bmatrix} \\ &= 10^{-3} \begin{Bmatrix} -3.7 \\ -7.8 \end{Bmatrix} \text{ m} \end{aligned} \quad (4.3.85)$$

Using equation (4.3.21) we can find the member forces for Stage II:

$$F_{12}'' = \frac{2 \times 10^4 (2)}{2.0} \cdot \begin{bmatrix} -\frac{1}{2} & \frac{\sqrt{3}}{2} \\ \frac{\sqrt{3}}{2} & \frac{1}{2} \end{bmatrix} \begin{Bmatrix} 0 - (-3.7) \\ 0 - (-7.8) \end{Bmatrix} 10^{-3} = +98.1 \text{ kN} \quad (4.3.86)$$

$$F_{13}'' = \frac{2 \times 10^4}{1.0} \cdot \begin{bmatrix} -1 & 0 \\ 0 & -1 \end{bmatrix} \begin{Bmatrix} 0 - (-3.7) \\ 0 - (-7.8) \end{Bmatrix} 10^{-3} = -74.0 \text{ kN} \quad (4.3.87)$$

$$F_{14}'' = \frac{2 \times 10^4 (\sqrt{2})}{1.0 \sqrt{2}} \cdot \begin{bmatrix} -\frac{1}{\sqrt{2}} & -\frac{1}{\sqrt{2}} \\ \frac{1}{\sqrt{2}} & -\frac{1}{\sqrt{2}} \end{bmatrix} \begin{Bmatrix} 0 - (-3.7) \\ 0 - (-7.8) \end{Bmatrix} 10^{-3} = -162.6 \text{ kN} \quad (4.3.88)$$

Final


As before, the final member forces are the Stage I and Stage II forces:

$$F_{12} = F_{12}^I + F_{12}^{II} = 0 + 98.1 = 98.1 \text{ kN} \quad (4.3.89)$$

$$F_{13} = F_{13}^I + F_{13}^{II} = -40 - 74.0 = -114.0 \text{ kN} \quad (4.3.90)$$

$$F_{14} = F_{14}^I + F_{14}^{II} = 100\sqrt{2} - 162.6 = -21.6 \text{ kN} \quad (4.3.91)$$

Thus the final result is:

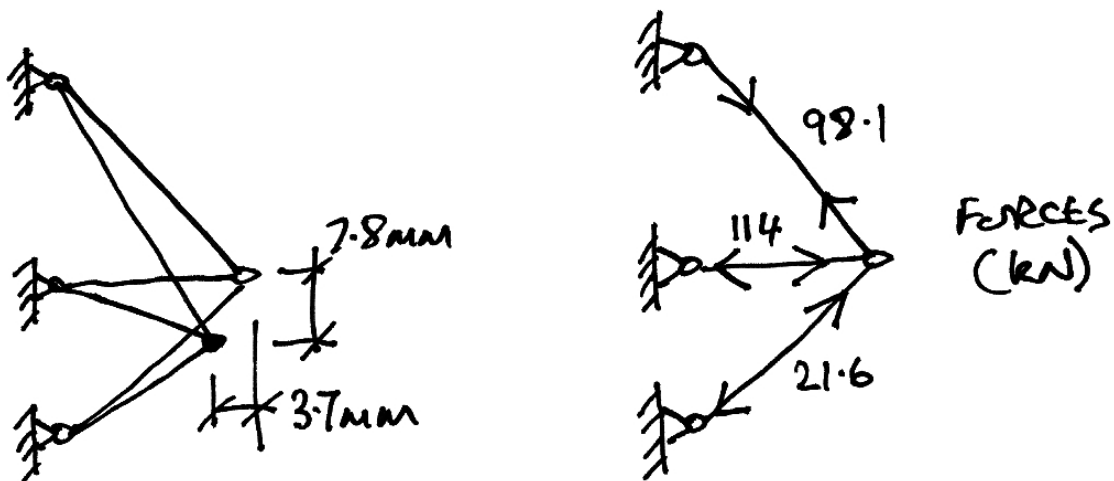


4.3.10 Problems

Problem 1

Determine the displacements of joint 1 and the member forces for the following truss.


Take $EA = 2 \times 10^4$ kN.

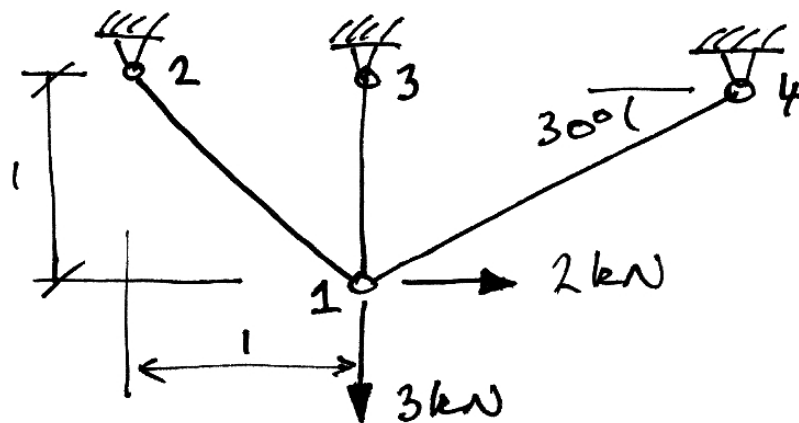

Problem 2

Determine the displacements of joint 1 and the member forces for the following truss.


Take $EA = 2 \times 10^4$ kN, the area of both members is $A\sqrt{2}$.

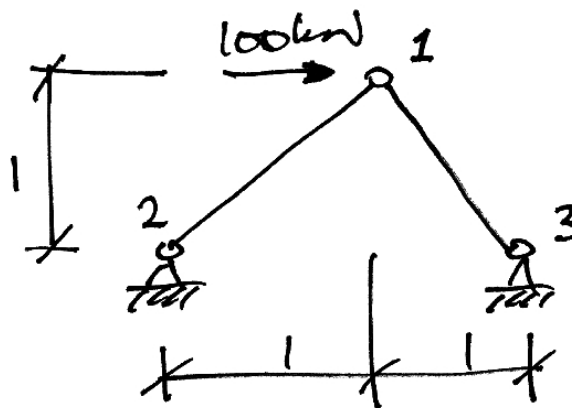

Ans. $\delta_{1x} = +5$ mm, $\delta_{1y} = 0$

Problem 3


Using any pertinent results from Problem 2, determine the area of member 14 such that the horizontal displacement of node 1 is half what it was prior to the installation of member 14. Determine also the force in member 14. Take $EA = 2 \times 10^4$ kN,

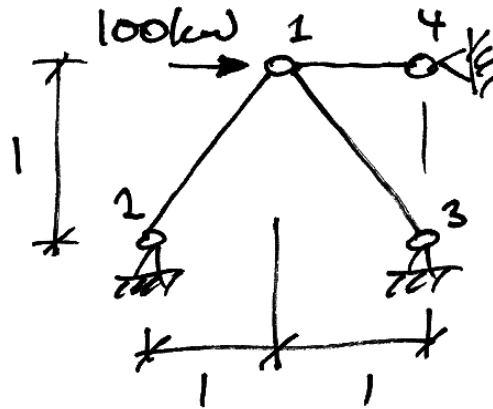

Ans. $A_{14} = A$, $F_{14} = -50$ kN


Problem 4

Determine the displacements of the joints and the member forces for the following truss. Take $EA = 2 \times 10^4$ kN, the area of all members is $A\sqrt{2}$, except for member 24 which has an area of A .

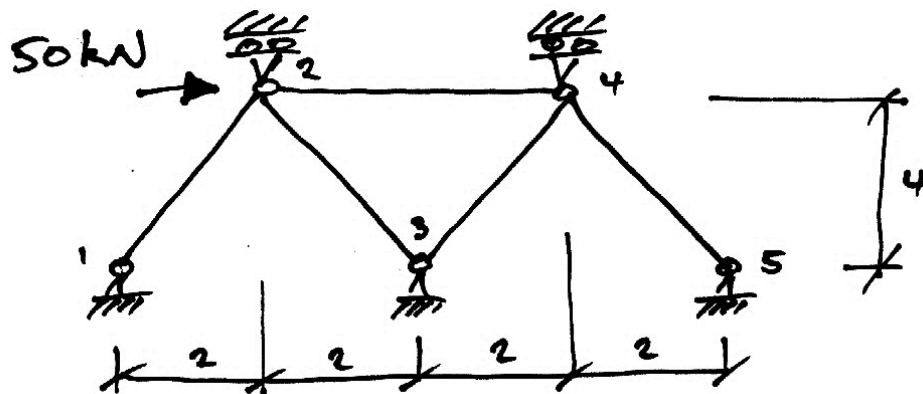


Problem 5

Determine the displacements of the joints and the member forces for the following truss. Take $EA = 2 \times 10^4$ kN, the area of the members is as shown.

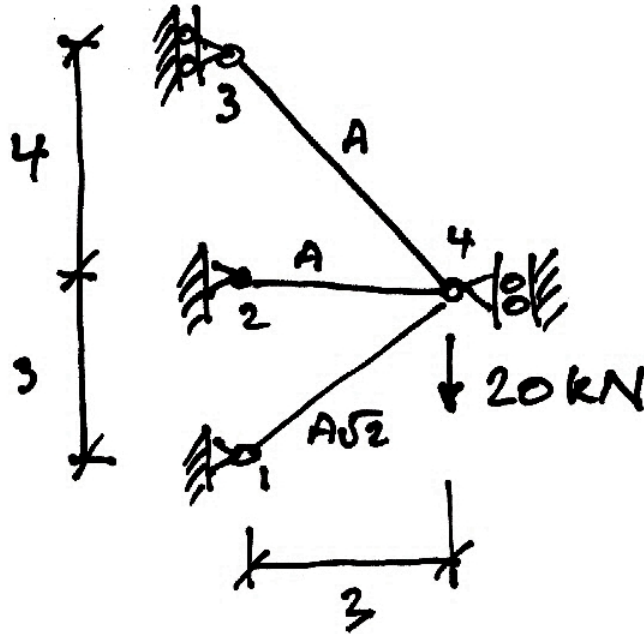

Problem 6

Determine the displacements of the joints and the member forces for the following truss. Take $EA = 2 \times 10^4$ kN, the area of all members is A , except for member 14 which has an area of $A\sqrt{2}$.

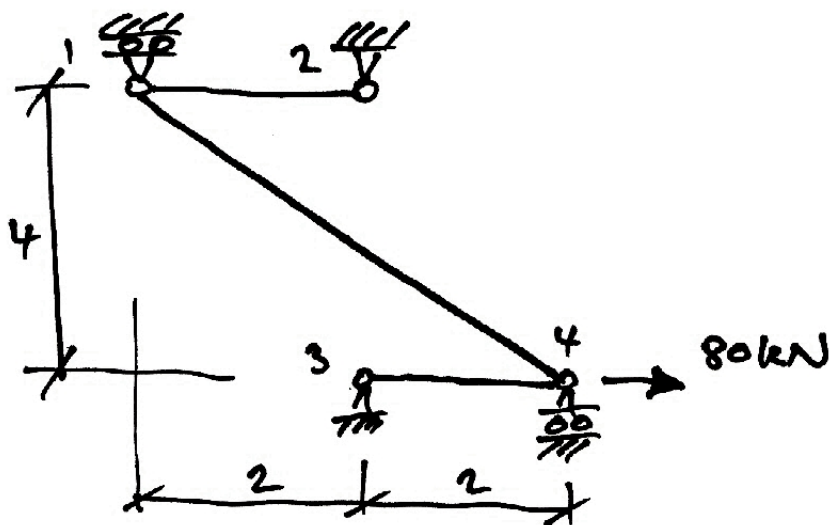


Week-(13-15)

MD Ehasan Kabir

4.4 Beams

4.4.1 Beam Element Stiffness Matrix

To derive the beam element stiffness matrix, we recall some results obtained previously, summarized here:

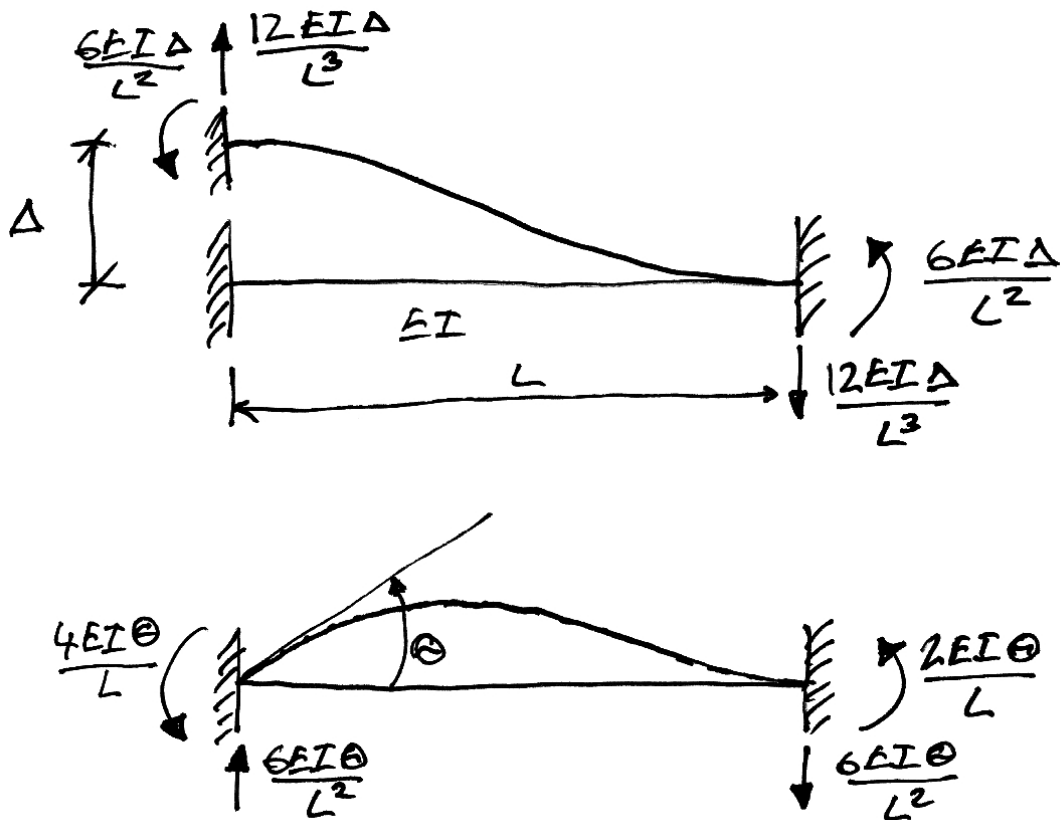

Next we must adopt strict local element sign convention and node identification:



Anti-clockwise moments and rotations (i.e. from the x -axis to the y -axis) are positive and upwards forces are positive.

Thus for a vertical displacement of Δ at node i , now labelled δ_{iy} , we have the following ‘force’ vector:

$$\begin{Bmatrix} F_{iy} \\ M_i \\ F_{jy} \\ M_j \end{Bmatrix} = \begin{Bmatrix} \frac{12EI}{L^3} \\ \frac{6EI}{L^2} \\ -\frac{12EI}{L^3} \\ \frac{6EI}{L^2} \end{Bmatrix} \delta_{iy} \quad (4.4.1)$$

Similarly, applying the same deflection, but at node j , δ_{jy} , gives:

$$\begin{Bmatrix} F_{iy} \\ M_i \\ F_{jy} \\ M_j \end{Bmatrix} = \begin{Bmatrix} -\frac{12EI}{L^3} \\ \frac{6EI}{L^2} \\ \frac{12EI}{L^3} \\ -\frac{6EI}{L^2} \end{Bmatrix} \delta_{jy} \quad (4.4.2)$$

Next, applying a rotation to node i , θ_i , gives:

$$\begin{Bmatrix} F_{iy} \\ M_i \\ F_{jy} \\ M_j \end{Bmatrix} = \begin{Bmatrix} \frac{6EI}{L^2} \\ \frac{4EI}{L} \\ -\frac{6EI}{L^2} \\ \frac{2EI}{L} \end{Bmatrix} \theta_i \quad (4.4.3)$$

And a rotation to node j , θ_j , gives:

$$\begin{Bmatrix} F_{iy} \\ M_i \\ F_{jy} \\ M_j \end{Bmatrix} = \begin{Bmatrix} \frac{6EI}{L^2} \\ \frac{2EI}{L} \\ -\frac{6EI}{L^2} \\ \frac{4EI}{L} \end{Bmatrix} \theta_j \quad (4.4.4)$$

Since all of these displacement could happen together, using superposition we thus have the total force vector as:

$$\begin{Bmatrix} F_{iy} \\ M_i \\ F_{jy} \\ M_j \end{Bmatrix} = \begin{Bmatrix} \frac{12EI}{L^3} \\ \frac{6EI}{L^2} \\ -\frac{12EI}{L^3} \\ \frac{6EI}{L^2} \end{Bmatrix} \delta_{iy} + \begin{Bmatrix} \frac{6EI}{L^2} \\ \frac{4EI}{L} \\ -\frac{6EI}{L^2} \\ \frac{2EI}{L} \end{Bmatrix} \theta_i + \begin{Bmatrix} -\frac{12EI}{L^3} \\ \frac{6EI}{L^2} \\ \frac{12EI}{L^3} \\ -\frac{6EI}{L^2} \end{Bmatrix} \delta_{jy} + \begin{Bmatrix} \frac{6EI}{L^2} \\ \frac{2EI}{L} \\ -\frac{6EI}{L^2} \\ \frac{4EI}{L} \end{Bmatrix} \theta_j \quad (4.4.5)$$

Writing this as a matrix equation, we have:

$$\begin{Bmatrix} F_{iy} \\ M_i \\ F_{iy} \\ M_j \end{Bmatrix} = \begin{bmatrix} \frac{12EI}{L^3} & \frac{6EI}{L^2} & -\frac{12EI}{L^3} & \frac{6EI}{L^2} \\ \frac{6EI}{L^2} & \frac{4EI}{L} & -\frac{6EI}{L^2} & \frac{2EI}{L} \\ \hline -\frac{12EI}{L^3} & -\frac{6EI}{L^2} & \frac{12EI}{L^3} & -\frac{6EI}{L^2} \\ \frac{6EI}{L^2} & \frac{2EI}{L} & -\frac{6EI}{L^2} & \frac{4EI}{L} \end{bmatrix} \begin{Bmatrix} \delta_{iy} \\ \theta_i \\ \delta_{iy} \\ \theta_j \end{Bmatrix} \quad (4.4.6)$$

This is in the typical form:

$$\{\mathbf{F}^e\} = [\mathbf{k}]\{\mathbf{u}^e\} \quad (4.4.7)$$

And so the beam element stiffness matrix is given by:

$$[\mathbf{k}] = \begin{bmatrix} \frac{12EI}{L^3} & \frac{6EI}{L^2} & -\frac{12EI}{L^3} & \frac{6EI}{L^2} \\ \frac{6EI}{L^2} & \frac{4EI}{L} & -\frac{6EI}{L^2} & \frac{2EI}{L} \\ \hline -\frac{12EI}{L^3} & -\frac{6EI}{L^2} & \frac{12EI}{L^3} & -\frac{6EI}{L^2} \\ \frac{6EI}{L^2} & \frac{2EI}{L} & -\frac{6EI}{L^2} & \frac{4EI}{L} \end{bmatrix} \quad (4.4.8)$$

Next we note a special case where the vertical displacements of the beam nodes are prevented and only rotations of the beam ends is allowed. In this case, all terms relating to the translation DOFs are removed giving us the *reduced stiffness matrix* for a *beam on rigid vertical supports*:

$$[\mathbf{k}] = \begin{bmatrix} \frac{4EI}{L} & \frac{2EI}{L} \\ \frac{2EI}{L} & \frac{4EI}{L} \end{bmatrix} \quad (4.4.9)$$

As we did for trusses, we will often write these equations in terms of nodal submatrices as:

$$\begin{Bmatrix} \mathbf{F}_i \\ \mathbf{F}_j \end{Bmatrix} = \begin{bmatrix} \mathbf{k11} & \mathbf{k12} \\ \mathbf{k21} & \mathbf{k22} \end{bmatrix} \begin{Bmatrix} \delta_i \\ \delta_j \end{Bmatrix} \quad (4.4.10)$$

4.4.2 Beam Element Loading

Applied Loads

Beam loads are different to truss loads since they can be located anywhere along the element, not only at the nodes – termed intermodal loading. Beams can also have loads applied to the nodes – nodal loading. We deal with these two kinds of loads as follows:

- Nodal loads: apply the load to the joint as usual;
- Inter-nodal loads: apply the equivalent concentrated loads to the joints (these are just fixed end moment reactions to the load, with the direction reversed).

If a member's nodes are locked against rotation, the member end forces due to inter-nodal loading will just be the fixed end moment and force reaction vector we are familiar with $\{\mathbf{F}_F\}$. If a member also displaces, the total member end forces are:

$$\{\mathbf{F}\}_{Tot} = \{\mathbf{F}_F\} + [\mathbf{k}]\{\boldsymbol{\delta}\} \quad (4.4.11)$$

Thus the general stiffness equation becomes:


$$\{\mathbf{F}\} = [\mathbf{K}]\{\boldsymbol{\delta}\} \quad (4.4.12)$$

Where $\{\mathbf{F}\}$ is now the vector of net nodal loads:

$$\text{Net Nodal Load} = \text{Nodal Load} - \sum \text{Fixed End Reactions} \quad (4.4.13)$$

Lastly, we must note that inter-nodal loads on adjacent members will result in multiple loads on a node. Thus we must take the algebraic sum of the forces/moments on each node in our analysis, bearing in mind the sign convention.

As an example, the equivalent nodal loads for a UDL applied to a beam element are:

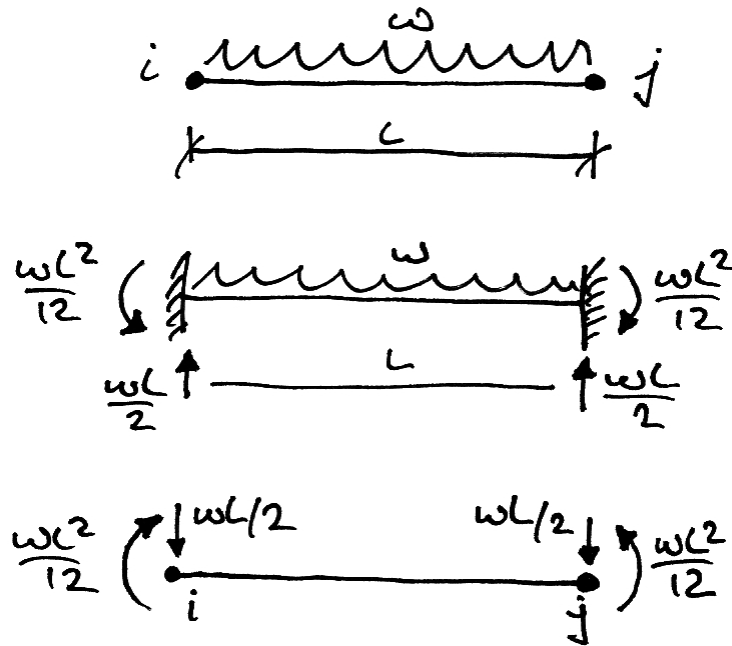


Member End Forces

After the deformations of the beam are known, we can use the element stiffness matrices to recover the end forces/moments on each element due to both deformations and the inter-nodal loading directly from equation (4.4.11).

4.4.3 Example 7 – Simple Two-Span Beam

Problem

For the following beam, find the rotations of joints 2 and 3 and the bending moment diagram. Take $EI = 6 \times 10^3 \text{ kNm}^2$.

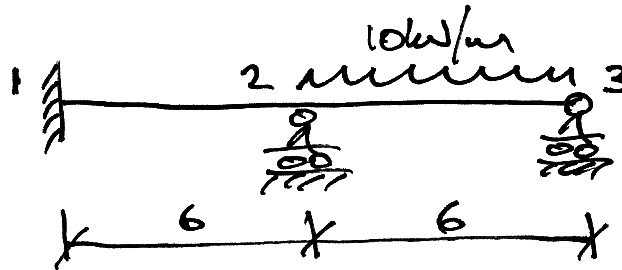

Solution

First we write the general equation in terms of nodal sub-matrices:

$$\begin{Bmatrix} \mathbf{F}_1 \\ \mathbf{F}_2 \\ \mathbf{F}_3 \end{Bmatrix} = \begin{bmatrix} \mathbf{K}_{11} & \mathbf{K}_{12} & \mathbf{K}_{13} \\ \mathbf{K}_{21} & \mathbf{K}_{22} & \mathbf{K}_{23} \\ \mathbf{K}_{31} & \mathbf{K}_{32} & \mathbf{K}_{33} \end{bmatrix} \begin{Bmatrix} \delta_1 \\ \delta_2 \\ \delta_3 \end{Bmatrix} \quad (4.4.14)$$

Next we note that the only possible displacements are the rotations of joints 2 and 3.

Thus we can restrict the equation by eliminating joint 1 as follows:

$$\begin{Bmatrix} \mathbf{F}_2 \\ \mathbf{F}_3 \end{Bmatrix} = \begin{bmatrix} \mathbf{K}_{22} & \mathbf{K}_{23} \\ \mathbf{K}_{32} & \mathbf{K}_{33} \end{bmatrix} \begin{Bmatrix} \delta_2 \\ \delta_3 \end{Bmatrix} \quad (4.4.15)$$

To give:

$$\begin{Bmatrix} \mathbf{F}_2 \\ \mathbf{F}_3 \end{Bmatrix} = \begin{bmatrix} \mathbf{K}_{22} & \mathbf{K}_{23} \\ \mathbf{K}_{32} & \mathbf{K}_{33} \end{bmatrix} \begin{Bmatrix} \delta_2 \\ \delta_3 \end{Bmatrix} \quad (4.4.16)$$

Since this beam is on rigid vertical supports, we can use the beam stiffness matrix given by equation (4.4.9). Thus we are left with two equations:

$$\begin{Bmatrix} M_2 \\ M_3 \end{Bmatrix} = \begin{bmatrix} k_{22} & k_{23} \\ k_{32} & k_{33} \end{bmatrix} \begin{Bmatrix} \theta_2 \\ \theta_3 \end{Bmatrix} \quad (4.4.17)$$

The member contributions to each of these terms are:

- k_{22} = Term 22 of Member 12 + Term 11 of Member 23;
- k_{23} = Term 12 of Member 23;
- k_{32} = Term 21 of Member 23;
- k_{33} = Term 22 of Member 23

Thus, for Member 12 we have:

$$[\mathbf{k}]_{12} = \begin{bmatrix} \frac{4EI}{L} & \frac{2EI}{L} \\ \frac{2EI}{L} & \frac{4EI}{L} \end{bmatrix} = 10^3 \begin{bmatrix} \frac{4(6)}{6} & \frac{2(6)}{6} \\ \frac{2(6)}{6} & \frac{4(6)}{6} \end{bmatrix} = 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} \quad (4.4.18)$$


And for Member 23:

$$[\mathbf{k}]_{23} = 10^3 \begin{bmatrix} \frac{4(6)}{6} & \frac{2(6)}{6} \\ \frac{2(6)}{6} & \frac{4(6)}{6} \end{bmatrix} = 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} \quad (4.4.19)$$

Thus the global stiffness equation is:

$$\begin{Bmatrix} M_2 \\ M_3 \end{Bmatrix} = 10^3 \begin{bmatrix} 8 & 2 \\ 2 & 4 \end{bmatrix} \begin{Bmatrix} \theta_2 \\ \theta_3 \end{Bmatrix} \quad (4.4.20)$$

To find the moments to apply to the nodes, we determine the fixed-end moments caused by the loads on each members. Only Member 23 has load, and its fixed end moments are:

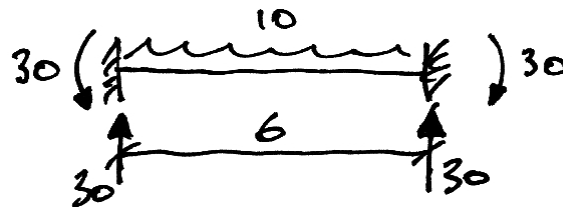


Our sign convention is anti-clockwise positive. Thus the moments to apply to the joints become (refer to equation (4.4.13)):

$$-\begin{Bmatrix} 30 \\ -30 \end{Bmatrix} = 10^3 \begin{bmatrix} 8 & 2 \\ 2 & 4 \end{bmatrix} \begin{Bmatrix} \theta_2 \\ \theta_3 \end{Bmatrix} \quad (4.4.21)$$

Solving the equation:

$$\begin{Bmatrix} \theta_2 \\ \theta_3 \end{Bmatrix} = \frac{1}{10^3} \frac{1}{(8 \cdot 4 - 2 \cdot 2)} \begin{bmatrix} 4 & -2 \\ -2 & 8 \end{bmatrix} \begin{Bmatrix} -30 \\ 30 \end{Bmatrix} = 10^{-3} \begin{Bmatrix} -90/14 \\ 150/14 \end{Bmatrix} \text{ rads} \quad (4.4.22)$$

Since we know that anti-clockwise is positive, we can draw the displaced shape (in mrad):

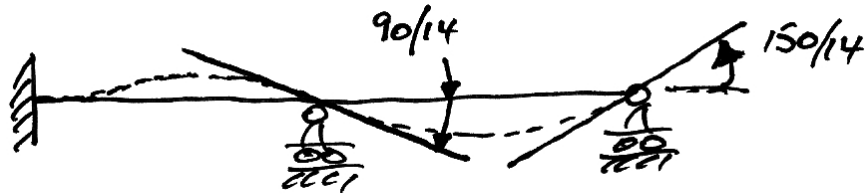


Using the member stiffness matrices we can recover the bending moments at the end of each member, now that the rotations are known, from equation (4.4.11):

$$\begin{Bmatrix} M_1 \\ M_2 \end{Bmatrix} = \begin{Bmatrix} 0 \\ 0 \end{Bmatrix} + 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} 10^{-3} \begin{Bmatrix} 0 \\ -90/14 \end{Bmatrix} = \begin{Bmatrix} -12.9 \\ -25.7 \end{Bmatrix} \text{ kNm} \quad (4.4.23)$$

$$\begin{Bmatrix} M_2 \\ M_3 \end{Bmatrix} = \begin{Bmatrix} 30 \\ -30 \end{Bmatrix} + 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} 10^{-3} \begin{Bmatrix} -90/14 \\ 150/14 \end{Bmatrix} = \begin{Bmatrix} +25.7 \\ 0 \end{Bmatrix} \text{ kNm} \quad (4.4.24)$$


Thus the final BMD can be drawn as:

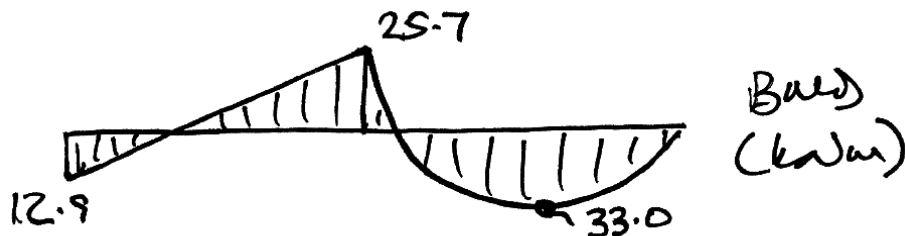

4.4.4 Example 8 – Non-Prismatic Beam

Problem

For the following beam, find the vertical deflection of joint 2 and the bending moment diagram. Take $EI = 12 \times 10^3 \text{ kNm}^2$.

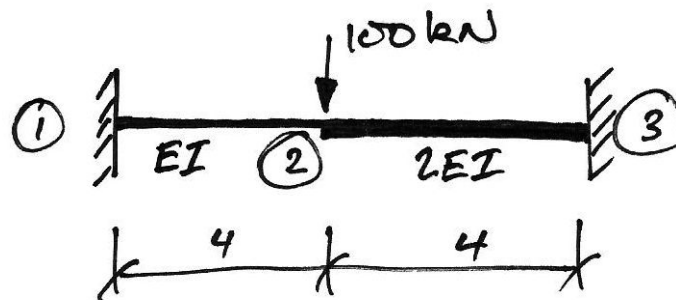

Solution

First we write the general equation in terms of nodal sub-matrices:

$$\begin{Bmatrix} \mathbf{F}_1 \\ \mathbf{F}_2 \\ \mathbf{F}_3 \end{Bmatrix} = \begin{bmatrix} \mathbf{K}_{11} & \mathbf{K}_{12} & \mathbf{K}_{13} \\ \mathbf{K}_{21} & \mathbf{K}_{22} & \mathbf{K}_{23} \\ \mathbf{K}_{31} & \mathbf{K}_{32} & \mathbf{K}_{33} \end{bmatrix} \begin{Bmatrix} \delta_1 \\ \delta_2 \\ \delta_3 \end{Bmatrix} \quad (4.4.25)$$

Next we note that the only possible displacements are those of joint 2. Thus we can restrict the equation to:

$$\{\mathbf{F}_2\} = [\mathbf{K}_{22}] \{\delta_2\} \quad (4.4.26)$$

The member contributions to \mathbf{K}_{22} are:

- Sub-matrix **k22** of member 12;
- Sub-matrix **k11** of member 23.

That is:

$$[\mathbf{K}_{22}] = [\mathbf{k}22_{12}] + [\mathbf{k}11_{23}] \quad (4.4.27)$$

For member 12, we have, from equation (4.4.8):

$$\mathbf{k}22_{12} = \begin{bmatrix} \frac{12EI}{L^3} & -\frac{6EI}{L^2} \\ \frac{6EI}{L^2} & \frac{4EI}{L} \end{bmatrix} = 10^3 \begin{bmatrix} \frac{12 \cdot 12}{4^3} & -\frac{6 \cdot 12}{4^2} \\ -\frac{6 \cdot 12}{4^2} & \frac{4 \cdot 12}{4} \end{bmatrix} = 10^3 \begin{bmatrix} 2.25 & -4.5 \\ -4.5 & 12 \end{bmatrix} \quad (4.4.28)$$

And for member 23:

$$\mathbf{k}11_{23} = \begin{bmatrix} \frac{12EI}{L^3} & \frac{6EI}{L^2} \\ \frac{6EI}{L^2} & \frac{4EI}{L} \end{bmatrix} = 10^3 \begin{bmatrix} \frac{12 \cdot 24}{4^3} & \frac{6 \cdot 24}{4^2} \\ \frac{6 \cdot 24}{4^2} & \frac{4 \cdot 24}{4} \end{bmatrix} = 10^3 \begin{bmatrix} 4.5 & 9 \\ 9 & 24 \end{bmatrix} \quad (4.4.29)$$


Since the load is a directly applied nodal load we can now write equation (4.4.26), using equations (4.4.27), (4.4.28), and (4.4.29), as:

$$\begin{Bmatrix} F_{2y} \\ M_2 \end{Bmatrix} = \begin{Bmatrix} -100 \\ 0 \end{Bmatrix} = 10^3 \begin{bmatrix} 6.75 & 4.5 \\ 4.5 & 36 \end{bmatrix} \begin{Bmatrix} \delta_{2y} \\ \theta_2 \end{Bmatrix} \quad (4.4.30)$$

Solving:

$$\begin{Bmatrix} \delta_{2y} \\ \theta_2 \end{Bmatrix} = 10^{-3} \frac{1}{(6.75 \cdot 36 - 4.5 \cdot 4.5)} \begin{bmatrix} 36 & -4.5 \\ -4.5 & 6.75 \end{bmatrix} \begin{Bmatrix} -100 \\ 0 \end{Bmatrix} = 10^{-3} \begin{Bmatrix} -16.16 \\ 2.02 \end{Bmatrix} \quad (4.4.31)$$

Thus we have a downwards (negative) displacement of 16.2 mm and an anticlockwise rotation of 2.02 mrad at joint 2, as shown:

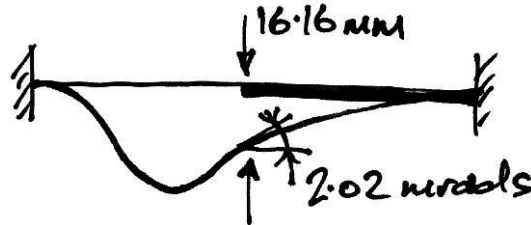


Next we recover the element end forces. For member 12, from equation (4.4.6) we have:

$$\begin{Bmatrix} F_{1y} \\ M_1 \\ F_{2y} \\ M_2 \end{Bmatrix} = 10^3 \begin{bmatrix} 2.25 & 4.5 & -2.25 & 4.5 \\ 4.5 & 12 & -4.5 & 6 \\ -2.25 & -4.5 & 2.25 & -4.5 \\ 4.5 & 6 & -4.5 & 12 \end{bmatrix} 10^{-3} \begin{Bmatrix} 0 \\ 0 \\ -16.16 \\ 2.02 \end{Bmatrix} = \begin{Bmatrix} 45.5 \\ 84.8 \\ -45.5 \\ 97.0 \end{Bmatrix} \quad (4.4.32)$$

And for member 23:


$$\begin{Bmatrix} F_{2y} \\ M_2 \\ F_{3y} \\ M_3 \end{Bmatrix} = 10^3 \begin{bmatrix} 4.5 & 9 & -4.5 & 9 \\ 9 & 24 & -9 & 12 \\ -4.5 & -9 & 4.5 & -9 \\ 9 & 12 & -9 & 24 \end{bmatrix} 10^{-3} \begin{Bmatrix} -16.16 \\ 2.02 \\ 0 \\ 0 \end{Bmatrix} = \begin{Bmatrix} -54.5 \\ -97.0 \\ 54.5 \\ -121.2 \end{Bmatrix} \quad (4.4.33)$$

Thus the member end forces are:

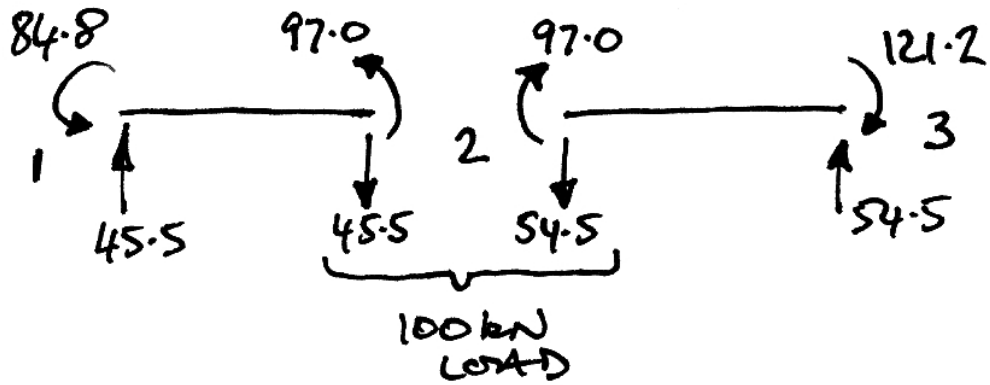

As can be seen, the load is split between the two members in a way that depends on their relative stiffness.


The total solution is thus:

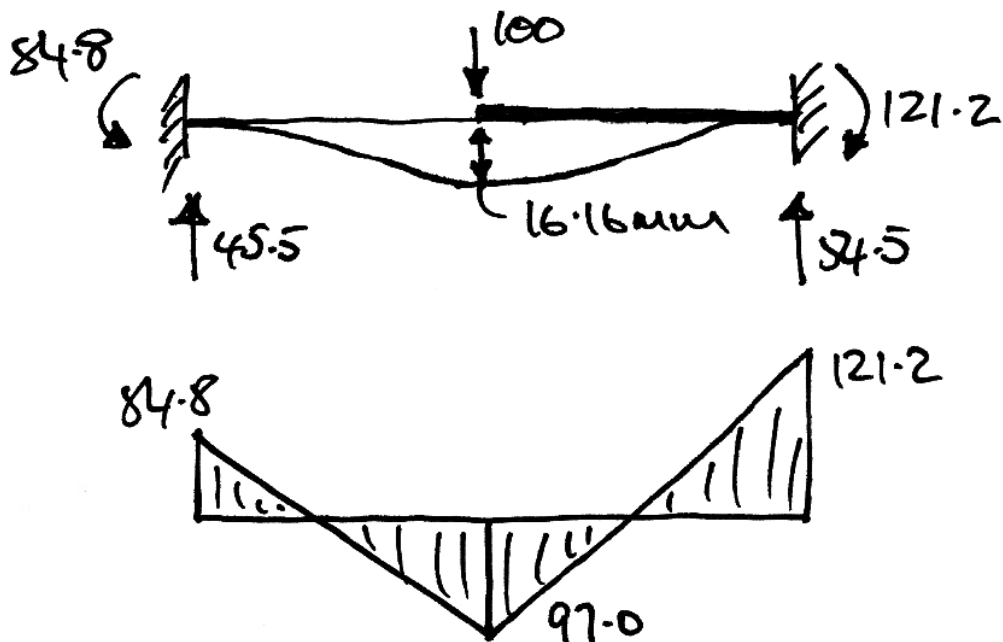

4.4.5 Problems


Problem 1

Determine the bending moment diagram and rotation of joint 2. Take $EI = 10 \times 10^3 \text{ kNm}^2$.

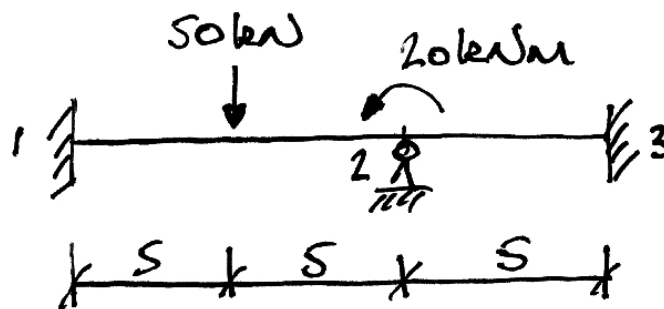

Problem 2


Determine the bending moment diagram and the rotations of joints 1 and 2. Take $EI = 20 \times 10^3 \text{ kNm}^2$.

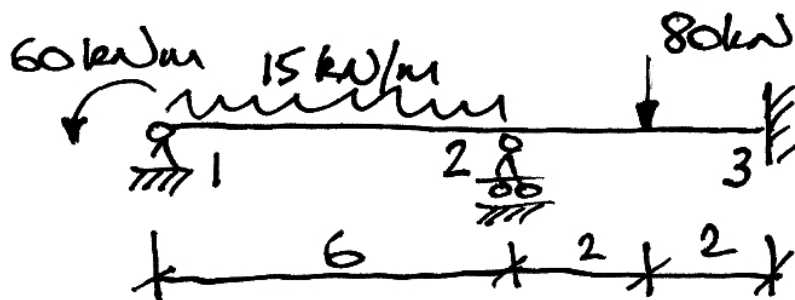


Problem 3

Determine the bending moment diagram and the displacements of joints 2 and 3.

Take $EI = 20 \times 10^3 \text{ kNm}^2$.

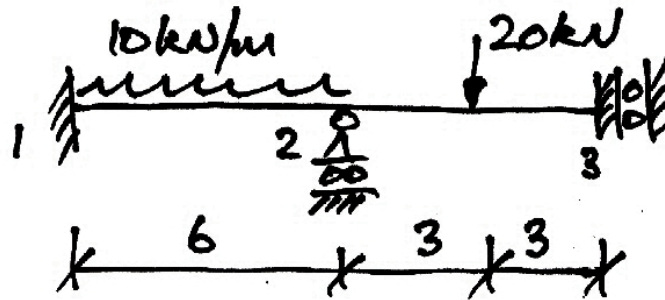
**Problem 4**

Determine the bending moment diagram and the vertical displacement under the 100 kN point load. Take $EI = 10 \times 10^3 \text{ kNm}^2$.

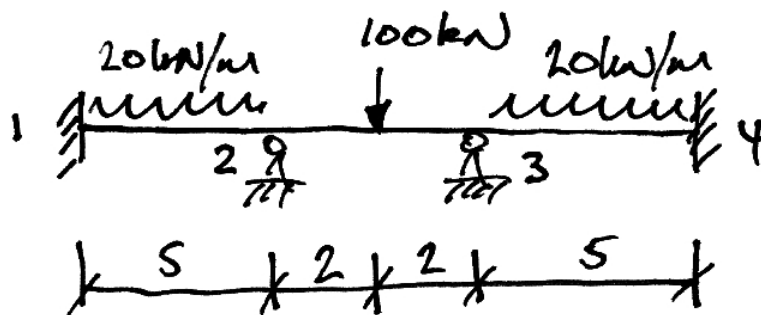


Problem 5

Determine the bending moment diagram and the rotations of joints 2 and 3. Take $EI = 20 \times 10^3 \text{ kNm}^2$.

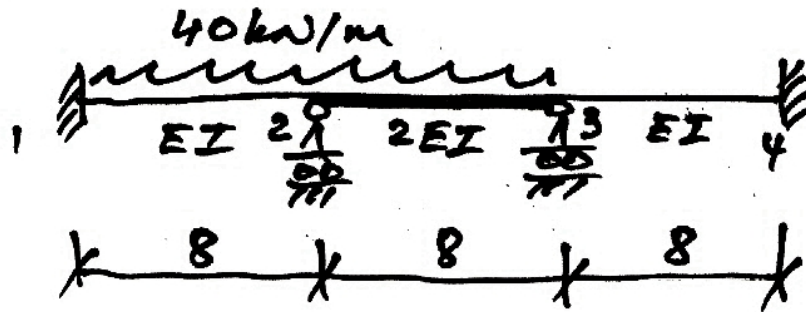**Problem 6**

Determine the bending moment diagram and the rotations of all joints. Take $EI = 40 \times 10^3 \text{ kNm}^2$. You may use *Excel* or *Matlab* to perform some of the numerical calculations. Check your member stiffness and global stiffness matrices with *LinPro*, and your final results. Identify and explain discrepancies. Verify with *LUSAS*.

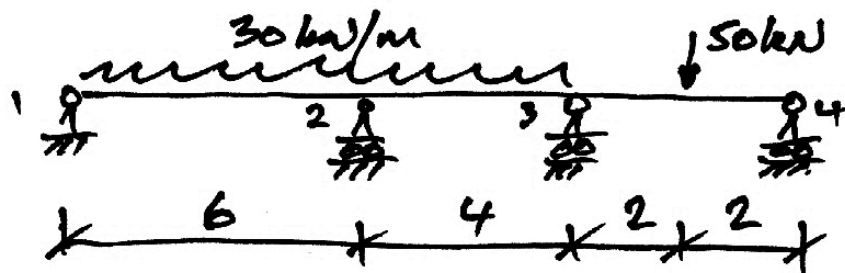

Week-(16-17)

MD Ehasan Kabir


4.5 Plane Frames

4.5.1 Plane Frame Element Stiffness Matrix

A plane frame element is similar to a beam element except for some differences:

- The presence of axial forces;
- The member may be oriented at any angle in the global axis system;
- The inter-nodal loads may be applied in the local or global coordinates.

These points are illustrated in the following:

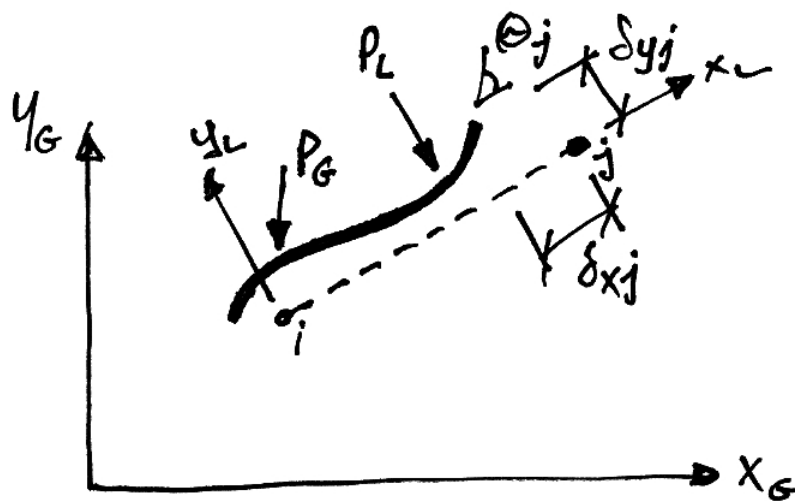

Lastly, an easy way to deal with inter-nodal point loads (P_G , P_L) is to introduce a node under the point load (splitting the member in two), then it is no longer inter-nodal and so no transformations or equivalent load analysis is required. The downside to this is that the number of equations increases (which is only really a problem for analysis by hand).

Axial Forces

To include axial forces, we can simply expand the beam element stiffness matrix to allow for the extra degree of freedom of x -displacement at each node in the member local coordinates. Thus expanding equation (4.4.8) to allow for the extra DOFs gives:

$$[\mathbf{k}] = \begin{bmatrix} X_{11} & 0 & 0 & X_{14} & 0 & 0 \\ 0 & \frac{12EI}{L^3} & \frac{6EI}{L^2} & 0 & -\frac{12EI}{L^3} & \frac{6EI}{L^2} \\ 0 & \frac{6EI}{L^2} & \frac{4EI}{L} & 0 & -\frac{6EI}{L^2} & \frac{2EI}{L} \\ \hline X_{41} & 0 & 0 & X_{44} & 0 & 0 \\ 0 & -\frac{12EI}{L^3} & -\frac{6EI}{L^2} & 0 & \frac{12EI}{L^3} & -\frac{6EI}{L^2} \\ 0 & \frac{6EI}{L^2} & \frac{2EI}{L} & 0 & -\frac{6EI}{L^2} & \frac{4EI}{L} \end{bmatrix} \quad (4.5.1)$$

However, these terms that account for axial force are simply those of a plane truss element in its local coordinate system:

$$[\mathbf{k}] = \frac{EA}{L} \begin{bmatrix} 1 & -1 \\ -1 & 1 \end{bmatrix} \quad (4.5.2)$$

Thus equation (4.5.1) becomes:

$$\mathbf{[k]} = \begin{bmatrix} \frac{EA}{L} & 0 & 0 & -\frac{EA}{L} & 0 & 0 \\ 0 & \frac{12EI}{L^3} & \frac{6EI}{L^2} & 0 & -\frac{12EI}{L^3} & \frac{6EI}{L^2} \\ 0 & \frac{6EI}{L^2} & \frac{4EI}{L} & 0 & -\frac{6EI}{L^2} & \frac{2EI}{L} \\ -\frac{EA}{L} & 0 & 0 & \frac{EA}{L} & 0 & 0 \\ 0 & -\frac{12EI}{L^3} & -\frac{6EI}{L^2} & 0 & \frac{12EI}{L^3} & -\frac{6EI}{L^2} \\ 0 & \frac{6EI}{L^2} & \frac{2EI}{L} & 0 & -\frac{6EI}{L^2} & \frac{4EI}{L} \end{bmatrix} \quad (4.5.3)$$

This is the stiffness matrix for a plane frame element in its local coordinate system and can also be written in terms of nodal sub-matrices as:

$$\mathbf{[k]} = \begin{bmatrix} \mathbf{k11} & \mathbf{k12} \\ \mathbf{k21} & \mathbf{k22} \end{bmatrix} \quad (4.5.4)$$

Where the nodal sub-matrices are as delineated in equation (4.5.3).

Note that if axial forces are neglected, we can just use the regular beam element stiffness matrix instead, though coordinate transformation may be required.

Transformation to Global Coordinates

From the Appendix, the plane frame element stiffness matrix in global coordinates is:

$$[\mathbf{K}^e] = [\mathbf{T}]^T [\mathbf{k}] [\mathbf{T}] \quad (4.5.5)$$

As a consequence, note that we do not need to perform the transformation when:

1. The member local axis and global axis system coincide;
2. The only unrestrained DOFs are rotations/moments.


Again from the Appendix, the transformation matrix for a plane frame element is:

$$\mathbf{T} = \begin{bmatrix} \cos \alpha & \sin \alpha & 0 & | & 0 & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & | & 0 & 0 & 0 \\ 0 & 0 & 1 & | & 0 & 0 & 0 \\ \hline 0 & 0 & 0 & | & \cos \alpha & \sin \alpha & 0 \\ 0 & 0 & 0 & | & -\sin \alpha & \cos \alpha & 0 \\ 0 & 0 & 0 & | & 0 & 0 & 1 \end{bmatrix} \quad (4.5.6)$$


Inter-nodal Loads

In plane frames, loads can be applied in the global axis system, or the local axis system. For example, if we consider a member representing a roof beam, we can have the following loads:


- Case 1: Gravity loads representing the weight of the roof itself;
- Case 2: Horizontal loads representing a horizontal wind;
- Case 3: Net pressure loads caused by outside wind and inside pressures.

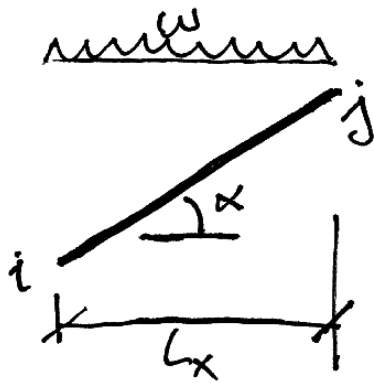

Case 1

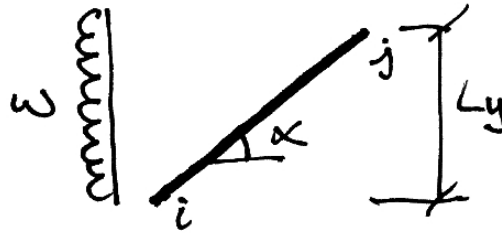

Case 2

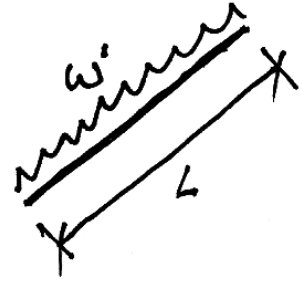


Case 3

Most structural analysis software will allow you to choose the axis system of your loads. However, in order to deal with these loads for simple hand analysis we must know how it works and so we consider each case separately.

In the following the member local axis system has a prime (e.g. x') and the global axis system does not (e.g. x).

Case 1: Vertically Applied Loads


In this case we can consider an equivalent beam which is the projection of the load onto a horizontal beam of length L_x :

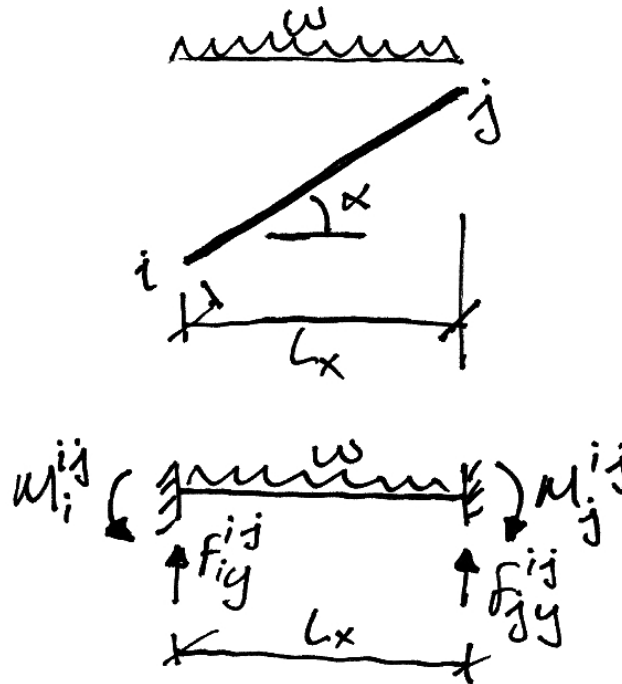

Since the resulting nodal forces and moments are in the global axis system no further work is required.

Case 2: Horizontally Applied Loads:


Similarly to vertically applied loads, we can consider the horizontal projection of load onto an equivalent member of length L_y .

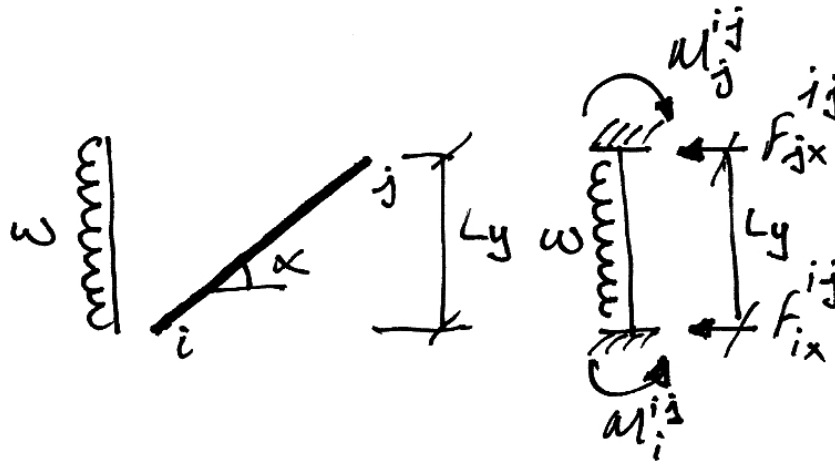

Again the resulting nodal loads are in the global axis system and do not require any modification.

Case 3: Loads Applied in Local Member Axis System

In this case there is no need for an equivalent beam and the fixed-fixed reactions are worked out as normal:

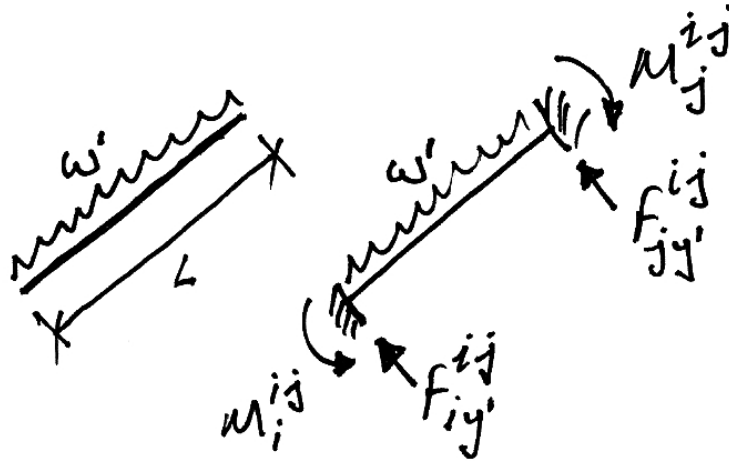

However, there is a complication here since the reactions are now not all in the global axis system. Thus the forces (not moments) must be transformed from the local axis to the global axis system. Thus there is a simple case:

If axial forces are neglected, only moments are relevant and so no transformations are required.

For generality though we can use the transformations given in the Appendix:

$$\{\mathbf{F}\} = [\mathbf{T}]^T \{\mathbf{F}'\} \quad (4.5.7)$$


Writing this out in full for clarity, we have:

$$\begin{Bmatrix} F_{ix}^{ij} \\ F_{iy}^{ij} \\ M_i^{ij} \\ F_{jx}^{ij} \\ F_{jy}^{ij} \\ M_j^{ij} \end{Bmatrix} = \begin{bmatrix} \cos \alpha & -\sin \alpha & 0 & | & 0 & 0 & 0 \\ \sin \alpha & \cos \alpha & 0 & | & 0 & 0 & 0 \\ 0 & 0 & 1 & | & 0 & 0 & 0 \\ \hline 0 & 0 & 0 & | & \cos \alpha & -\sin \alpha & 0 \\ 0 & 0 & 0 & | & \sin \alpha & \cos \alpha & 0 \\ 0 & 0 & 0 & | & 0 & 0 & 1 \end{bmatrix} \begin{Bmatrix} F_{ix'}^{ij} \\ F_{iy'}^{ij} \\ M_i^{ij} \\ F_{jx'}^{ij} \\ F_{jy'}^{ij} \\ M_j^{ij} \end{Bmatrix} \quad (4.5.8)$$

4.5.2 Example 9 – Simple Plane Frame

Problem

For the following frame, determine the rotation of the joints and the bending moment diagram. Neglect axial deformations. Take $EI = 1 \times 10^3 \text{ kNm}^2$.

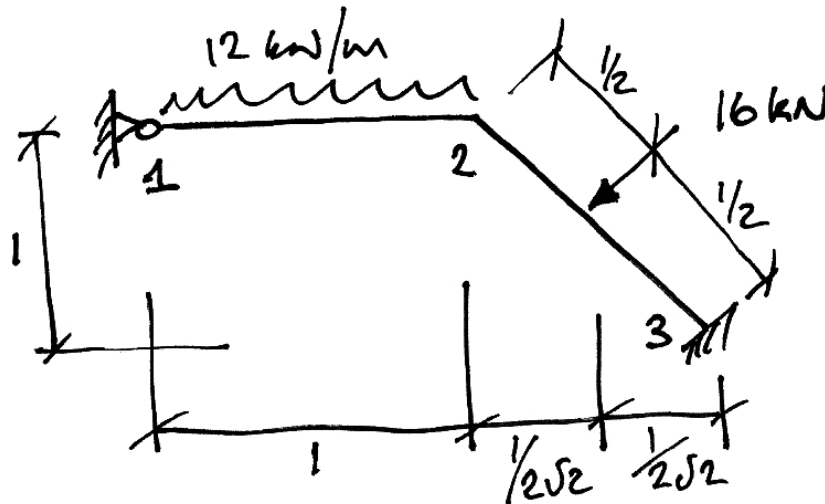

Solution

The fact that we can neglect axial deformation makes this problem much simpler. As a consequence, the only possible displacements are the rotations of joints 1 and 2. Since node 3 is fully restricted out, we have the following partially-restricted set of equations in terms of nodal sub-matrices:

$$\begin{Bmatrix} \mathbf{F}_1 \\ \mathbf{F}_2 \end{Bmatrix} = \begin{bmatrix} \mathbf{K}_{11} & \mathbf{K}_{12} \\ \mathbf{K}_{21} & \mathbf{K}_{22} \end{bmatrix} \begin{Bmatrix} \delta_1 \\ \delta_2 \end{Bmatrix} \quad (4.5.9)$$

If we expand this further, we will be able to restrict out all but the rotational DOFs:

$$\left\{ \begin{array}{c} \cdot \\ \cdot \\ \hline \sum M_1 \\ \cdot \\ \cdot \\ \hline \sum M_2 \end{array} \right\} = \left[\begin{array}{ccc|ccc} \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & k_{33} & \cdot & \cdot & k_{36} \\ \hline \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & k_{63} & \cdot & \cdot & k_{66} \end{array} \right] \left\{ \begin{array}{c} \cdot \\ \cdot \\ \theta_1 \\ \cdot \\ \cdot \\ \theta_2 \end{array} \right\} \quad (4.5.10)$$

The member contributions to each of these terms are:

- k_{33} = Term 33 of Member 12;
- k_{36} = Term 36 of Member 12;
- k_{63} = Term 63 of Member 12;
- k_{66} = Term 66 of Member 12 + Term 33 of Member 23.

- Member 12:

Looking at equation (4.5.3):

$$\text{Term 33} = \left(\frac{4EI}{L} \right)_{12} = \frac{4 \cdot 10^3}{1} = 4 \times 10^3 \quad (4.5.11)$$

$$\text{Term 36} = \left(\frac{2EI}{L} \right)_{12} = \frac{2 \cdot 10^3}{1} = 2 \times 10^3 \quad (4.5.12)$$

$$\text{Term 63} = \left(\frac{2EI}{L} \right)_{12} = \frac{2 \cdot 10^3}{1} = 2 \times 10^3 \quad (4.5.13)$$

$$\text{Term 66} = \left(\frac{4EI}{L} \right)_{12} = \frac{4 \cdot 10^3}{1} = 4 \times 10^3 \quad (4.5.14)$$

- Member 23:

Again, from equation (4.5.3):

$$\text{Term 33} = \left(\frac{4EI}{L} \right)_{23} = \frac{4 \cdot 10^3}{1} = 4 \times 10^3 \quad (4.5.15)$$


Thus the system equation becomes:

$$\begin{Bmatrix} \sum M_1 \\ \sum M_2 \end{Bmatrix} = 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 8 \end{bmatrix} \begin{Bmatrix} \theta_1 \\ \theta_2 \end{Bmatrix} \quad (4.5.16)$$

Next we must find the net moments applied to each node. There are no directly applied nodal moment loads, so the ‘force’ vector is, from equation (4.4.13):


$$\{\mathbf{F}\} = -\{\mathbf{F}_F\} \quad (4.5.17)$$

- Member 12 Moments:

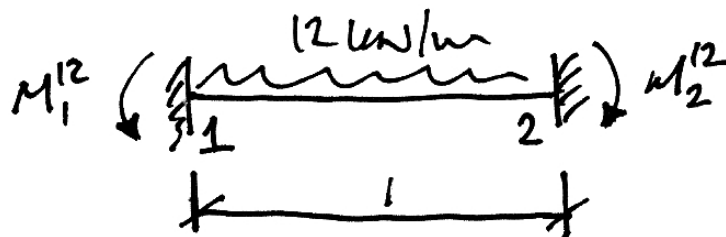

$$\begin{aligned} M_1^{12} &= \frac{wL^2}{12} = \frac{12 \cdot 1^2}{12} = +1 \text{ kNm} \\ M_2^{12} &= -\frac{wL^2}{12} = -\frac{12 \cdot 1^2}{12} = -1 \text{ kNm} \end{aligned} \quad (4.5.18)$$

- Member 23 Moments:

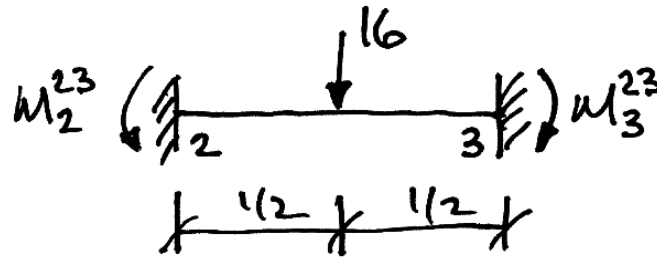

$$M_2^{23} = \frac{PL}{8} = \frac{16 \cdot 1}{8} = +2 \text{ kNm} \quad (4.5.19)$$

$$M_3^{23} = -\frac{PL}{8} = -\frac{16 \cdot 1}{8} = -2 \text{ kNm}$$

Thus the net nodal loads become:

$$\{\mathbf{F}\} = -\{\mathbf{F}_F\} = -\left\{ \begin{array}{c} \sum M_1 \\ \sum M_2 \end{array} \right\} = -\left\{ \begin{array}{c} +1 \\ -1+2 \end{array} \right\} = \left\{ \begin{array}{c} -1 \\ -1 \end{array} \right\} \text{ kNm} \quad (4.5.20)$$


And so equation (4.5.16) is thus:

$$\left\{ \begin{array}{c} -1 \\ -1 \end{array} \right\} = 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 8 \end{bmatrix} \left\{ \begin{array}{c} \theta_1 \\ \theta_2 \end{array} \right\} \quad (4.5.21)$$

Which is solved to get:

$$\left\{ \begin{array}{c} \theta_1 \\ \theta_2 \end{array} \right\} = \frac{1}{10^3} \frac{1}{(4 \cdot 8 - 2 \cdot 2)} \begin{bmatrix} 8 & -2 \\ -2 & 4 \end{bmatrix} \left\{ \begin{array}{c} -1 \\ -1 \end{array} \right\} = \left\{ \begin{array}{c} -3/14 \\ -1/14 \end{array} \right\} \times 10^{-3} \text{ rads} \quad (4.5.22)$$

The negative results indicate both rotations are clockwise.

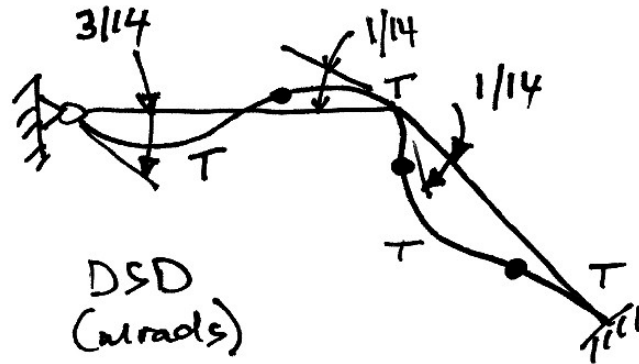


Lastly, we must find the member end forces. Since we only need to draw the bending moment diagram so we need only consider the terms of the member stiffness matrix relating to the moments/rotations (similar to equation (4.4.9)). Also, we must account for the equivalent nodal loads as per equation (4.4.11):

- Member 12:

$$\begin{Bmatrix} M_1^{12} \\ M_2^{12} \end{Bmatrix} = \begin{Bmatrix} +1 \\ -1 \end{Bmatrix} + 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} \begin{Bmatrix} -3/14 \\ -1/14 \end{Bmatrix} 10^{-3} = \begin{Bmatrix} 0 \\ -12/7 \end{Bmatrix} \text{ kNm} \quad (4.5.23)$$

- Member 23:


$$\begin{Bmatrix} M_2^{23} \\ M_3^{23} \end{Bmatrix} = \begin{Bmatrix} +2 \\ -2 \end{Bmatrix} + 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} \begin{Bmatrix} -1/14 \\ 0 \end{Bmatrix} 10^{-3} = \begin{Bmatrix} +12/7 \\ -17/7 \end{Bmatrix} \text{ kNm} \quad (4.5.24)$$

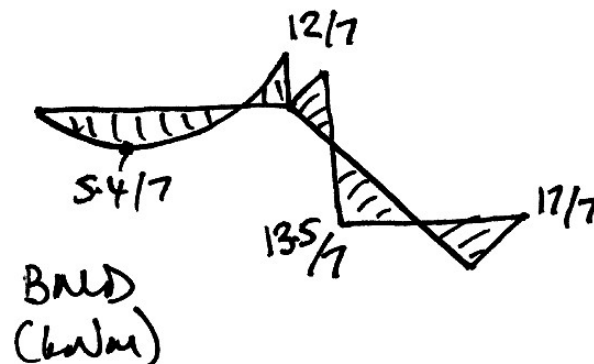

4.5.3 Example 10 –Plane Frame Using Symmetry


Problem

For the following frame, determine the rotation of the joints, the displacement under the 8 kN point load and the bending moment diagram. Neglect axial deformations. Take $EI = 1 \times 10^3 \text{ kNm}^2$.

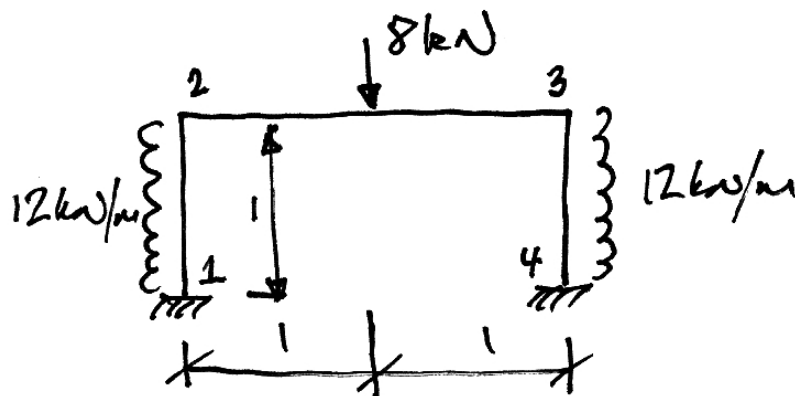

Solution

Again, the fact that we can neglect axial deformation makes this problem much simpler. Since the structure is symmetrical and it is symmetrically loaded, it will not sway. Further, because of this symmetry, we can adopt the following model for analysis:

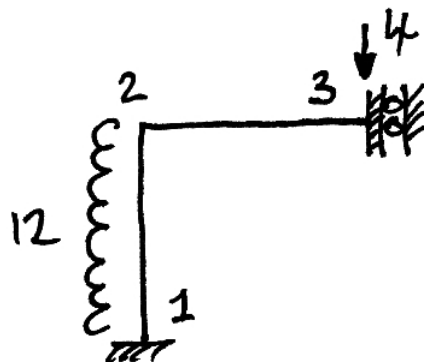

Notice two things from this model:

- we have renumber the joints – there is no need to retain the old numbering system;
- The remaining DOFs are θ_2 and δ_{3y} - we can restrict all other DOFs. Thus in terms of nodal sub-matrices we immediately have:

$$\begin{Bmatrix} \mathbf{F}_2 \\ \mathbf{F}_3 \end{Bmatrix} = \begin{bmatrix} \mathbf{K11} & \mathbf{K12} \\ \mathbf{K21} & \mathbf{K22} \end{bmatrix} \begin{Bmatrix} \delta_2 \\ \delta_3 \end{Bmatrix} \quad (4.5.25)$$

And expanding this further, we restrict out all other restrained DOFs:

$$\begin{Bmatrix} \cdot \\ \cdot \\ \sum M_2 \\ \cdot \\ \sum F_{3y} \\ \cdot \end{Bmatrix} = \begin{bmatrix} \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & k_{66} & \cdot & k_{68} & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \end{bmatrix} \begin{Bmatrix} \cdot \\ \cdot \\ \theta_2 \\ \cdot \\ \delta_{3y} \\ \cdot \end{Bmatrix} \quad (4.5.26)$$

The member contributions to each of these terms are:

- k_{66} = Term 66 of Member 12 + Term 33 of Member 23;
- k_{68} = Term 35 of Member 23;
- k_{86} = Term 53 of Member 23;
- k_{88} = Term 55 of Member 23.

Transformation of the member stiffness matrices is not required. Member 12 only has a rotational DOF and Member 23's local member coordinate system is parallel to the global axis coordinate system.

- Member 12:

From equation (4.5.3):

$$\text{Term 66} = \left(\frac{4EI}{L} \right)_{12} = \frac{4 \cdot 10^3}{1} = 4 \times 10^3 \quad (4.5.27)$$

- Member 23:

Again, from equation (4.5.3):

$$\text{Term 33} = \left(\frac{4EI}{L} \right)_{23} = \frac{4 \cdot 10^3}{1} = 4 \times 10^3 \quad (4.5.28)$$

$$\text{Term 35} = \left(-\frac{6EI}{L^2} \right)_{23} = -\frac{6 \cdot 10^3}{1^2} = -6 \times 10^3 \quad (4.5.29)$$


$$\text{Term 53} = \left(-\frac{6EI}{L^2} \right)_{23} = -\frac{6 \cdot 10^3}{1^2} = -6 \times 10^3 \quad (4.5.30)$$

$$\text{Term 55} = \left(\frac{12EI}{L^3} \right)_{23} = \frac{12 \cdot 10^3}{1^3} = 12 \times 10^3 \quad (4.5.31)$$

Thus the system equation becomes:

$$\begin{Bmatrix} \sum M_2 \\ \sum F_{3y} \end{Bmatrix} = 10^3 \begin{bmatrix} 8 & -6 \\ -6 & 12 \end{bmatrix} \begin{Bmatrix} \theta_2 \\ \delta_{3y} \end{Bmatrix} \quad (4.5.32)$$

The 4 kN point load is directly applied to node 3 so this causes no difficulty. The equivalent nodal loads for the UDL are:

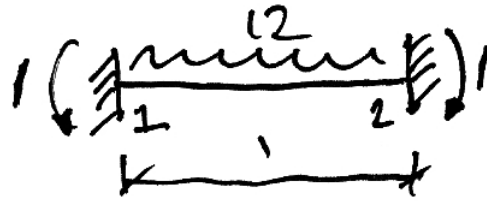

$$M_1^{12} = \frac{wL^2}{12} = \frac{12 \cdot 1^2}{12} = +1 \text{ kNm}$$

$$M_2^{12} = -\frac{wL^2}{12} = -\frac{12 \cdot 1^2}{12} = -1 \text{ kNm}$$
(4.5.33)

Notice that we do not need to find the vertical reaction forces as there is no sway of the frame and we are neglecting axial deformation.

The nodal load vector, from equation (4.4.13) is thus:

$$\{\Sigma \mathbf{F}\} = \{\mathbf{F}\} - \{\mathbf{F}_F\} = \begin{Bmatrix} 0 \\ -4 \end{Bmatrix} - \begin{Bmatrix} -1 \\ 0 \end{Bmatrix} = \begin{Bmatrix} +1 \\ -4 \end{Bmatrix}$$
(4.5.34)


And so equation (4.5.32) is thus:

$$\begin{Bmatrix} +1 \\ -4 \end{Bmatrix} = 10^3 \begin{bmatrix} 8 & -6 \\ -6 & 12 \end{bmatrix} \begin{Bmatrix} \theta_2 \\ \delta_{3y} \end{Bmatrix}$$
(4.5.35)

Which is solved to get:

$$\begin{Bmatrix} \theta_2 \\ \delta_{3y} \end{Bmatrix} = \frac{1}{10^3} \frac{1}{[8 \cdot 12 - (-6)(-6)]} \begin{bmatrix} 12 & 6 \\ 6 & 8 \end{bmatrix} \begin{Bmatrix} +1 \\ -4 \end{Bmatrix} = \begin{Bmatrix} -0.2 \\ -0.43 \end{Bmatrix} \times 10^{-3} \begin{matrix} \text{rads} \\ \text{m} \end{matrix}$$
(4.5.36)

The negative results indicate the rotation is clockwise and the displacement downwards, as may be expected:

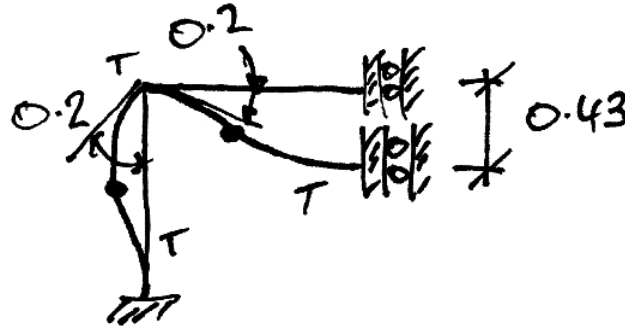

Lastly then we find the bending moments. For member 12 only the terms relating to bending moments are relevant.

- Member 12:

$$\begin{Bmatrix} M_1^{12} \\ M_2^{12} \end{Bmatrix} = \begin{Bmatrix} +1 \\ -1 \end{Bmatrix} + 10^3 \begin{bmatrix} 4 & 2 \\ 2 & 4 \end{bmatrix} \begin{Bmatrix} 0 \\ -0.2 \end{Bmatrix} 10^{-3} = \begin{Bmatrix} +0.6 \\ -1.8 \end{Bmatrix} \text{ kNm} \quad (4.5.37)$$

However, for member 23, the downwards deflection also causes moments and so the relevant DOFs are rotation of node i and vertical movement of node j (as calculated earlier). It is easier to see this if we write the member equation in full:


- Member 23:

$$\begin{Bmatrix} \cdot \\ \cdot \\ M_2^{23} \\ \cdot \\ \cdot \\ M_3^{23} \end{Bmatrix} = 10^3 \begin{bmatrix} \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & 4 & \cdot & -6 & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ \cdot & \cdot & 2 & \cdot & -6 & \cdot \end{bmatrix} \begin{Bmatrix} \cdot \\ \cdot \\ -0.2 \\ \cdot \\ -0.43 \\ \cdot \end{Bmatrix} \times 10^{-3} \quad (4.5.38)$$

Thus:

$$\begin{Bmatrix} M_2^{23} \\ M_3^{23} \end{Bmatrix} = \begin{Bmatrix} +1.8 \\ +2.2 \end{Bmatrix} \text{ kNm} \quad (4.5.39)$$

And so the BMD is:

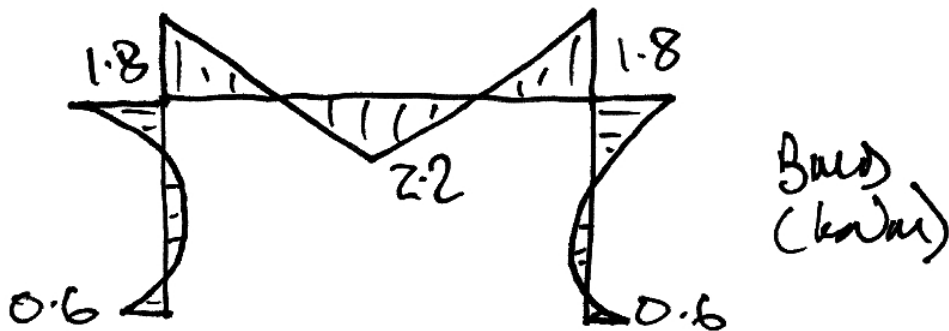


4.5.4 Problems

Problem 1


Determine the bending moment diagram and the rotation of joint 2. Take $EI = 10 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

(Ans. $\theta_2 = 5/6 \text{ mrad}$)

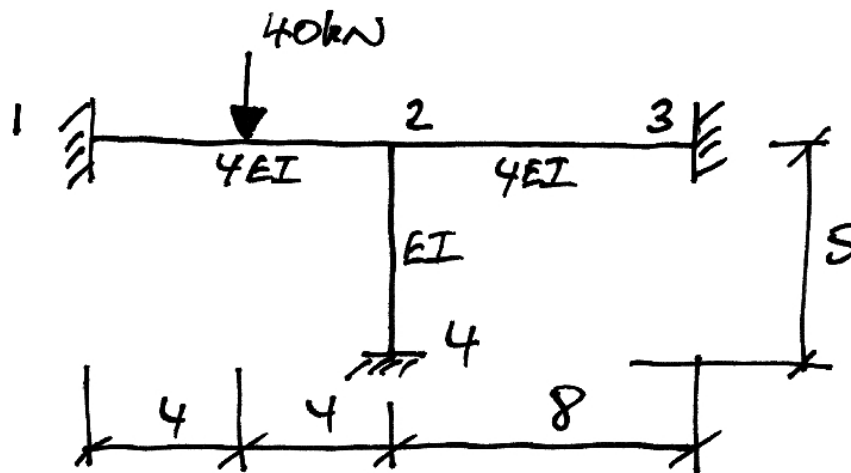


Problem 2

Determine the bending moment diagram and the rotations of joints 1 and 2. Take $EI = 20 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

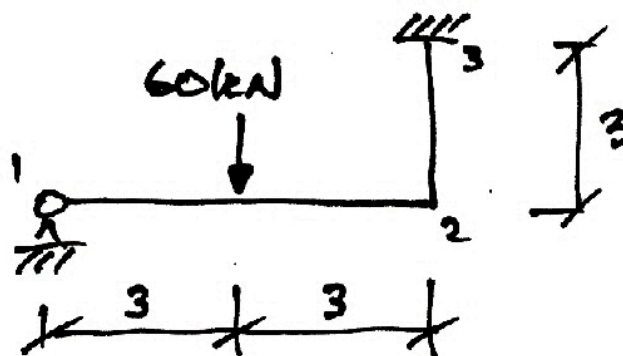


Problem 3

Determine the bending moment diagram. Take $EI = 20 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

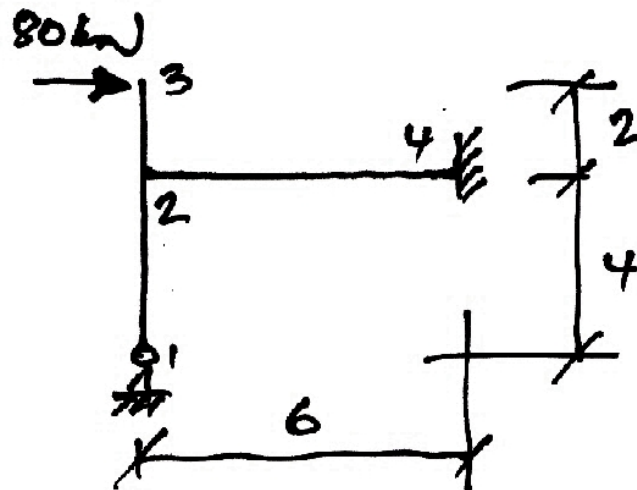**Problem 4**


Determine the bending moment diagram, the rotation of joint 2, and the horizontal displacements of joints 2 and 3. Take $EI = 10 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

(Ans. $\theta_2 = -11.33 \text{ mrad}$; $\delta_{2x} = 44.0 \text{ mm}$)

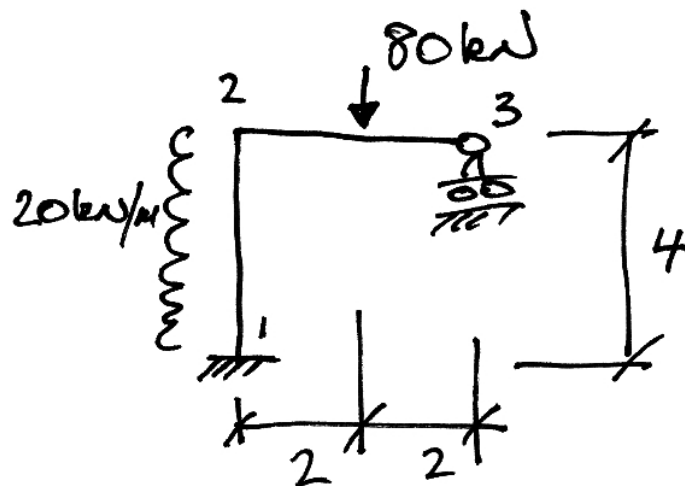


Problem 5

Determine the bending moment diagram. Take $EI = 20 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

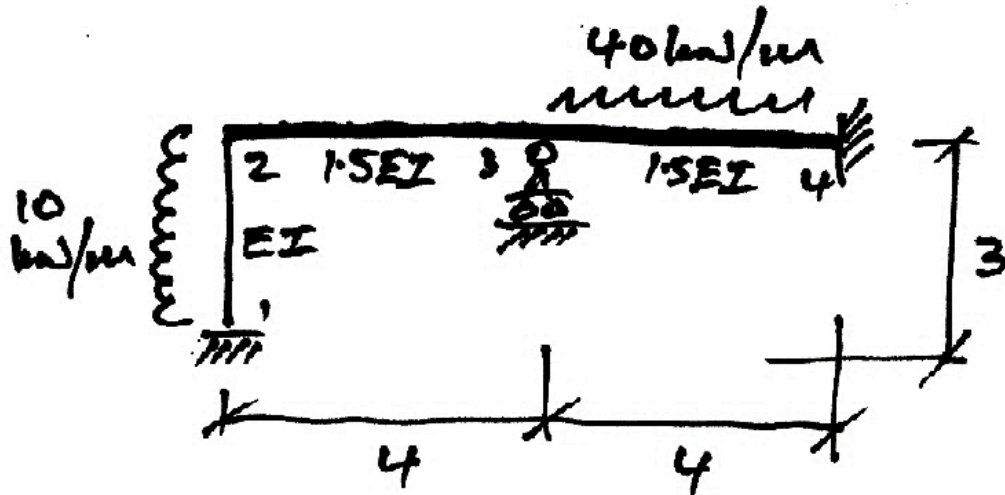

Problem 6


Determine the bending moment diagram and the vertical displacement of joint 3. Take $EI = 40 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

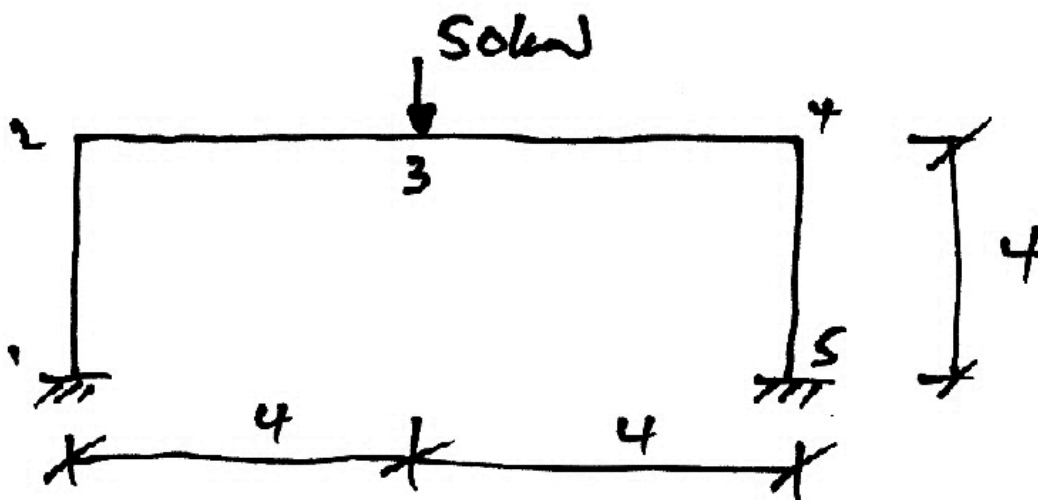

Problem 7

Determine the bending moment diagram, the rotation of joint 2, and the vertical displacement under the 80 kN point load. Take $EI = 10 \times 10^3 \text{ kNm}^2$ and neglect axial deformations.

(Ans. $\theta_2 = -1.071 \text{ mrad}$; $\delta_y = -1.93 \text{ mm}$)

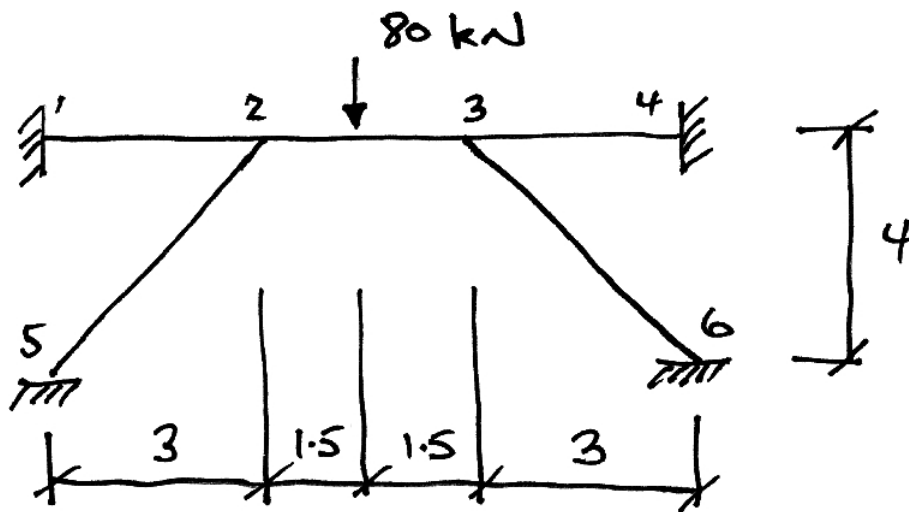
**Problem 8**

For the frame of Problem 1, determine the bending moment diagram and the rotation and vertical displacement of joint 2 if member 24 has $EA = 10 \times 10^3 \text{ kN}$. Neglect axial deformation in the other members.

(Ans. $\theta_2 = 0.833 \text{ mrad}$; $\delta_y = -0.01 \text{ mm}$)

Problem 9

Determine the bending moment diagram for the prismatic portal frame. Take $EI = 20 \times 10^3 \text{ kNm}^2$ and neglect axial deformations. You may use *Excel* or *Matlab* to perform some of the numerical calculations. Check your member stiffness and global stiffness matrices with *LinPro*, and your final results. Identify and explain discrepancies. Verify with *LUSAS*.

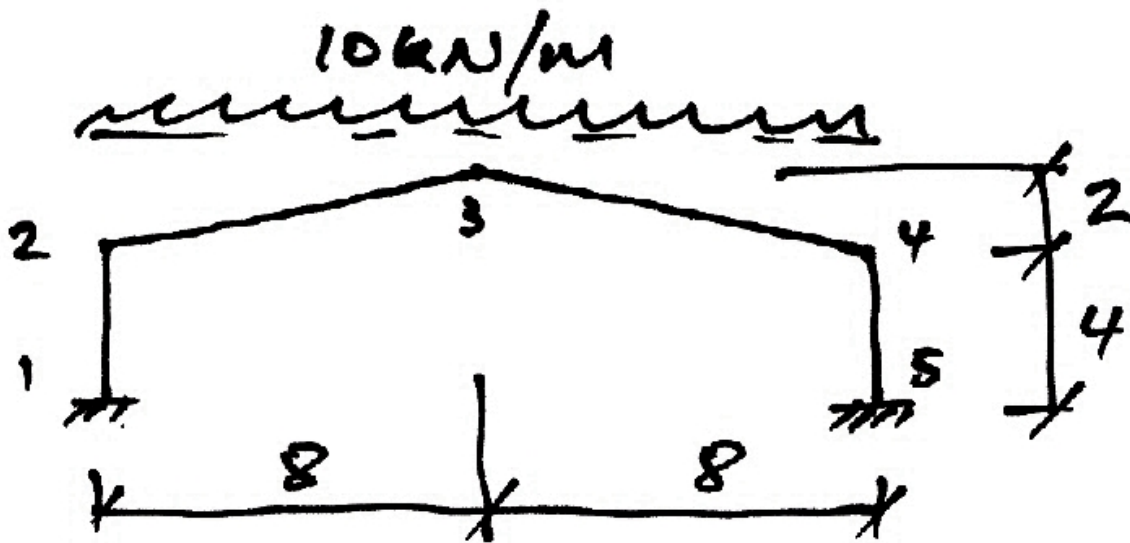


4.6 Appendix


4.6.1 Plane Truss Element Stiffness Matrix in Global Coordinates

Compatibility Conditions

Firstly we identify the conditions of compatibility of a truss element nodal deflections and the member elongation. We use the following notation for the deflections at each node of the truss:

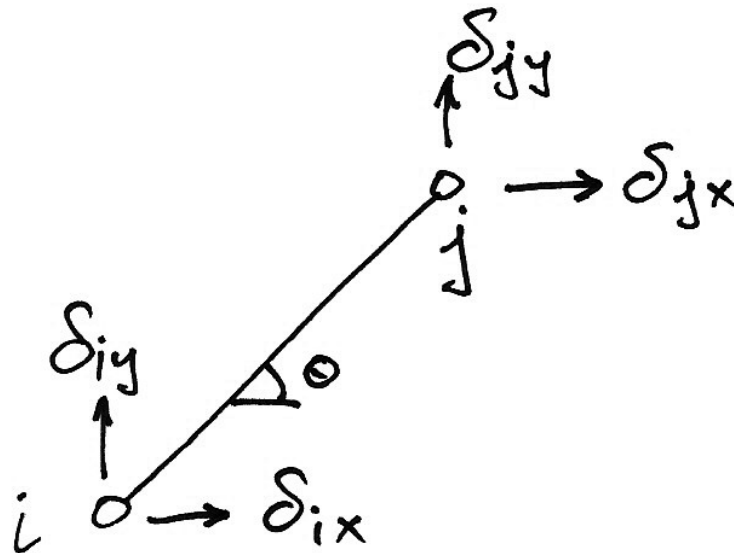


If we now consider the deflected position of the truss member, we have:

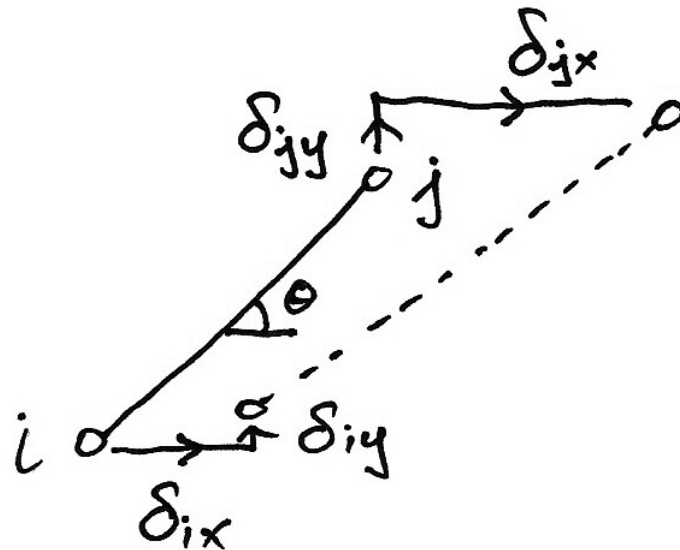


Obviously the change in length of the truss will be related to the difference between the nodal deflections. Hence, we define the changes in movements such that an elongation gives positive changes:

$$\Delta\delta_x = \delta_{jx} - \delta_{ix} \qquad \Delta\delta_y = \delta_{jy} - \delta_{iy}$$

Moving the deflected position of node i back to its original location gives:

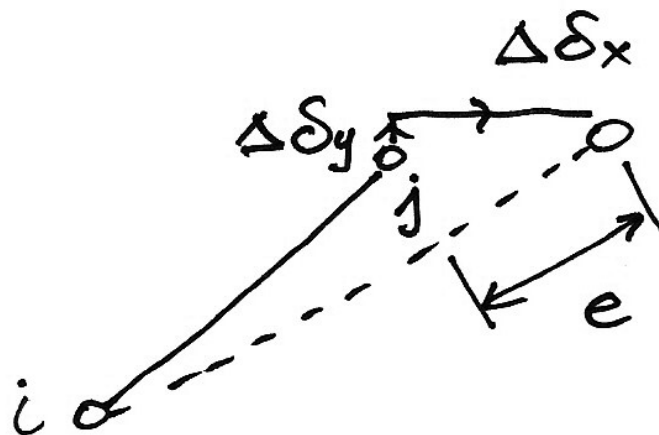

Looking more closely at the triangle of displacements at node j , and remembering that we are assuming small deflections—which in this case means the deflected position of the member is still at a rotation of θ . Hence we have:

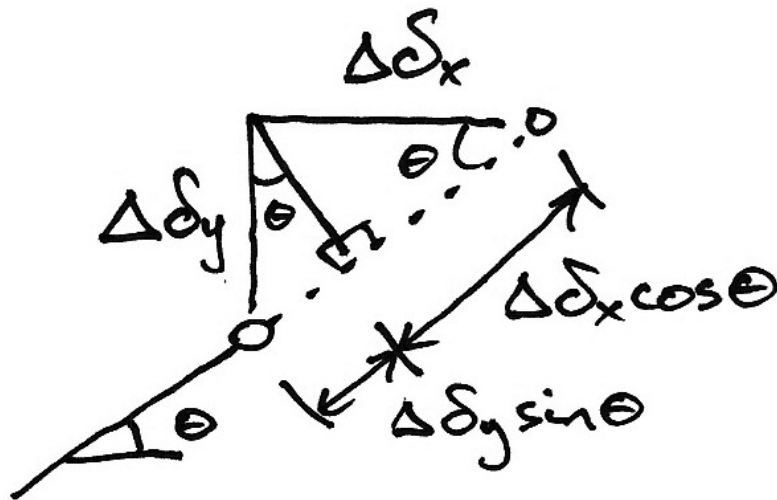

And so the elongation is given by:

$$\begin{aligned}
 e &= \Delta \delta_x \cos \theta + \Delta \delta_y \sin \theta \\
 &= (\delta_{jx} - \delta_{ix}) \cos \theta + (\delta_{jy} - \delta_{iy}) \sin \theta
 \end{aligned}
 \tag{4.6.1}$$

Now multiply out and re-order to get:

$$e = -\delta_{ix} \cos \theta + -\delta_{iy} \sin \theta + \delta_{jx} \cos \theta + \delta_{jy} \sin \theta
 \tag{4.6.2}$$

If we define a direction vector, \mathbf{a} , and a displacement vector, $\mathbf{\delta}$, as:

$$\mathbf{a} = \begin{Bmatrix} -\cos \theta \\ -\sin \theta \\ \cos \theta \\ \sin \theta \end{Bmatrix} \quad \mathbf{\delta} = \begin{Bmatrix} \delta_{ix} \\ \delta_{iy} \\ \delta_{jx} \\ \delta_{jy} \end{Bmatrix}
 \tag{4.6.3}$$


Then, from (4.6.2) and (4.6.3), we can say:

$$e = \mathbf{\alpha}^t \boldsymbol{\delta} \quad (4.6.4)$$


Thus we have related the end displacements to the elongation of the member which therefore maintain compatibility of displacement.

Virtual Work for Element Forces

Looking at the forces acting on the nodes of the bar element, we have:

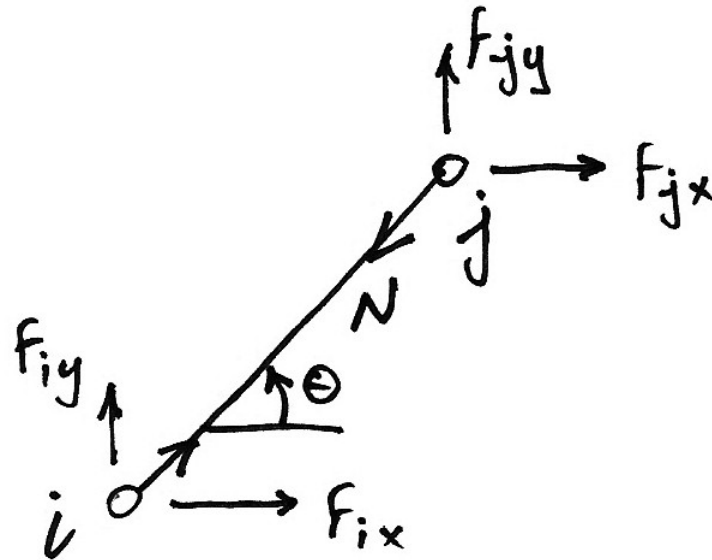

This is a force system in equilibrium—the external nodal loading is in equilibrium with the internal bar force, N . If we consider a pattern of compatible displacements such as the following:

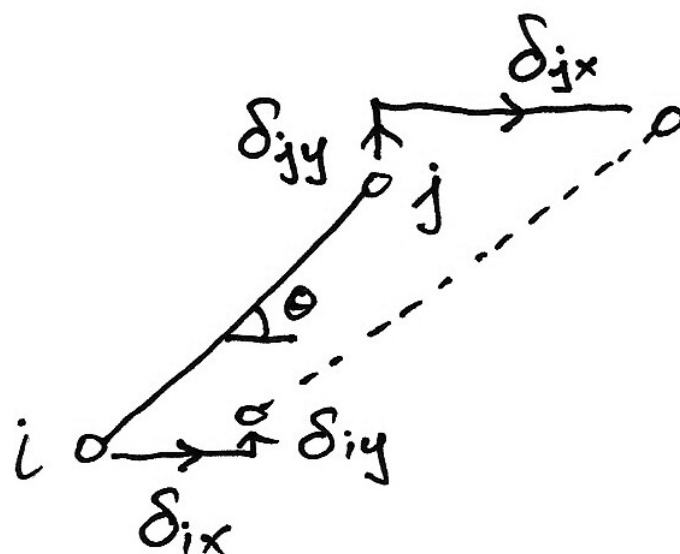

We can apply virtual work to this:

$$\begin{aligned}\delta W &= 0 \\ \delta W_E &= \delta W_I\end{aligned}$$

And we have:

Set of forces in
equilibrium

$$\sum F_i \cdot \delta y_i = \sum P_i \cdot \delta e_i$$

Set of compatible
displacements

Substituting in our notations for the bar element:

$$eN = F_{ix} \delta_{ix} + F_{iy} \delta_{iy} + F_{jx} \delta_{jx} + F_{jy} \delta_{jy} \quad (4.6.5)$$

If we define the force vector, \mathbf{F} , as:

$$\mathbf{F} = \begin{Bmatrix} F_{ix} \\ F_{iy} \\ F_{jx} \\ F_{jy} \end{Bmatrix} \quad (4.6.6)$$

Then we can write (4.6.5) as:

$\mathbf{F}' \boldsymbol{\delta} = eN$	$(4.6.7)$
--	-----------

If we use (4.6.4) we now have:

$$\mathbf{F}' \boldsymbol{\delta} = \boldsymbol{\alpha}' \delta N \quad (4.6.8)$$

Post-multiply both sides by $\boldsymbol{\delta}^{-1}$, and noting that N is a scalar, gives:


$$\mathbf{F}' = \boldsymbol{\alpha}' N$$

$$\mathbf{F} = \boldsymbol{\alpha} N \quad (4.6.9)$$

Expanding this out gives:

$$\begin{Bmatrix} F_{ix} \\ F_{iy} \\ F_{jx} \\ F_{jy} \end{Bmatrix} = \begin{Bmatrix} -N \cos \theta \\ -N \sin \theta \\ N \cos \theta \\ N \sin \theta \end{Bmatrix} \quad (4.6.10)$$

Which are the equations of equilibrium of the bar element:

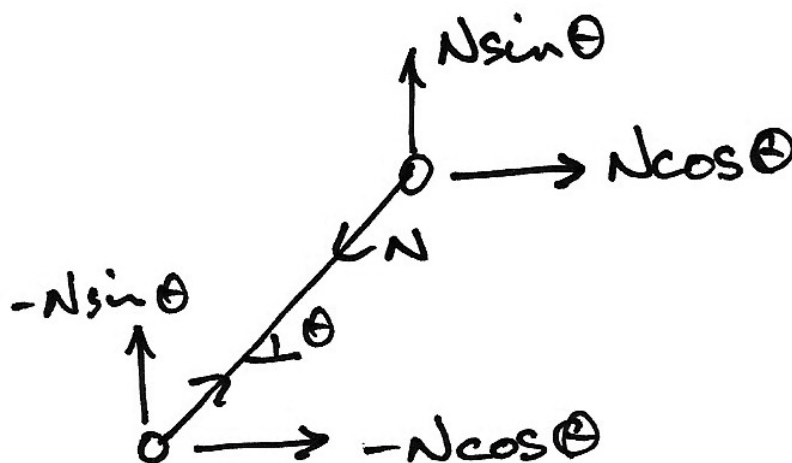

Relating Forces to Displacements

Lastly, in order to relate the end forces to the element nodal displacements, we note from the constitutive law:

$$N = \frac{EA}{L} \cdot e \quad (4.6.11)$$

And so from (4.6.9) we have:

$$\mathbf{F} = \boldsymbol{\alpha} \frac{EA}{L} e \quad (4.6.12)$$

And using equation (4.6.4) gives:

$$\mathbf{F} = \boldsymbol{\alpha} \frac{EA}{L} \boldsymbol{\alpha}' \boldsymbol{\delta} \quad (4.6.13)$$

Hence the term $\boldsymbol{\alpha} \frac{EA}{L} \boldsymbol{\alpha}'$ relates force to displacement and is called the stiffness matrix, \mathbf{k} , which is evaluated by multiplying out terms:

$$\begin{aligned} \mathbf{k} &= \boldsymbol{\alpha} \frac{EA}{L} \boldsymbol{\alpha}' \\ &= \frac{EA}{L} \begin{Bmatrix} -\cos \theta \\ -\sin \theta \\ \cos \theta \\ \sin \theta \end{Bmatrix} \begin{bmatrix} -\cos \theta & -\sin \theta & \cos \theta & \sin \theta \end{bmatrix} \end{aligned} \quad (4.6.14)$$

And multiplying this out gives:

$$\mathbf{k} = \frac{EA}{L} \begin{bmatrix} \cos^2 \theta & \cos \theta \sin \theta & -\cos^2 \theta & -\cos \theta \sin \theta \\ \cos \theta \sin \theta & \sin^2 \theta & -\cos \theta \sin \theta & -\sin^2 \theta \\ -\cos^2 \theta & -\cos \theta \sin \theta & \cos^2 \theta & \cos \theta \sin \theta \\ -\cos \theta \sin \theta & -\sin^2 \theta & \cos \theta \sin \theta & \sin^2 \theta \end{bmatrix} \quad (4.6.15)$$

And for clarity, we write out the final equation in matrix form and in full:

$$\mathbf{F} = \mathbf{k}\boldsymbol{\delta} \quad (4.6.16)$$

$$\begin{Bmatrix} F_{ix} \\ F_{iy} \\ F_{jx} \\ F_{jy} \end{Bmatrix} = \frac{EA}{L} \begin{bmatrix} \cos^2 \theta & \cos \theta \sin \theta & -\cos^2 \theta & -\cos \theta \sin \theta \\ \cos \theta \sin \theta & \sin^2 \theta & -\cos \theta \sin \theta & -\sin^2 \theta \\ -\cos^2 \theta & -\cos \theta \sin \theta & \cos^2 \theta & \cos \theta \sin \theta \\ -\cos \theta \sin \theta & -\sin^2 \theta & \cos \theta \sin \theta & \sin^2 \theta \end{bmatrix} \begin{Bmatrix} \delta_{ix} \\ \delta_{iy} \\ \delta_{jx} \\ \delta_{jy} \end{Bmatrix} \quad (4.6.17)$$

So for example, the stiffness that relates a horizontal force at node j to the horizontal displacement at node j is:


$$F_{jx} = \left(\frac{EA}{L} \cos^2 \theta \right) \delta_{jx}$$

And other relationships can be found similarly.

4.6.2 Coordinate Transformations

Point Transformation

We consider the transformation of a single point P from one coordinate axis system xy to another $x'y'$:

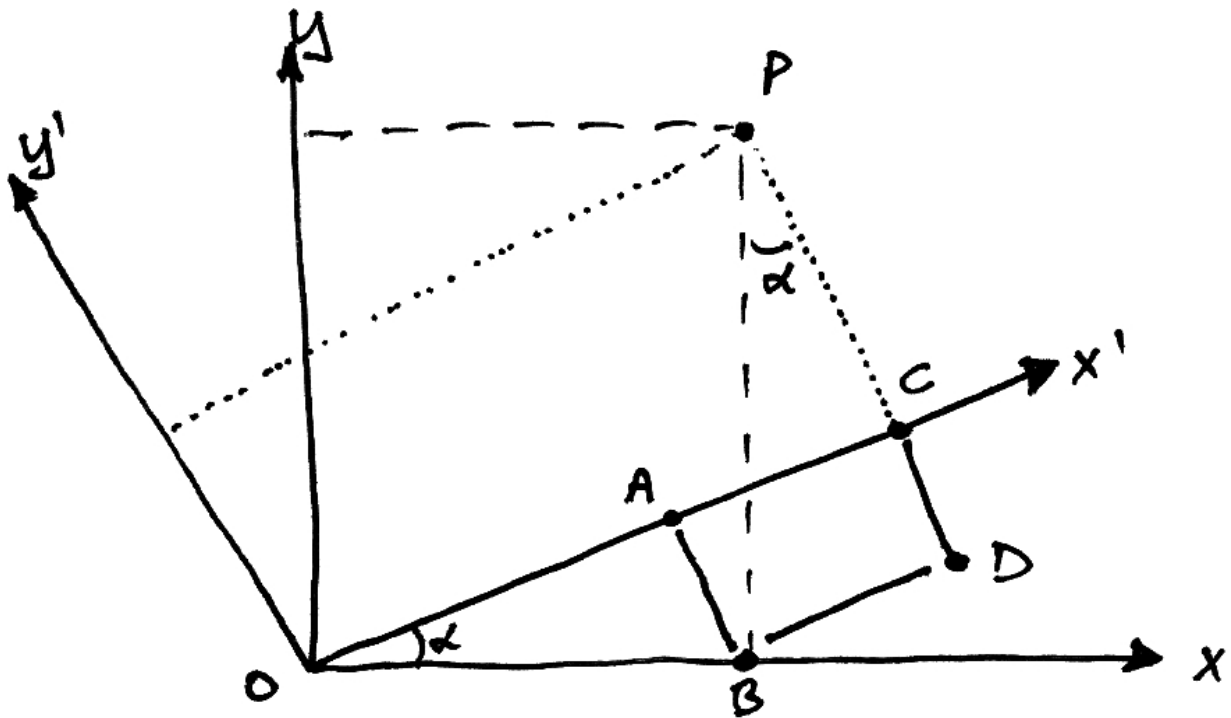

From the diagram, observe:

$$\begin{aligned} |OC| &= x' \text{ coordinate of } P \\ |PC| &= y' \text{ coordinate of } P \end{aligned} \quad (4.6.18)$$

Also:

$$\begin{aligned} |OB| &= x \text{ coordinate of } P \\ |PB| &= y \text{ coordinate of } P \end{aligned} \quad (4.6.19)$$

Next we can say:

$$|OC| = |OA| + |AC| \quad (4.6.20)$$

$$|PC| = |PD| - |CD| \quad (4.6.21)$$

Introducing the relevant coordinates:

$$|OA| = |OA| \cos \alpha = x \cos \alpha \quad (4.6.22)$$

$$|AC| = |BD| = |PB| \sin \alpha = y \sin \alpha \quad (4.6.23)$$

Thus equation (4.6.20) becomes:

$$|OC| = x' = x \cos \alpha + y \sin \alpha \quad (4.6.24)$$

Next we have:

$$|PD| = |PB| \cos \alpha = y \cos \alpha \quad (4.6.25)$$

$$|CD| = |AB| = |OB| \sin \alpha = x \sin \alpha \quad (4.6.26)$$

Thus equation (4.6.21) becomes:

$$|PC| = y' = y \cos \alpha - x \sin \alpha \quad (4.6.27)$$

Writing equations (4.6.24) and (4.6.27) together:

$$x' = x \cos \alpha + y \sin \alpha \quad (4.6.28)$$

$$y' = -x \sin \alpha + y \cos \alpha \quad (4.6.29)$$

And now in matrix form gives:

$$\begin{Bmatrix} x' \\ y' \end{Bmatrix} = \begin{bmatrix} \cos \alpha & \sin \alpha \\ -\sin \alpha & \cos \alpha \end{bmatrix} \begin{Bmatrix} x \\ y \end{Bmatrix} \quad (4.6.30)$$

Often we write:

$$\begin{aligned} c &\equiv \cos \alpha \\ s &\equiv \sin \alpha \end{aligned} \quad (4.6.31)$$

To give:

$$\begin{Bmatrix} x' \\ y' \end{Bmatrix} = \begin{bmatrix} c & s \\ -s & c \end{bmatrix} \begin{Bmatrix} x \\ y \end{Bmatrix} \quad (4.6.32)$$

Lastly, if we generically name the two coordinate systems as q and q' , we then have in matrix form:

$$\{\mathbf{q}'\} = [\mathbf{T}_N] \{\mathbf{q}\} \quad (4.6.33)$$

Where $[\mathbf{T}_N]$ is the nodal transformation matrix given by:

$$\mathbf{T}_N = \begin{bmatrix} \cos \alpha & \sin \alpha \\ -\sin \alpha & \cos \alpha \end{bmatrix} \quad (4.6.34)$$

Force/Displacement Transformation

Forces and moments can be oriented in the local member axis system or in the global structure axis system. In general we will need to transform the forces and displacements of both nodes, thus we write:

$$\begin{Bmatrix} \mathbf{F}_i' \\ \mathbf{F}_j' \end{Bmatrix} = \begin{bmatrix} \mathbf{T}_N & \mathbf{0} \\ \mathbf{0} & \mathbf{T}_N \end{bmatrix} \begin{Bmatrix} \mathbf{F}_i \\ \mathbf{F}_j \end{Bmatrix} \quad (4.6.35)$$

And finally we can write:

$$\{\mathbf{F}'\} = [\mathbf{T}]\{\mathbf{F}\} \quad (4.6.36)$$

Where:

$$[\mathbf{T}] = \begin{bmatrix} \mathbf{T}_N & \mathbf{0} \\ \mathbf{0} & \mathbf{T}_N \end{bmatrix} \quad (4.6.37)$$

Similarly for deflections:

$$\{\delta'\} = [\mathbf{T}]\{\delta\} \quad (4.6.38)$$

A very useful property of the transformation matrix (not derived here) is that it is orthogonal. This means that its transpose is equal to its inverse:

$$[\mathbf{T}]^T = [\mathbf{T}]^{-1} \quad (4.6.39)$$

Thus when either a force or displacement is known for the local axis system, it can be found in the global axis system as follows:

$$\{\mathbf{F}\} = [\mathbf{T}]^T \{\mathbf{F}'\} \quad (4.6.40)$$

$$\{\boldsymbol{\delta}\} = [\mathbf{T}]^T \{\boldsymbol{\delta}'\} \quad (4.6.41)$$

Transformations for Plane Truss Element

For a plane truss member, there will be x and y components of force at each of its nodes. Using the transformation for a point, we therefore have:

$$\begin{Bmatrix} F_{x'} \\ F_{y'} \end{Bmatrix} = \begin{bmatrix} \cos \alpha & \sin \alpha \\ -\sin \alpha & \cos \alpha \end{bmatrix} \begin{Bmatrix} F_x \\ F_y \end{Bmatrix} \quad (4.6.42)$$

And so for a truss element, we have directly from equation (4.6.34):

$$\mathbf{T}_N = \begin{bmatrix} \cos \alpha & \sin \alpha \\ -\sin \alpha & \cos \alpha \end{bmatrix} \quad (4.6.43)$$

And so, from equation (4.6.37),

$$[\mathbf{T}] = \begin{bmatrix} \cos \alpha & \sin \alpha & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & 0 \\ 0 & 0 & \cos \alpha & \sin \alpha \\ 0 & 0 & -\sin \alpha & \cos \alpha \end{bmatrix} \quad (4.6.44)$$

For clarity, we write the transformation out in full:

$$\begin{Bmatrix} F_{ix'} \\ F_{iy'} \\ F_{jx'} \\ F_{jy'} \end{Bmatrix} = \begin{bmatrix} \cos \alpha & \sin \alpha & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & 0 \\ 0 & 0 & \cos \alpha & \sin \alpha \\ 0 & 0 & -\sin \alpha & \cos \alpha \end{bmatrix} \begin{Bmatrix} F_{ix} \\ F_{iy} \\ F_{jx} \\ F_{jy} \end{Bmatrix} \quad (4.6.45)$$

Transformations for Plane Frame Element

Based on the DOF transformation matrix for a plane truss member (in terms of forces), we can determine the transformation matrix for a plane frame node quite easily:

$$\begin{Bmatrix} F_x^e \\ F_y^e \\ M^e \end{Bmatrix} = \begin{bmatrix} \cos \alpha & \sin \alpha & 0 \\ -\sin \alpha & \cos \alpha & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{Bmatrix} F_x \\ F_y \\ M \end{Bmatrix} \quad (4.6.46)$$

This is because a moment remains a moment in the plane. So for a single node, and both nodes, we have, respectively:

$$\{\mathbf{F}'\} = [\mathbf{T}_N] \{\mathbf{F}\} \quad (4.6.47)$$

$$\begin{Bmatrix} \mathbf{F}'_i \\ \mathbf{F}'_j \end{Bmatrix} = \begin{bmatrix} \mathbf{T}_N & \mathbf{0} \\ \mathbf{0} & \mathbf{T}_N \end{bmatrix} \begin{Bmatrix} \mathbf{F}_i \\ \mathbf{F}_j \end{Bmatrix} \quad (4.6.48)$$

Thus, we can now write the final transformation matrix for a plane frame element as:

$$\mathbf{T} = \begin{bmatrix} \cos \alpha & \sin \alpha & 0 & | & 0 & 0 & 0 \\ -\sin \alpha & \cos \alpha & 0 & | & 0 & 0 & 0 \\ 0 & 0 & 1 & | & 0 & 0 & 0 \\ \hline 0 & 0 & 0 & | & \cos \alpha & \sin \alpha & 0 \\ 0 & 0 & 0 & | & -\sin \alpha & \cos \alpha & 0 \\ 0 & 0 & 0 & | & 0 & 0 & 1 \end{bmatrix} \quad (4.6.49)$$

Element Stiffness Matrix Transformation

Using the general expression for a single element:

$$\mathbf{F}^e = \mathbf{K}^e \boldsymbol{\delta}^e \quad (4.6.50)$$

Regardless of member type or the number of dimensions, we will always have some coordinate transform from local to global coordinates such that:

$$\mathbf{F}^e = \mathbf{T}\mathbf{F} \quad (4.6.51)$$

$$\boldsymbol{\delta}^e = \mathbf{T}\boldsymbol{\delta} \quad (4.6.52)$$

Hence from equation (4.6.50) we can write:

$$\mathbf{T}\mathbf{F} = \mathbf{K}^e \mathbf{T}\boldsymbol{\delta} \quad (4.6.53)$$

And so the force-displacement relationship in the global axis system is:

$$\mathbf{F} = [\mathbf{T}^{-1} \mathbf{K}^e \mathbf{T}] \boldsymbol{\delta} \quad (4.6.54)$$

The term in brackets can now be referred to as the element stiffness matrix in global coordinates. Thus, using equation (4.6.39), we write:

$$\mathbf{K}_G^e = \mathbf{T}^T \mathbf{K}_L^e \mathbf{T} \quad (4.6.55)$$

4.6.3 Past Exam Questions

Summer 2001

1. (a) On erecting the plane pin-jointed frame shown in Fig. Q1 the member 12 is found to be 30 mm too long and is forced into place. The member 14 is then heated by 100°C . Then the external 100 kN vertical load is applied at node 1. Using the *Stiffness Method of Analysis*, determine the displacement of the joints and the forces in members 12 and 14. (20 marks)
- (b) If member 13 is removed, and the same conditions apply as in (a) above, (i.e. member 12 is 30 mm too long, member 14 is heated by 100°C , and the external 100 kN vertical load is applied at node 1), using the *Stiffness Method of Analysis*, determine the displacement of the joints. (5 marks)

Assume $EA = 2 \times 10^9 \text{ kN}$.

Assume the coefficient of thermal expansion $\alpha = 2 \times 10^{-5}$ per $^{\circ}\text{C}$.

The cross-sectional area of the members is as follows:

Horizontal member 12:	$3A$
Horizontal member 15:	$2A$
Diagonal member 13:	$3\sqrt{2}A$
Vertical member 14:	$3A$

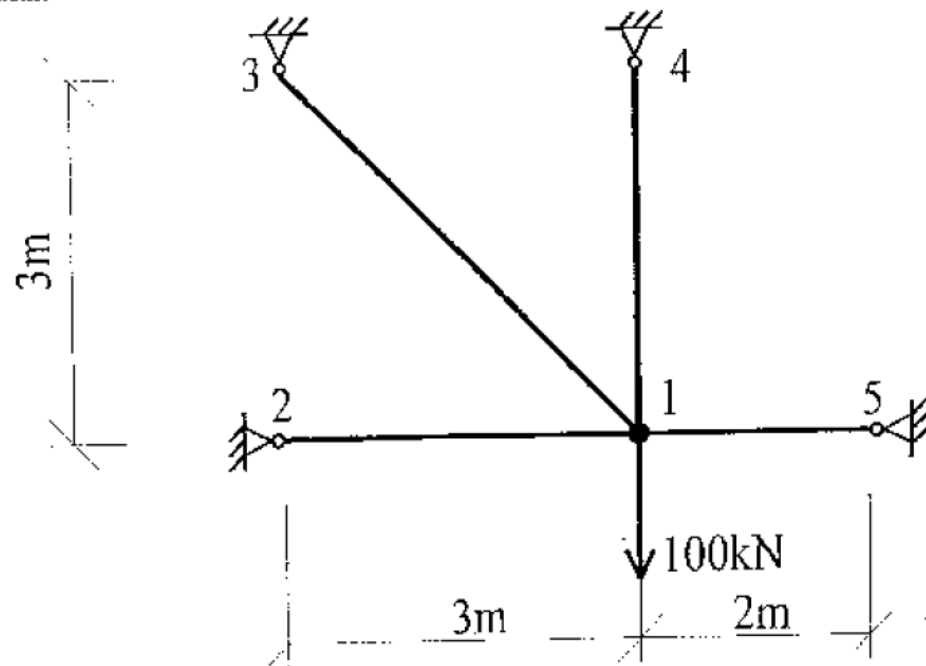


FIG. Q1

Summer 2002

1. (a) On erecting the plane pin-jointed frame shown in Fig. Q 1 the member 13 is found to be $6\sqrt{2}$ mm too long and is forced into place. The member 15 is then heated by 100°C . Then the external 100 kN vertical load is applied at node 1. Using the *Stiffness Method of Analysis*, determine the displacement of the joints and the forces in the members. (20 marks)

- (b) If member 14 is removed, and the same conditions apply as in (a) above, (i.e. member 13 is $6\sqrt{2}$ mm too long, member 15 is heated by 100°C , and the external 100 kN vertical load is applied at node 1), using the *Stiffness Method of Analysis*, determine the displacement of the joints. (5 marks)

Assume $EA = 2 \times 10^4$ kN.

Assume the coefficient of thermal expansion $\alpha = 2 \times 10^{-5}$ per $^\circ\text{C}$.

The cross-sectional area of the members is as follows:

Horizontal member 12:	3A
Horizontal member 16:	3A
Diagonal member 13	$3\sqrt{2} A$
Diagonal member 15	$3\sqrt{2} A$
Vertical member 14 :	6A

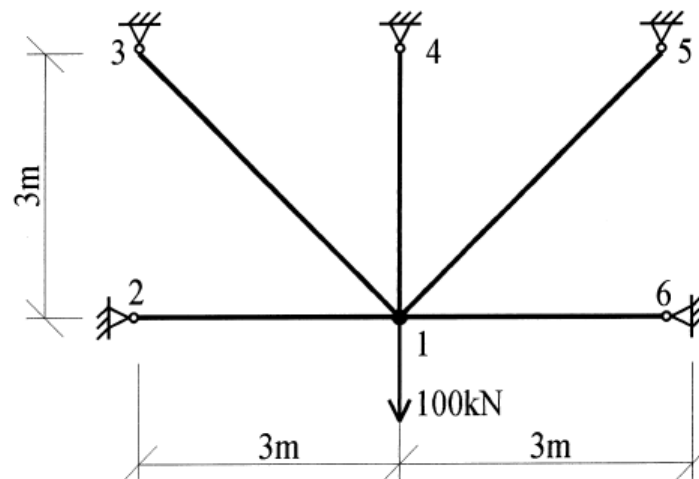


FIG. Q1

Summer 2004

1. (a) On erecting the plane pin-jointed frame shown in Fig. Q1, the members 12 and 23 were each found to be 5 mm too long and were forced into place. Then the external 200 kN vertical load was applied at node 2.

Using the Stiffness Method of Analysis, determine the displacement of the joints and the forces in members 12 and 23.

Assume $EA = 2 \times 10^4$ kN.

The cross-section area of the members is as follows:

Horizontal members 12, 23, 45, 56:	A
Diagonal members 15, 26, 24, 35:	$\sqrt{2} A$
Vertical member 25:	2 A

Note: diagonals are not interconnected at their junction. (20 marks)

- (b) Identify qualitatively the forces in the other members i.e. compression, tension, or zero force. (5 marks)

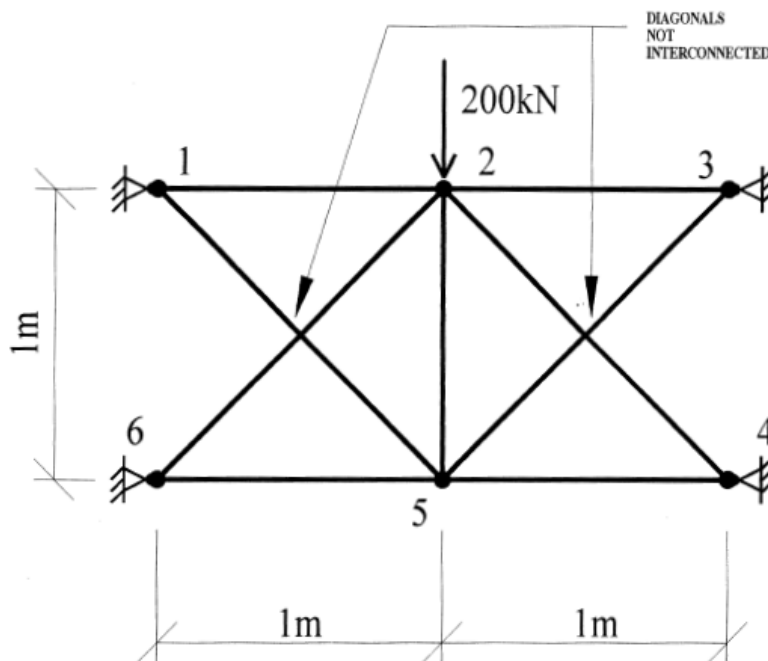


FIG. Q1

Summer 2006

1. Using the stiffness method of analysis determine the displacement of the joints and the forces in the members of the plane pin-jointed frame shown in Fig. Q1 for *each* of load cases (a) and (b) below acting *separately*:
- A proposed vertical load of 100 kN to be applied at joint 1 as shown, with all members being the correct length.
 - On erecting the truss if the member 12 is 5mm too short and is forced into place and then the member 15 is heated by 125 degrees C above normal, and *NO* external 100 kN load applied.

Assume $EA = 2 \times 10^4$ kN and the coefficient of thermal expansion $\alpha = 2 \times 10^{-5}$ per deg. C.

The cross-sectional area of the members is as follows:

Horizontal members 12 and 15:	A
Diagonal members 13 and 14:	$\sqrt{2} A$

(25 marks)

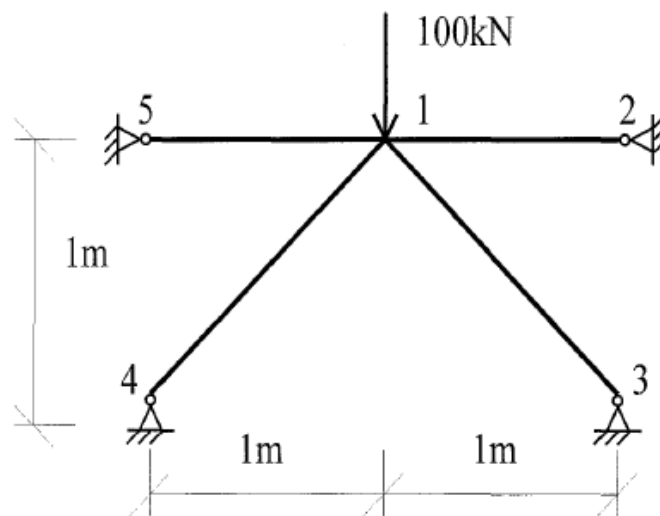


FIG. Q1

Sample Paper 2006/7

1. (a) Using the stiffness method, determine the displacement of the joints of the pin-jointed truss shown in Fig. Q1(a), under the load as shown.

(10 marks)

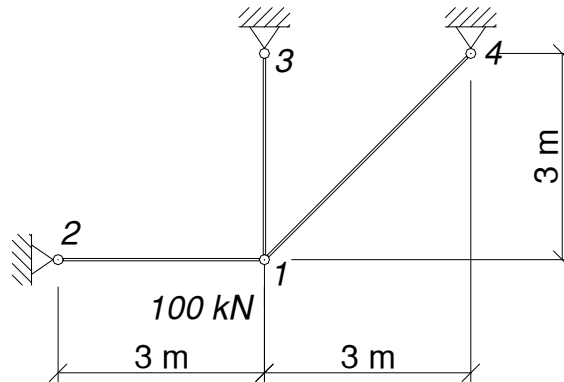


FIG. Q1(a)

- (b) Members 15 and 16 are added to the truss of Fig. 1(a) to form the truss shown in Fig. Q1(b). However, member 16 is found to be 15 mm too long and is forced into place. The same load of 100 kN is again to be applied. Using the stiffness method, determine the displacement of the joints and the force in member 16.

(15 marks)

Take $EA = 2 \times 10^4$ kN and the cross sectional areas of the members as:

Members 12, 13, and 16: $3A$;
 Diagonal Members 14 and 15: $3\sqrt{2}A$.

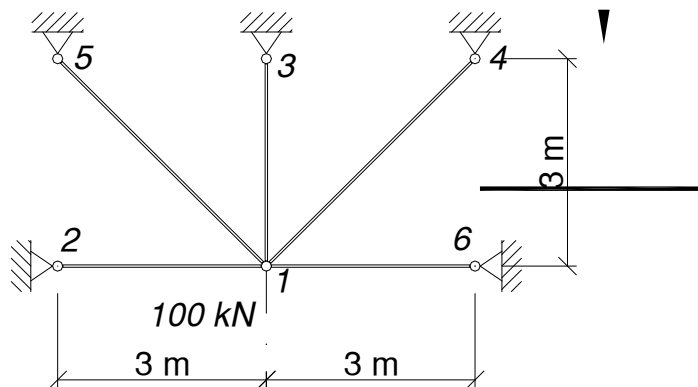


FIG. Q1(b)

Ans. (a) 25 kN; 75 kN; $25\sqrt{2}$ kN;

(b) $50\sqrt{2}$ kN; 156.1 kN; 60.4 kN; $-100\sqrt{2}$ kN; $-50\sqrt{2}$ kN

Semester 1 2006/7

1. Using the stiffness method, determine the displacement of the joints and the forces in the members of the pin-jointed truss shown in Fig. Q1, allowing for:

- (i) The 100 kN vertical load as shown, and;
- (ii) A lack of fit of member 12, which was found to be 5 mm too short upon arrival at site, and which was then forced into place.

Take $EA = 2 \times 10^4$ kN and the cross sectional areas of the members as:

- Members 12: $3A$;
- Members 13 and 14: $3\sqrt{2}A$.

(25 marks)

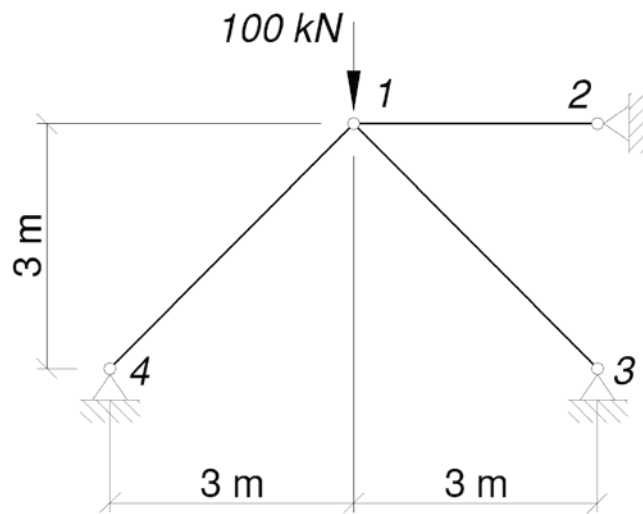


FIG. Q1

Ans. 50 kN; $-75\sqrt{2}$ kN; $-25\sqrt{2}$ kN.

Semester 1 Repeat 2006/7

1. Using the stiffness method, determine the displacement of the joints and the forces in the members of the pin-jointed truss shown in Fig. Q1, allowing for:

- (i) The 100 kN vertical load as shown, and;
- (ii) A lack of fit of member 12, which was found to be $10\sqrt{2}$ mm too short upon arrival at site, and which was then forced into place.

Take $EA = 2 \times 10^4$ kN and the cross sectional areas of all members as $3\sqrt{2}A$.

(25 marks)

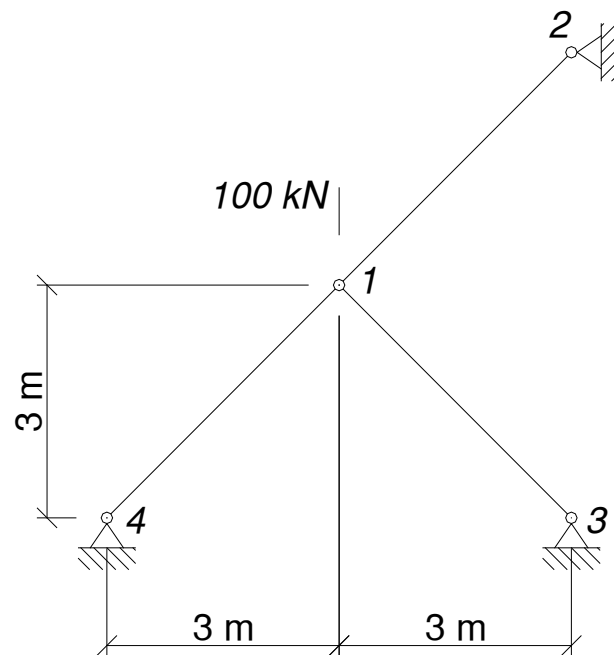


FIG. Q1

Ans. $125\sqrt{2}$ kN; $-50\sqrt{2}$ kN; $-75\sqrt{2}$ kN.

Semester 1 2007/8

QUESTION 1

Using the stiffness method, determine the displacement of the joints and the forces in the members of the pin-jointed truss shown in Fig. Q1, allowing for:

- (i) The 100 kN load as shown, and;
- (ii) A lack of fit of member 13, which was found to be 4 mm too short upon arrival at site, and which was then forced into place;
- (iii) A temperature rise of 20 °C in member 24.

Note:

Take $EA = 125 \times 10^3$ kN and the coefficient of thermal expansion $\alpha = 2 \times 10^{-5}$ °C⁻¹.

(25 marks)


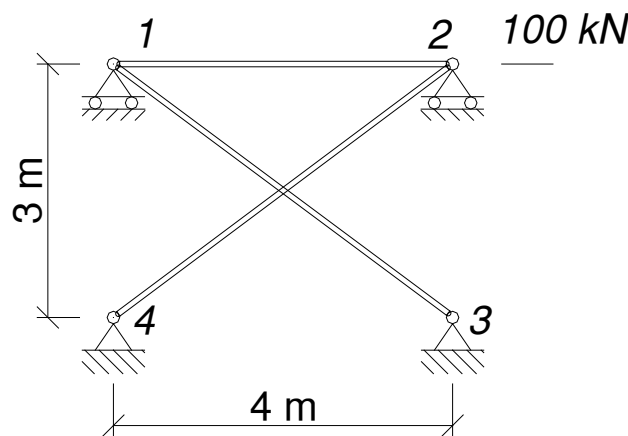


FIG. Q1

Ans. -55.7 kN; +69.7 kN; -55.3 kN.

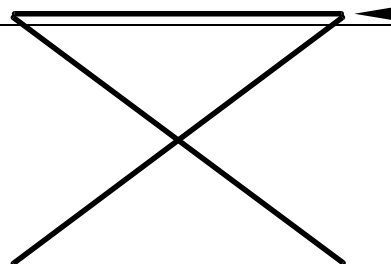

Semester 1 2008/9

QUESTION 1

Using the stiffness method, for the continuous beam shown in Fig. Q1, do the following:

- (i) determine the displacement of the joints;
- (ii) draw the bending moment diagram;
- (iii) determine the reactions.

Note:

Take $EI = 10 \times 10^3 \text{ kNm}^2$.

(25 marks)

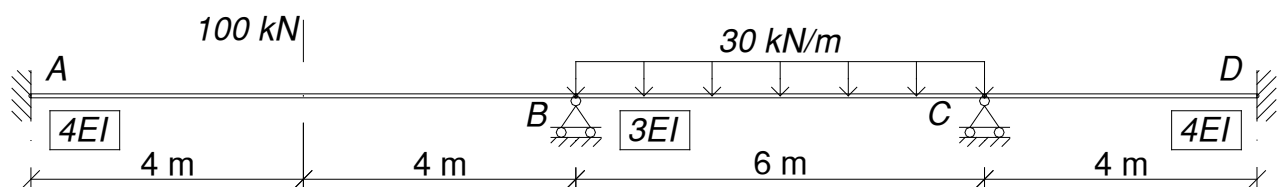


FIG. Q1

Ans. 98.7 kNm; 102.6 kNm; 60.9 kNm.

Semester 1 2009/10

QUESTION 1

Using the stiffness method, for the frame shown in Fig. Q1, do the following:

- (i) determine the vertical displacement at the centre of the middle span;
- (ii) draw the bending moment diagram;
- (iii) determine the reactions.

Note:

Take $EI = 10 \times 10^3 \text{ kNm}^2$.

(25 marks)

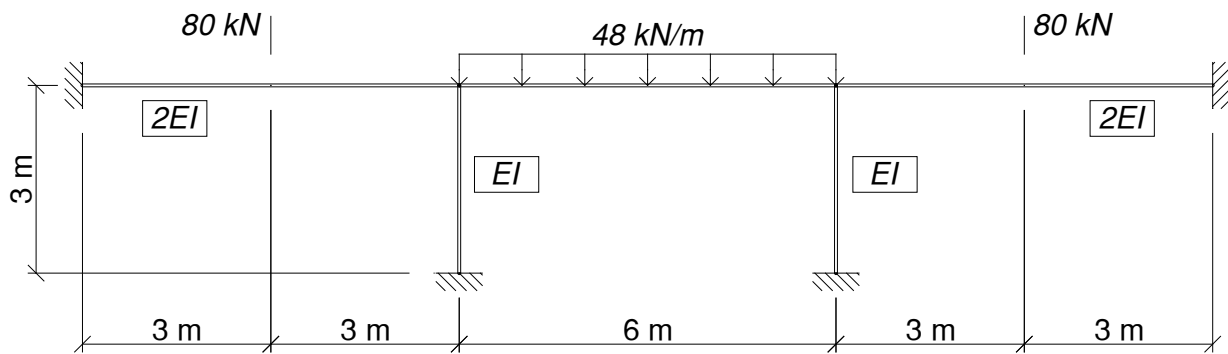


FIG. Q1

Ans. -11.88 mm

Semester 1 2010/11

QUESTION 1

Using the stiffness method, for the truss shown in Fig. Q1:

(a) Determine:

- (i) The displacement of the joints;
- (ii) The forces in the members;
- (iii) The deflected shape of the structure.

(15 marks)

(b) Determine the lack of fit of member 23, which would result in no horizontal displacement of joint 2 under the 100 kN load shown.

(10 marks)

Note:

- Take $E = 200 \text{ kN/mm}^2$ for all members.
- Area for member 12 is $A = 400\sqrt{10} \text{ mm}^2$.
- Area for member 23 is $A = 960 \text{ mm}^2$.
- Area for member 13 is $A = 640\sqrt{2} \text{ mm}^2$.

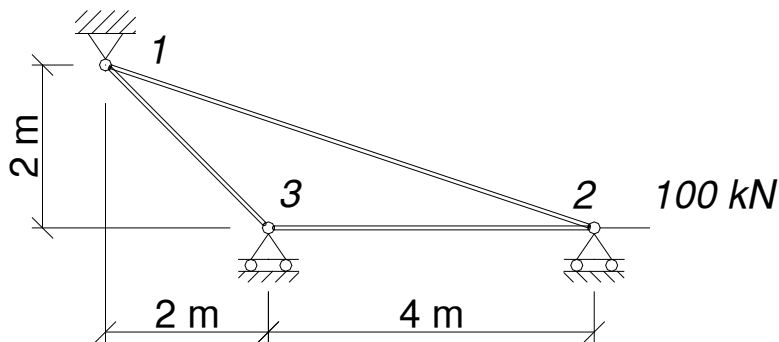


FIG. Q1

Ans. 68.7 kN, 34.6 kN, 49.3 kN; 5.21 mm.

4.7 References

- Albery, J., Carstensen, C. and Funken, S.A. (1999), ‘Remarks around 50 lines of Matlab: short finite element implementation’, *Numerical Algorithms*, 20, pp. 117-137, available at: [web address](#).
- Brown, D.K. (1990), *An Introduction to the Finite Element Method using Basic Programs*, 2nd Edn., Taylor and Francis, London.
- Carroll, W.F. (1999), *A Primer for Finite Elements in Elastic Structures*, John Wiley & Sons, New York.
- Coates, R.C., Coultie, M.G. and Kong, F.K. (1987), *Structural Analysis*, Chapman and Hall.
- Davies, G.A.O. (1982), *Virtual Work in Structural Analysis*, John Wiley & Sons.
- Desai, C.S. and Abel, J.F. (1972), *Introduction to the Finite Element Method: A Numerical Method for Engineering Analysis*, Van Nostrand Reinhold, New York.
- Ghali, A. and Neville, A.M. (1997), *Structural Analysis – A unified classical and matrix approach*, 4th edn., E&FN Spon, London.
- McGuire, W., Gallagher, R.H. and Ziemian, R.D. (2000), *Matrix Structural Analysis*, 2nd Edn., John Wiley & Sons.
- Meek, J.L. (1991), *Computer Methods in Structural Analysis*, 2nd Edn., E&FN Spon.
- Przemieniecki, J.S. (1968), *Theory of Matrix Structural Analysis*, McGraw-Hill, New York.
- Sack, R.L. (1989), *Matrix Structural Analysis*, Waveland Press, Prospect Heights, Illinois, US.
- Thompson, F., and Haywood, G.G. (1986), *Structural Analysis Using Virtual Work*, Chapman and Hall.
- Weaver, W. and Gere, J.M (1990), *Matrix Analysis of Framed Structures*, 3rd Edn., Van Nostrand Reinhold, New York.