



University of Global Village (UGV), Barishal

ETABS and SAFE (Complete RCC Building Project Development)

Content of Laboratory Course



Prepared By

Oaisul Mostofa Karim
Lecturer
Department of Civil Engineering
University of Global Village (UGV)

Program: B.Sc. in CE



BASIC COURSE INFORMATION

Course Title	ETABS and SAFE (Complete RCC Building Project Development)
Course Code	CE 0732-3102
Credits	01
CIE Marks	30
SEE Marks	20
Exam Hours	2 hours (Semester Final Exam)
Level	8 th Semester

ASSESSMENT PATTERN

CIE- Continuous Internal Evaluation (30 Marks)

SEE- Semester End Examination (20 Marks)

SEE- Semester End Examination (40 Marks) (should be converted in actual marks (20))

Bloom's Category	Tests
Remember	05
Understand	07
Apply	08
Analyze	07
Evaluate	08
Create	05

CIE- Continuous Internal Evaluation (100 Marks) (should be converted in actual marks (30))

Bloom's Category Marks (out of 100)	Lab Final (30)	Lab Report (10)	Continuous lab performance (30)	Presentation & Viva (10)	External Participation in Curricular/ Final Project Exhibition (10)
Remember/ Imitation	05		05	02	Attendance 10
Understand/ manipulation	05	05	05	03	
Apply/ Precision	05		05		
Analyze/ Articulation	05		05		
Evaluate/ Naturalisation	05	05	05		
Create	05		05	05	



Course Title: ETABS and SAFE (Complete RCC Building Project Development)

Covered Course: Structural Analysis and Design-III Sessional

COURSE CODE: CE 0732-3202

CREDIT: 01

CIE MARKS: 30

SEE MARKS: 20

- CLO1** **Master Structural Modeling and Analysis:** Students will learn to model and analyze RCC buildings using ETABS and SAFE, incorporating all relevant load combinations such as dead load, live load, wind load, and seismic load.
- CLO2** **Design Structural and Foundation Elements:** Students will be able to design key structural elements (beams, columns, slabs) and foundations (isolated, combined footings) to meet safety, serviceability, and code compliance requirements.
- CLO3** **Develop Reinforcement Detailing:** Students will gain proficiency in generating detailed reinforcement drawings and schedules for all structural components, ensuring practical applicability in construction.
- CLO4** **Integrate Cost Estimation and Code Compliance:** Students will acquire the ability to perform project cost estimation and ensure compliance with building codes like BNBC-2020 and ASCE-7, optimizing designs for cost efficiency and sustainability.

Sl.	Course Contents	Hours	CLOs
1	<p>Material Assigning: Assigning grade of concrete and steel, Inserting the value of E, Poison's ratio and Density of RC, Drawing frame Sections (column & beam).</p> <p>Dead and Live Load Assign: Assigning main wall load, partition wall load, assigning Parapet wall load, floor finished, live loads according to BNBC/ACI guidelines</p> <p>Wind and Earthquake Load Assign: Calculating and assigning base share in X and Y direction, and assign load combination.</p>	40	CLO 1, CLO 3
2	Basic Command for SAFE, Design of column footing, combined footing, mat foundation, pile foundation and pile cap, and group pile.	20	CLO 2, CLO 3
3	Complete project submission in pdf file and model submission	20	CLO 4

References:

Bangladesh National Building Code (BNBC) 1993

ETABS Version 9.6.2 User's Guide

WEEK	TOPIC	TEACHING-LEARNING STRATEGY	ASSESSMENT STRATEGY	CORRESPONDING CLOs
01-02	Multi-storied building frame by ETABS	LECTURE, DISCUSSION	Individual model checking	CLO1
03-04	Multi-storied building frame by ETABS	LECTURE, DISCUSSION	Individual model checking	CLO3
05	Introduction to the project by SAFE	LECTURE, DISCUSSION	Individual model checking	CLO1
06-09	Define various properties of new model	LECTURE, DISCUSSION	Individual model checking	CLO2
10-11	Draw various parts of model and add design strips	LECTURE, DISCUSSION	Individual model checking	CLO3
12-13	Assign Loads, Analysis	LECTURE, DISCUSSION	Individual model checking	CLO2
14-15	Design Display, Run the project, create Final Report		Individual model checking	CLO3
16	Doubt Solving Class	Discussion		
17	Final Assessment	Lab Quiz, Practical exam	Written, Viva	CLO1

Assessment Strategy

CIE- Continuous Internal Evaluation (60 Marks) (Should be converted in 30 marks)

Bloom's Category Marks (out of 60)	Lab Final (30)	Lab Report (10)	Continuous lab performance (10)	Presentation & Viva (10)	External Participation in Curricular/Co-Curricular Activities (10)
Remember	05			02	Attendance 10
Understand	05	05	02	03	
Apply	05		02		
Analyze	05		02		
Evaluate	05	05	02		
Create	05		02	05	

SEE- Semester End Examination (40 Marks) (Should be converted in 20 marks)

Bloom's Category	Tests
Remember	05
Understand	05
Apply	10
Analyze	05
Evaluate	05
Create	10



WEEK 01-02

Multi-storied building frame by ETABS

MULTI-STORIED BUILDING FRAME UNDER ALL LOADS

Objective: Analyze the following 9-Storeyed residential building under all loads and find out the following items;

1. Supports Reactions for foundation design
2. Column Axial forces
3. Beams forces

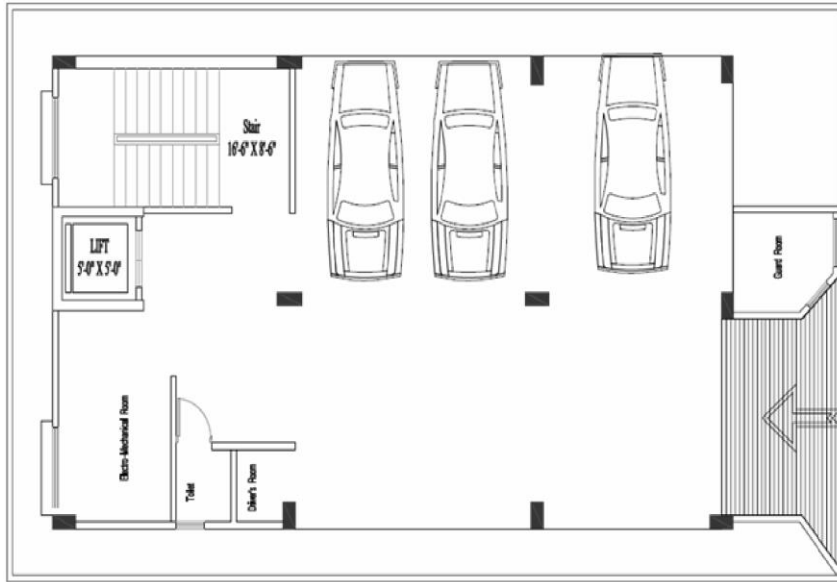


Fig. 4.1 : Ground Floor Plan

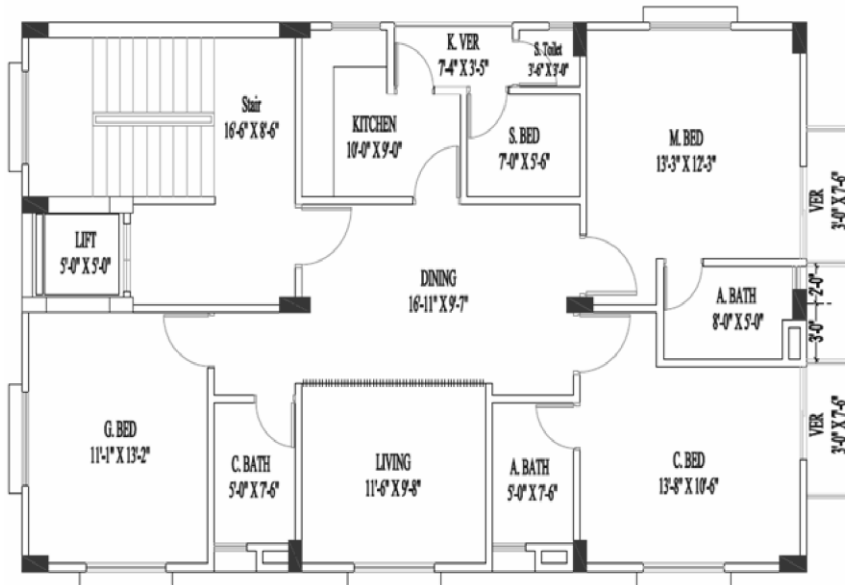


Fig. 4.2: Typical Floor Plan

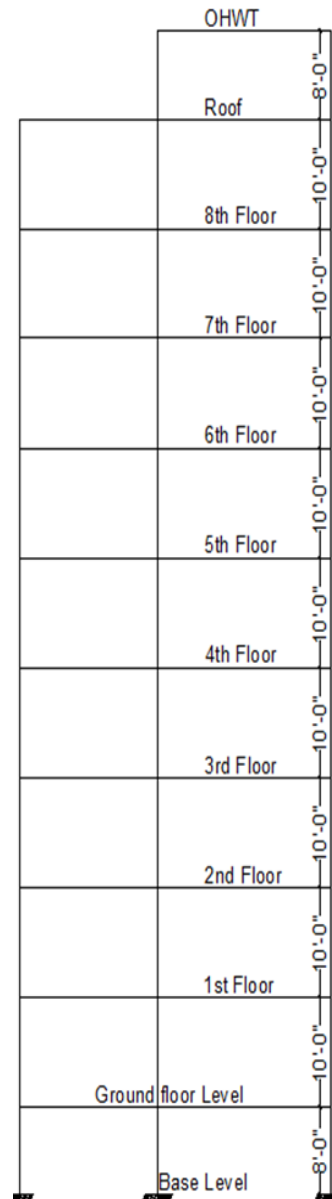


Fig. 4.3: Elevation view

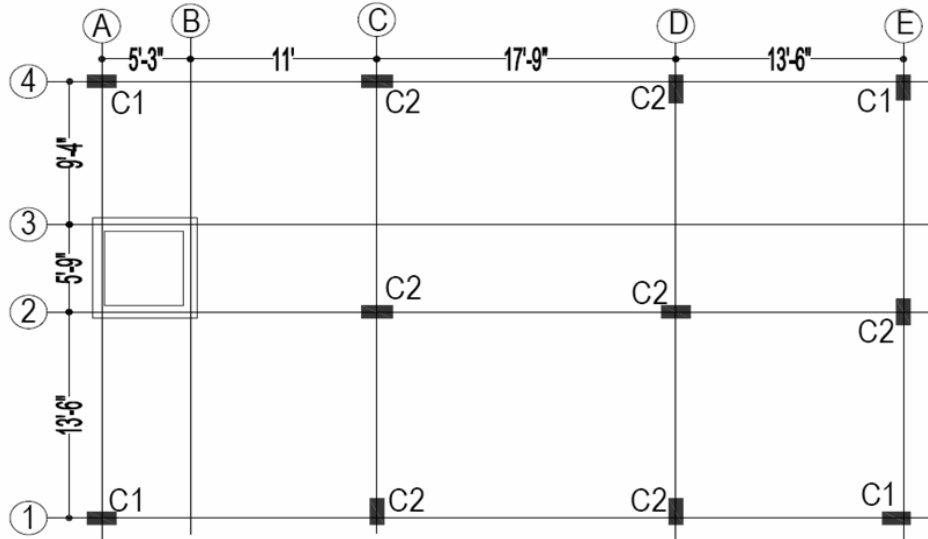


Fig. 4.4: Column Layout Plan

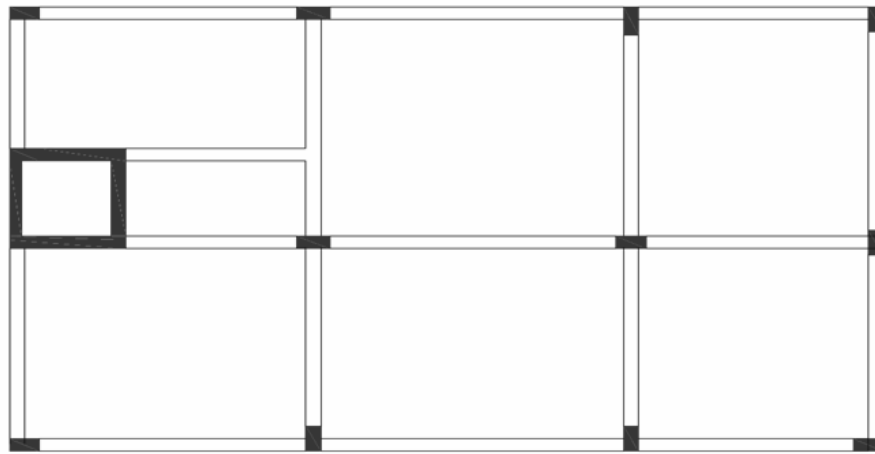


Fig. 4.5: Grade Beam Layout Plan

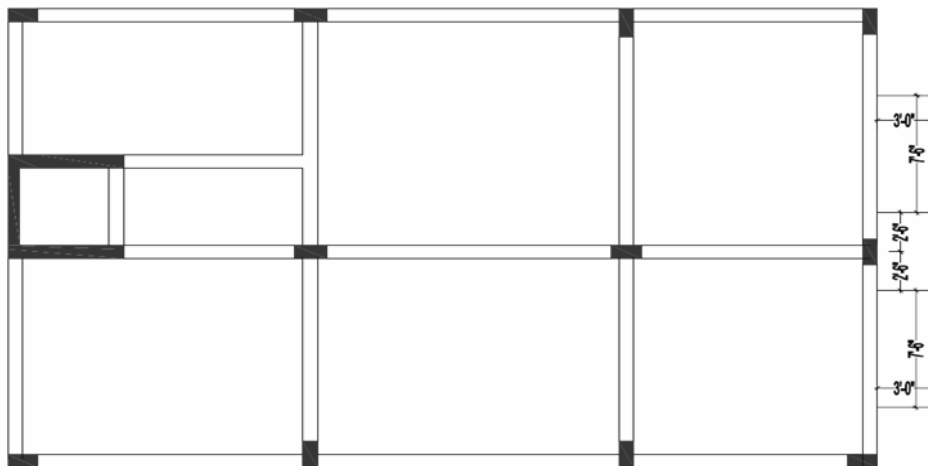


Fig. 4.6: Typical Floor Beam and Slab Layout Plan

Table: 4.1 Geometry and Loads

Properties:	Load Definitions:
<p>Column: C1= 12"X18" C2=12"X20" Materials=Concrete, $f'_c=4000$ psi Beam: GB = 10"X18" FB = 10"X20" Materials=Concrete, $f'_c=4000$ psi</p> <p>Shear wall: Thickness = 8" Materials=Concrete, $f'_c=4000$ psi</p> <p>Slab: Thickness = 6" Materials=Concrete, $f'_c=3000$ psi</p> <p>So, Slab load = $(6 \times 150) / 12 = 75$ psf</p> <ul style="list-style-type: none"> • All supports are fixed support • Bottom story height = 8'-0" • Typical story height = 10'-0" • Top story for lift & stair = 8'-0" 	<p>1. Dead Load: Self weight (Factor=1) Floor Finish (FF) = 30 psf Partition wall load (PW) = 25 psf Wall load on beams (W) = 416 lb/ft (for 5" brick wall)</p> <p>2. Live Load: LL = 40 psf</p> <p>3. Seismic Definition: (Dhaka zone) EQx & EQy</p> <p>4. Wind Definitions: (for Dhaka) Wx & Wy *Wind speed for Dhaka zone = 210 km/hr = 130 mile/hr</p>
	Load Combinations:
	<p>UFL = DL+LL FDL = 1.2*DL+1.6*LL FDLEQx = 0.9*DL+1.2*LL+1.32*EQx FDLEQz = 0.9*DL+1.2*LL+1.32*EQy FDLWx = 0.9*DL+1.2*LL+1.2*Wx FDLWz = 0.9*DL+1.2*LL+1.2*Wy</p>

Procedure:

1. **Grid System and Story data definition:** Open ETABS software → File → New Model → no → Units = Kip-ft → Number of lines in X-direction= 5 → Number of lines in Y-direction= 4 → Number of stories=11 → Bottom Story height=8 → Typical Story height = 10 → Click on Custom Grid spacing → Edit Grid → Click on Spacing → Then X-direction Grid spacing A = 15'3", B=11', C=17'9" → D=13'6" → E=0 → Then Y-direction Grid spacing 1 = 13'6", 2=5'9", 3=9'4" → 4=0 → OK → Then click on Custom Story Data → Edit Story Data → Now change the Label as GB, STORY1.....STORY8, ROOF, OHWT → Height OHWT = 8 → Elevation, BASE = -8 → Master Story, STORY1 = Yes → Similar to, BASE, ROOF and OHWT = NONE and from STORY2 to STORY8 = STORY1 → OK → Grid only → OK. (Fig: 4.7).

2. **Define:**

2.1 **Materials Properties:** Define → Materials Properties → Add New Materials → Material Name = CONC3 ($f'_c=3000$ psi) → Specified Conc. Comp. Strength = 4 → Modulus of Elasticity = 3122 → OK (in the same way define other materials like CONC4 for $f'_c=4000$ psi → OK. (Fig: 4.8)

2.2 **Frame Sections (for Beam, Column):** Define → Frame Sections → Add Rectangular → Section Name = C12X18 → Material = CONC4 → Depth=18, Width = 12 → Reinforcement → Column

→Cover to Rect. Center= 1.5→OK →OK → OK. (Fig: 4.9). In the same way define other Columns and Beams

Define Grid Data

X Grid Data

Grid ID	Spacing	Line Type	Visibility	Bubble Loc.	Grid Color
1	A	5.25	Primary	Show	Top
2	B	11	Primary	Show	Top
3	C	17.75	Primary	Show	Top
4	D	13.5	Primary	Show	Top
5	E	0	Primary	Show	Top
6					
7					
8					
9					
10					

Y Grid Data

Grid ID	Spacing	Line Type	Visibility	Bubble Loc.	Grid Color
1	1	13.5	Primary	Show	Left
2	2	5.75	Primary	Show	Left
3	3	3333333333	Primary	Show	Left
4	4	0	Primary	Show	Left
5					
6					
7					
8					
9					
10					

Story Data

	Label	Height	Elevation	Master Story	Similar To	Splice Point	Splice Height
12	DHWT	8	98	No	NONE	No	0.
11	ROOF	10.	90	No	NONE	No	0.
10	STORY8	10.	80	No	STORY1	No	0.
9	STORY7	10.	70	No	STORY1	No	0.
8	STORY6	10.	60	No	STORY1	No	0.
7	STORY5	10.	50	No	STORY1	No	0.
6	STORY4	10.	40	No	STORY1	No	0.
5	STORY3	10.	30	No	STORY1	No	0.
4	STORY2	10.	20	No	STORY1	No	0.
3	STORY1	10.	10	Yes		No	0.
2	GB	8.	0	No	NONE	No	0.
1	BASE		-8				

Reset Selected Rows

Height: 10. [Reset]

Master Story: No [Reset]

Similar To: NONE [Reset]

Splice Point: No [Reset]

Splice Height: 0 [Reset]

Units

Change Units: Kip-ft

Fig 4.7

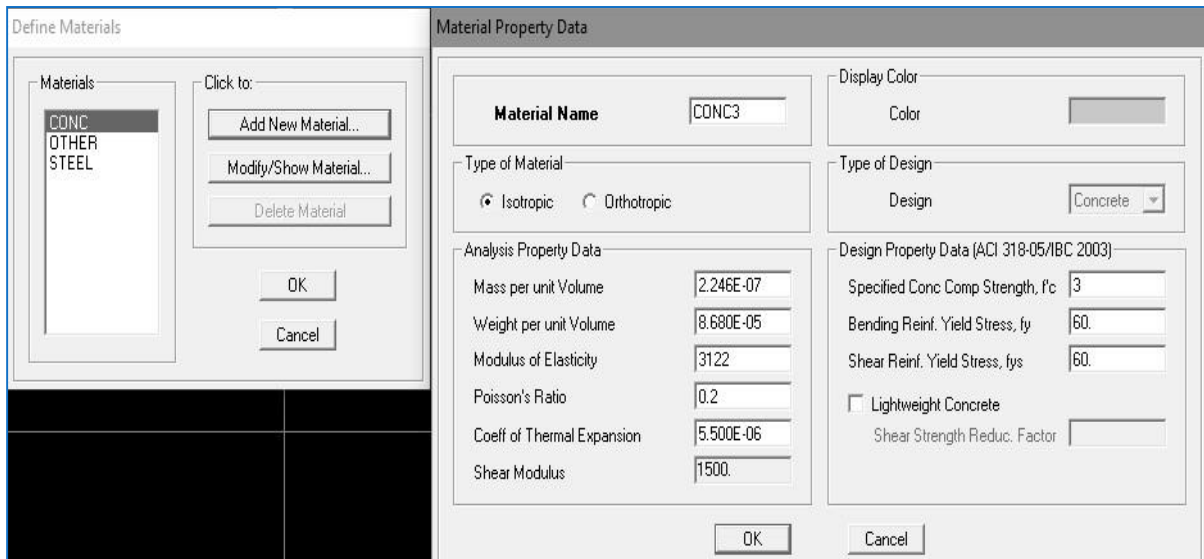


Fig 4.8

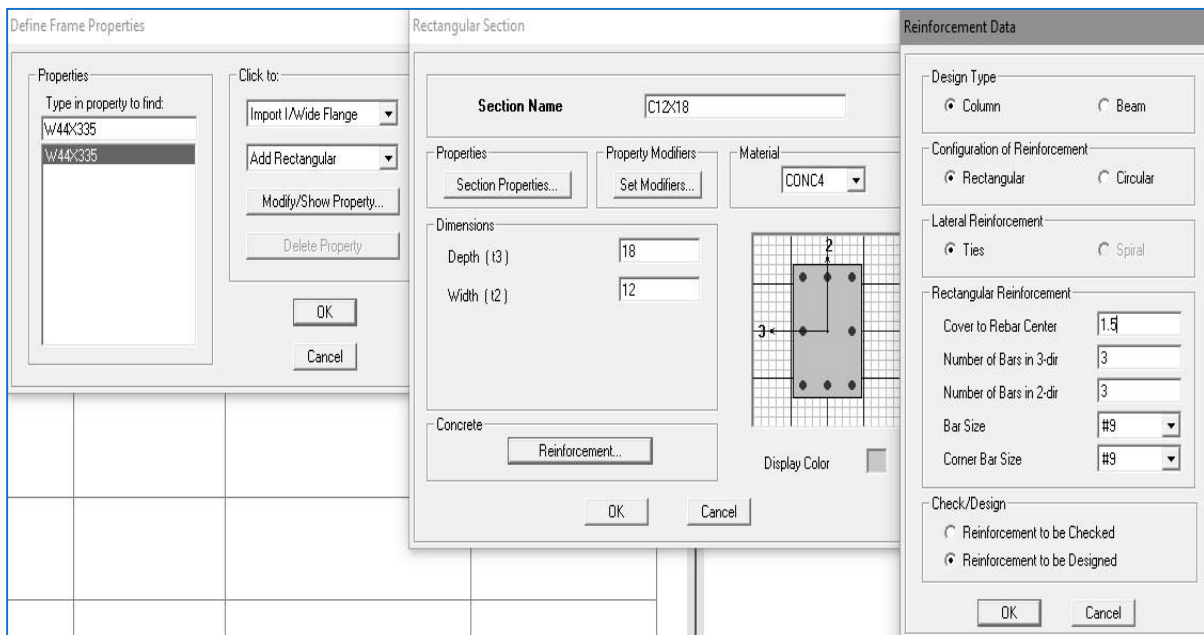


Fig 4.9

2.3 Wall/Slab/Deck Sections: Define→Wall/Slab/Deck sections→SLAB1→Modify/Show Section→ Section Name=SLAB6→Material=CONC3→Thickness: Membrane=6, Bending=6→Type: Shell→Set Modifiers→Bending m11 Modifier=Bending m11 Modifier=Bending m22 Modifier=Bending m12 Modifier= 0.00001→ OK →OK → OK. (Fig: 4.10).

In the same way define other Slabs and Shear Walls.

2.4 Static Load Cases: Define →Static Load Cases→Load: SFW, Type: DEAD, Self wt Multiplier: 1→Modify Load→Again, Load: FF, Type: DEAD, Self wt Multiplier: 0→Add New Load

Load: PW, Type: DEAD, Self wt Multiplier: 0 → Add New Load

Load: WALL, Type: DEAD, Self wt Multiplier: 0 → Add New Load

Load: EQX, Type: QUAKE, Self wt Multiplier: 0, Auto Lateral Load= UBC 94 → Add New Load
 → Modify Lateral Load → X Dir, Seismic Zone factor=1.5, Site coefficient =1.2, Importance factor=1, Method A Ct(ft)=0.03, Top story=OHWT, Bottom story= Base, Numerical coefficient

Rw=8 → OK → OK. (Fig: 4.11, 4.12)

In the same process define other seismic and wind loads.

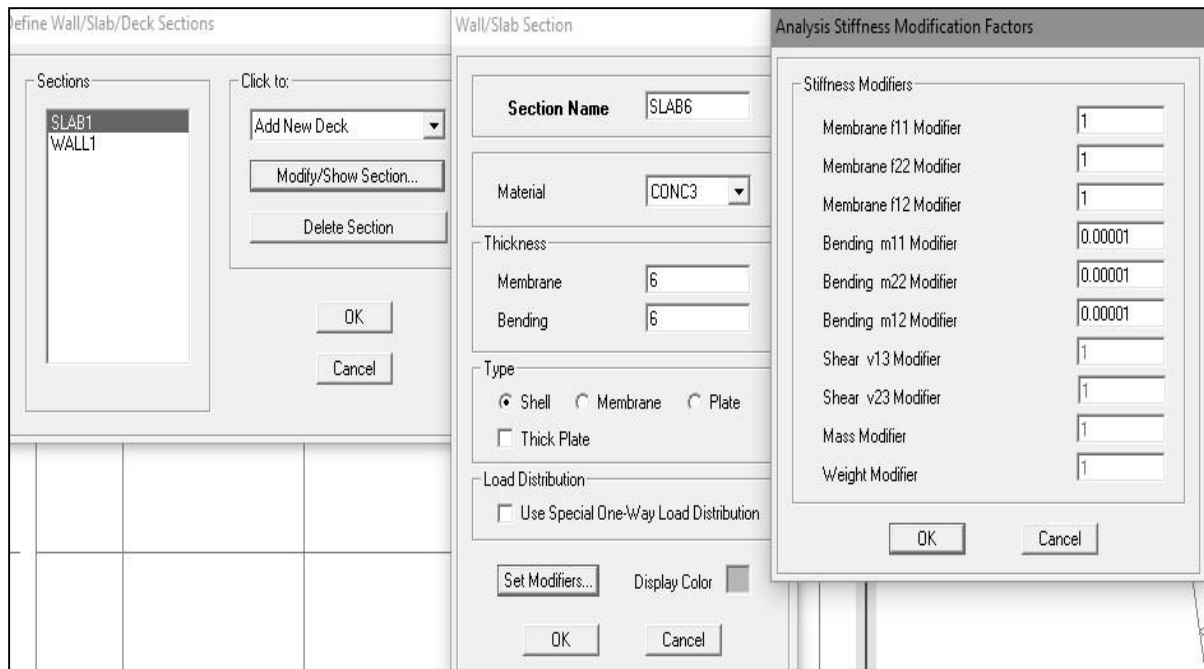


Fig 4.10

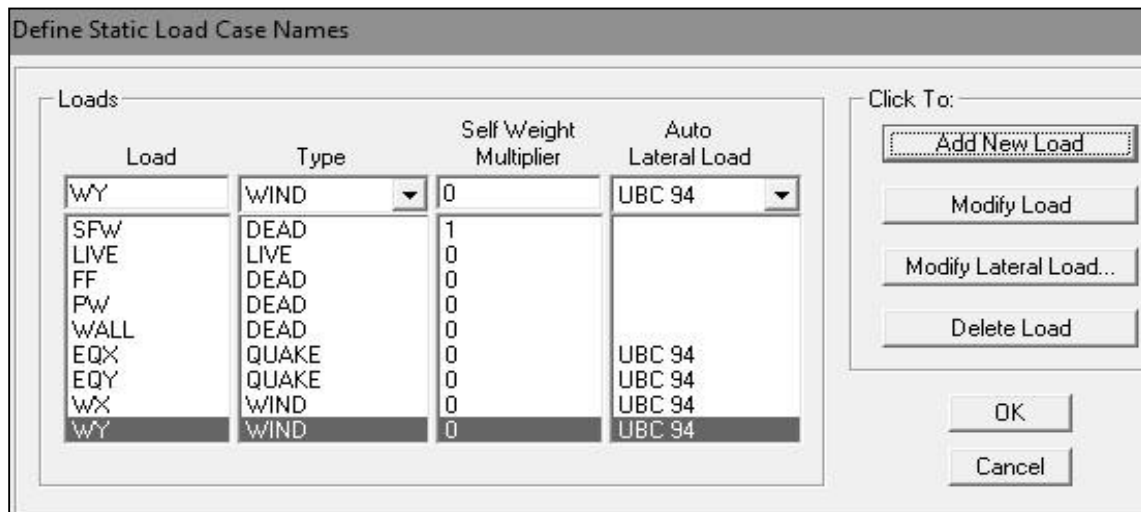


Fig 4.11

1994 UBC Seismic Loading

Direction and Eccentricity

X Dir Y Dir
 X Dir + Eccen Y Y Dir + Eccen X
 X Dir - Eccen Y Y Dir - Eccen X

Ecc. Ratio (All Diaph.)

Override Diaph. Eccen.

Time Period

Method A Ct (ft) =
 Program Calc Ct (ft) =
 User Defined T =

Story Range

Top Story

Bottom Story

Factors

Numerical Coefficient, R_w

Seismic Coefficients

Seismic Zone Factor, Z

Per Code
 User Defined

Site Coefficient, S

Importance Factor, I

UBC 94 Wind Loading

Exposure and Pressure Coefficients

Exposure from Extents of Rigid Diaphragms
 Exposure from Area Objects

Wind Exposure Parameters

Wind Direction Angle

Windward Coeff, C_q

Leeward Coeff, C_q

Exposure Height

Top Story

Bottom Story

Include Parapet
 Parapet Height

Wind Coefficients

Wind Speed (mph)

Exposure Type

Importance Factor

Fig 4.12

2.5 Load Combinations: Define → Load Combinations →Add New Combo.. →Load Combination Name=UDL→Load Combination Type =ADD→ Case Name=SFW static load, Scale Factor=1→Add→Case Name=LIVE static load, Scale Factor=1→Add→Case Name=FF static load, Scale Factor=1→Add→Case Name=PW static load, Scale Factor=1→Add→Case Name=WALL static load, Scale Factor=1→Add→OK

Again→Add New Combo.. →Load Combination Name=FDL→Load Combination Type =ADD→ Case Name=SFW static load, Scale Factor=1.2→Modify→Case Name=LIVE static load, Scale Factor=1.6→Modify →Case Name=FF static load, Scale Factor=1.2→Modify →Case Name=PW static load, Scale Factor=1.2→Modify →Case Name=WALL static load, Scale

Factor=1.2→Modify →OK. (Fig. 4.13)

★Same process follow for other load combination define and finally press OK.

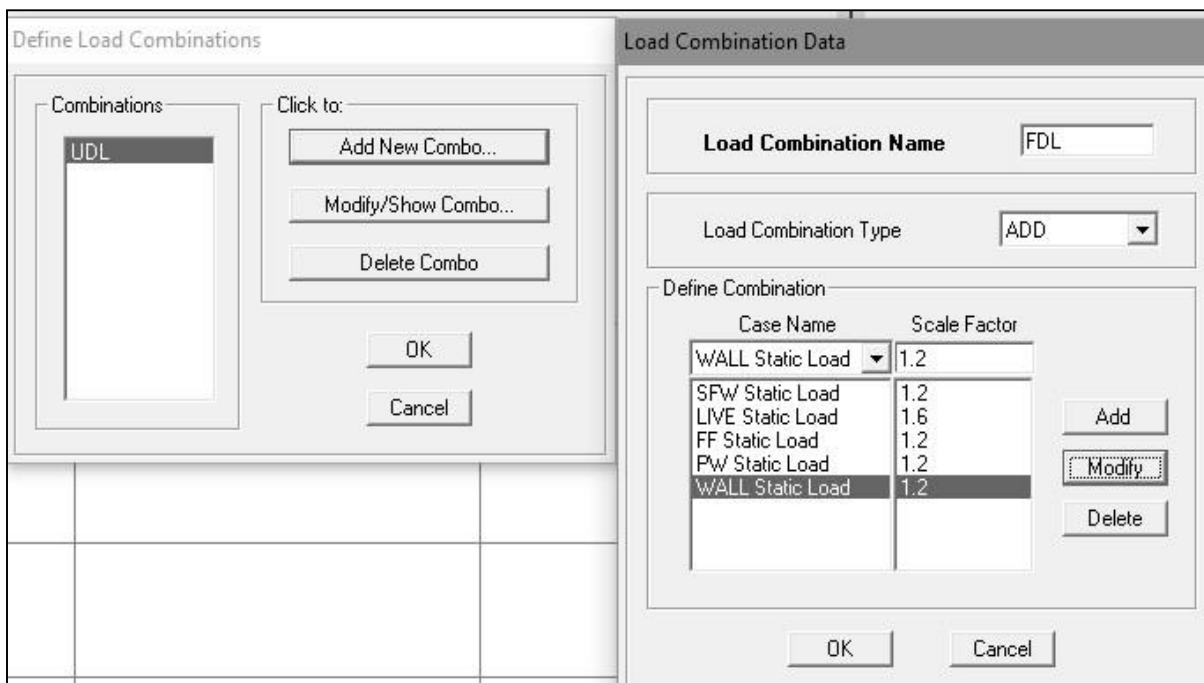


Fig 4.13




WEEK 03-04

MULTI-STORIED BUILDING FRAME UNDER ALL LOADS

3 Draw:

3.1 **Column Draw:** Plan view is → Story1 or any other without BASE plan and from bottom select → All Story then from menu bar click on Draw → Draw Line Objects → Create Columns in Region or at Clicks (Plan) → Select Property = C12X18 → Then draw the Column on plan view by clicking on every Column points as your Column Layout Plan. (Fig: 4.14)

3.2 **Grade/Floor Beam Draw:** Plan view is → GB Plan View and for other Story1 or any other without BASE plan and from bottom select → Similar Story then from menu bar click on Draw → Draw Line Objects → Click on Lines (Plan, Elev, 3D) → Select Property = GB10X18 → Then draw the line on GB Plan View by clicking one point to another point as your given Grade Beam Layout Plan. (Fig: 4.15, 4.16)

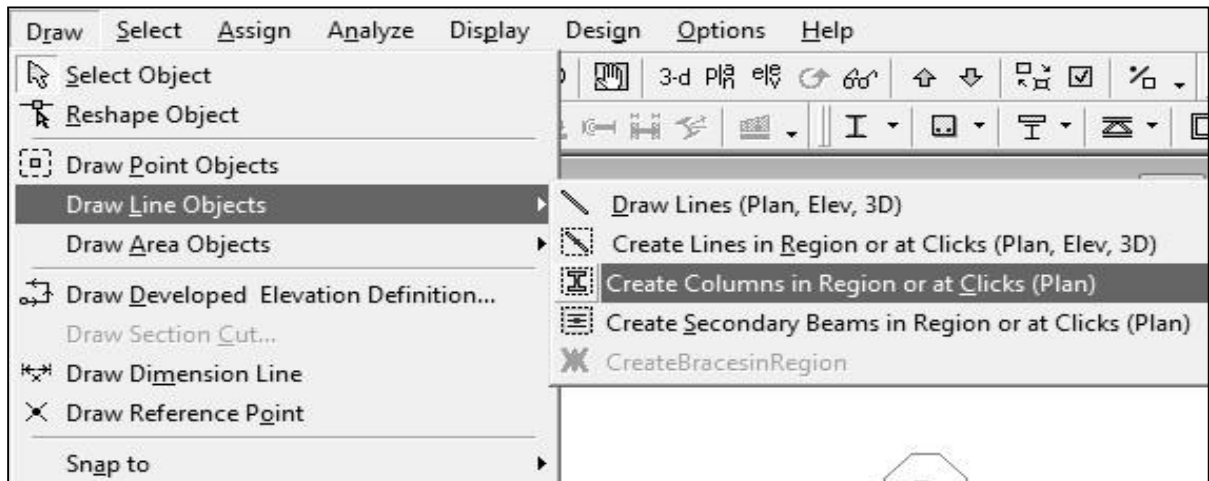

The image shows a 'Properties of Object' dialog box with a table of properties. The 'Property' field is set to 'C12X18'. Other properties include 'Moment Releases' (Continuous), 'Angle' (0), 'Plan Offset X' (0), and 'Plan Offset Y' (0).

Property	
Property	C12X18
Moment Releases	Continuous
Angle	0
Plan Offset X	0
Plan Offset Y	0

Fig. 4.14

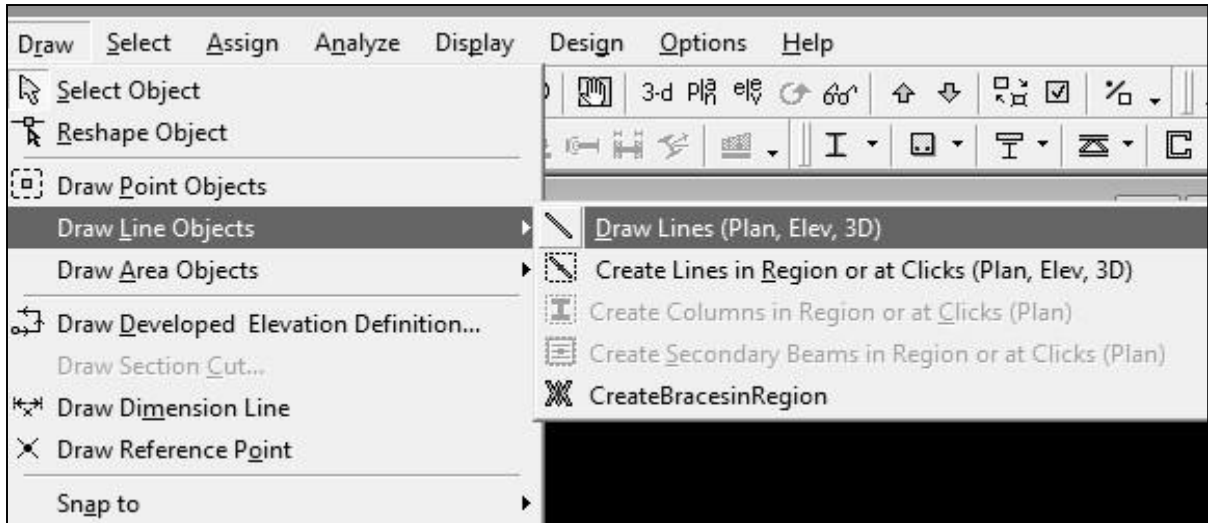


Fig: 4.15

Type of Line	Frame
Property	GB10x18
Moment Releases	Continuous
Plan Offset Normal	0.
Drawing Control Type	None <space bar>

Fig . 4.16

3.3 **SLAB Draw:** Plan view is → Plan ViewStory1 or any other without BASE plan and from bottom select → Similar Story then from menu bar click on Draw → Draw Area Objects → Click on Draw Areas (Plan, Elev, 3D) → Select Property = SLAB6 → Then draw the Slab by clicking one point to another point at anti clockwise rotations your given Slab Layout Plan .

- To display the slab on screen go to View → Set Building View Options → Click on Object fill → Apply to all Windows → OK. (Fig: 4.17)

3.4 Varandha Draw: Follow the Fig: 4.18


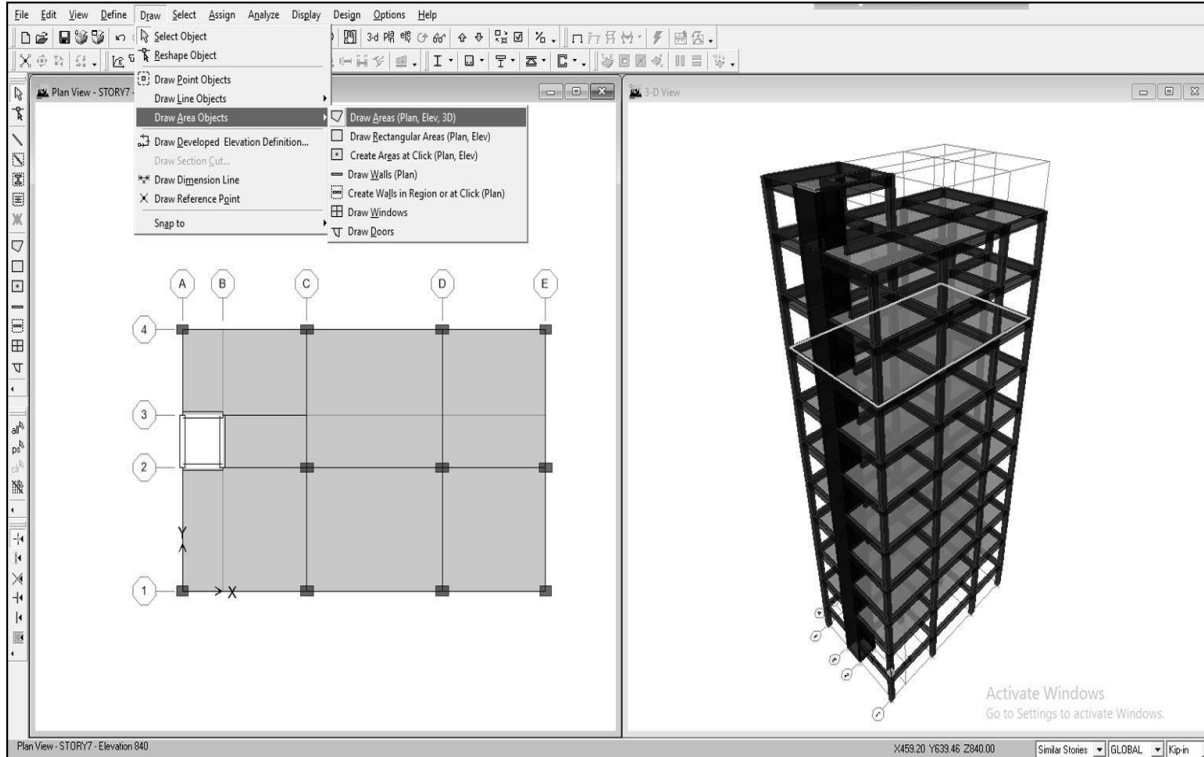


Fig. 4.17

Veranda Draw

Go to Set Building view options then unmark
Beam(Line) - ok **Plan view Story 1**

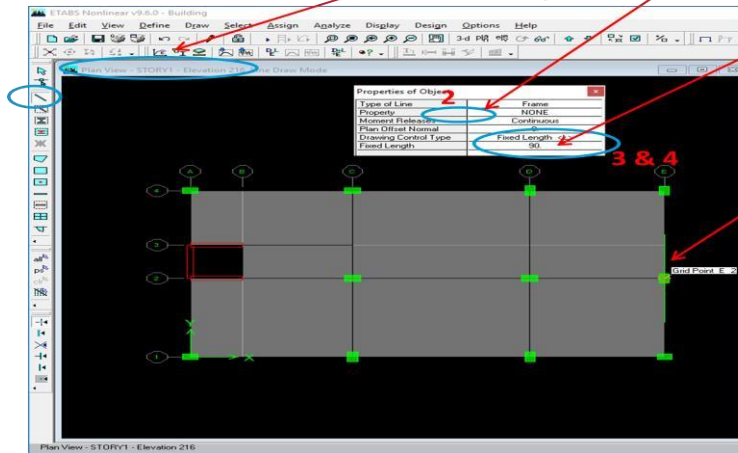


- 3. Fixed length (L)
- 4. Input the length of veranda

5. Draw the beam line by clicking one column to another column

Fig. 4.18a

Veranda Draw

1. Select line
2. Edit
3. Extrude lines to Area
4. Input Dx/dy/ Value (width of verandah)

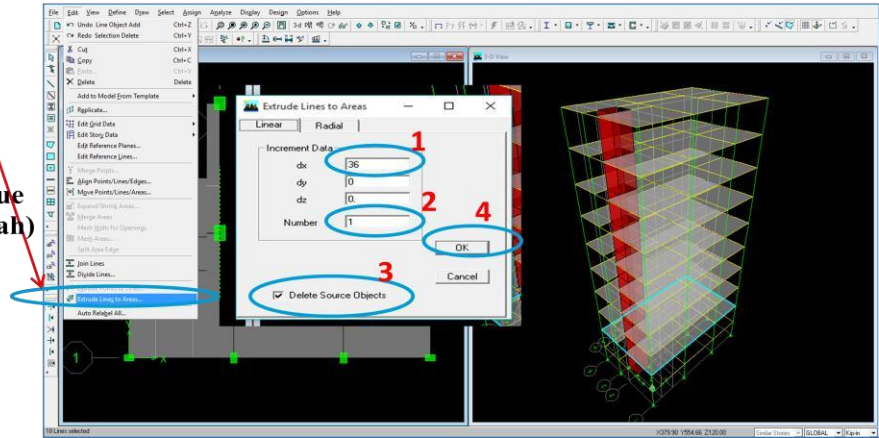

To move

1. Select Verandah
2. Edit
3. Move points/lines/Area
4. Input distance according to the direction
5. ok

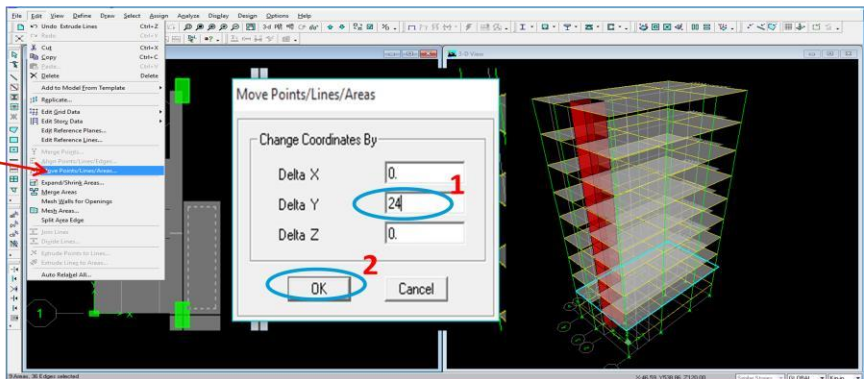


Fig. 4.18b

4 Assign:

4.1 **Support Assign:** Select the support point at BASE Plan → Assign → Joint/Point → Restraints (Supports) → Then select support type (Fixed, Pin, Roller) by clicking on symbols → OK. (Fig: 4.19)

4.2 Load Assign:

4.2.1 **Floor Load Assign:** Select Slabs → Assign → Shell/Area Loads → Uniform → Load Case Name = Live → Units = lb-ft → Load = 40 → Direction = Gravity → OK. The same procedure follows for other Distributed loads (FF, PW). (Fig: 4.20).

4.2.2 **Wall Load Assign:** Select Floor Beams → Assign → Frame/Line Loads → Distributed → Load Case Name = WALL → Units = lb-ft → Direction = Local-2 → Then write the values of wall Load = 425 → OK. (Fig: 4.21, 4.22)

4.3 Area Mesh and Diaphragm Create:

4.3.1 **Area Mesh:** Select Slabs → Assign → Shell/Area → Area Object Mesh Option → Further subdivided Auto Mesh with minimum element size of = 3 → OK. (Fig: 4.23)

4.3.2 **Diaphragm:** Select All → Assign → Shell/Area → Diaphragm → D1 → Modify/Show Diaphragm → Rigid → OK → OK. (Fig: 4.24)

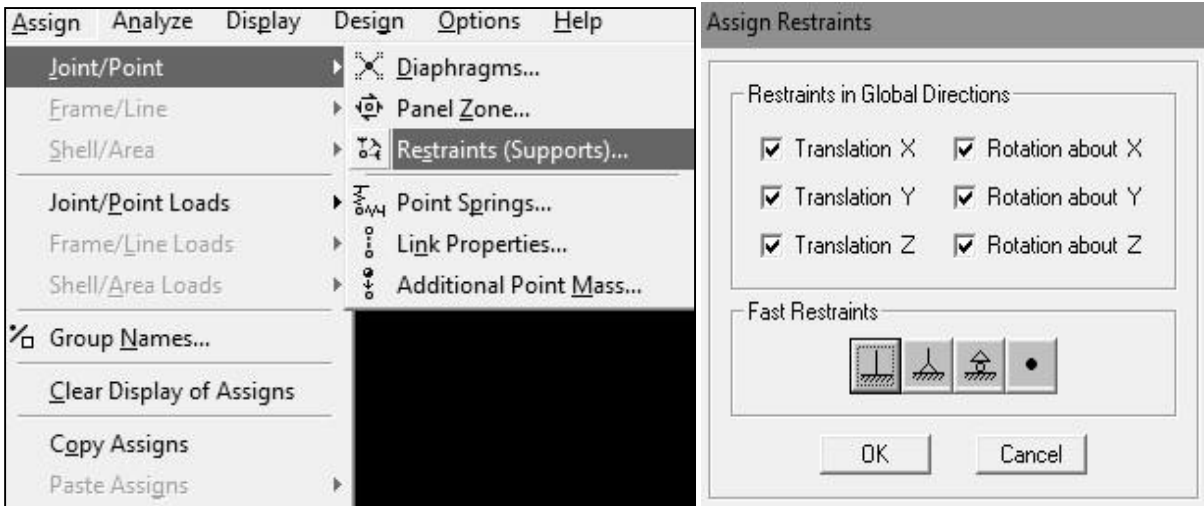


Fig . 4.19

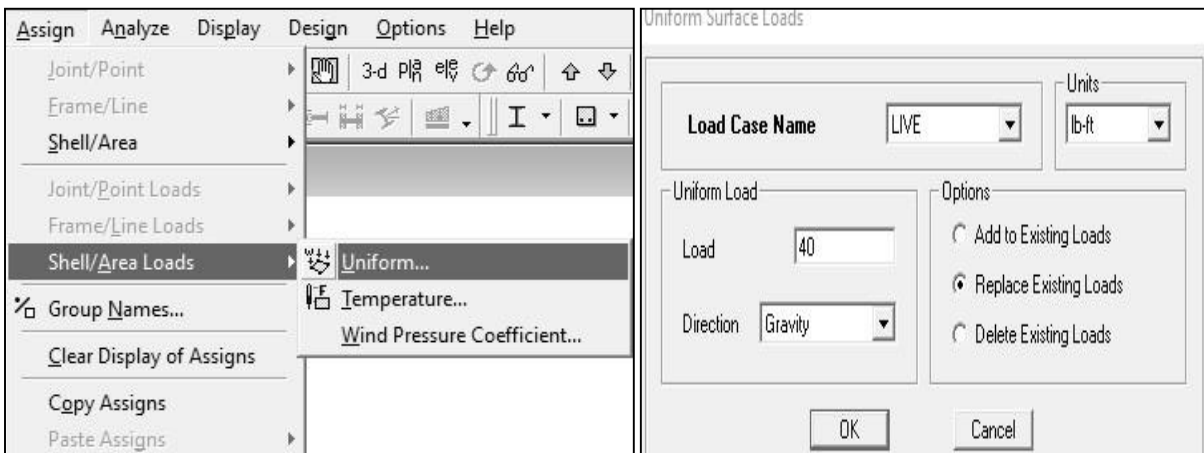


Fig . 4.20


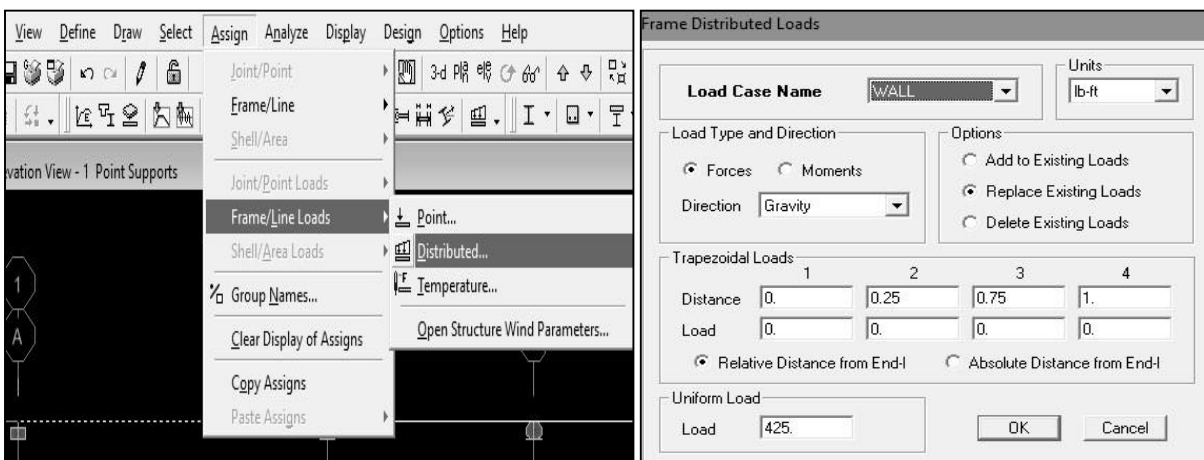


Fig . 4.21

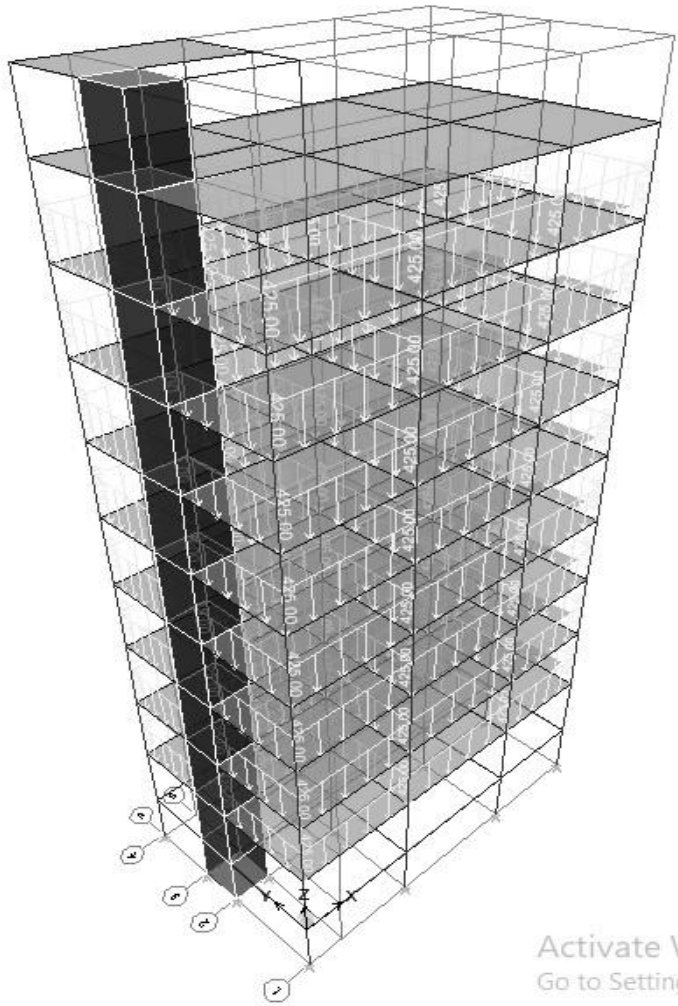

Activate V
Go to Setting

Fig. 4.22

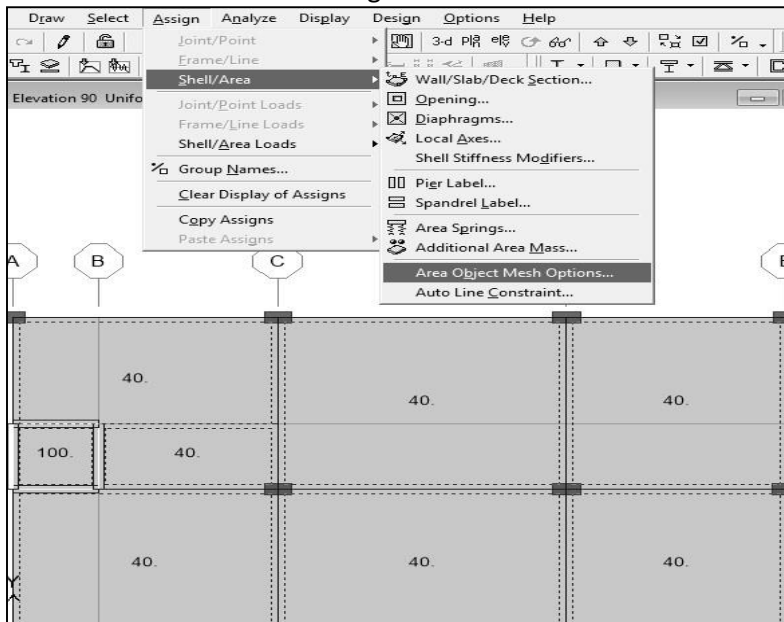


Fig. 4.2 3a

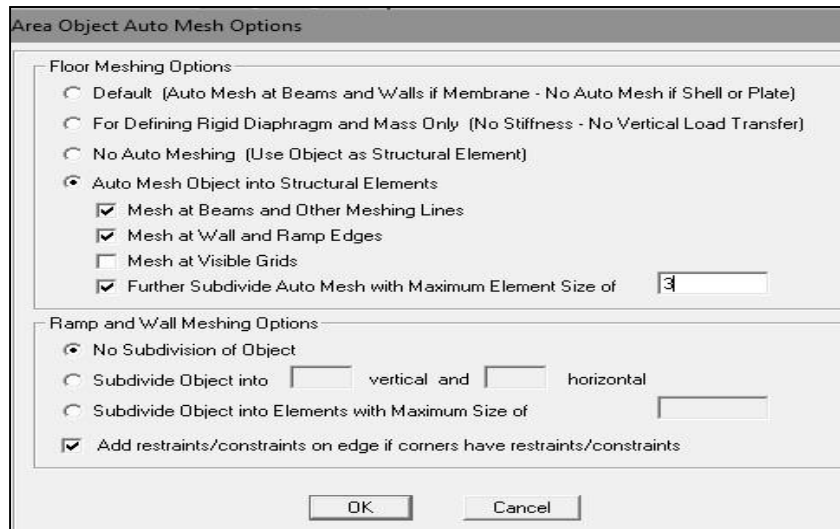


Fig . 4.23b

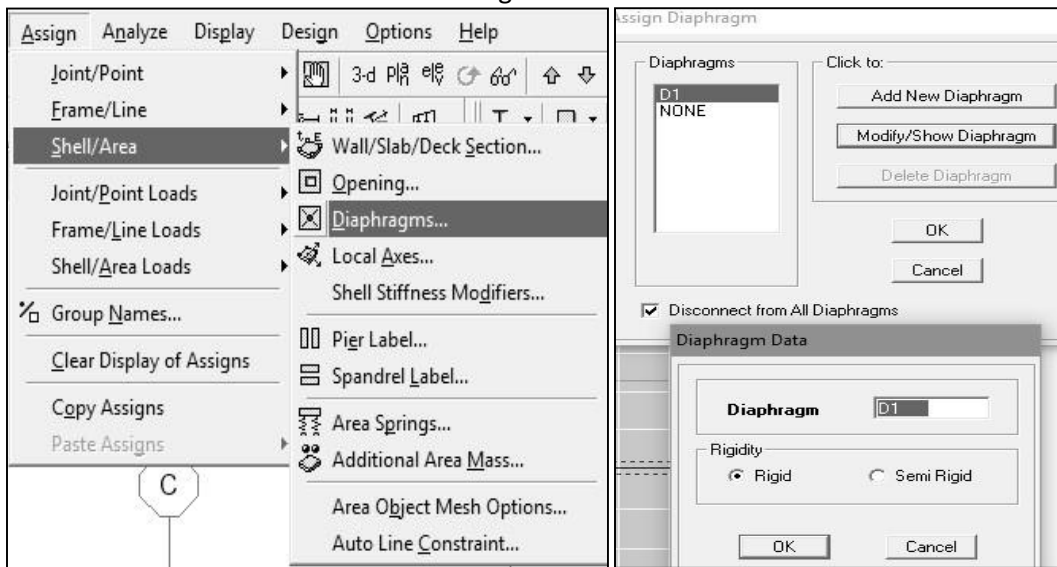


Fig . 4.24

5 Analysis:

Go to Analyze→Check Model (mark all checking options)→OK

Again Go to Analyze→Run Analysis

6 Results:

6.1 **Support Reactions:** Go to display →Show Member Forces/Stress Diagram →Support/Spring Reactions→Select Load (Live/Dead etc.)→ OK →Select the Support point by click (from the display elevation view) →press mouse right button and find out your desirable values like vertical force, horizontal force and moment. (Fig: 4.25, 4.26)

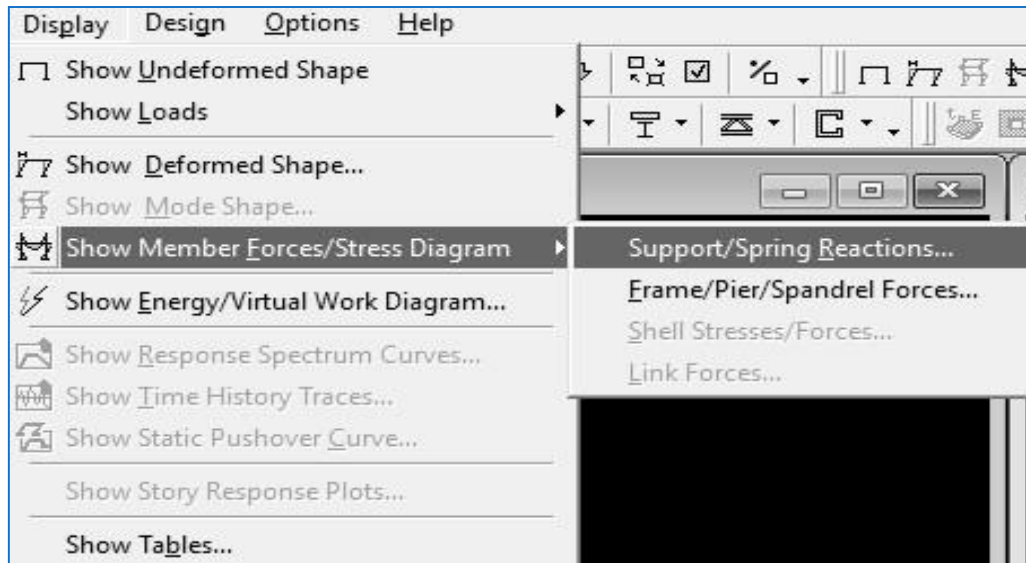


Fig: 4.25

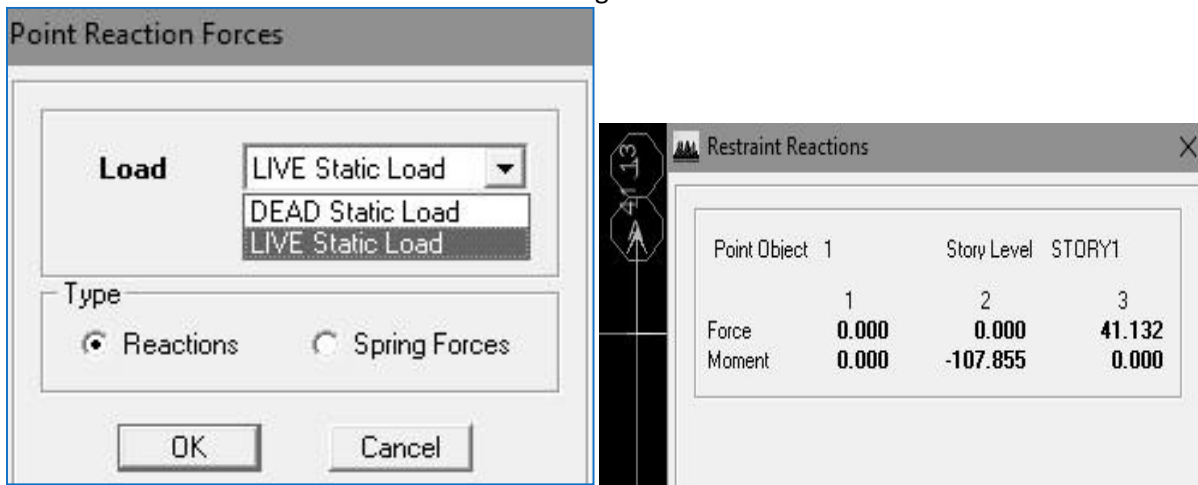


Fig. 4.26

6.2 **Maximum Shear force on beam AB:** Go to display → Show Member Forces/Stress Diagram → Frame/Pier/Spandrel Forces... → Select Load (Live/Dead etc.) → Shear 2-2 → Click on Show Values on Diagram → OK → Select the Beam by click (from the display elevation view) → press mouse right button and find out your desirable values like vertical force, horizontal force and moment. (Fig: 4.27)

6.3 **Maximum Bending Moment on beam:** Go to display → Show Member Forces/Stress Diagram → Frame/Pier/Spandrel Forces... → Select Load (Live/Dead etc.) → Moment 3-3 → Click on Show Values on Diagram → OK → Select the Beam by click (from the display elevation view) → press mouse right button and find out your desirable values like vertical force, horizontal force and moment. (Fig: 4.28)

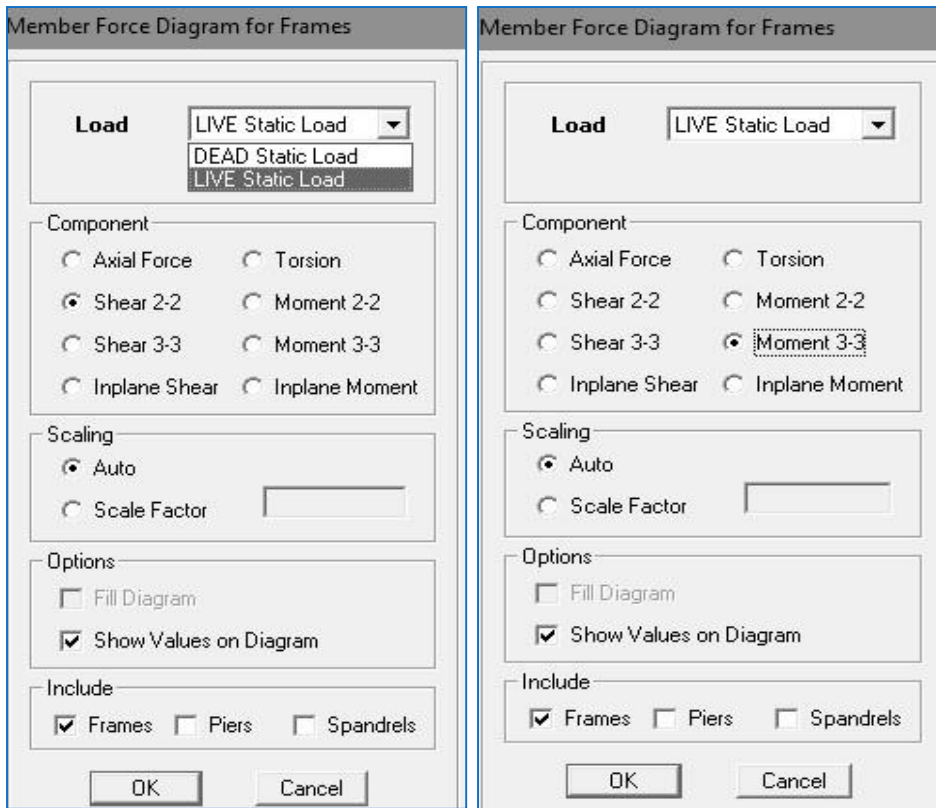


Fig. 4.27

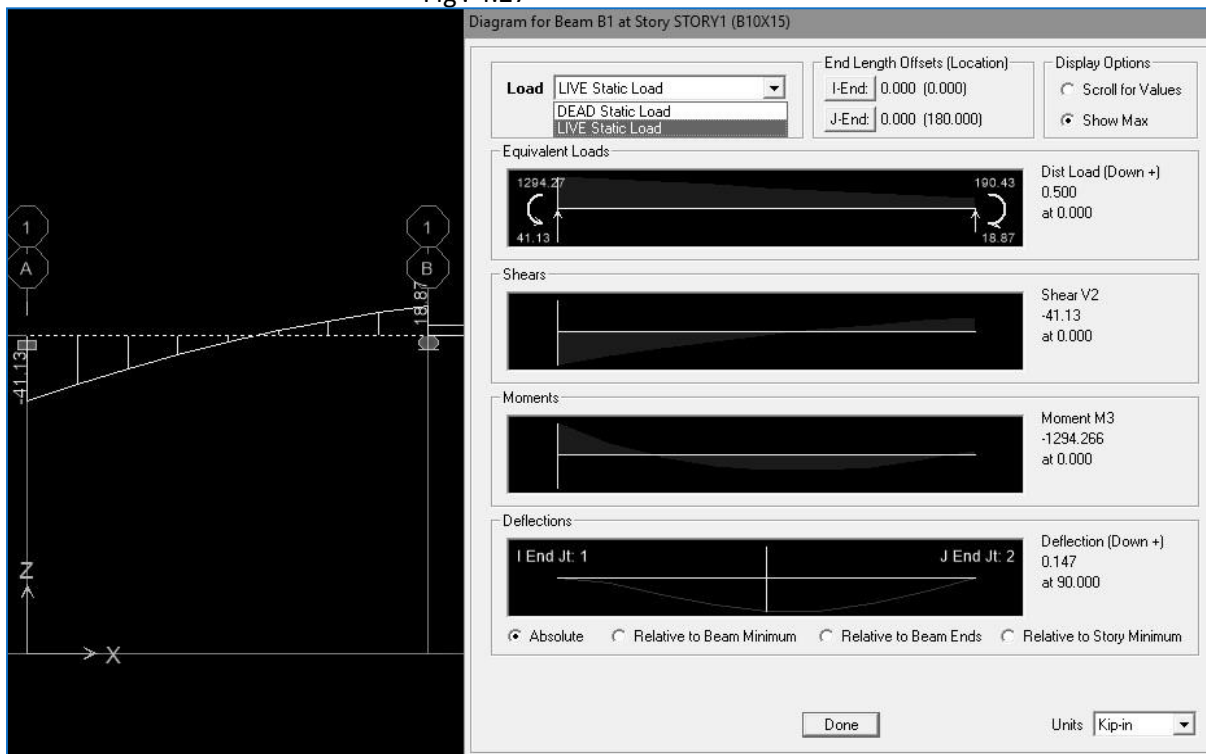


Fig. 4.28



WEEK 05

Introduction to the project by SAFE

R/C Example

The intent of this tutorial is to give you hands-on experience via step-by-step instructions on how to use SAFE to model, analyze, design and detail mild reinforced concrete slabs. Fundamentals of the model creation process are identified and various model construction techniques are introduced. As you complete the tutorial, you will build the model shown in Figure 1.

The Project

The tutorial project is an irregularly shaped suspended concrete slab, with overall dimensions of 113 feet by 120 feet. A large opening exists in the interior for stair access. The 10-inch thick slab is supported by 12-inch-thick walls, 16-inch-thick drop panels on columns, and 18-inch by 24-inch beams on two perimeter sides. Columns are 18 inches square, drop panels are typically 6 feet square, and the story height below the slab is 12 feet. The model will be analyzed for a uniform dead load of 30 pounds per square foot (psf) plus the self weight of the structure and a live load of 50 psf.

Concrete Materials:

Concrete strength, $f'_c = 4000$ psi

Unit weight of concrete = 150 pcf Mild-steel reinforcing:

$f_y = 60$ ksi

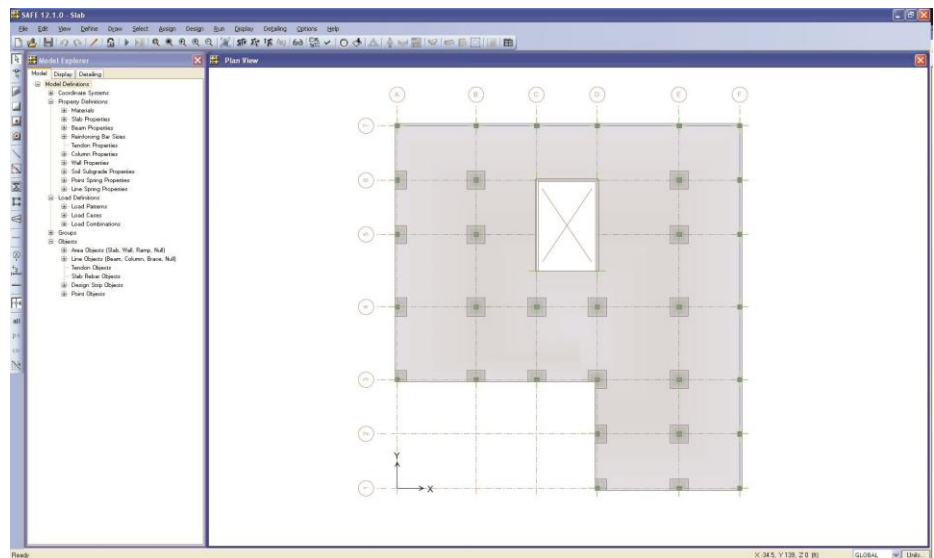



Figure 1 The Project Model

Navigating Through SAFE

The SAFE program provides the user with two principal ways to navigate through program commands: menu commands or toolbar buttons. All commands are available through the main menu bar (e.g., **Draw menu > Draw Columns**), and a majority of the menu commands are also available as buttons on toolbars (e.g., **Draw Columns**, ). The availability of a button on the toolbar is indicated in the menus by the existence of an icon to the left of the command, as shown in Figure 2.

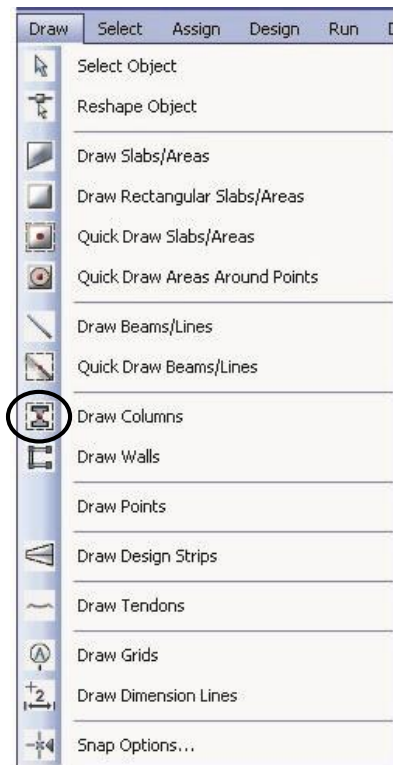


Figure 2 Draw Menu

In this tutorial, the reference to various commands will be given using the narrative description, i.e., **Draw menu > Draw Column** command, in lieu of the associated button.



WEEK 06-07

BUILDING THE PROJECT BY SAFE

**Define various properties of new
model**

Step 1 Begin a New Model

In this Step, the dimensions and basic grid will be defined, which will serve as a guide for developing the model. This model will be built without using the automated template tools provided in SAFE to demonstrate how to construct a model from scratch. However, as a general rule, we highly recommend using templates to start models whenever possible because they provide a quick, easy way of generating a model. Consult the SAFE Help topics for information about templates.

Define the Grid

Click the **File menu > New Model** command to access the New Model Initialization form shown in Figure 3. This form is used to

- A. specify the starting point of the model creation: a Blank screen, a screen with a Grid Only, or one of eight templates. Default units also may be selected here, along with the design code and preferences.

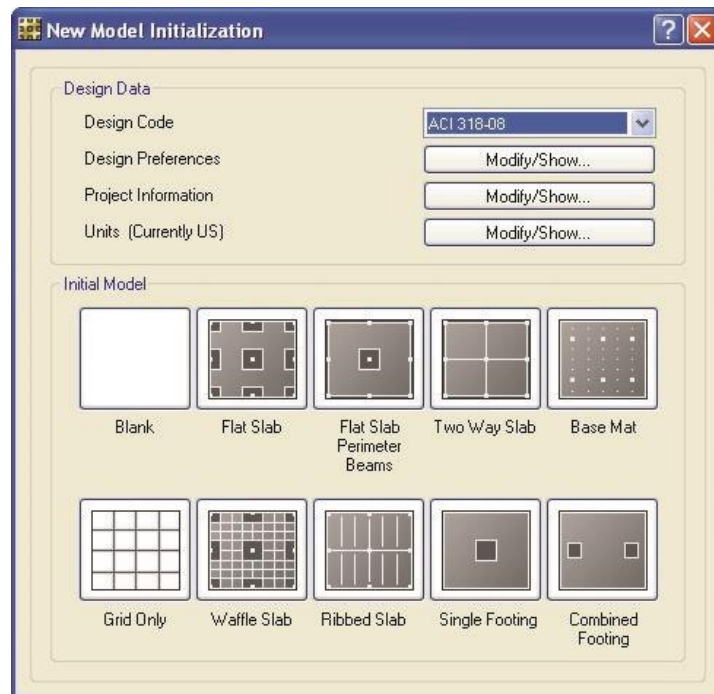


Figure 3 New Model Initialization form

- B. In the Design Data area, select ACI 318-08 from the Design Code drop-down list.
- C. In the Design Data area, verify that the Units are set to Currently US; if not, click the **Modify/Show** button and select the U.S. Defaults on the Units form.
- D. In the Initial Model area, click the **Grid Only** button to display the Coordinate System Definition form shown in Figure 4. This form is used to specify the number of grids and spacing in each direction. It is important that the grid is defined so as to accurately

represent the geometry of the structure; so it is advisable to spend time carefully planning the number and spacing of the grid lines. E. Select the *Cartesian* option.

- F. As shown in Figure 4, set the Number of Grid Lines in the X Direction to **6** and in the Y Direction to **7**. Set the Spacing in the X Direction to **20** feet and in the Y Direction to **18** feet.



The image shows a dialog box titled "Coordinate System Definition". It has a title bar with a question mark and a close button. The dialog is divided into several sections. The first section is "Coord System" with a dropdown menu set to "GLOBAL". The second section has two radio buttons: "Cartesian" (which is selected) and "Cylindrical". The third section is "Number of Grid Lines" with two input fields: "X Direction" containing the number "6" and "Y Direction" containing the number "7". The fourth section is "Grid Spacing" with two input fields: "X Direction" containing "20" followed by "ft" and "Y Direction" containing "18" followed by "ft". At the bottom of the dialog, there are four buttons: "Grid Labels...", "Edit Grid...", "OK", and "Cancel".

Figure 4 Coordinate System Definition form

- G. Click the **Edit Grid** button to display the form shown in Figure 5. The Coordinate System form is used to modify and edit the grid definitions, as well as set the top of model datum. It also allows the user to set the display options associated with the grids.
1. In the *Display Grid Data as* area, select the *Spacing* option.
 2. In the **X Grid Data** table, change the X spacing as follows:

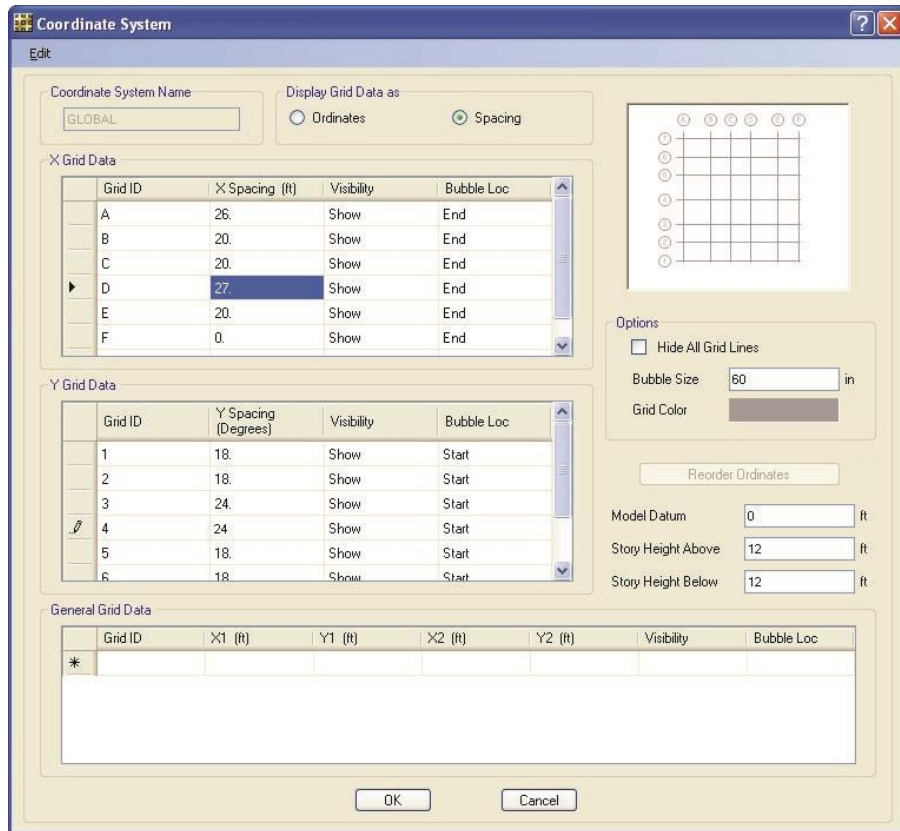


Figure 5 Coordinate System form

Grid ID	Change X Spacing to
A	26
D	27

- In the **Y Grid Data** table, change the Y spacing as follows:

Grid ID	Change Y Spacing to
3	24
4	24

- Click the **OK** button to accept your changes.

Upon closing the Coordinate System form, by default, the grid system displays in the main SAFE window, with two windows tiled vertically: a Model Explorer window on the left and a Plan View on the right. The number of view windows can be changed using the **Options menu > Windows** command.

H. Click the **View menu > Set Display Options** command to display the Set Display Options form. Uncheck the *Horizon* option and click the **OK** button to exit that form. The Horizon option displays a plane that resembles an engineering calculation grid to illustrate the datum plane location; we are turning this option off to display our coordinate system grid better.

You should now have a display similar to that shown in Figure 6.

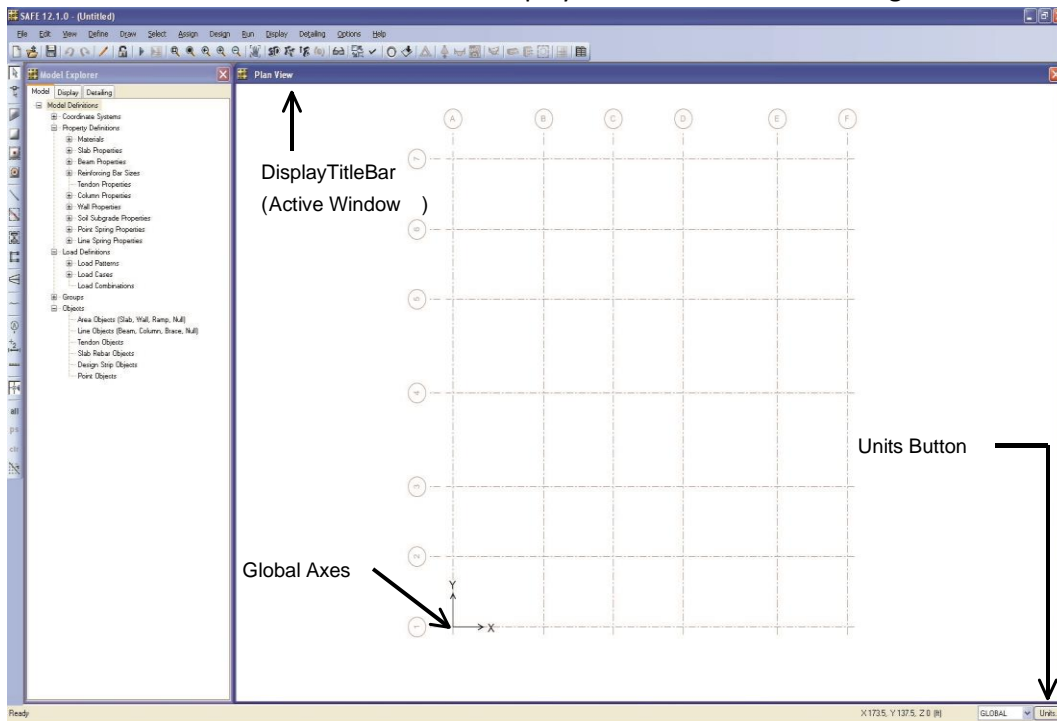


Figure 6 SAFE Main Window

Note that the Plan View window is active. When a window is active, the display title bar is highlighted. Set a window active by clicking anywhere in the window.

Note that the Global Axes are displayed and that the Z positive is in the “up” direction. When SAFE refers to the direction of gravity, this is in the negative Z direction, or “down.”

Save the Model


Save your model often! Click the **File menu > Save** command. Specify the directory in which to save the model. For this tutorial, specify the file name as *Slab*.

Typically a model would be saved with the same name. However to record work at various stages of development or as a backup, the **File menu > Save As** command can be used to save the file using another name.

Step 2 Define Properties

In this Step, material and section properties for the slab (area object) and beams (line objects), columns, and walls are defined. Note that previously defined materials and properties may be reviewed and modified using the Model Explorer window (see Figure 7). To do this, expand any of the property items on the tree by clicking the + node, and then double click on the desired item to display the associated form.

Figure 7 Model Explorer window

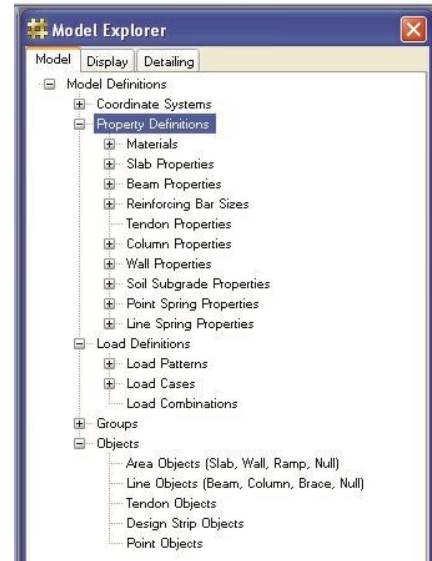

Define Material Properties

- A. Click the **Define menu > Materials** command to access the Materials form shown in Figure 8.

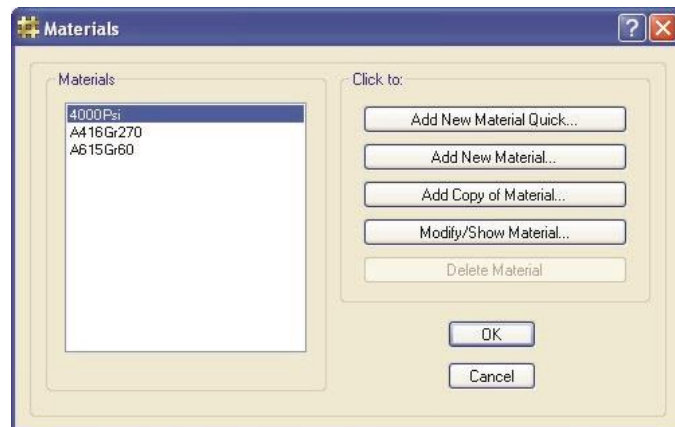


Figure 8 Materials form

- B. Highlight *4000Psi* in the Materials area, and click the **Modify/Show Material** button to display the Material Property Data form shown in Figure 9. That form lists the properties associated with 4000psi concrete; this is the concrete property that will be used in our model.

The image shows a 'Material Property Data' dialog box. It is divided into several sections:

- General Data:** Material Name is '4000Psi', Material Type is 'Concrete', Material Display Color is a purple square, and Material Notes is empty.
- Material Weight:** Weight per Unit Volume is '1.5E+02' lb/ft3.
- Isotropic Property Data:** Modulus of Elasticity, E is '3604.997' kip/in2; Poisson's Ratio, U is '0.2'; Coefficient of Thermal Expansion, A is '5.5E-06' 1/F; Shear Modulus, G is '1502.082' kip/in2.
- Other Properties for Concrete Materials:** Specified Concrete Compressive Strength, f'c is '4' kip/in2. There is a checkbox for 'Lightweight Concrete' which is unchecked, and a field for 'Shear Strength Reduction Factor' which is empty.

Buttons for 'OK' and 'Cancel' are at the bottom.

Figure 9 Material Property Data form

- C. Click the **OK** button to accept this material as defined.
- D. In the Materials area, highlight *A615Gr60*.
- E. Click the **Modify/Show Material** button to display the Material Property Data form shown in Figure 10. This form lists the properties associated with Grade 60 reinforcing; this is the rebar property that will be used in our model.
- F. Click the **OK** button to accept this material as defined.
- G. Click the **OK** button on the Materials form to accept all of the defined materials.
- H. Click the **File menu** > **Save** command to save your model.

The image shows a 'Material Property Data' dialog box for rebar. It is divided into several sections:

- General Data:** Material Name is 'A615Gr60', Material Type is 'Rebar', Material Display Color is a grey square, and Material Notes is empty.
- Material Weight:** Weight per Unit Volume is '4.9E+02' lb/ft3.
- Uniaxial Property Data:** Modulus of Elasticity, E is '29000' kip/in2.
- Other Properties for Rebar Materials:** Minimum Yield Stress, Fy is '60' kip/in2; Minimum Tensile Stress, Fu is '90' kip/in2.

Buttons for 'OK' and 'Cancel' are at the bottom.

Figure 10 Material Property Data form



WEEK 08-09

BUILDING THE PROJECT BY SAFE

**Define various properties of new
model**

Define Slab and Drop Properties

- A. Click the Define menu > Slab Properties command to access the Slab Properties form shown in Figure 11.



Figure 11 Slab Properties form

- B. In the Slab Property area, highlight SLAB1.
- C. Recall that for this tutorial project, the slab thickness is 10 inches. To adjust the default dimensions of SLAB1, click the **Modify/Show Property** button to access the Slab Property Data form shown in Figure 12.
1. Select Slab from the Type drop-down list in the Analysis Property Data area; this ensures that any area object with this property assignment will be identified as a slab member.
 2. Type 10in in the Thickness edit box in the Analysis Property Data area.
- Note:** Input may be done in units other than those shown on the form by explicitly stating the units. For example, if for this case the thickness was to be 18 inches, input could be 1.5ft, and the program automatically converts the number input to be consistent with the units shown on the form.
3. Click the **OK** button to accept the changes and return to the Slab Properties form.

Figure 12 Slab Property Data form

- D. Recall that the project has 16-inch-thick drop panels on columns. To specify a property for the drop panel, click the **Add New Property** button on the Slab Properties form and complete the following.
1. Type **DROP** in the Property Name edit box on the Slab Property Data form.
 2. Select *Drop* from the Type drop-down list in the Analysis Property Data area.

Note: When multiple area objects occupy the same location in plan, SAFE determines which property value to use in the stiffness formula based on the following hierarchy: the Drop type has priority over a Slab type.
 3. Type **16** in the Thickness edit box.
 4. Click the **OK** button to accept the changes and return to the Slab Properties form.
- E. Click the **OK** button to end the slab property definitions. Click the **File menu > Save** command to save the model.

Define Beam Properties

- A. Click the **Define menu > Beam Properties** command to access the Beam Properties form shown in Figure 13.



Figure 13 Beam Properties form

- B. In the Beam Property area, highlight BEAM1.
- C. Click the **Modify/Show Property** button to access the Beam Property Data form shown in Figure 14. Recall that the beams for the project are 18 inches by 24 inches.
 1. In the Analysis Property Data area, select *L Beam* from the Beam Shape Type drop-down list.

In the Analysis Property Data area, type **18** into the Web Width at Top edit box, type **18** into the Web Width at Bottom edit box, type **24** into the Depth edit box, type **5ft** into the Flange Width edit box, and **10** into the Slab Depth edit box.

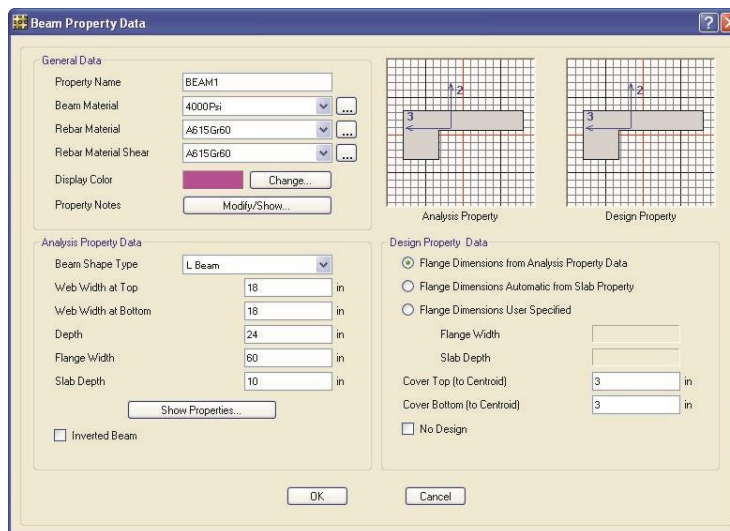


Figure 14 Beam Property Data form

2. In the Design Property Data area, select the *Flange Dimensions from Analysis Property Data* option. This option utilizes the flange width and depth provided in the analysis property data.
3. Click the **OK** button to end the beam property definition.

- D. Click the **OK** button to leave the Beam Properties form. Click the **File menu** > **Save** command to save your model.

Define Column Properties

- A. Click the **Define menu** > **Column Properties** command to access the Column Properties form.
- B. In the Column Property area, highlight *COL1*.
- C. Click the **Modify/Show Property** button to access the Column Property Data form shown in Figure 15. Recall that the columns for the project are 18 inches square and that the drop panels are 6 feet square.

The screenshot shows the 'Column Property Data' dialog box. It is divided into several sections:

- General Data:** Property Name: COL1; Material: 4000Psi; Display Color: (purple square); Notes: (empty).
- Column Section Dimensions:** Column Shape: Rectangular; Parallel to 2-Axis: 18 in; Parallel to 3-Axis: 18 in.
- Automatic Drop Panel Dimensions:** Include Automatic Drop Panel Over Column: ; Parallel to 2-Axis: 72 in; Parallel to 3-Axis: 6ft; Slab Property: DROP.
- Automatic Column Capital (Drop Cap) Dimensions:** Include Automatic Column Capital (Drop Cap): ; Parallel to 2-Axis: (empty) in; Parallel to 3-Axis: (empty) in; Height: (empty) in.

Buttons: 'Show Properties...', 'OK', 'Cancel'. A grid diagram on the right shows a square column on a grid with axes 2 and 3.

Figure 15 Column Property Data form

1. In the Column Section Dimensions area, select *Rectangular* from the Column Shape drop-down list.
2. In the Column Section Dimensions area, type **18** into the Parallel to 2-Axis edit box and type **18** into the Parallel to 3-Axis edit box.
3. Make sure that the *Include Automatic Rigid Zone Area Over Column* option is checked. This option restricts deformation of the slab at the column location, which prevents unrealistic peaks in moment distribution from occurring.

In the Automatic Drop Panel Dimensions area, check the *Include Automatic Drop Panel Over Column* option. This option automatically adds a drop panel when a column with this property is drawn.

4. In the Automatic Drop Panel Dimensions area, type **6ft** into the Parallel to 2-Axis edit box and type **6ft** into the Parallel to 3-Axis edit box.
 5. In the Automatic Drop Panel Dimensions area, select *DROP* from the Slab Property drop-down list.
 6. Click the **OK** button to leave the Column Property Data form.
- D. Click the **Add New Property** button to access the Column Property Data form.
1. In the General Data area, type **COL-NODROP** in the Property Name edit box.
 2. In the Column Section Dimensions area, select *Rectangular* from the Column Shape drop-down list.
 3. In the Column Section Dimensions area, type **18** into the Parallel to 2-Axis edit box and type **18** into the Parallel to 3-Axis edit box.
 4. Make sure that the Include Automatic Rigid Zone Area Over Column option is checked.
 5. In the Automatic Drop Panel Dimensions area, make sure that the *Include Automatic Drop Panel Over Column* option is unchecked.
 6. Click the **OK** button to leave the Column Property Data form.
- E. Click the **OK** button to accept the Column Property definitions.

Define Wall Properties

- A. Click the **Define menu > Wall Properties** command to access the Wall Properties form.
- B. In the Wall Property area, highlight *Wall*.
- C. Click the **Modify/Show Property** button to access the Wall Property Data form shown in Figure 16. Recall that the walls for the project are 12 inches thick.

Figure 16 Wall Property Data form

1. In the Wall Dimensions area, type **12** into the Thickness edit box.
2. Make sure that the *Include Automatic Rigid Zone Area Over Wall* option is checked. This option restricts deformation of the slab at the wall location, which prevents unrealistic peaks in moment distribution from occurring.

Click the **OK** button to leave the Wall Property Data form. D.

Click the **OK** button to accept the Wall Property definition.

This completes the material and section property definition phase of the model creation. The slab and beam properties will be assigned in the model datum plane, while the columns and walls will be assigned as supports. Supports also can be assigned as point restraints, point springs or line springs. Support stiffnesses are calculated by SAFE based on the cross-sectional properties, material properties, and lengths specified when the columns and walls are drawn.

Step 3 Define Static Load Patterns

In this Step, the dead and live static load patterns are defined. That is, we will name the various types of loads and specify the self-weight multipliers. The loads will be assigned to objects, and the values for the loads specified (uniform dead load of 30 psf and live load of 50 psf), in Step 8.

- A. Click the **Define menu > Load Patterns** command to access the Load Patterns form shown in Figure 17.

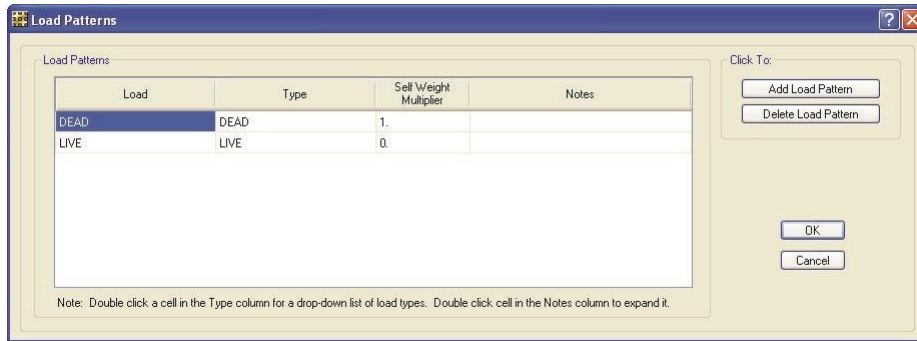


Figure 17 Load Patterns form

- B. Note that load patterns *DEAD* and *LIVE* are defined by default.
- C. Recall that the project will be analyzed for the dead load plus the self weight of the structure. Thus, the Self Weight Multiplier should be set equal to **1** (this will include 1.0 times the self weight of all members) for the *DEAD* load. Only the *DEAD* load pattern should have a non-zero Self Weight Multiplier.
- D. Click the **OK** button to accept the defined static load patterns.
- E. Click the **File menu > Save** command.

Step 4 Define Load Cases

In this Step, the Load Cases are defined. This is where the type of analysis is specified.

- A. Click the **Define menu > Load Cases** command to access the Load Cases form shown in Figure 18.

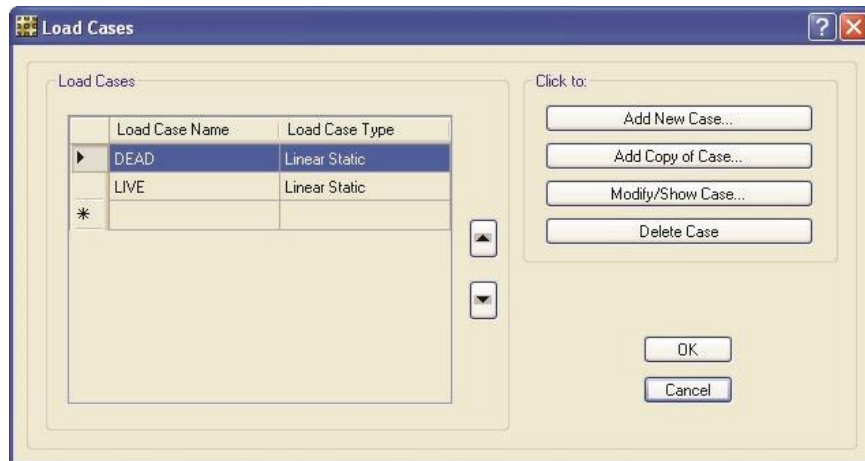


Figure 18 Load Cases form

- B. With the *DEAD* Load Case Name highlighted, click the **Modify/Show Case** button to display the Load Case Data form shown in Figure 19. This data form changes based on the type of load case specified.

1. In the Load Case Type area, select *Static* from the drop-down list. Modal and Hyperstatic also are available as load case types.

In the Analysis Type area, select the *Linear* option. When working with a Static Load Case Type, the program offers the option to do Linear, Nonlinear (Allow Uplift), Nonlinear(Cracked), or Nonlinear (Long Term Cracked) analysis. For our tutorial example, a Static, Linear analysis will be performed for DEAD and LIVE.

2. In the Loads Applied area, verify that the load pattern is *DEAD* with a scale factor of *1*.
3. Click the **OK** button to close the Load Case Data form.

The screenshot shows the 'Load Case Data - Linear Static' dialog box. It has several sections:

- Load Case Name:** A text box containing 'DEAD'.
- Load Case Data Notes:** A button labeled 'Modify/Show Notes...'
- Load Case Type:** A dropdown menu set to 'Static' and a 'Design...' button.
- Stiffness to Use:** Two radio buttons: 'Zero Initial Conditions - Unstressed State' (selected) and 'Stiffness at End of Nonlinear Case'. Below the second radio button is an empty text box.
- Important Note:** A small text box stating: 'Important Note: Loads from the Nonlinear Case are NOT included in the current case.'
- Analysis Type:** Four radio buttons: 'Linear' (selected), 'Nonlinear (Allow Uplift)', 'Nonlinear (Cracked)', and 'Nonlinear (Long Term Cracked)'. Below these are two empty text boxes labeled 'Creep Coefficient' and 'Shrinkage Strain'.
- Loads Applied:** A table with two columns: 'Load Name' and 'Scale Factor'. The first row is 'DEAD' with a scale factor of '1'. There is a '*' symbol in the first column of the table.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Figure 19 Load Cases Data form

- C. Review the LIVE load case, if so desired, by selecting it and using the **Modify/Show Case** button as described for the DEAD load case.
- D. Click the **OK** button to close the Load Cases form.
- E. Click the **File menu > Save** command.



WEEK 10-11

BUILDING THE PROJECT BY SAFE

**Draw various parts of model and
add design strips**

Step 5 Draw Objects

In this Step, slabs, columns with drops, beams, walls, and openings will be drawn.

Draw Slabs

Ensure that the Plan View is active (click anywhere in the display window; a window is active when the Display Title Bar, just below the horizontal toolbar, is highlighted). Now draw area objects to model the slab using the following Action Items.

- A. Click the **Draw menu > Snap Options** command to display the Snap Options form shown in Figure 20.

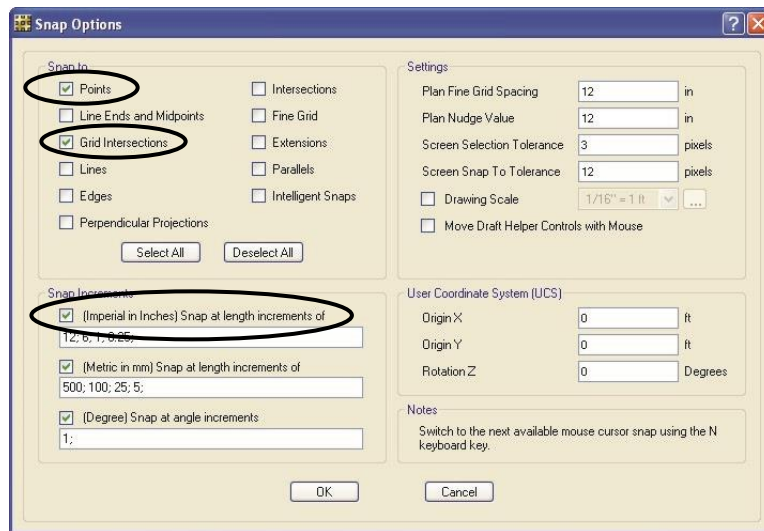


Figure 20 Snap Options form

- B. In the *Snap to* area, make sure that the *Points* and *Grid Intersections* options are checked. These snap options will assist in accurately positioning objects when drawing.
- C. In the *Snap Increments* area, make sure that the *(Imperial in Inches) Snap at length increments of* option is checked. When drawing slab edges, beams and walls, a dimension line will appear. and the object will snap to the values specified in this edit box.
- D. Click the **OK** button to close the Snap Options form.
- E. Click the **Draw menu > Draw Slabs/Areas** command to access the Draw Slabs/Areas form shown in Figure 21. If the Draw Slabs/Areas form covers part of the model, click on the blue title bar, hold down the mouse button, and drag it out of the way.

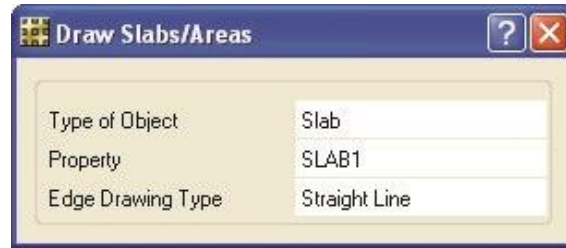


Figure 21 Draw Slabs/Areas form

- F. Make sure that the Type of Object is set to *Slab*. If it is not, click once in the drop-down list opposite the Type of Object item and select *Slab*.
- G. Click in the Property drop-down list and select *SLAB1*. This is the slab property defined in Step 2.
- H. Click in the Edge Drawing Type drop-down list and select *Straight Line*. Although not used in this project, slab edges also may be drawn with arcs and curves.
- I. To draw the first corner of the slab, click once in the Plan View at the intersection of grid lines A and 7 (the cursor should display *Grid Point A 7* at the correct location). Then moving clockwise around the grid (note how the slab edge is dimensioned as you draw), click once at these grid intersections in this order to draw the outline of the slab: F7, F1, D1, D3, and A3. After clicking at grid A3, press the **Enter** key on the keyboard. The shaded slab object should now appear.

If you have made a mistake while drawing this object, click the **Select menu > Select > Pointer/Window** command to leave the Draw mode and go to the Select mode. Then click the **Edit menu > Undo Area Add** command, and repeat Items E through I.
- J. Click on the **Select menu > Select > Pointer/Window** command or press the **Esc** key on the keyboard to exit the Draw Slabs/Areas command.
- K. Select the slab by clicking on it anywhere. The status bar in the lower left-hand corner should show "1 Areas, 6 Edges selected." If you make a mistake in selecting, press the **Select menu > Clear Selection** command and try again.
- L. Click the **Edit menu > Edit Areas > Expand/Shrink Areas** command to display the Expand/Shrink Areas form shown in Figure 22.
- M. Type **9** into the Offset Value edit box. We will use this form to expand (a positive value expands) the slab by 9 inches at each corner to create the perimeter overhang that is needed to accommodate the width of the columns (1/2 of 18 inches).



Figure 22 Expand/Shrink Areas form

- N. Click the **OK** button to finish the slab.
- O. Click the **File menu** > **Save** command to save your model.

Draw Columns

With the active window set as described in the preceding *Draw Slabs* section (i.e., Plan View window active and the snap to points and grid intersections enabled), use the following Action Items to draw columns.

- A. Click the Draw menu > Draw Columns command to access the Draw Columns form shown in Figure 23.
- B. Click in the Property Below drop-down list and select COL1. This is the property for the 18-inch by 18-inch column with a drop panel defined in Step 2.
- C. Click in the Property Above drop-down list and select NONE. There are no columns above the slab.

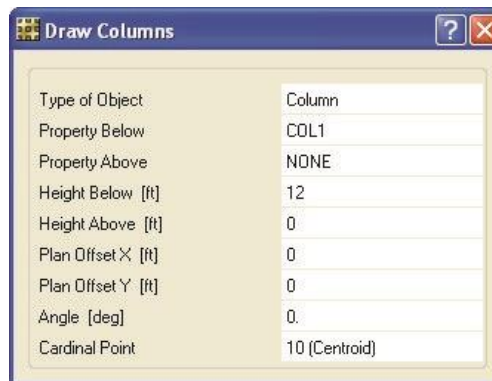


Figure 23 Draw Columns form

- D. Click in the Height Below edit box and type **12**, and click in the Height Above edit box and type **0**. Note that the units are feet.
- E. Click in the Cardinal Point drop-down list and select *10 (Centroid)*.


- F. Locate the mouse cursor just above and to the left of grid intersection A6, hold down the left mouse button, and drag diagonally to just below and to the right of E3 and release the mouse button. Columns and drop panels should be placed at every grid intersection enclosed by the window just drawn. Note how the drop panels are trimmed at the slab edges.
- G. Locate the mouse cursor just above and to the left of grid intersection D2, hold down the left mouse button, and drag diagonally to just below and to the right of E1 and then release. Again, columns and drop panels should be added to the grid intersections enclosed by the window.
- H. Click in the Property Below drop-down list and select *COLNODROP*. This is the property for the 18-inch by 18-inch column without a drop panel for use on the perimeter.
- I. Left click once at each of the following grid locations to draw the perimeter columns: A7, B7, C7, D7, E7, F7, F6, F5, F4, F3, F2, and F1.
- J. Click on the **Select menu > Select > Pointer/Window** command or press the **Esc** key on the keyboard to exit the Draw Columns command.
- K. Locate the mouse cursor just above and to the left of grid intersection C6, hold down the left mouse button, and drag diagonally to just below and to the right of D5 and release the mouse button. The status bar in the lower left-hand corner should show “24 Points, 4 Lines, 4 Areas, 16 Edges selected.” If the selection is not correct, simply click the **Select menu > Clear Selection** command and try again.
- L. Click the **Edit menu > Delete** command or press the **Delete** key on the keyboard to remove the columns enclosed in the window. M. Click the **File menu > Save** command to save your model.
- N. Click the **View menu > Set Default 3D View** command to display the model in 3D. Note how the columns extend below the slab.
- O. Click the **View menu > Set Plan View** command to return to the Plan View before continuing the project.

Draw Walls

Similar to the preceding two sections, ensure that the Plan View is active and that the snap to points, grid intersections and the snap increments options are enabled. Now use the following Action Items to draw walls.

- A. Click the **Draw menu > Draw Walls** command to access the Draw Walls form shown in Figure 24.
- B. Click in the drop-down list opposite the Wall Property Below item and select *WALL1*. This is the wall property for the 12-inch-thick wall defined in Step 2.

- C. Click in the Wall Property Above drop-down list and select *NONE*. There are no walls above the slab
- D. Click in the Wall Height Below edit box and type **12**. Click in the Wall Height Above edit box and type **0**. Note that the units are feet.

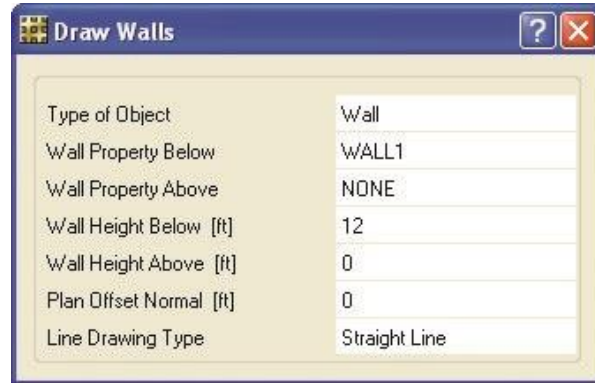

Type of Object	Wall
Wall Property Below	WALL1
Wall Property Above	NONE
Wall Height Below [ft]	12
Wall Height Above [ft]	0
Plan Offset Normal [ft]	0
Line Drawing Type	Straight Line

Figure 24 Draw Walls form

- E. Click in the drop-down list opposite the Line Drawing Type item and select *Straight Line*. Although not used in this project, walls may also be drawn with arcs and curves.
- F. Left click at grid intersection C6 to begin drawing the first wall. Draw the wall along grid line C (the wall is on grid line C if no angle measure is shown) past grid line 5 until the snap increments dimension line shows *30ft* and then click again. Hit the **Enter** key on the keyboard to complete the wall. This places a wall 30 feet long along grid line C.

If you have made a mistake while drawing this object, click the **Select menu > Select > Pointer/Window** command to leave the Draw mode and go to the Select mode. Then click the **Edit menu > Undo Area Object Add** command, and repeat Items A through F.

- G. Click on the **Select menu > Select > Pointer/Window** command or press the **Esc** key on the keyboard to exit the Draw Walls command.
- H. Hold down the **Shift** key on your keyboard and **right** click once at the end point of the wall just drawn. A selection list similar to the one shown in Figure 25 appears because multiple objects exist at that location. In this example, two point objects and two area objects exist at the same location. Note that the selection list will appear only when the **Shift** key is used with the click.



Figure 25 Selection List form

- I. Highlight the first point object and click the **OK** button. Because a right click action initiated the selection process, a Point Object Information form similar to the one shown in Figure 26, will display.

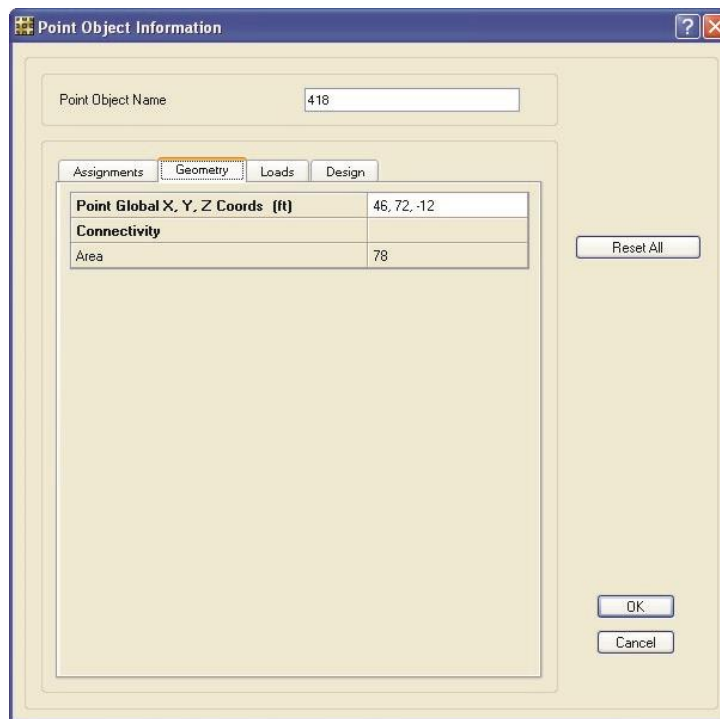


Figure 26 Point Object Information form

1. Click on the *Geometry* tab. Verify that the Point Global X and Y Coordinates are 46 and 72, respectively. If the coordinates are not correct, delete and re-draw the wall following the instructions described in Item F above.
 2. Click the **OK** button to leave the Point Object Information form.
- J. Click the **Draw menu > Draw Walls** command to access the Draw Walls form.

- K. For the next wall, located along grid line 6, left click at grid intersection C6 to begin drawing the wall and at intersection D6 (the snap increment dimension line should show *20ft*) to designate the end of the wall.
- L. With the draw mode still active, draw the last wall along grid line D past grid line 5 until the snap increments dimension line shows 30 and then click again.
- M. Hit the **Enter** key on the keyboard to complete the wall. This wall should be parallel to the first wall drawn.
- N. Click on the **Select menu > Select > Pointer/Window** command or press the **Esc** key on the keyboard to exit the Draw Walls command. Your model should look similar to Figure 27.

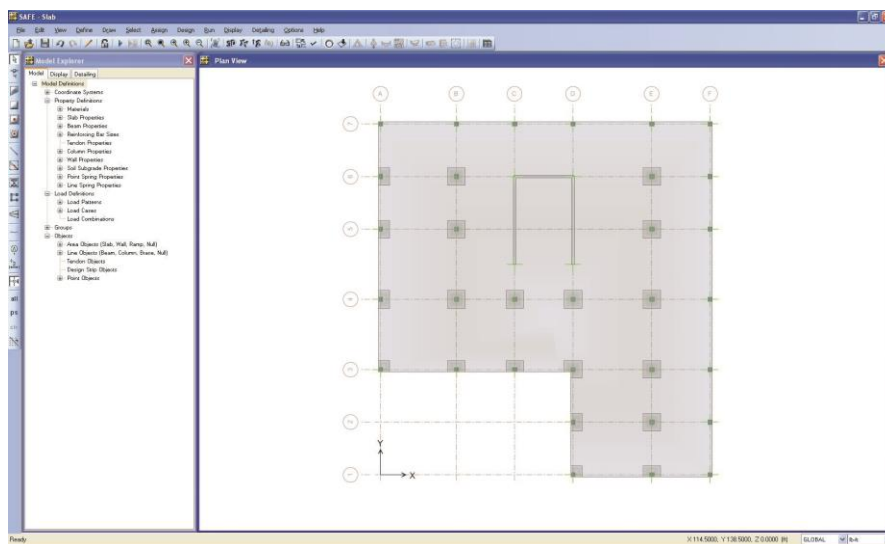


Figure 27 The model after drawing columns and walls

Draw Beams

Similar to the previous sections, ensure that the Plan View is active and the snap to points and grid intersections features are enabled. Draw the beams as follows.

- A. Click the **Draw menu > Draw Beams/Lines** command to access the Draw Beams/Lines form shown in Figure 28.

Draw Beams/Lines	
Type of Object	Beam
Property	BEAM1
Plan Offset Normal [ft]	0
Line Drawing Type	Straight Line

Figure 28 Draw Beams/Lines form

- B. Click in the drop-down list opposite the Property item and select *BEAM1*. Recall that BEAM1 is the 18-inch by 24-inch beam defined in Step 2.
- C. Click in the Line Drawing Type drop-down list and select *Straight Line*.
- D. Left click once at the grid intersection A7. Click again at grid intersections F7, followed by F1. Although only one beam per side was drawn, the program will automatically mesh this single object internally into multiple beam elements to provide the correct connectivity to the supporting columns and slab elements.
- E. Click on the **Select menu > Select > Pointer/Window** command or press the **Esc** key on the keyboard to exit the Draw Beams command.
- F. Click the **File menu > Save** command to save your model.

Draw Openings (Area Objects)

Similar to the previous sections, ensure that the Plan View is active and the snap to points and grid intersections features are enabled. Draw an area object to model the opening as follows:

- A. Click the **Draw menu > Draw Rectangular Slabs/Areas** command to display the Draw Rectangular Slabs/Areas form shown in Figure 29.
- B. Click once in the drop-down list opposite the Type of Object item and select *Opening*.

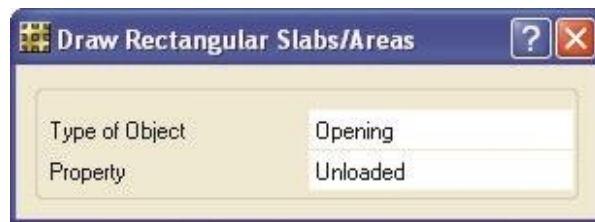


Figure 29 Draw Rectangular Slabs/Areas form

- C. Left click at the intersection of grid lines C and 6, and while holding the left mouse button down, move diagonally down to the wall end point located along grid line D between grids 4 and 5 and release the button. An area object with different shading should appear, indicating that an opening for the stairs has been drawn. An opening takes priority over an object with assigned slab properties when the program determines the stiffness formulation.
- D. Click on the **Select menu > Select > Pointer/Window** command or press the **Esc** key on the keyboard to exit the Draw Rectangular Slabs/Areas command.
- E. Click the **File menu > Save** command to save your model.

Step 6 Add Design Strips

In this step, design strips will be added to the model. Design strips determine how reinforcing will be calculated and positioned in the slab. Forces are integrated across the design strips and used to calculate the required reinforcing for the selected design code. Typically design strips are positioned in two principal directions: Layer A and Layer B.

Similar to the previous sections, ensure that the Plan View is active and the snap to points and grid intersections features are enabled. Add design strips to the model as follows:

- A. Click the **Edit menu > Add/Edit Design Strips > Add Design Strips** command to display the Add Design Strips form shown in Figure 30.
- B. In the Options area, select the *Add Design Strips Along Cartesian Grid Lines* option. Make sure that the *Include Middle Strips* option is checked
- C. In the Parameters area, click in the Grid Direction drop-down list and select *X*.

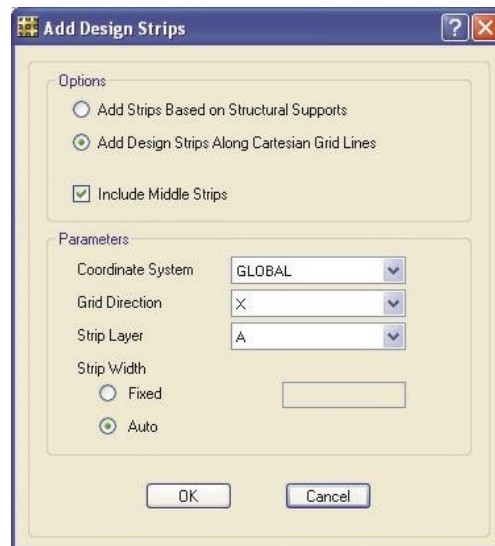


Figure 30 Add Design Strips form

- D. Select *A* from the Strip Layer drop-down list.
- E. Select the *Auto* option. The added design strips will automatically adjust their width to align with adjacent strips.
- F. Click the **OK** button to leave the Add Design Strips form. Design strips in the X-axis direction should now appear as solid lines.

- G. Left click on the design strips that lie below grid line 3 to select them; the status bar in the lower left-hand corner should show “4 Design Strips selected.” If the selection
- H. is not correct, simply click the **Select menu > Clear Selection** command and try again.
- I. Left click on the slab (anywhere except at a column, drop panel, beam or design strip location) to select it; the status bar in the lower left-hand corner should now show “1 Areas, 6 Edges, 4 Design Strips selected.”
- J. Left click at the left ends of the 4 selected design strips; the status bar in the lower left-hand corner should now show “4 Points, 1 Areas, 6 Edges, 4 Design Strips selected.”
- K. Click the **Edit menu > Align Points/Lines/Edges** command to display the Align Points/Lines/Edges form shown in Figure 31. K. Select the Trim Line/Edge/Tendon/Strip Objects option.



Figure 31 Align Points/Lines/Edges form

- L. Click the **OK** button to leave the Align Points/Lines/Edges form. The design strips below grid line 3 should now be trimmed to the edge of the slab.
- M. Left click on the design strip that lies on grid line 5 to select it; the status bar in the lower left-hand corner should show “1 Design Strips selected.”
- N. Press the **Delete** key on the keyboard to remove the selected design strip from the model.
- O. Click the **Draw menu > Draw Design Strips** command to display the Draw Design Strips form shown in Figure 32.

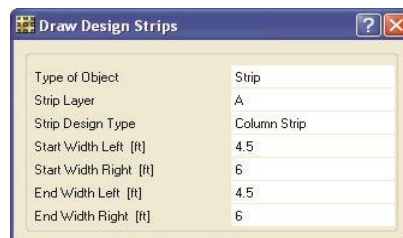


Figure 32 Draw Design Strips form

- P. Select **A** from the Strip Layer drop-down list.

- Q. Select *Column Strip* from the Strip Design Type drop-down list.
- R. Type **4.5** into the Start Width Left edit box.
- S. Type **6** into the Start Width Right edit box.
- T. Type **4.5** into the End Width Left edit box and type **6** into the End Width Right edit box.
- U. Left click at grid intersection A5 and at C5, and then click the right mouse button to stop drawing.
- V. Left click at grid intersection D5 and at F5.
- W. Press the **Esc** key on the keyboard to leave the Draw command.
- X. Click the **Edit menu > Add/Edit Design Strips > Add Design Strips** command to display the Add Design Strips form. Y. Select *Y* from the Grid Direction drop-down list.

- Z. Click in the Strip Layer edit box and select *B* from the drop-down list.

- AA. Click the **OK** button to leave the Add Design Strips form. Design strips in the Y-axis direction should now appear as solid lines.

- BB. Left click on the design strips that lie to the left of grid line D to select them; the status bar in the lower left-hand corner should show "6 Design Strips selected."

- CC. Left click on the slab (anywhere except at a column, drop panel, beam or design strip location) to select it; the status bar in the lower left-hand corner should now show "1 Areas, 6 Edges, 6 Design Strips selected."

- DD. Left click at the bottom ends of the selected design strips; the status bar in the lower left-hand corner should now show "6 Points, 1 Areas, 6 Edges, 6 Design Strips selected."

- EE. Click the **Edit menu > Align Points/Lines/Edges** command to display the Align Points/Lines/Edges form.

- FF. Select the Trim Line/Edge/Tendon/Strip Objects option.

- GG. Click the **OK** button to leave the Align Points/Lines/Edges form. The Y direction design strips to the left of grid line D should now be trimmed to the edge of the slab. The trimming of the design strips was done for display purposes only; the program will automatically ignore the portion of a design strip that extends beyond a slab edge.

- HH. Click the **File menu > Save** command to save your model.

Step 7 Set Display Options

In this Step, the set display options will be used to alter the objects displayed.

- A. Click the **View menu > Set Display Options** command. When the Set Display Options form displays, uncheck the *Design Strip Layer A* and *Design Strip Layer B* check boxes in the Items Present in View area, as shown in Figure 33. This action will turn off the display of the design strips.

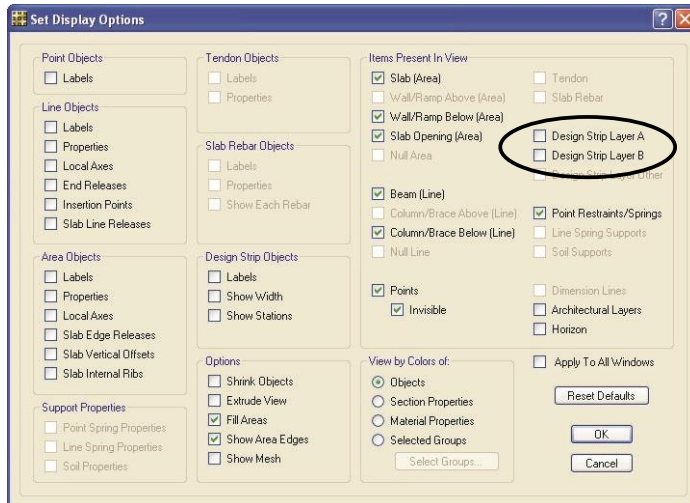


Figure 33 Set Display Options form

- B. Click the **OK** button to accept the changes, and the model now appears as shown in Figure 34.

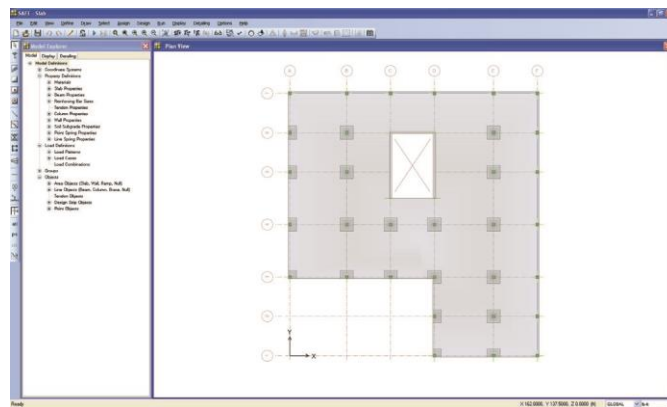


Figure 34 Model after all objects have been drawn



WEEK 12-13

BUILDING THE PROJECT BY SAFE

Assign Loads, Analysis

Step 8 Assign Loads

In this Step, the dead and live loads will be assigned to the slab. Ensure that the Plan View is still active, and that the program is in the select mode (**Draw menu > Select > Pointer/Window** command).

- A. Select the slab by clicking on it anywhere that is *not* a beam, wall, column, drop panel or opening. The status bar in the lower lefthand corner should show “1 Areas, 6 Edges selected.” If you make a mistake in selecting, click the **Select menu > Clear Selection** command, and try again.
- B. Click the **Assign menu > Load Data > Surface Loads** command to access the Surface Loads form shown in Figure 35.
- C. If it is not selected already, select DEAD from the Load Pattern Name drop-down list.
- D. Select *Gravity* from the Direction drop-down list in the Load Direction area.

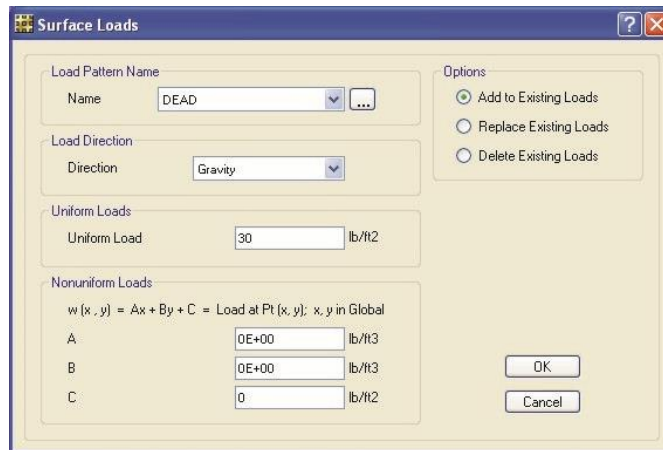


Figure 35 Surface Loads form

- E. In the Uniform Loads area, type **30** in the Uniform Load edit box.

Note: Additional load patterns may be defined by clicking on the “...” button next to the load pattern name. A “...” button returns you to the form used to define the item in the adjacent drop-down list or edit box, which in this case is the Load Patterns form.

- F. Click the **OK** button to accept the dead load assignment. SAFE will display the loads on the model. Use the **Assign menu > Clear Display of Assigns** command to remove the assignments from the display, if desired.
- G. Click anywhere on the main slab to reselect the slab, or click the **Select menu > Get Previous Selection** command to select the slab.
- H. Click the **Assign menu > Load Data > Surface Loads** command to again access the Surface Loads form.

- I. Select *LIVE* from the Load Pattern Name drop-down list.
- J. Type **50** in the Uniform Load edit box in the Uniform Loads area.
- K. Click the **OK** button to accept the live load assignment. Again, use the **Assign menu > Clear Display of Assigns** command to remove the assignments from the display.
- L. To review the assignments to the slab, **right** click on the slab anywhere that is *not* a beam, wall, column, drop-panel or opening to access the Slab-Type Area Object Information form shown in Figure 36.
- M. Select the *Loads* tab and note that the DEAD Load Pattern has a Load Value of 30lb/ft2, and that the LIVE Load Pattern has a Load Value of 50lb/ft2.
- N. Click the **OK** button to close the Slab-Type Area Object Information form.
- O. Click the **File menu > Save** command to save your model.

The screenshot shows a dialog box titled "Slab-Type Area Object Information". At the top, there is a text field for "Area Object Name" containing the value "1". Below this, there are four tabs: "Assignments", "Geometry", "Loads", and "Design". The "Loads" tab is currently selected. Inside the "Loads" tab, there is a table with two sections. The first section is for a "DEAD" load pattern, with a "Load Value (lb/ft2)" of 30. The second section is for a "LIVE" load pattern, with a "Load Value (lb/ft2)" of 50. To the right of the table, there are two buttons: "Assign Load..." and "Reset All". At the bottom right of the dialog, there are "OK" and "Cancel" buttons.

Load Pattern	DEAD
Uniform Load	
Load Direction	Gravity (-Global Z)
Load Value (lb/ft2)	30
Load Pattern	LIVE
Uniform Load	
Load Direction	Gravity (-Global Z)
Load Value (lb/ft2)	50


Figure 36 Slab-Type Area Object Information form

Step 9 Run the Analysis and Design

In this Step, the analysis and design will be run.

- A. Click the **Run menu > Run Analysis & Design** command to start the analysis. The program will create the analysis model from your object-based SAFE model and will display information in the status bar in the lower left-hand corner as the analysis and design proceeds. Additional information about the run may be accessed at a later time

using the **File menu > Show Input/Output Text Files** command and selecting the filename with a *.LOG* extension.

When the analysis and design are finished, the program automatically displays a deformed shape view of the model, and the model is locked. The model is locked when the **Options menu > Lock/Unlock Model** icon  appears depressed. Locking the model prevents any changes to the model that would invalidate the analysis results.

10 Graphically Review the Analysis Results

In this Step, the analysis will be reviewed using graphical displays of the results.

- A. Click the **View menu > Set Default 3D View** command to display the deformed shape for the DEAD load case in 3D.
- B. Click the **Start Animation** button in the lower right-hand corner of the display to animate the deformed shape. Speed of the animation may be adjusted by using the slider control adjacent to the button. Click the **Stop Animation** button to end the animation.
- C. Click the **Display menu > Show Deformed Shape** command to access the Deformed Shape form shown in Figure 37.

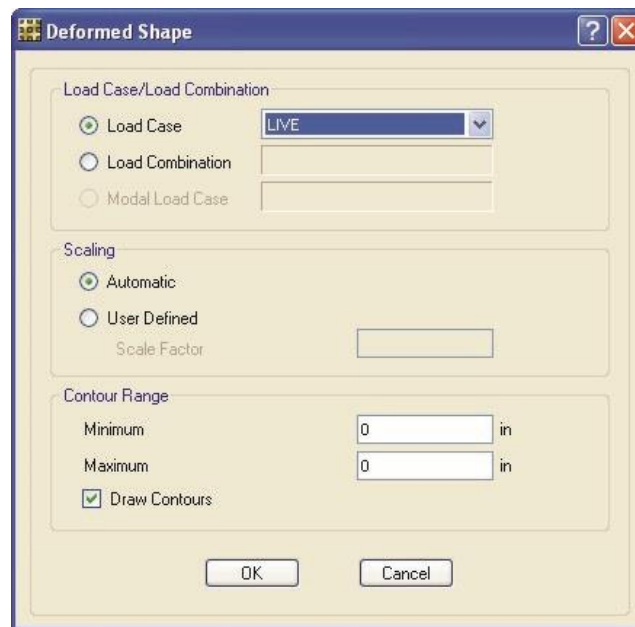


Figure 37 Deformed Shape form

- D. In the Load Case/Load Combination area, select the *Load Case* option.
- E. Select LIVE from the Load Case drop-down list.

- F. Select the *Automatic* option in the Scaling area.
- G. Check the *Draw Contours* checkbox in the Contour Range area.
- H. Click the **OK** button to generate a 3-D deformed shape with contours for the LIVE load case.
- I. Click the **Display menu > Show Slab Forces/Stresses** command to bring up the Slab Forces/Stresses form shown in Figure 38.

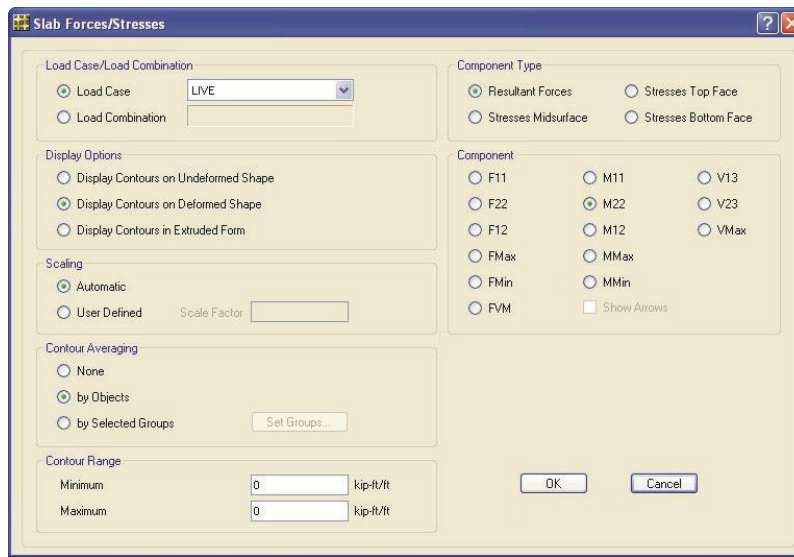


Figure 38 Slab Forces/Stresses form

- J. Select *LIVE* from the Load Case drop-down list.
- K. Select the *Resultant Forces* option in the Component Type area.
- L. Select the *M22* option in the Component area.
- M. Select the *Display Contours on Deformed Shape* option in the Display Options area.
- N. Click the **OK** button to generate the moment diagram shown in Figure 39.

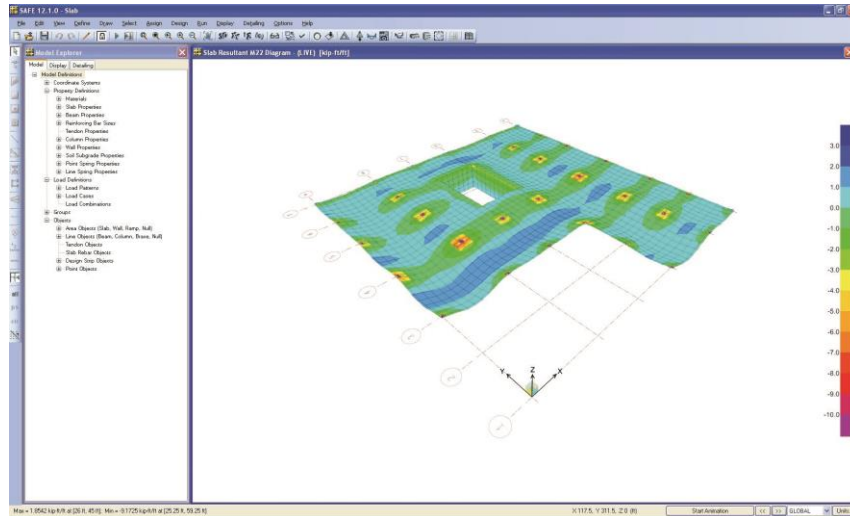


Figure 39 M22 Moment Diagram

Note that as you move the cursor over the moment diagram, the values are displayed at the cursor and in the lower left-hand corner of the window.

- O. Click the **Display menu > Show Undeformed Shape** command to clear the display of the moment diagram.
- P. Click the **View menu > Set Plan View** command to return to the Plan View.



WEEK 14-15

BUILDING THE PROJECT BY SAFE

**Design Display, Run the project, create
Final Report**

Step 11 Design Display

In this Step, design results for the slab and beams will be displayed. Note that the design was run along with the analysis in Step 9. Design results are for the ACI 318-08 code, which was selected in Step 1. Design preferences may be reviewed or changed by going to the **Design menu > Step 11 Design Display**

Design Preferences command (some design preferences are also set on the section property data forms); be sure to re-run the analysis and design (Step 9) if changes to the preferences are made.

- A. Click the **Display menu > Show Slab Design** command to access the Slab Design form shown in Figure 40.

The image shows a software dialog box titled "Slab Design". It is divided into several sections for configuring the display of slab design results. The "Choose Display Type" section includes a "Design Basis" dropdown menu set to "Strip Based" and a "Display Type" dropdown menu set to "Enveloping Flexural Reinforcement". There is an unchecked checkbox for "Impose Minimum Reinforcing". The "Choose Strip Direction" section has three checkboxes: "Layer A" (checked), "Layer B" (unchecked), and "Layer Other" (unchecked). The "Rebar Location Shown" section has two checkboxes: "Show Top Rebar" (checked) and "Show Bottom Rebar" (unchecked). The "Reinforcing Display Type" section has three radio button options: "Show Rebar Intensity (Area/Unit Width)", "Show Total Rebar Area for Strip" (selected), and "Show Number of Bars of Size:". Below this are two "Bar Size" dropdown menus for "Top" and "Bottom", both set to "#5". The "Reinforcing Diagram" section has two checked checkboxes: "Show Reinforcing Envelope Diagram" and "Show Reinforcing Extent", with a "Scale Factor" input field set to "1". The "Show Rebar Above Specified Value" section has three radio button options: "None" (selected), "Typical Uniform Reinforcing Specified Below", and "Reinforcing Specified in Slab Rebar Objects". The "Typical Uniform Reinforcing" section has two radio button options: "Define by Bar Size and Bar Spacing" (selected) and "Define by Bar Area and Bar Spacing". Below this are two rows of "Bar Size" and "Spacing, (in)" dropdown menus for "Top" and "Bottom", both set to "#5" and "12". At the bottom of the dialog are "OK" and "Cancel" buttons.

Figure 40 Slab Design form

- B. In the Choose Display Type area, select *Strip Based* from the Design Basis drop-down list and *Enveloping Flexural Reinforcement* from the Display Type drop-down list.
- C. In the Choose Strip Direction area, check the *Layer A* checkbox and uncheck the *Layer B* checkbox. This will display the design results in the Layer A (X) direction only.
- D. In the Rebar Location Shown area, check the *Show Top Rebar* checkbox and uncheck the *Show Bottom Rebar* checkbox.
- E. In the Reinforcing Display Type area, select the *Show Total Rebar Area for Strip* option.
- F. Click the **OK** button to leave the Slab Design form and display the slab design results. The top flexural reinforcing required in the Layer A direction is displayed for both column and middle strips.

Positioning the cursor at any location on a Layer A design strip causes the required top and bottom reinforcing values to be displayed at the cursor and in the lower left corner of the window.

- G. To view the required reinforcing in the other direction, click the **Display menu > Show Slab Design** command to display the Slab Design form.
- H. In the Choose Display Type area, select *Finite Element Based* from the Design Basis drop-down list. This option displays the required reinforcing calculated on an element-by-element basis as intensity contours - integration across the defined design strips is not performed.
- I. In the Reinforcing Direction and Location area, select the *Direction 2 – Bottom Rebar* option. Direction 2 refers to the object local axis 2 direction.
- J. In the Show Rebar Above Specified Value area, select the *None* option.
- K. Click the **OK** button to leave the Slab Design form and display the slab design results for the local axis 2 direction. The view will be updated to that shown in Figure 41. Again, positioning the cursor anywhere on the slab will result in the display of the reinforcing values at the cursor and in the lower left-hand corner of the SAFE window.

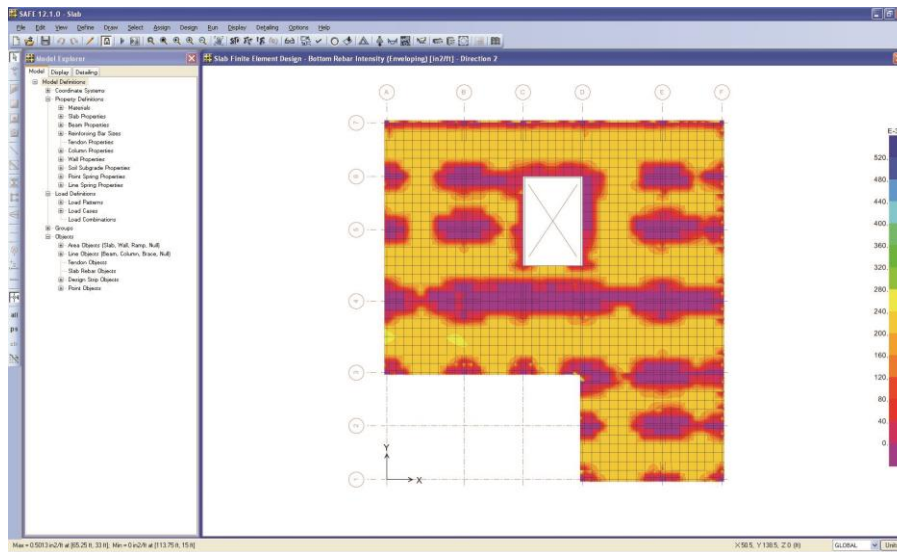


Figure 41 Direction 2 reinforcing

- L. To view the required reinforcing in the beams, click the **Display menu > Show Beam Design** command. The Beam Design form shown in Figure 42 displays.
- M. In the Choose Display Type area, select *Longitudinal Rebar* from the Display Type drop-down list and *Flexure* from the Rebar Type drop-down list.
- N. Review the other selected options and then click the **OK** button to close the Beam Design form.

The view will be updated to show the flexural reinforcing required in the beams along the two perimeter sides. Positioning the cursor on the beams will result in the display of the reinforcing values in the lower left-hand corner and at the cursor.

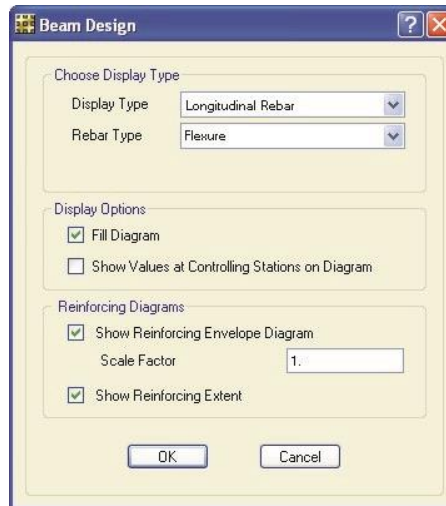


Figure 42 Beam Design form

- O. **Right** click on a beam to display the Design Details form shown in Figure 43.

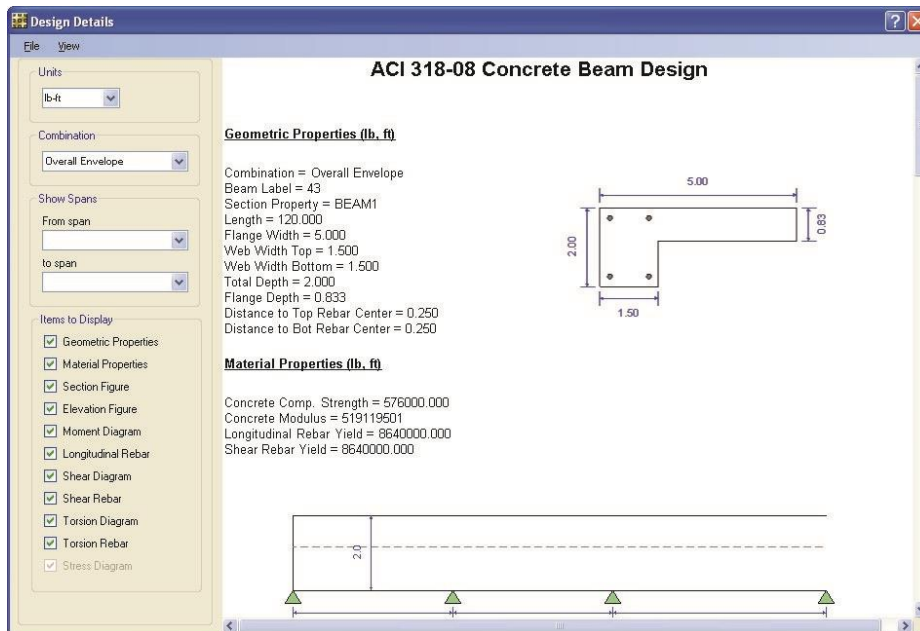


Figure 43 Design Details form

Scroll through the form to see all of the design information associated with the selected beam. Click the **X** button in the top-right corner of the form to close the form.

Step 12 Run Detailing

In this Step, detailing will be run and displayed. Detailing may be run only after analysis and design are complete.

- A. Click the **Detailing menu > Detailing Preferences** command to display the Detailing Preferences form shown in Figure 44. Use this form to set the regional standards, to control how dimensioning is displayed, to manage reinforcing bar notation, and to select the units for material quantity takeoffs.

The screenshot shows the 'Detailing Preferences' dialog box with the following settings:

Section	Setting
Standards	Units: US
Standards	Rebar Set: US Customary (#8)
Dimension Units	Length: Foot
Dimension Units	Section and Thickness: Inch
Dimension Units	Rebar Spacing: Inch
Dimension Units	Force: Kip
Bar Mark	Bar Mark Style: MK-01, MK02...
Bar Mark	Number Separator: - (Dash)
Bar Mark	Mark Separator: - (Dash)
Bar Mark	Spacing Separator: @ (At)
Material Quantity Units	Rebar Length: Foot
Material Quantity Units	Slab Area: Sq ft
Material Quantity Units	Concrete Volume: Cu ft
Material Quantity Units	Rebar Weight: Ton

Figure 44 Detailing Preferences form

- B. Review the settings on this form (we will accept the default selections), and then click the **OK** button to close the form.
- C. Click the **Detailing menu > Slab/Mat Reinforcing Preferences** to display the Slab/Mat Detailing Preferences form shown in Figure 45.

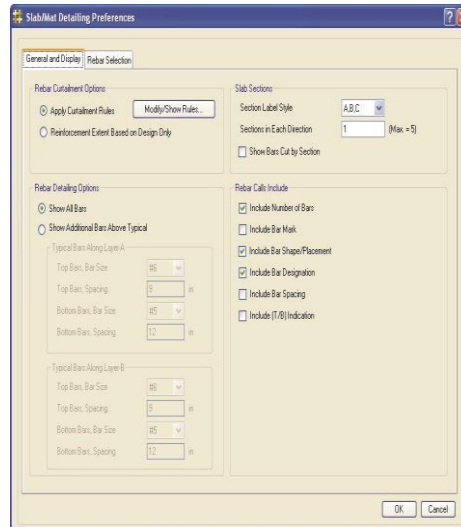


Figure 45 Slab/Mat Detailing Preferences form

- D. Click the *General and Display* tab. On this tab review or alter the rebar curtailment, detailing and callout options, as well as set how sections should be cut. We will accept the default settings.
- E. Click the *Rebar Selection* tab and review or change the rebar selection rules, preferred sizes, minimums and reinforcing around openings. We will accept the default settings.
- F. Click the **OK** button to accept the selections and close the form.
- G. Click the **Detailing menu > Drawing Sheet Setup** command to display the Drawing Sheet Setup form. The sheet size, scales, title block and text sizes can be reviewed and changed using this form.
We will accept the default settings.
- H. Click the **OK** button to close the form.
- I. Review the line thicknesses and styles by clicking the **Detailing menu > Drawing Format Properties** command.
- J. Click the **OK** button to accept the selections and close the form.
- K. Now that the detailing preferences and drawing setup options have been reviewed, click the **Run menu > Run Detailing** command to generate the detailing drawings. A framing plan is displayed when detailing is complete.
- L. Click the **Detailing menu > Show Detailing** command to access the Display Detailing Item form shown in Figure 46.

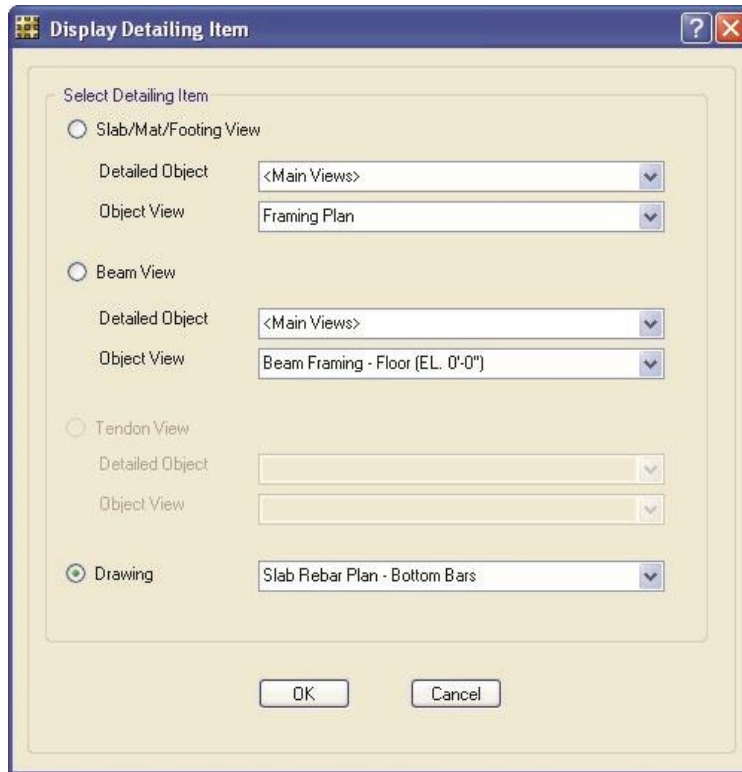


Figure 46 Display Detailing Item form

- M. Select the Drawing option.
- N. Select *Slab Rebar Plan – Bottom Bars* from the Drawing dropdown list.
- O. Click the **OK** button to leave the Display Detailing Item form and display the selected drawing shown in Figure 47.
- P. Clicking on the *Detailing* tab in the Model Explorer and expanding the Views and Drawing Sheets trees also provides access to detailing drawings and component views.
- Q. Click the **Display menu > Show Undeformed Shape** command to return to the model.

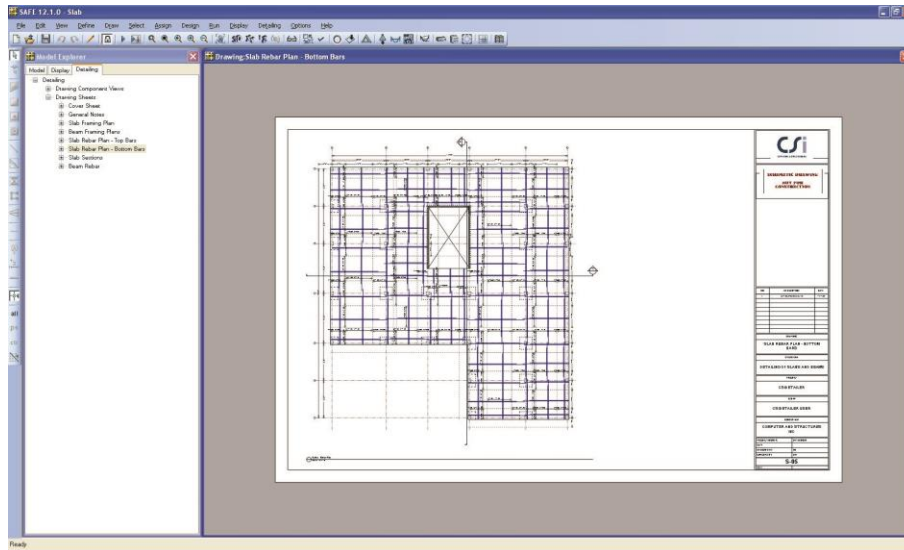


Figure 47 Slab Rebar Plan

Step 13 Create Report

In this Step, a report describing model input and output results will be created.

- A. Click the **File menu > Report Setup** command to display the Report Setup Data form.
- B. In the Report Output Type area, be sure that the *RTF File* option is selected.
- C. In the Report Items area, uncheck the *Include Hyperlinked Contents* checkbox.
- D. Click the **OK** button to leave the Report Setup Data form.
- E. Click the **File menu > Create Report** command to display the Microsoft Word Rich Text File Report form.
- F. Type **Slab** in the File name edit box and click the **Save** button. A report, with a cover similar to that shown in Figure 48 should be displayed in your word processor, and will be saved to your hard disk.

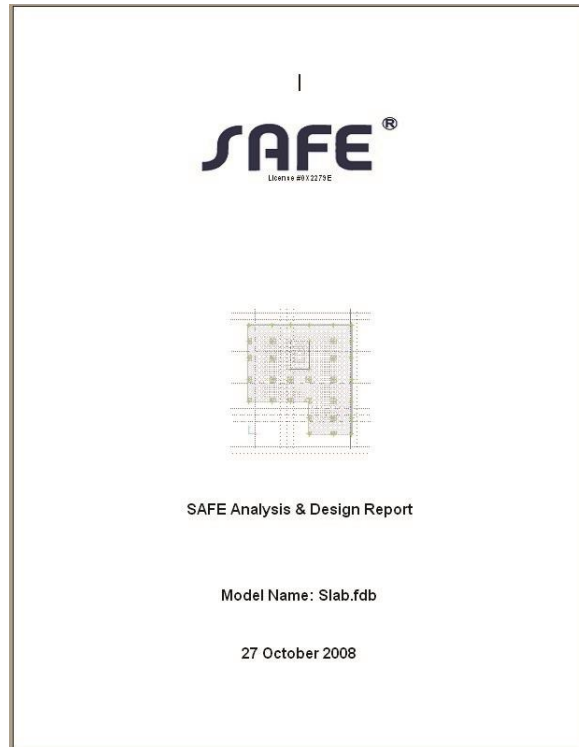


Figure 48 Cover Page for Report

- G. Scroll through the report to find tables that list geometry and properties, analysis results and design information, such as that shown in Figure 49.
- H. Close your word processor and return to the SAFE program.
- I. Click the **File menu** > **Save** command to save your model one last time.

5. Analysis results

5.1. Support results

This section provides support results, including items such as column, support, and spring reactions.

Table 23: Nodal Reactions

Point	OutputCase	Table 23: Nodal Reactions					
		F _x kN	F _y kN	F _z kN	M _x kN-m	M _y kN-m	M _z kN-m
89	DEAD	691.13	82529.50	25002.259	-2059.1	23232.510	-302.530
90	DEAD	10725.270	-540.160	54083.440	1422.600	39453.960	-33.180
92	DEAD	9311.390	-944.300	43333.450	3069.740	34515.510	-36.870
94	DEAD	82721.80	740.110	38662.170	-3207.640	36980.060	-27.140
96	DEAD	-2002.990	1229.410	47590.490	-2775.8	-13439	-414.300
98	DEAD	-4243.740	-1191.450	116960	422.1320	-1694.4	-43.190
10	DEAD	-3644.090	-1063.850	90206.320	3770.090	-14304	-406.30
12	DEAD	-2686.490	937.830	89911.270	-2921.650	-10481	-37.110
74	DEAD	-942.640	867.3840	32600.060	-21930	-4892.440	-29.570
76	DEAD	-634.620	-2298.730	69817.430	8485.590	-3114.270	-207.00
82	DEAD	61999.20	3733.320	73416390	-1428.3	16096.020	-43890
83	DEAD	2276.640	-2297.600	91241.090	8769.780	7359.820	-42.960
89	DEAD	-3190.390	1344.390	93036.470	-4746.400	-137.11	-58.430
91	DEAD	-3484.620	-342.750	10787.2	1694.30	-1087.1	-424.40
93	DEAD	-2297.370	-1471.230	91518.960	6035.480	-5066.090	-46.460
95	DEAD	-2295.480	610.860	89814.490	-1819.990	-4778.330	-51.400
97	DEAD	61532.070	2803.470	22179.130	-4096.7	26068.070	-50.970
98	DEAD	6138.990	-1202.610	37667.290	4266.690	28408.490	-54.780
100	DEAD	-3460.030	3713.440	39911.700	-13009	-18792	-62.200
102	DEAD	-3643.370	-1167.190	89038.810	4683.740	-15991	-61.710
104	DEAD	4814.090	-246.440	24687.000	94330.80	14481.750	23.960
105	DEAD	-1966.260	-3279.270	49031.840	12349.940	-9824.560	-42.220
107	DEAD	-432.90	-3003.090	33400.430	11684.200	-270.930	-29.990
109	DEAD	1194.140	-3768.710	46290.270	14497.960	4244.670	-66.620
111	DEAD	-979.430	-3389.460	49647.840	13303.230	-3717.320	-119.10
113	DEAD	-1476.910	-1572.300	20710.000	6640.110	-8876.470	-40.900
114	DEAD	-3678.980	27.530	36230.290	138.460	-42148	-59.680
116	DEAD	-3623.900	-861.200	39125.200	4074.490	-14697	-71.420
118	DEAD	-4208.610	-306.360	47438.810	1869.840	-1727.9	-60.230
120	DEAD	-3776.870	279.860	38643.250	-304.040	-16189	-60.220
122	DEAD	-3699.170	-662.120	38998.820	3169.910	-18760	-72.620
124	DEAD	-3000.890	843.230	17853.650	-2385.630	-14199	-73.200
379	DEAD	-693.200	-115.080	-2093.730	-284.360	-402.110	-28.610
380	DEAD	-626.890	-298.240	54909.090	-91.060	-2724.220	334.130
383	DEAD	44.910	464.840	-913.820	-488.580	489.700	18.790
385	DEAD	14637.90	-942.460	4721.940	-387.310	51117.40	-620.460
99	LIVE	2187.390	167.4940	69456.660	-691.920	7751.390	-9.390
60	LIVE	3431.520	-172.650	15819.980	465.960	12626.320	-10.480
62	LIVE	2872.330	-304.980	12377.850	993.060	11621.790	-11.600
64	LIVE	2899.690	228.240	11161.150	-463.330	9705.960	-42.070
66	LIVE	-1605.290	2305.840	13730.140	-8887.090	-4298.590	-132.300
68	LIVE	-1360.130	-380.340	38676.990	1348.030	-6430.730	-136.80
70	LIVE	-1161.430	-336.650	27188.920	1212.670	-4888.280	-129.40
72	LIVE	-838.660	286.460	-2826.510	-1184.630	-3246.950	-114.070

Figure 49 Typical Report information

Congratulations! You've successfully created, analyzed, designed, detailed, and reviewed a SAFE reinforced concrete model.



Review and Practical Classes (Practice Session) Week 16-17

Any Questions?

